

Vehicle	Capacity	Engine Type	Model Year	SystemName	FunctionName	SubFunction	
Escape/Tribute / Mariner	3.0L	4V	2009	4X4 Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	4X4 Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	4X4 Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	4X4 Control Module	Active Test	Pulse-width modulation status C	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	4X4 Control Module	Active Test	Four wheel drive Mode Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Antilock braking system	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Antilock braking system	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Antilock braking system	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Antilock braking system	Active Test	Booster Learn Cycle	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Antilock braking system	Active Test	Longitudinal Acceleration Senso	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Antilock braking system	Active Test	rear-only dump valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Antilock braking system	Active Test	rear-only isolation valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Antilock braking system	Active Test	Primary Low Pressure supply V	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Antilock braking system	Active Test	Right Rear Traction Assist Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Antilock braking system	Active Test	Pressure transducer	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Antilock braking system	Active Test	Left Rear Traction Control Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Front Controls Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Front Controls Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Front Controls Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Front Controls Interface Module	Active Test	Bezel Illumination	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Front Display Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Front Display Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Front Display Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Front Display Interface Module	Active Test	Bezel Illumination	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	Horn	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	Dimmable Backlighting	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	Brake/Shift Interlock	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	Parking Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	Key Pad Backlighting	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	Accessory Delay Relay Circuit	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	White Lighting Circuit	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	Floor Lamp Output Circuit	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	Interior Lighting Circuit	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	Right Front Turn Lamp Output S	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	Smart Window Control	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	Right Rear Turn Signal/Trailer R	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	Right Rear Turn Signal Lamp Sta	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	Left Rear Turn Signal/Trailer Rel	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	Left Rear Turn Signal Lamp Statu	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	Left Front Mirror Turn Signal Lar	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	Left Front Turn Lamp Output Stz	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	Low Beam Circuit Status Right Fi	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	Low Beam Circuit Status Left Frc	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	Fog Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	Mirror Puddle Lamps	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	Right Front Mirror Turn Signal L	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	All Door Unlock	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	All Door Lock	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	Liftgate release	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	Liftglass/Trunk Release	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Generic Electronic Module / Smart Jun	Active Test	High Beam	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Active Test	All segments	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Active Test	High Beam Indicator	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Active Test	Low Fuel Warning Indication	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Active Test	Oil Pressure Warning Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Active Test	Check Engine Malfunction Indici	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Active Test	Generator lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Active Test	Over Drive (O/D) off	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Active Test	Brake Warning Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Active Test	Tire Pressure Monitoring System	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Active Test	Airbag	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Active Test	Right Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Active Test	Left Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Active Test	Cruise control lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Active Test	Wrench Telltale Indicator	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2009	Instrument Cluster	Active Test	Traction Assist Active Indicator	V1.20.001

Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Active	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Read DTC		V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Erase DTC		V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Live Data		V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Active Test	Spark Advance	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Active Test	Fuel pump	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Active Test	Evaporative Emission Vapor Ma	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Remote Anti-Theft / Personality Modu	Read DTC		V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Remote Anti-Theft / Personality Modu	Erase DTC		V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Remote Anti-Theft / Personality Modu	Live Data		V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Remote Anti-Theft / Personality Modu	Active Test	Parking Lamps	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Remote Anti-Theft / Personality Modu	Active Test	LOCK	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Remote Anti-Theft / Personality Modu	Active Test	Horn Output	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Remote Anti-Theft / Personality Modu	Active Test	All Door Unlock	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Remote Anti-Theft / Personality Modu	Active Test	Interior Lamps	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Remote Anti-Theft / Personality Modu	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Read DTC		V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Erase DTC		V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Live Data		V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Active Test	Four wheel drive HIGH Indicator	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Active Test	Door Ajar Warning Lamp circuit	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Active Test	Center Axle Engage Solenoid	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Active Test	Speed Relay Control	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Active Test	Clockwise Relay Control	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Active Test	Wiper Run Relay Control	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Active Test	Down Relay Control	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Active Test	Over Speed Warning Chime	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Active Test	Safety Belt Warning Lamp	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Active Test	Chimer control	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Active Test	Contact Plate Power	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Active Test	Washer Pump Relay Control	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Active Test	Accessory Delay Relay	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Active Test	4WD Low Indicator Status	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Active Test	Heated Backlight Relay	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Active Test	Center Axle Disconnect Solenoid	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Active Test	One Touch Down Motor Relay	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Generic Electronic Module	Active Test	Up Relay Control	V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Integrated Air Bag Module	Read DTC		V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Integrated Air Bag Module	Erase DTC		V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Integrated Air Bag Module	Live Data		V1.20.001	
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Integrated Air Bag Module	Active Test	Airbag Warning Lamp and Chim	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	Other	Anti-Lock Brake / Traction Control Mo	Read DTC	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	Other	Anti-Lock Brake / Traction Control Mo	Erase DTC	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	Other	Anti-Lock Brake / Traction Control Mo	Live Data	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	Other	Security module	Read DTC	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	Other	Security module	Erase DTC	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	Other	Electronic Crash Sensor	Read DTC	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	Other	Electronic Crash Sensor	Erase DTC	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	Other	Electronic Crash Sensor	Live Data	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	Other	Hybrid Electronic Cluster	Read DTC	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	Other	Hybrid Electronic Cluster	Erase DTC	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	Other	Hybrid Electronic Cluster	Live Data	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	Other	Hybrid Electronic Cluster	Active Test	Tachometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	Other	Hybrid Electronic Cluster	Active Test	Temperature Gauge	V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	Other	Hybrid Electronic Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	Other	Hybrid Electronic Cluster	Active Test	All segments	V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	Other	Hybrid Electronic Cluster	Active Test	Speedometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	Other	Powertrain Control Module	Read DTC	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	Other	Powertrain Control Module	Erase DTC	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	Other	Powertrain Control Module	Live Data	V1.20.001	
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001	
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001	
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001	
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001	
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001	
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001	
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Active	V1.20.001	
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001	
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001	
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001	
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001	
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Powertrain Control Module	Read DTC		V1.20.001	
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Powertrain Control Module	Erase DTC		V1.20.001	

Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Remote Anti-Theft / Personality Modu	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Remote Anti-Theft / Personality Modu	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Remote Anti-Theft / Personality Modu	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Remote Anti-Theft / Personality Modu	Active Test	Parking Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Remote Anti-Theft / Personality Modu	Active Test	LOCK	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Remote Anti-Theft / Personality Modu	Active Test	Horn Output	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Remote Anti-Theft / Personality Modu	Active Test	All Door Unlock	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Remote Anti-Theft / Personality Modu	Active Test	Interior Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Remote Anti-Theft / Personality Modu	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Active Test	Door Ajar Warning Lamp circuit	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Active Test	Center Axle Engage Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Active Test	Speed Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Active Test	Wiper Run Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Active Test	Down Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Active Test	Transfer Case Shift Relay (LZH) c	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Active Test	Over Speed Warning Chime	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Active Test	Washer Pump Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Active Test	Accessory Delay Relay	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Active Test	Heated Backlight Relay	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Active Test	Center Axle Disconnect Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Active Test	One Touch Down Motor Relay	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Generic Electronic Module	Active Test	Up Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Integrated Air Bag Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Integrated Air Bag Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Integrated Air Bag Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1998 Integrated Air Bag Module	Active Test	Airbag Warning Lamp and Chime	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve State	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve State	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve State	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve State	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve State	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve State	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Powertrain Control Module	Read DTC		V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Powertrain Control Module	Erase DTC		V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Powertrain Control Module	Live Data		V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Powertrain Control Module	Active Test	Glow plug control	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Powertrain Control Module	Active Test	Intake Air Shutter Valve 2	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Powertrain Control Module	Active Test	Warm Up Solenoid	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Powertrain Control Module	Active Test	variable boost control solenoid	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Powertrain Control Module	Active Test	Four wheel drive Mode Lamp	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Powertrain Control Module	Active Test	Neutral Tow Light	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Powertrain Control Module	Active Test	Hub Lock LOCK Solenoid	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Powertrain Control Module	Active Test	Hub LOCK / UNLOCK Solenoid	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Powertrain Control Module	Active Test	Swirl control solenoid	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Powertrain Control Module	Active Test	Glow plug lamp	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Powertrain Control Module	Active Test	intake air shutter valve	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Restraint Control Module	Read DTC		V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Restraint Control Module	Erase DTC		V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Restraint Control Module	Live Data		V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Transmission Control Module	Read DTC		V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Transmission Control Module	Erase DTC		V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Transmission Control Module	Live Data		V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Transmission Control Module	Active Test	Pressure Control Solenoid A	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Transmission Control Module	Active Test	Pressure Control Solenoid B	V1.20.001

BT-50 / Ranger	3.0L	WE-CD	2007 Transmission Control Module	Active Test	Pressure Control Solenoid C	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Transmission Control Module	Active Test	Firm Shift	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Transmission Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Transmission Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Transmission Control Module	Active Test	Gear Commanded	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Transmission Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
BT-50 / Ranger	3.0L	WE-CD	2007 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve State	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve State	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve State	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve State	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve State	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve State	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Read DTC		V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Erase DTC		V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Live Data		V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Active Test	Glow plug control	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Active Test	Intake Air Shutter Valve 2	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Active Test	Warm Up Solenoid	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Active Test	variable boost control solenoid	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Active Test	Four wheel drive Mode Lamp	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Active Test	Neutral Tow Light	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Active Test	Hub Lock LOCK Solenoid	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Active Test	Hub LOCK / UNLOCK Solenoid	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Active Test	Swirl control solenoid	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Active Test	Glow plug lamp	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Active Test	intake air shutter valve	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Restraint Control Module	Read DTC		V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Restraint Control Module	Erase DTC		V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Restraint Control Module	Live Data		V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Transmission Control Module	Read DTC		V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Transmission Control Module	Erase DTC		V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Transmission Control Module	Live Data		V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Transmission Control Module	Active Test	Pressure Control Solenoid A	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Transmission Control Module	Active Test	Pressure Control Solenoid B	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Transmission Control Module	Active Test	Pressure Control Solenoid C	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Transmission Control Module	Active Test	Firm Shift	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Transmission Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Transmission Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Transmission Control Module	Active Test	Gear Commanded	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Transmission Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 4X4 Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 4X4 Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 4X4 Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 4X4 Control Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 4X4 Control Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 4X4 Control Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 4X4 Control Module	Active Test	Neutral Tow Light	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun	Active Test	Park Lamp Output	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun	Active Test	All Doors Lock Relay	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun	Active Test	Wiper Run Relay Driver State	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun	Active Test	Fog Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun	Active Test	Horn Control Driver	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun	Active Test	Illuminated entry relay circuit	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun	Active Test	Drivers Door Unlock Output	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun	Active Test	Battery Saver Relay Status.	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun	Active Test	Clear History	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Erase DTC		V1.20.001

Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Speedometer	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Tachometer	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	All segments	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Brake Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Check Engine Malfunction Indici	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Overdrive OFF Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Oil Pressure Low Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Tire Pressure Monitoring System	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Check fuel cap indicator lamp cc	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Restraints Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Fuel Level Low Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Engine over-temperature light	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Speed Control Set Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Fog Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Occupant Classification System Modul	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Occupant Classification System Modul	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Occupant Classification System Modul	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	EGR Motor Position Desired	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Restraint Control Module	Active Test	Restraints Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Restraint Control Module	Active Test	Passenger Airbag Deactivation L	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Satellite Digital Audio Receiver System	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Satellite Digital Audio Receiver System	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Satellite Digital Audio Receiver System	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2009 Satellite Digital Audio Receiver System	Active Test	Satellite Digital Audio Receiver (V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 4X4 Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 4X4 Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 4X4 Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 4X4 Control Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 4X4 Control Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 4X4 Control Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 4X4 Control Module	Active Test	Neutral Tow Light	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun	Active Test	Park Lamp Output	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun	Active Test	All Doors Lock Relay	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun	Active Test	Fog Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun	Active Test	Horn Control Relay	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun	Active Test	Illuminated entry driver circuit	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun	Active Test	Drivers Door Unlock Output	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun	Active Test	Passenger Unlock Activated	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun	Active Test	Battery Saver Relay Status.	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun	Active Test	Accessory Delay Relay Circuit	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun	Active Test	Clear History	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Speedometer	V1.20.001

Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Tachometer	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	All segments	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Brake Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Check Engine Malfunction Indica	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Overdrive OFF Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Oil Pressure Low Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Tire Pressure Monitoring System	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Check fuel cap indicator lamp cc	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Restraints Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Fuel Level Low Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Engine over-temperature light	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Speed Control Set Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Fog Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Occupant Classification System Modul	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Occupant Classification System Modul	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Occupant Classification System Modul	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	EGR Motor Position Desired	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Restraint Control Module	Active Test	Restraints Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Restraint Control Module	Active Test	Passenger Airbag Deactivation L	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Satellite Digital Audio Receiver System	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Satellite Digital Audio Receiver System	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Satellite Digital Audio Receiver System	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2008 Satellite Digital Audio Receiver System	Active Test	Satellite Digital Audio Receiver (V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 4X4 Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 4X4 Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 4X4 Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 4X4 Control Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 4X4 Control Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 4X4 Control Module	Active Test	Neutral Tow Light	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 4X4 Control Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Generic Electronic Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Generic Electronic Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Generic Electronic Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Generic Electronic Module	Active Test	Fog Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Generic Electronic Module	Active Test	Park Lamp Output	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Generic Electronic Module	Active Test	All Doors Lock Relay	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Generic Electronic Module	Active Test	Drivers Door Unlock Output	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Generic Electronic Module	Active Test	Wiper Run Relay Driver State	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Generic Electronic Module	Active Test	Horn Control Driver	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Generic Electronic Module	Active Test	Illuminated entry relay circuit	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Generic Electronic Module	Active Test	Battery Saver Relay Status.	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Generic Electronic Module	Active Test	Clear History	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Check fuel cap indicator lamp cc	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Engine over-temperature light	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001

Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Tire Pressure Monitoring System	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Speed Control Set Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Restraints Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Fog Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Speedometer	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Tachometer	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Fuel Level Low Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Check Engine Malfunction Indica	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Brake Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Overdrive OFF Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Oil Pressure Low Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Occupant Classification System Modul	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Occupant Classification System Modul	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Occupant Classification System Modul	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	EGR Motor Position Desired	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Restraint Control Module	Active Test	Passenger Airbag Deactivation L	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Restraint Control Module	Active Test	Restraints Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Satellite Digital Audio Receiver System	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Satellite Digital Audio Receiver System	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Satellite Digital Audio Receiver System	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2007 Satellite Digital Audio Receiver System	Active Test	Satellite Digital Audio Receiver C	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 4X4 Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 4X4 Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 4X4 Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 4X4 Control Module	Active Test	Pulse-width modulation status C	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 4X4 Control Module	Active Test	Four wheel drive Mode Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Antilock braking system	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Antilock braking system	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Antilock braking system	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Antilock braking system	Active Test	Booster Learn Cycle	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Antilock braking system	Active Test	Longitudinal Acceleration Senso	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Antilock braking system	Active Test	rear-only dump valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Antilock braking system	Active Test	rear-only isolation valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Antilock braking system	Active Test	Primary Low Pressure supply V:	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Antilock braking system	Active Test	Right Rear Traction Assist Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Antilock braking system	Active Test	Secondary Low Pressure Feed V:	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Antilock braking system	Active Test	Pressure transducer	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Antilock braking system	Active Test	Left Rear Traction Control Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Front Controls Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Front Controls Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Front Controls Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Front Controls Interface Module	Active Test	Bezel Illumination	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Front Display Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Front Display Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Front Display Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Front Display Interface Module	Active Test	Bezel Illumination	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun	Active Test	Horn	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun	Active Test	Dimmable Backlighting	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun	Active Test	Brake/Shift Interlock	V1.20.001

Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	Parking Lamp	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	Key Pad Backlighting	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	Accessory Delay Relay Circuit	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	White Lighting Circuit	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	Floor Lamp Output Circuit	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	Interior Lighting Circuit	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	Right Front Turn Lamp Output S	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	Smart Window Control	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	Right Rear Turn Signal/Trailer R	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	Right Rear Turn Signal Lamp Sta	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	Left Rear Turn Signal/Trailer Rel	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	Left Rear Turn Signal Lamp Stat	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	Left Front Mirror Turn Signal Lar	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	Left Front Turn Lamp Output Ste	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	Low Beam Circuit Status Right Fr	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	Low Beam Circuit Status Left Fr	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	Fog Lamp	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	Mirror Puddle Lamps	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	Right Front Mirror Turn Signal Li	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	All Door Unlock	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	All Door Lock	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	Liftgate release	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	Liftglass/Trunk Release	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Generic Electronic Module / Smart Jun Active Test	High Beam	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Read DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Erase DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Live Data	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	All segments	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	High Beam Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Low Fuel Warning Indication	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Oil Pressure Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Check Engine Malfunction Indica	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Generator Alarm	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Over Drive (O/D) off	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Brake Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Tire Pressure Monitoring System	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Airbag	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Right Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Left Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Cruise control lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Check fuel cap indicator lamp cc	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Wrench Telltale Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Traction Assist Active Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Turn Signal Left On Warning Chi	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Turn Signal Click (turn signal TT	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Turn Signal Clack (turn signal TT	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Belt Minder Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Key In Ignition Reminder Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Message Center Warning Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Park Brake Warning Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Seatbelt Warning Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Headlamps on Reminder Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Airbag Secondary Warning	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Speedometer Gauge Indicator C	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Roll Stability Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Instrument Cluster	Active Test	Tachometer	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Occupant Classification System Modul	Read DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Occupant Classification System Modul	Erase DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Occupant Classification System Modul	Live Data	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Parking Aid Module	Read DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Parking Aid Module	Erase DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Parking Aid Module	Live Data	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Parking Aid Module	Active Test	Activate System	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Parking Aid Module	Active Test	Activate Light Emitting Diode	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Parking Aid Module	Active Test	Activate Rear Speaker	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Read DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Erase DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Live Data	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Starter Motor Control Output D	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	One-Touch Start Status	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Fan control high speed	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Fan control low speed	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Air Conditioning Compressor Co	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Injector 1 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Injector 2 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Injector 3 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Injector 4 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Heater control for Heated Exha	V1.20.001

Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Firm Shift	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Heater control for Heated Exhat	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Engine Revolutions Per Minute	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Desired camshaft angle for all b	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Converter Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Pressure Control Solenoid A	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Gear Command by Output State	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Power Steering Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Power Steering Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Restraint Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Restraint Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Restraint Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Satellite Digital Audio Receiver System	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Satellite Digital Audio Receiver System	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Satellite Digital Audio Receiver System	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Satellite Digital Audio Receiver System	Active Test	Satellite Digital Audio Receiver C	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Audio Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Audio Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Audio Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Accessory Protocol Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Accessory Protocol Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Accessory Protocol Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Heating Ventilation Air Conditioning	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Heating Ventilation Air Conditioning	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Heating Ventilation Air Conditioning	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Heating Ventilation Air Conditioning	Active Test	Blower motor control command	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Heating Ventilation Air Conditioning	Active Test	recirculation door close comman	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Heating Ventilation Air Conditioning	Active Test	recirculation door open comman	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Heating Ventilation Air Conditioning	Active Test	Left Blend Door Position	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Heating Ventilation Air Conditioning	Active Test	Right Blend Door Position	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Heating Ventilation Air Conditioning	Active Test	Dimming Control Command	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Heating Ventilation Air Conditioning	Active Test	Heated Backlight Relay	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Heating Ventilation Air Conditioning	Active Test	All segments	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Heating Ventilation Air Conditioning	Active Test	Front Blower Relay	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Heating Ventilation Air Conditioning	Active Test	Rear Window Defog Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2009 Heating Ventilation Air Conditioning	Active Test	Air conditioning Floor Servo Pos	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Antilock braking system	Read DTC		V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Antilock braking system	Erase DTC		V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Antilock braking system	Live Data		V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Generic Electronic Module	Read DTC		V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Generic Electronic Module	Erase DTC		V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Generic Electronic Module	Live Data		V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Generic Electronic Module	Active Test	Rear Wiper Relay	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Generic Electronic Module	Active Test	Horn	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Generic Electronic Module	Active Test	Lock/Unlock Double Lock	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Generic Electronic Module	Active Test	Lock/Unlock Central Lock	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Generic Electronic Module	Active Test	Accessory Delay Relay	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Generic Electronic Module	Active Test	Head Lamps	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Generic Electronic Module	Active Test	Hazard Flashers	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Generic Electronic Module	Active Test	Security Horn Alarm	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Instrument Cluster	Read DTC		V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Instrument Cluster	Erase DTC		V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Instrument Cluster	Live Data		V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Powertrain Control Module	Read DTC		V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Powertrain Control Module	Erase DTC		V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Powertrain Control Module	Live Data		V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Powertrain Control Module	Active Test	1-2 Shift Solenoid	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Powertrain Control Module	Active Test	2-3 Shift Solenoid	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Powertrain Control Module	Active Test	3-2 Timing Solenoid	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Powertrain Control Module	Active Test	3-4 Shift Solenoid	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
Escape / Tribute (2006/4 -)	2.3L	L3	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Ser	V1.20.001

Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Antilock braking system	Active Test	Vacuum Pump Status	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Antilock braking system	Active Test	Pedal Simulator Unit Cutoff Valv	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Antilock braking system	Active Test	Left Front Brake Pressure	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Antilock braking system	Active Test	Right Front Brake Pressure	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Antilock braking system	Active Test	Left Rear Brake Pressure	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Antilock braking system	Active Test	Right Rear Brake Pressure	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Antilock braking system	Active Test	Left Front/Right Rear Traction C	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Antilock braking system	Active Test	Right Front/Left Rear Traction C	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Antilock braking system	Active Test	Left Front/Right Rear Traction C	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Antilock braking system	Active Test	Right Front/Left Rear Traction C	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Antilock braking system	Active Test	Left Front Dump	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Antilock braking system	Active Test	Left Front Isolation valve	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Antilock braking system	Active Test	Right Front Dump	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Antilock braking system	Active Test	Right Front Isolation Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Antilock braking system	Active Test	Left Rear Dump	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Antilock braking system	Active Test	Left Rear Isolation Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Antilock braking system	Active Test	Right Rear Dump	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Antilock braking system	Active Test	Right Rear Isolation Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Battery Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Battery Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Battery Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Front Controls Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Front Controls Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Front Controls Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Front Controls Interface Module	Active Test	Bezel Illumination	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Front Display Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Front Display Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Front Display Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Front Display Interface Module	Active Test	Bezel Illumination	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	Horn	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	Dimmable Backlighting	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	Brake/Shift Interlock	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	Parking Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	Key Pad Backlighting	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	Accessory Delay Relay Circuit	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	White Lighting Circuit	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	Floor Lamp Output Circuit	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	Interior Lighting Circuit	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	Right Front Turn Lamp Output S	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	Smart Window Control	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	Right Rear Turn Signal/Trailer R	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	Right Rear Turn Signal/Lamp Sta	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	Right Rear Turn Signal/Trailer Rel	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	Left Rear Turn Signal Lamp Statu	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	Left Front Mirror Turn Signal Lar	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	Left Front Turn Lamp Output St	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	Low Beam Circuit Status Right Fr	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	Low Beam Circuit Status Left Fr	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	Fog Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	Mirror Puddle Lamps	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	Right Front Mirror Turn Signal L	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	All Door Unlock	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	All Door Lock	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	Liftgate release	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	Liftglass/Trunk Release	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Generic Electronic Module / Smart Jun	Active Test	High Beam	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Speedometer	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Assist Gauge Pointer Placement	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	High Beam Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Low Fuel Warning Indication	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Oil Pressure Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Check Engine Malfunction Indica	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Generator lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Brake Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Tire Pressure Monitoring System	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Airbag	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Right Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Left Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Engine over-temperature light	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Cruise control lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Wrench Telltale Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Traction Assist Active Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Turn Signal Left On Warning Chi	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Turn Signal Click (turn signal TT	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Turn Signal Click (turn signal TT	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Belt Minder Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Key In Ignition Reminder Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Message Center Warning Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Park Brake Warning Chime	V1.20.001

Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Seatbelt Warning Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Headlamps on Reminder Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Airbag Secondary Warning	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Charge Gauge Pointer Placemer	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	HEV Hazard Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	HEV Ready Light	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Roll Stability Control	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Instrument Cluster	Active Test	Tachometer	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Occupant Classification System Modul	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Occupant Classification System Modul	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Occupant Classification System Modul	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Parking Aid Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Parking Aid Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Parking Aid Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Parking Aid Module	Active Test	Activate System	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Parking Aid Module	Active Test	Activate Light Emitting Diode	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Parking Aid Module	Active Test	Activate Rear Speaker	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Powertrain Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Powertrain Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Powertrain Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Powertrain Control Module	Active Test	Fan control high speed	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Powertrain Control Module	Active Test	Fan control low speed	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Powertrain Control Module	Active Test	Injector 1 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Powertrain Control Module	Active Test	Injector 2 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Powertrain Control Module	Active Test	Injector 3 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Powertrain Control Module	Active Test	Injector 4 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Powertrain Control Module	Active Test	Heater control for Heated Exhau	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Powertrain Control Module	Active Test	Heater control for Heated Exhau	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Powertrain Control Module	Active Test	DC to DC Converter Enable	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Powertrain Control Module	Active Test	Heater Pump Commanded	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Powertrain Control Module	Active Test	Motor Electronics Coolant Pump	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Powertrain Control Module	Active Test	Desired camshaft angle for all b	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Powertrain Control Module	Active Test	Evaporative Emission System Va	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Power Steering Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Power Steering Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Restraint Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Restraint Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Restraint Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Satellite Digital Audio Receiver System	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Satellite Digital Audio Receiver System	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Satellite Digital Audio Receiver System	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Satellite Digital Audio Receiver System	Active Test	Satellite Digital Audio Receiver C	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Transmission Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Transmission Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Transmission Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Audio Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Audio Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Audio Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Accessory Protocol Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Accessory Protocol Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Accessory Protocol Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Heating Ventilation Air Conditioning	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Heating Ventilation Air Conditioning	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Heating Ventilation Air Conditioning	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Heating Ventilation Air Conditioning	Active Test	Blower motor control command	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Heating Ventilation Air Conditioning	Active Test	recirculation door close comman	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Heating Ventilation Air Conditioning	Active Test	recirculation door open comman	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Heating Ventilation Air Conditioning	Active Test	Left Blend Door Position	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Heating Ventilation Air Conditioning	Active Test	Right Blend Door Position	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Heating Ventilation Air Conditioning	Active Test	Dimming Control Command	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Heating Ventilation Air Conditioning	Active Test	Heated Backlight Relay	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Heating Ventilation Air Conditioning	Active Test	All segments	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Heating Ventilation Air Conditioning	Active Test	Front Blower Relay	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Heating Ventilation Air Conditioning	Active Test	Rear Window Defog Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2009 Heating Ventilation Air Conditioning	Active Test	Air conditioning Floor Servo Pos	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Powertrain Control Module	Read DTC		V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Powertrain Control Module	Erase DTC		V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Powertrain Control Module	Live Data		V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001

BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Warm Up Solenoid	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Glow plug lamp	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Passenger compartment temper	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Glow plug control	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Electronic Throttle Control Desir	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Transmission Control Module	Read DTC		V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	2.0L	RF_T	2007 Transmission Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Active Test	Injector 1	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Active Test	Injector 2	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Active Test	Injector 3	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Active Test	Injector 4	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Active Test	Warm Up Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Active Test	Glow plug lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Active Test	Passenger compartment temper	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Active Test	Glow plug control	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 Powertrain Control Module	Active Test	Electronic Throttle Control Desir	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997 Security module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997 Security module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997 Hybrid Electronic Cluster	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997 Hybrid Electronic Cluster	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997 Hybrid Electronic Cluster	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997 Hybrid Electronic Cluster	Active Test	Tachometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997 Hybrid Electronic Cluster	Active Test	Temperature Gauge	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997 Hybrid Electronic Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997 Hybrid Electronic Cluster	Active Test	All segments	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997 Hybrid Electronic Cluster	Active Test	Speedometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997 Powertrain Control Module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997 Powertrain Control Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997 Powertrain Control Module	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997 Powertrain Control Module	Active Test	Engine cooling fan	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Antilock braking system	Read DTC		V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Antilock braking system	Erase DTC		V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Antilock braking system	Live Data		V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Generic Electronic Module	Read DTC		V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Generic Electronic Module	Erase DTC		V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Generic Electronic Module	Live Data		V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Generic Electronic Module	Active Test	Rear Wiper Relay	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Generic Electronic Module	Active Test	Horn	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Generic Electronic Module	Active Test	Lock/Unlock Double Lock	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Generic Electronic Module	Active Test	Lock/Unlock Central Lock	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Generic Electronic Module	Active Test	Accessory Delay Relay	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Generic Electronic Module	Active Test	Head Lamps	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Generic Electronic Module	Active Test	Hazard Flashers	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Generic Electronic Module	Active Test	Security Horn Alarm	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Instrument Cluster	Read DTC		V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Instrument Cluster	Erase DTC		V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Instrument Cluster	Live Data		V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Powertrain Control Module	Read DTC		V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Powertrain Control Module	Erase DTC		V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Powertrain Control Module	Live Data		V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Powertrain Control Module	Active Test	3-2 Timing Solenoid Valve	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Ser	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Powertrain Control Module	Active Test	Injector 4	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Powertrain Control Module	Active Test	Injector 2	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Powertrain Control Module	Active Test	Injector 3	V1.20.001
Escape / Tribute (- 2006/3)	2.3L	L3	2003 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001

MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2005 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2005 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2005 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2005 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2005 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2005 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2005 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2005 Restraint Control Module	Read DTC		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2005 Restraint Control Module	Erase DTC		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2005 Restraint Control Module	Live Data		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2005 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2005 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2005 Remote Keyless Entry	Live Data		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2005 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2005 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2005 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2005 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2005 Remote Keyless Entry	Active Test	Super Lock	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2005 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2005 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Antilock braking system	Read DTC		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Antilock braking system	Erase DTC		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Antilock braking system	Live Data		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Antilock braking system	Active Test	Traction control priming valve fr	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Antilock braking system	Active Test	Calibrate Master Cylinder Pressu	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Antilock braking system	Active Test	Left Front Traction Control Switc	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Antilock braking system	Active Test	Traction control switching valve	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Antilock braking system	Active Test	Left Front Traction Control Prim	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Electronic Automatic Temperature Cor	Live Data		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Generic Electronic Module	Read DTC		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Generic Electronic Module	Erase DTC		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Generic Electronic Module	Live Data		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Instrument Cluster	Read DTC		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Instrument Cluster	Erase DTC		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Instrument Cluster	Live Data		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Left Power Sliding Door Module	Read DTC		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Left Power Sliding Door Module	Erase DTC		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Left Power Sliding Door Module	Live Data		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Read DTC		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Live Data		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Restraint Control Module	Read DTC		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Restraint Control Module	Erase DTC		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-2.0L	LF	2007 Restraint Control Module	Live Data		V1.20.001

BT-50 / Ranger	2.6L	G6	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
BT-50 / Ranger	2.6L	G6	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
BT-50 / Ranger	2.6L	G6	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
BT-50 / Ranger	2.6L	G6	2007 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
BT-50 / Ranger	2.6L	G6	2007 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
BT-50 / Ranger	2.6L	G6	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
BT-50 / Ranger	2.6L	G6	2007 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
BT-50 / Ranger	2.6L	G6	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
BT-50 / Ranger	2.6L	G6	2007 Restraint Control Module	Read DTC		V1.20.001
BT-50 / Ranger	2.6L	G6	2007 Restraint Control Module	Erase DTC		V1.20.001
BT-50 / Ranger	2.6L	G6	2007 Restraint Control Module	Live Data		V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
BT-50 / Ranger	2.5L	WL-CD	2007 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997,5 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997,5 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997,5 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997,5 Security module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997,5 Security module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997,5 Hybrid Electronic Cluster	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997,5 Hybrid Electronic Cluster	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997,5 Hybrid Electronic Cluster	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997,5 Hybrid Electronic Cluster	Active Test	Tachometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997,5 Hybrid Electronic Cluster	Active Test	Temperature Gauge	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997,5 Hybrid Electronic Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997,5 Hybrid Electronic Cluster	Active Test	All segments	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997,5 Hybrid Electronic Cluster	Active Test	Speedometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997,5 Powertrain Control Module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997,5 Powertrain Control Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997,5 Powertrain Control Module	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997,5 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997,5 Powertrain Control Module	Active Test	Engine cooling fan	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997,5 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997,5 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997,5 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997,5 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1997,5 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF_T	2005 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF_T	2005 Powertrain Control Module	Active Test	Engine cooling fan	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF_T	2005 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF_T	2005 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF_T	2005 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF_T	2005 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF_T	2005 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Engine cooling fan	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Active	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Passive Anti-Theft System	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Passive Anti-Theft System	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Passive Anti-Theft System	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Passive Anti-Theft System	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Passive Anti-Theft System	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Remote Anti-Theft / Personality Modu	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Remote Anti-Theft / Personality Modu	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Remote Anti-Theft / Personality Modu	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Remote Anti-Theft / Personality Modu	Active Test	Parking Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Remote Anti-Theft / Personality Modu	Active Test	LOCK	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Remote Anti-Theft / Personality Modu	Active Test	Horn Output	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Remote Anti-Theft / Personality Modu	Active Test	All Door Unlock	V1.20.001

Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Remote Anti-Theft / Personality Modu	Active Test	Interior Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Remote Anti-Theft / Personality Modu	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Restraint Control Module	Active Test	Airbag Warning Lamp and Chim	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Active Test	Door Ajar Warning Lamp circuit	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Active Test	Center Axle Engage Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Active Test	Speed Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Active Test	Wiper Run Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Active Test	Down Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Active Test	Transfer Case Shift Relay (LZH) c	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Active Test	Over Speed Warning Chime	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Active Test	Washer Pump Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Active Test	Accessory Delay Relay	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Active Test	Heated Backlight Relay	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Active Test	Center Axle Disconnect Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Active Test	One Touch Down Motor Relay	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 Generic Electronic Module	Active Test	Up Relay Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Security module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Security module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Electronic Crash Sensor	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Electronic Crash Sensor	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Electronic Crash Sensor	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Hybrid Electronic Cluster	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Hybrid Electronic Cluster	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Hybrid Electronic Cluster	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Hybrid Electronic Cluster	Active Test	Tachometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Hybrid Electronic Cluster	Active Test	Temperature Gauge	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Hybrid Electronic Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Hybrid Electronic Cluster	Active Test	All segments	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Hybrid Electronic Cluster	Active Test	Speedometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Powertrain Control Module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Powertrain Control Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Powertrain Control Module	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Security module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Security module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Electronic Crash Sensor	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Electronic Crash Sensor	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Electronic Crash Sensor	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Generic Electronic Module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Generic Electronic Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Generic Electronic Module	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Generic Electronic Module	Active Test	Wiper Run Relay Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Hybrid Electronic Cluster	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Hybrid Electronic Cluster	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Hybrid Electronic Cluster	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Hybrid Electronic Cluster	Active Test	Tachometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Hybrid Electronic Cluster	Active Test	Temperature Gauge	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Hybrid Electronic Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Hybrid Electronic Cluster	Active Test	All segments	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Hybrid Electronic Cluster	Active Test	Speedometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Powertrain Control Module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Powertrain Control Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Powertrain Control Module	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001

Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Generic Electronic Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Generic Electronic Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Generic Electronic Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Generic Electronic Module	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Generic Electronic Module	Active Test	Door Ajar Warning Lamp circuit	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Generic Electronic Module	Active Test	Center Axle Engage Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Generic Electronic Module	Active Test	Speed Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Generic Electronic Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Generic Electronic Module	Active Test	Wiper Run Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Generic Electronic Module	Active Test	Transfer Case Shift Relay (LZH) c	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Generic Electronic Module	Active Test	Pulse-width modulation status C	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Generic Electronic Module	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Generic Electronic Module	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Generic Electronic Module	Active Test	Washer Pump Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Generic Electronic Module	Active Test	Accessory Delay Relay	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Generic Electronic Module	Active Test	Neutral Tow Light	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Generic Electronic Module	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Generic Electronic Module	Active Test	Heated Backlight Relay	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Generic Electronic Module	Active Test	Center Axle Disconnect Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Generic Electronic Module	Active Test	One Touch Down Motor Relay	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Integrated Air Bag Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Integrated Air Bag Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Integrated Air Bag Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Integrated Air Bag Module	Active Test	Airbag Warning Lamp and Chim	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Remote Anti-Theft / Personality Modu	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Remote Anti-Theft / Personality Modu	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Remote Anti-Theft / Personality Modu	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Remote Anti-Theft / Personality Modu	Active Test	Parking Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Remote Anti-Theft / Personality Modu	Active Test	Horn Output	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Remote Anti-Theft / Personality Modu	Active Test	All Door Unlock	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Remote Anti-Theft / Personality Modu	Active Test	Interior Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1997 Remote Anti-Theft / Personality Modu	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Security module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Security module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Electronic Crash Sensor	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Electronic Crash Sensor	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Electronic Crash Sensor	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Hybrid Electronic Cluster	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Hybrid Electronic Cluster	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Hybrid Electronic Cluster	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Hybrid Electronic Cluster	Active Test	Tachometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Hybrid Electronic Cluster	Active Test	Temperature Gauge	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Hybrid Electronic Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Hybrid Electronic Cluster	Active Test	All segments	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Hybrid Electronic Cluster	Active Test	Speedometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Powertrain Control Module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Powertrain Control Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Powertrain Control Module	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2009 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997 Generic Electronic Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997 Generic Electronic Module	Erase DTC		V1.20.001

Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Generic Electronic Module	Live Data	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Generic Electronic Module	Active Test	Four wheel drive HIGH Indicator V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Generic Electronic Module	Active Test	Door Ajar Warning Lamp circuit V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Generic Electronic Module	Active Test	Center Axle Engage Solenoid V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Generic Electronic Module	Active Test	Speed Relay Control V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Generic Electronic Module	Active Test	Clockwise Relay Control V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Generic Electronic Module	Active Test	Wiper Run Relay Control V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Generic Electronic Module	Active Test	Interior courtesy lamps V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Generic Electronic Module	Active Test	Transfer Case Shift Relay (L2H) c V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Generic Electronic Module	Active Test	Pulse-width modulation status C V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Generic Electronic Module	Active Test	Safety Belt Warning Lamp V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Generic Electronic Module	Active Test	Chimer control V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Generic Electronic Module	Active Test	Washer Pump Relay Control V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Generic Electronic Module	Active Test	Accessory Delay Relay V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Generic Electronic Module	Active Test	Neutral Tow Light V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Generic Electronic Module	Active Test	4WD Low Indicator Status V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Generic Electronic Module	Active Test	Heated Backlight Relay V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Generic Electronic Module	Active Test	Center Axle Disconnect Solenoid V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step) V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Generic Electronic Module	Active Test	Battery Saver Relay Control V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Generic Electronic Module	Active Test	One Touch Down Motor Relay V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Integrated Air Bag Module	Read DTC	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Integrated Air Bag Module	Erase DTC	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Integrated Air Bag Module	Live Data	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Integrated Air Bag Module	Active Test	Airbag Warning Lamp and Chim V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Powertrain Control Module	Read DTC	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Powertrain Control Module	Erase DTC	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Powertrain Control Module	Live Data	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Powertrain Control Module	Active Test	Shift Solenoid 3 V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Powertrain Control Module	Active Test	Shift Solenoid 1 V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Powertrain Control Module	Active Test	Spark Advance V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Powertrain Control Module	Active Test	Torque Converter Clutch Soleno V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Powertrain Control Module	Active Test	Idle Air Control V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Powertrain Control Module	Active Test	Evaporative Emission Canister V V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Powertrain Control Module	Active Test	Fuel pump V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Powertrain Control Module	Active Test	Shift Solenoid 2 V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Powertrain Control Module	Active Test	Electronic Pressure Control V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Remote Anti-Theft / Personality Modu	Read DTC	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Remote Anti-Theft / Personality Modu	Erase DTC	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Remote Anti-Theft / Personality Modu	Live Data	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Remote Anti-Theft / Personality Modu	Active Test	Parking Lamps V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Remote Anti-Theft / Personality Modu	Active Test	Horn Output V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Remote Anti-Theft / Personality Modu	Active Test	All Door Unlock V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Remote Anti-Theft / Personality Modu	Active Test	Interior Lamps V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1997	Remote Anti-Theft / Personality Modu	Active Test	Driver's Door Unlock (or 2-Step) V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Anti-Lock Brake / Traction Control Mo	Read DTC	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Anti-Lock Brake / Traction Control Mo	Erase DTC	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Anti-Lock Brake / Traction Control Mo	Live Data	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Security module	Read DTC	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Security module	Erase DTC	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Electronic Crash Sensor	Read DTC	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Electronic Crash Sensor	Erase DTC	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Electronic Crash Sensor	Live Data	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Generic Electronic Module	Read DTC	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Generic Electronic Module	Erase DTC	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Generic Electronic Module	Live Data	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Generic Electronic Module	Active Test	Wiper Run Relay Control V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Hybrid Electronic Cluster	Read DTC	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Hybrid Electronic Cluster	Erase DTC	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Hybrid Electronic Cluster	Live Data	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Hybrid Electronic Cluster	Active Test	Tachometer V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Hybrid Electronic Cluster	Active Test	Temperature Gauge V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Hybrid Electronic Cluster	Active Test	Fuel Gauge Indicator Control V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Hybrid Electronic Cluster	Active Test	All segments V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Hybrid Electronic Cluster	Active Test	Speedometer V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Powertrain Control Module	Read DTC	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Powertrain Control Module	Erase DTC	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Powertrain Control Module	Live Data	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Powertrain Control Module	Active Test	Idle Air Control V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Powertrain Control Module	Active Test	Spark Advance V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Powertrain Control Module	Active Test	Evaporative Emission Canister V V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Powertrain Control Module	Active Test	Fuel pump V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999,75	Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997	Anti-Lock Brake / Traction Control Mo	Read DTC	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997	Anti-Lock Brake / Traction Control Mo	Erase DTC	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997	Anti-Lock Brake / Traction Control Mo	Live Data	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997	Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997	Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997	Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997	Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997	Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997	Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997	Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997	Generic Electronic Module	Read DTC	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997	Generic Electronic Module	Erase DTC	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997	Generic Electronic Module	Live Data	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997	Generic Electronic Module	Active Test	Four wheel drive HIGH Indicator V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997	Generic Electronic Module	Active Test	Door Ajar Warning Lamp circuit V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997	Generic Electronic Module	Active Test	Center Axle Engage Solenoid V1.20.001

Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Generic Electronic Module	Active Test	Speed Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Generic Electronic Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Generic Electronic Module	Active Test	Wiper Run Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Generic Electronic Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Generic Electronic Module	Active Test	Pulse-width modulation status C	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Generic Electronic Module	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Generic Electronic Module	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Generic Electronic Module	Active Test	Washer Pump Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Generic Electronic Module	Active Test	Accessory Delay Relay	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Generic Electronic Module	Active Test	Neutral Tow Light	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Generic Electronic Module	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Generic Electronic Module	Active Test	Heated Backlight Relay	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Generic Electronic Module	Active Test	Center Axle Disconnect Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Generic Electronic Module	Active Test	One Touch Down Motor Relay	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Integrated Air Bag Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Integrated Air Bag Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Integrated Air Bag Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Integrated Air Bag Module	Active Test	Airbag Warning Lamp and Chim	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Remote Anti-Theft / Personality Modu	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Remote Anti-Theft / Personality Modu	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Remote Anti-Theft / Personality Modu	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Remote Anti-Theft / Personality Modu	Active Test	Parking Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Remote Anti-Theft / Personality Modu	Active Test	Horn Output	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Remote Anti-Theft / Personality Modu	Active Test	All Door Unlock	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Remote Anti-Theft / Personality Modu	Active Test	Interior Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1997 Remote Anti-Theft / Personality Modu	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 4X4 Control Module	Read DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 4X4 Control Module	Erase DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 4X4 Control Module	Live Data		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 4X4 Control Module	Active Test	Pulse-width modulation status C	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 4X4 Control Module	Active Test	Four wheel drive Mode Lamp	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Antilock braking system	Read DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Antilock braking system	Erase DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Antilock braking system	Live Data		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Antilock braking system	Active Test	Booster Learn Cycle	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Antilock braking system	Active Test	Longitudinal Acceleration Senso	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Antilock braking system	Active Test	rear-only dump valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Antilock braking system	Active Test	rear-only isolation valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Antilock braking system	Active Test	Primary Low Pressure supply V:	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Antilock braking system	Active Test	Right Rear Traction Assist Valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Antilock braking system	Active Test	Secondary Low Pressure Feed V:	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Antilock braking system	Active Test	Pressure transducer	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Antilock braking system	Active Test	Left Rear Traction Control Valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Accessory Protocol Interface Module	Read DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Accessory Protocol Interface Module	Erase DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Accessory Protocol Interface Module	Live Data		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Front Controls Interface Module	Read DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Front Controls Interface Module	Erase DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Front Controls Interface Module	Live Data		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Front Controls Interface Module	Active Test	Bezel Illumination	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Front Display Interface Module	Read DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Front Display Interface Module	Erase DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Front Display Interface Module	Live Data		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Read DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Erase DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Live Data		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Active Test	Horn	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Active Test	Dimmable Backlighting	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Active Test	Brake/Shift Interlock	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Active Test	Parking Lamp	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Active Test	Key Pad Backlighting	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Active Test	Accessory Delay Relay Circuit	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Active Test	White Lighting Circuit	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Active Test	Floor Lamp Output Circuit	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Active Test	Interior Lighting Circuit	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Active Test	Right Front Turn Lamp Output S	V1.20.001

Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun Active Test	Smart Window Control	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun Active Test	Right Rear Turn Signal/Trailer R	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun Active Test	Right Rear Turn Signal Lamp Sta	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun Active Test	Left Rear Turn Signal/Trailer Rel	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun Active Test	Left Rear Turn Signal Lamp Stat	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun Active Test	Left Front Mirror Turn Signal Lar	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun Active Test	Left Front Turn Lamp Output St	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun Active Test	Low Beam Circuit Status Right Fr	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun Active Test	Low Beam Circuit Status Left Fr	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun Active Test	Fog Lamp	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun Active Test	Mirror Puddle Lamps	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun Active Test	Right Front Mirror Turn Signal L	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun Active Test	All Door Unlock	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun Active Test	All Door Lock	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun Active Test	Liftgate release	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun Active Test	Liftglass/Trunk Release	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun Active Test	High Beam	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Global Positioning System Module	Read DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Global Positioning System Module	Erase DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Global Positioning System Module	Live Data	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Read DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Erase DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Live Data	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	All segments	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	High Beam Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Low Fuel Warning Indication	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Oil Pressure Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Check Engine Malfunction Indica	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Generator lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Over Drive (O/D) off	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Brake Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Tire Pressure Monitoring System	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Airbag	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Right Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Left Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Cruise control lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Check fuel cap indicator lamp cc	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Wrench Telltale Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Traction Assist Active Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Turn Signal Left On Warning Chi	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Turn Signal Click (turn signal TT	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Turn Signal Clack (turn signal TT	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Belt Minder Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Key In Ignition Reminder Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Message Center Warning Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Park Brake Warning Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Seatbelt Warning Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Headlamps on Reminder Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Airbag Secondary Warning	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Speedometer Gauge Indicator C	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Roll Stability Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Tachometer	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Occupant Classification System Modul	Read DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Occupant Classification System Modul	Erase DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Occupant Classification System Modul	Live Data	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Parking Aid Module	Read DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Parking Aid Module	Erase DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Parking Aid Module	Live Data	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Read DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Erase DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Live Data	V1.20.001	
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Starter Motor Control Output D	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	One-Touch Start Status	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Fan control high speed	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Fan control low speed	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Air Conditioning Compressor Co	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Injector 1 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Injector 2 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Injector 3 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Injector 4 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Heater control for Heated Exha	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Firm Shift	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Heater control for Heated Exha	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Engine Revolutions Per Minute	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Converter Pressure Control	V1.20.001

Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Pressure Control Solenoid A	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Gear Command by Output State	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Desired camshaft angle for all b	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Power Steering Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Power Steering Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Restraint Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Restraint Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Restraint Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Audio Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Audio Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Audio Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Heating Ventilation Air Conditioning	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Heating Ventilation Air Conditioning	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Heating Ventilation Air Conditioning	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Heating Ventilation Air Conditioning	Active Test	Blower motor control command	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Heating Ventilation Air Conditioning	Active Test	recirculation door close comman	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Heating Ventilation Air Conditioning	Active Test	recirculation door open comman	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Heating Ventilation Air Conditioning	Active Test	Left Blend Door Position	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Heating Ventilation Air Conditioning	Active Test	Right Blend Door Position	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Heating Ventilation Air Conditioning	Active Test	Dimming Control Command	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Heating Ventilation Air Conditioning	Active Test	Heated Backlight Relay	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Heating Ventilation Air Conditioning	Active Test	All segments	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Heating Ventilation Air Conditioning	Active Test	Front Blower Relay	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Heating Ventilation Air Conditioning	Active Test	Rear Window Defog Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2010 Heating Ventilation Air Conditioning	Active Test	Air conditioning Floor Servo Pos	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 4X4 Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 4X4 Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 4X4 Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 4X4 Control Module	Active Test	Pulse-width modulation status C	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 4X4 Control Module	Active Test	Four wheel drive Mode Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Antilock braking system	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Antilock braking system	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Antilock braking system	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Antilock braking system	Active Test	Booster Learn Cycle	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Antilock braking system	Active Test	Longitudinal Acceleration Sens	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Antilock braking system	Active Test	rear-only dump valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Antilock braking system	Active Test	rear-only isolation valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Antilock braking system	Active Test	Lateral Accel Sensor Initializat	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Antilock braking system	Active Test	Primary Low Pressure supply V	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Antilock braking system	Active Test	Yaw Rate Sensor Initialization S	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Antilock braking system	Active Test	Right Rear Traction Assist Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Antilock braking system	Active Test	Pressure transducer	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Antilock braking system	Active Test	Left Rear Traction Control Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Accessory Protocol Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Accessory Protocol Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Accessory Protocol Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Front Controls Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Front Controls Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Front Controls Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Front Controls Interface Module	Active Test	Bezel Illumination	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Front Display Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Front Display Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Front Display Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Generic Electronic Module / Smart Jun	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Generic Electronic Module / Smart Jun	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Generic Electronic Module / Smart Jun	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Generic Electronic Module / Smart Jun	Active Test	Horn	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Generic Electronic Module / Smart Jun	Active Test	Dimmable Backlighting	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Generic Electronic Module / Smart Jun	Active Test	Brake/Shift Interlock	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Generic Electronic Module / Smart Jun	Active Test	Parking Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Generic Electronic Module / Smart Jun	Active Test	Key Pad Backlighting	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Generic Electronic Module / Smart Jun	Active Test	Accessory Delay Relay Circuit	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Generic Electronic Module / Smart Jun	Active Test	White Lighting Circuit	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Generic Electronic Module / Smart Jun	Active Test	Floor Lamp Output Circuit	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Generic Electronic Module / Smart Jun	Active Test	Interior Lighting Circuit	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Generic Electronic Module / Smart Jun	Active Test	Right Front Turn Lamp Output S	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Generic Electronic Module / Smart Jun	Active Test	Smart Window Control	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Generic Electronic Module / Smart Jun	Active Test	Right Rear Turn Signal/Trailer R	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Generic Electronic Module / Smart Jun	Active Test	Right Rear Turn Signal Lamp Sta	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Generic Electronic Module / Smart Jun	Active Test	Left Rear Turn Signal/Trailer Rel	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Generic Electronic Module / Smart Jun	Active Test	Left Rear Turn Signal Lamp Stat	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Generic Electronic Module / Smart Jun	Active Test	Left Front Mirror Turn Signal Lar	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Generic Electronic Module / Smart Jun	Active Test	Left Front Turn Lamp Output Sta	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Generic Electronic Module / Smart Jun	Active Test	Low Beam Circuit Status Right Fr	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Generic Electronic Module / Smart Jun	Active Test	Low Beam Circuit Status Left Fr	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Generic Electronic Module / Smart Jun	Active Test	Fog Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Generic Electronic Module / Smart Jun	Active Test	Mirror Puddle Lamps	V1.20.001

Escape/Tribute / Mariner	3.0L	4V	2010 Power Steering Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Power Steering Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Restraint Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Restraint Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Restraint Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Audio Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Audio Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Audio Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Heating Ventilation Air Conditioning	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Heating Ventilation Air Conditioning	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Heating Ventilation Air Conditioning	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Heating Ventilation Air Conditioning	Active Test	Blower motor control command	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Heating Ventilation Air Conditioning	Active Test	recirculation door close command	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Heating Ventilation Air Conditioning	Active Test	recirculation door open command	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Heating Ventilation Air Conditioning	Active Test	Left Blend Door Position	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Heating Ventilation Air Conditioning	Active Test	Right Blend Door Position	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Heating Ventilation Air Conditioning	Active Test	Dimming Control Command	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Heating Ventilation Air Conditioning	Active Test	Heated Backlight Relay	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Heating Ventilation Air Conditioning	Active Test	All segments	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Heating Ventilation Air Conditioning	Active Test	Front Blower Relay	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Heating Ventilation Air Conditioning	Active Test	Rear Window Defog Indicator	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2010 Heating Ventilation Air Conditioning	Active Test	Air conditioning Floor Servo Pos	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 4X4 Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 4X4 Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 4X4 Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 4X4 Control Module	Active Test	Pulse-width modulation status C	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 4X4 Control Module	Active Test	Four wheel drive Mode Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Antilock braking system	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Antilock braking system	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Antilock braking system	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Antilock braking system	Active Test	ABS Booster Solenoid Current	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Antilock braking system	Active Test	Vacuum Pump Status	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Antilock braking system	Active Test	Pedal Simulator Unit Cutoff Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Antilock braking system	Active Test	Left Front Brake Pressure	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Antilock braking system	Active Test	Right Front Brake Pressure	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Antilock braking system	Active Test	Left Rear Brake Pressure	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Antilock braking system	Active Test	Right Rear Brake Pressure	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Antilock braking system	Active Test	Left Front/Right Rear Traction C	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Antilock braking system	Active Test	Right Front/Left Rear Traction C	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Antilock braking system	Active Test	Left Front/Right Rear Traction C	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Antilock braking system	Active Test	Right Front/Left Rear Traction C	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Antilock braking system	Active Test	Left Front Dump	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Antilock braking system	Active Test	Left Front Isolation valve	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Antilock braking system	Active Test	Right Front Dump	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Antilock braking system	Active Test	Right Front Isolation Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Antilock braking system	Active Test	Left Rear Dump	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Antilock braking system	Active Test	Left Rear Isolation Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Antilock braking system	Active Test	Right Rear Dump	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Antilock braking system	Active Test	Right Rear Isolation Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Air Conditioning Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Air Conditioning Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Air Conditioning Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Accessory Protocol Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Accessory Protocol Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Accessory Protocol Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Battery Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Battery Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Battery Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Front Controls Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Front Controls Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Front Controls Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Front Controls Interface Module	Active Test	Bezel Illumination	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Front Display Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Front Display Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Front Display Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Active Test	Horn	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Active Test	Dimmable Backlighting	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Active Test	Brake/Shift Interlock	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Active Test	Parking Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Active Test	Key Pad Backlighting	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Active Test	Accessory Delay Relay Circuit	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Active Test	White Lighting Circuit	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Active Test	Floor Lamp Output Circuit	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Active Test	Interior Lighting Circuit	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Active Test	Right Front Turn Lamp Output S	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Active Test	Smart Window Control	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Active Test	Right Rear Turn Signal/Trailer Re	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Active Test	Right Rear Turn Signal Lamp Sta	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Active Test	Left Rear Turn Signal/Trailer Rel	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Active Test	Left Rear Turn Signal Lamp Stati	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Active Test	Left Front Mirror Turn Signal Lar	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Active Test	Left Front Turn Lamp Output Sta	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Active Test	Low Beam Circuit Status Right Fr	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Active Test	Low Beam Circuit Status Left Fr	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Active Test	Fog Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Active Test	Mirror Puddle Lamps	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Active Test	Right Front Mirror Turn Signal Li	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001

Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun Active Test	All Door Unlock	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun Active Test	All Door Lock	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun Active Test	Liftgate release	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun Active Test	Liftglass/Trunk Release	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Generic Electronic Module / Smart Jun Active Test	High Beam	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Global Positioning System Module	Read DTC	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Global Positioning System Module	Erase DTC	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Global Positioning System Module	Live Data	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Read DTC	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Erase DTC	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Live Data	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Speedometer
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Fuel Gauge Indicator Control
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Assist Gauge Pointer Placement
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	High Beam Indicator
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	All Warning Lamps
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Safety Belt Warning Lamp
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Door Ajar Warning Indicator
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Low Fuel Warning Indication
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Oil Pressure Warning Lamp
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Check Engine Malfunction Indica
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Generator lamp
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Antilock braking system Warnin
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Brake Warning Lamp
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Tire Pressure Monitoring System
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Airbag
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Right Turn signal Lamp Status
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Left Turn signal Lamp Status
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Engine over-temperature light
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Cruise control lamp
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Wrench Telltale Indicator
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Traction Assist Active Indicator
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Turn Signal Left On Warning Chi
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Turn Signal Click (turn signal TT
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Turn Signal Clack (turn signal TT
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Belt Minder Chime
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Key In Ignition Reminder Chime
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Message Center Warning Chime
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Park Brake Warning Chime
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Seatbelt Warning Chime
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Headlamps on Reminder Chime
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Airbag Secondary Warning
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Anti-Theft Indicator Lamp Contr
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Charge Gauge Pointer Placemer
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	HEV Hazard Indicator
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	HEV Ready Light
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Anti-Theft RF Enable and Trans
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Roll Stability Control
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Instrument Cluster	Active Test	Tachometer
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Occupant Classification System Modul	Read DTC	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Occupant Classification System Modul	Erase DTC	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Occupant Classification System Modul	Live Data	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Parking Aid Module	Read DTC	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Parking Aid Module	Erase DTC	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Parking Aid Module	Live Data	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Powertrain Control Module	Read DTC	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Powertrain Control Module	Erase DTC	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Powertrain Control Module	Live Data	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Powertrain Control Module	Active Test	Spark Advance
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Powertrain Control Module	Active Test	Fan control high speed
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Powertrain Control Module	Active Test	Fan control low speed
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Powertrain Control Module	Active Test	Injector 1 Disable
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Powertrain Control Module	Active Test	Injector 2 Disable
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Powertrain Control Module	Active Test	Injector 3 Disable
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Powertrain Control Module	Active Test	Injector 4 Disable
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Powertrain Control Module	Active Test	Heater control for Heated Exha
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Powertrain Control Module	Active Test	Evaporative Emission Canister V
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Powertrain Control Module	Active Test	Heater control for Heated Exha
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Powertrain Control Module	Active Test	Fuel pump
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Powertrain Control Module	Active Test	DC to DC Converter Enable
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Powertrain Control Module	Active Test	Heater Pump Commanded
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Powertrain Control Module	Active Test	Motor Electronics Coolant Pump
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Powertrain Control Module	Active Test	Desired camshaft angle for all b
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Powertrain Control Module	Active Test	Evaporative Emission Canister P
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Powertrain Control Module	Active Test	Evaporative Emission System Va
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Power Steering Control Module	Read DTC	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Power Steering Control Module	Erase DTC	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Power Steering Control Module	Live Data	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Restraint Control Module	Read DTC	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Restraint Control Module	Erase DTC	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Restraint Control Module	Live Data	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Transmission Control Module	Read DTC	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Transmission Control Module	Erase DTC	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Transmission Control Module	Live Data	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Audio Control Module	Read DTC	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Audio Control Module	Erase DTC	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Audio Control Module	Live Data	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Heating Ventilation Air Conditioning	Read DTC	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Heating Ventilation Air Conditioning	Erase DTC	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Heating Ventilation Air Conditioning	Live Data	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Heating Ventilation Air Conditioning	Active Test	Blower motor control command

Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Heating Ventilation Air Conditioning	Active Test	recirculation door close commai	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Heating Ventilation Air Conditioning	Active Test	recirculation door open commai	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Heating Ventilation Air Conditioning	Active Test	Left Blend Door Position	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Heating Ventilation Air Conditioning	Active Test	Right Blend Door Position	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Heating Ventilation Air Conditioning	Active Test	Dimming Control Command	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Heating Ventilation Air Conditioning	Active Test	Heated Backlight Relay	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Heating Ventilation Air Conditioning	Active Test	All segments	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Heating Ventilation Air Conditioning	Active Test	Front Blower Relay	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Heating Ventilation Air Conditioning	Active Test	Rear Window Defog Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2010 Heating Ventilation Air Conditioning	Active Test	Air conditioning Floor Servo Pos	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 4X4 Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 4X4 Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 4X4 Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 4X4 Control Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 4X4 Control Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 4X4 Control Module	Active Test	Neutral Tow Light	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 4X4 Control Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Generic Electronic Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Generic Electronic Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Generic Electronic Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Generic Electronic Module	Active Test	Fog Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Generic Electronic Module	Active Test	Park Lamp Output	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Generic Electronic Module	Active Test	All Doors Lock Relay	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Generic Electronic Module	Active Test	Drivers Door Unlock Output	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Generic Electronic Module	Active Test	Wiper Run Relay Driver State	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Generic Electronic Module	Active Test	Horn Control Driver	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Generic Electronic Module	Active Test	Illuminated entry relay circuit	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Generic Electronic Module	Active Test	Battery Saver Relay Status.	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Generic Electronic Module	Active Test	Clear History	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Active Test	Check fuel cap indicator lamp cc	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Active Test	Engine over-temperature light	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Active Test	Tire Pressure Monitoring System	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Active Test	Speed Control Set Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Active Test	Restraints Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Active Test	Fog Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Active Test	Speedometer	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Active Test	Tachometer	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Active Test	Fuel Level Low Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Active Test	Check Engine Malfunction Indica	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Active Test	Brake Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Active Test	Overdrive OFF Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Instrument Cluster	Active Test	Oil Pressure Low Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Occupant Classification System Modul	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Occupant Classification System Modul	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Occupant Classification System Modul	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2007 Restraint Control Module	Active Test	Passenger Airbag Deactivation L	V1.20.001

Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2007 Restraint Control Module	Active Test	Restraints Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2007 Satellite Digital Audio Receiver System Read DTC			V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2007 Satellite Digital Audio Receiver System Erase DTC			V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2007 Satellite Digital Audio Receiver System Live Data			V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2007 Satellite Digital Audio Receiver System Active Test		Satellite Digital Audio Receiver (V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 4X4 Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 4X4 Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 4X4 Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 4X4 Control Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 4X4 Control Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 4X4 Control Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 4X4 Control Module	Active Test	Neutral Tow Light	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power F	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Generic Electronic Module / Smart Jun	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Generic Electronic Module / Smart Jun	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Generic Electronic Module / Smart Jun	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Generic Electronic Module / Smart Jun	Active Test	Park Lamp Output	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Generic Electronic Module / Smart Jun	Active Test	All Doors Lock Relay	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Generic Electronic Module / Smart Jun	Active Test	Wiper Run Relay Driver State	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Generic Electronic Module / Smart Jun	Active Test	Fog Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Generic Electronic Module / Smart Jun	Active Test	Horn Control Driver	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Generic Electronic Module / Smart Jun	Active Test	Illuminated entry relay circuit	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Generic Electronic Module / Smart Jun	Active Test	Drivers Door Unlock Output	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Generic Electronic Module / Smart Jun	Active Test	Battery Saver Relay Status.	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Generic Electronic Module / Smart Jun	Active Test	Clear History	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	Speedometer	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	Tachometer	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	All segments	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	Brake Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	Check Engine Malfunction Indic	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	Overdrive OFF Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	Oil Pressure Low Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	Tire Pressure Monitoring System	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	Check fuel cap indicator lamp cc	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	Restraints Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	Fuel Level Low Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	Engine over-temperature light	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	Speed Control Set Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Instrument Cluster	Active Test	Fog Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Occupant Classification System Modul	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Occupant Classification System Modul	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Occupant Classification System Modul	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Restraint Control Module	Active Test	Restraints Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Restraint Control Module	Active Test	Passenger Airbag Deactivation L	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Satellite Digital Audio Receiver System Read DTC			V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Satellite Digital Audio Receiver System Erase DTC			V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2009 Satellite Digital Audio Receiver System Live Data			V1.20.001

Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2009 Satellite Digital Audio Receiver System Active Test	Satellite Digital Audio Receiver (V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 4X4 Control Module Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 4X4 Control Module Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 4X4 Control Module Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 4X4 Control Module Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 4X4 Control Module Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 4X4 Control Module Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 4X4 Control Module Active Test	Neutral Tow Light	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Anti-Lock Brake / Traction Control Mo Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Anti-Lock Brake / Traction Control Mo Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Anti-Lock Brake / Traction Control Mo Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Anti-Lock Brake / Traction Control Mo Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Anti-Lock Brake / Traction Control Mo Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Anti-Lock Brake / Traction Control Mo Active Test	Antilock braking system Power f	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Anti-Lock Brake / Traction Control Mo Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Anti-Lock Brake / Traction Control Mo Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Anti-Lock Brake / Traction Control Mo Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Anti-Lock Brake / Traction Control Mo Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Anti-Lock Brake / Traction Control Mo Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Anti-Lock Brake / Traction Control Mo Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Generic Electronic Module / Smart Jun Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Generic Electronic Module / Smart Jun Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Generic Electronic Module / Smart Jun Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Generic Electronic Module / Smart Jun Active Test	Park Lamp Output	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Generic Electronic Module / Smart Jun Active Test	All Doors Lock Relay	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Generic Electronic Module / Smart Jun Active Test	Fog Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Generic Electronic Module / Smart Jun Active Test	Horn Control Driver	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Generic Electronic Module / Smart Jun Active Test	Illuminated entry relay circuit	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Generic Electronic Module / Smart Jun Active Test	Drivers Door Unlock Output	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Generic Electronic Module / Smart Jun Active Test	Passenger Unlock Activated	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Generic Electronic Module / Smart Jun Active Test	Battery Saver Relay Status.	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Generic Electronic Module / Smart Jun Active Test	Accessory Delay Relay Circuit	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Generic Electronic Module / Smart Jun Active Test	Clear History	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	Speedometer	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	Tachometer	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	All segments	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	All Warning Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	Brake Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	Door Ajar Warning Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	Check Engine Malfunction Indic	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	Overdrive OFF Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	Temperature Gauge	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	Oil Pressure Low Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	Tire Pressure Monitoring System	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	Check fuel cap indicator lamp cc	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	Restraints Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	Fuel Level Low Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	Engine over-temperature light	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	Speed Control Set Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	Fog Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Instrument Cluster Active Test	Fuel Gauge Indicator Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Occupant Classification System Modul Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Occupant Classification System Modul Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Occupant Classification System Modul Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Powertrain Control Module Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Powertrain Control Module Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Powertrain Control Module Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Powertrain Control Module Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Powertrain Control Module Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Powertrain Control Module Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Powertrain Control Module Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Powertrain Control Module Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Powertrain Control Module Active Test	Line Pressure Control Desired	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Powertrain Control Module Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Powertrain Control Module Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Powertrain Control Module Active Test	Shift Solenoid 3	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Powertrain Control Module Active Test	Torque Converter Clutch Soleno	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Powertrain Control Module Active Test	Output State Control of Torque	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Powertrain Control Module Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Powertrain Control Module Active Test	Gear Commanded	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Powertrain Control Module Active Test	Coast Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Restraint Control Module Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Restraint Control Module Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Restraint Control Module Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Restraint Control Module Active Test	Restraints Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Restraint Control Module Active Test	Passenger Airbag Deactivation L	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Satellite Digital Audio Receiver System Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Satellite Digital Audio Receiver System Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Satellite Digital Audio Receiver System Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2008 Satellite Digital Audio Receiver System Active Test	Satellite Digital Audio Receiver (V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Anti-Lock Brake / Traction Control Mo Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Anti-Lock Brake / Traction Control Mo Erase DTC		V1.20.001

Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Active	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Remote Anti-Theft / Personality Modu	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Remote Anti-Theft / Personality Modu	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Remote Anti-Theft / Personality Modu	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Remote Anti-Theft / Personality Modu	Active Test	Parking Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Remote Anti-Theft / Personality Modu	Active Test	LOCK	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Remote Anti-Theft / Personality Modu	Active Test	Horn Output	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Remote Anti-Theft / Personality Modu	Active Test	All Door Unlock	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Remote Anti-Theft / Personality Modu	Active Test	Interior Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Remote Anti-Theft / Personality Modu	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Active Test	Door Ajar Warning Lamp circuit	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Active Test	Center Axle Engage Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Active Test	Clock Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Active Test	Speedwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Active Test	Wiper Run Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Active Test	Down Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Active Test	Transfer Case Shift Relay (LZH) c	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Active Test	Over Speed Warning Chime	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Active Test	Washer Pump Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Active Test	Accessory Delay Relay	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Active Test	Heated Backlight Relay	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Active Test	Center Axle Disconnect Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Active Test	One Touch Down Motor Relay	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Generic Electronic Module	Active Test	Up Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Integrated Air Bag Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Integrated Air Bag Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Integrated Air Bag Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1998 Integrated Air Bag Module	Active Test	Airbag Warning Lamp and Chim	V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Zetec	1992 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Zetec	1992 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Zetec	1992 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Zetec	1992 Security module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Zetec	1992 Security module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Zetec	1992 Hybrid Electronic Cluster	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Zetec	1992 Hybrid Electronic Cluster	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Zetec	1992 Hybrid Electronic Cluster	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Zetec	1992 Hybrid Electronic Cluster	Active Test	Tachometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Zetec	1992 Hybrid Electronic Cluster	Active Test	Temperature Gauge	V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Zetec	1992 Hybrid Electronic Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Zetec	1992 Hybrid Electronic Cluster	Active Test	All segments	V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Zetec	1992 Hybrid Electronic Cluster	Active Test	Speedometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Zetec	1992 Powertrain Control Module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Zetec	1992 Powertrain Control Module	Erase DTC		V1.20.001
PROBE / MX-6	2.0L	Other	1996 Powertrain Control Module	Read DTC		V1.20.001
PROBE / MX-6	2.0L	Other	1996 Powertrain Control Module	Erase DTC		V1.20.001
PROBE / MX-6	2.0L	Other	1996 Powertrain Control Module	Live Data		V1.20.001
PROBE / MX-6	2.0L	Other	1996 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
PROBE / MX-6	2.0L	Other	1996 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
PROBE / MX-6	2.0L	Other	1996 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
PROBE / MX-6	2.0L	Other	1996 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
PROBE / MX-6	2.0L	Other	1996 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
PROBE / MX-6	2.0L	Other	1996 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
PROBE / MX-6	2.0L	Other	1996 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
PROBE / MX-6	2.0L	Other	1996 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
PROBE / MX-6	2.0L	Other	1996 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
PROBE / MX-6	2.0L	Other	1996 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 4X4 Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 4X4 Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 4X4 Control Module	Live Data		V1.20.001

Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 4X4 Control Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 4X4 Control Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 4X4 Control Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 4X4 Control Module	Active Test	Neutral Tow Light	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Antilock braking system	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Antilock braking system	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Antilock braking system	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Antilock braking system	Active Test	Disable Valve Toggling	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Active Test	Park Lamp Output	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Active Test	All Doors Lock Relay	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Active Test	Wiper Run Relay Driver State	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Active Test	Fog Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Active Test	Horn Control Driver	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Active Test	Illuminated entry relay circuit	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Active Test	Drivers Door Unlock Output	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Active Test	Battery Saver Relay Status.	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Generic Electronic Module / Smart Jun	Active Test	Clear History	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Speedometer	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Tachometer	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	All segments	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Brake Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Check Engine Malfunction Indici	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Overdrive OFF Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Oil Pressure Low Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Tire Pressure Monitoring System	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Check fuel cap indicator lamp cc	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Chimer Test	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Restraints Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Fuel Level Low Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Engine over-temperature light	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Speed Control Set Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Fog Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Brake Input Switch Status - Brak	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Check Traction Control Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Instrument Cluster	Active Test	Traction Control Off Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Occupant Classification System Modul	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Occupant Classification System Modul	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Occupant Classification System Modul	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	EGR Motor Position Desired	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Satellite Digital Audio Receiver System	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Satellite Digital Audio Receiver System	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Satellite Digital Audio Receiver System	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2010 Satellite Digital Audio Receiver System	Active Test	Satellite Digital Audio Receiver (V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2010 4X4 Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2010 4X4 Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2010 4X4 Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2010 4X4 Control Module	Active Test	Clockwise Relay Control	V1.20.001

Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 4X4 Control Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 4X4 Control Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 4X4 Control Module	Active Test	Neutral Tow Light	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Antilock braking system	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Antilock braking system	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Antilock braking system	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Antilock braking system	Active Test	Disable Valve Toggling	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Generic Electronic Module / Smart Jun	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Generic Electronic Module / Smart Jun	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Generic Electronic Module / Smart Jun	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Generic Electronic Module / Smart Jun	Active Test	Park Lamp Output	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Generic Electronic Module / Smart Jun	Active Test	All Doors Lock Relay	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Generic Electronic Module / Smart Jun	Active Test	Wiper Run Relay Driver State	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Generic Electronic Module / Smart Jun	Active Test	Fog Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Generic Electronic Module / Smart Jun	Active Test	Horn Control Driver	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Generic Electronic Module / Smart Jun	Active Test	Illuminated entry relay circuit	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Generic Electronic Module / Smart Jun	Active Test	Drivers Door Unlock Output	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Generic Electronic Module / Smart Jun	Active Test	Battery Saver Relay Status.	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Generic Electronic Module / Smart Jun	Active Test	Clear History	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Speedometer	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Tachometer	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	All segments	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Brake Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Check Engine Malfunction Indici	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Overdrive OFF Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Oil Pressure Low Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Tire Pressure Monitoring System	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Check fuel cap indicator lamp cc	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Restraints Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Fuel Level Low Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Engine over-temperature light	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Speed Control Set Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Fog Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Brake Input Switch Status - Brak	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Check Traction Control Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Instrument Cluster	Active Test	Traction Control Off Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Occupant Classification System Modul	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Occupant Classification System Modul	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Occupant Classification System Modul	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Satellite Digital Audio Receiver System	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Satellite Digital Audio Receiver System	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Satellite Digital Audio Receiver System	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single overt	2010 Satellite Digital Audio Receiver System	Active Test	Satellite Digital Audio Receiver (V1.20.001
PROBE / MX-6	2.0L	Other	1997 Powertrain Control Module	Read DTC		V1.20.001
PROBE / MX-6	2.0L	Other	1997 Powertrain Control Module	Erase DTC		V1.20.001
PROBE / MX-6	2.0L	Other	1997 Powertrain Control Module	Live Data		V1.20.001
PROBE / MX-6	2.0L	Other	1997 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
PROBE / MX-6	2.0L	Other	1997 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
PROBE / MX-6	2.0L	Other	1997 Powertrain Control Module	Active Test	Spark Advance	V1.20.001

PROBE / MX-6	2.0L	Other	1997 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
PROBE / MX-6	2.0L	Other	1997 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
PROBE / MX-6	2.0L	Other	1997 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
PROBE / MX-6	2.0L	Other	1997 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
PROBE / MX-6	2.0L	Other	1997 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
PROBE / MX-6	2.0L	Other	1997 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
PROBE / MX-6	2.0L	Other	1997 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Anti-Lock Brake / Traction Control Mo	Read DTC	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Active	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Passive Anti-Theft System	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Passive Anti-Theft System	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Passive Anti-Theft System	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Passive Anti-Theft System	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Passive Anti-Theft System	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Remote Anti-Theft / Personality Modu	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Remote Anti-Theft / Personality Modu	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Remote Anti-Theft / Personality Modu	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Remote Anti-Theft / Personality Modu	Active Test	Parking Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Remote Anti-Theft / Personality Modu	Active Test	LOCK	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Remote Anti-Theft / Personality Modu	Active Test	Horn Output	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Remote Anti-Theft / Personality Modu	Active Test	All Door Unlock	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Remote Anti-Theft / Personality Modu	Active Test	Interior Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Remote Anti-Theft / Personality Modu	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Restraint Control Module	Active Test	Airbag Warning Lamp and Chim	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Active Test	Door Ajar Warning Lamp circuit	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Active Test	Center Axle Engage Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Active Test	Speed Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Active Test	Wiper Run Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Active Test	Down Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Active Test	Over Speed Warning Chime	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Active Test	Washer Pump Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Active Test	Accessory Delay Relay	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Active Test	Heated Backlight Relay	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Active Test	Center Axle Disconnect Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Active Test	One Touch Down Motor Relay	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Generic Electronic Module	Active Test	Up Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Active	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001

Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Powertrain Control Module	Active Test	Spear Commanded	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Remote Anti-Theft / Personality Modu	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Remote Anti-Theft / Personality Modu	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Remote Anti-Theft / Personality Modu	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Remote Anti-Theft / Personality Modu	Active Test	Parking Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Remote Anti-Theft / Personality Modu	Active Test	LOCK	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Remote Anti-Theft / Personality Modu	Active Test	Horn Output	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Remote Anti-Theft / Personality Modu	Active Test	All Door Unlock	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Remote Anti-Theft / Personality Modu	Active Test	Interior Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Remote Anti-Theft / Personality Modu	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Restraint Control Module	Active Test	Airbag Warning Lamp and Chime	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Active Test	Door Ajar Warning Lamp circuit	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Active Test	Center Axle Engage Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Active Test	Speed Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Active Test	Wiper Run Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Active Test	Down Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Active Test	Transfer Case Shift Relay (LZH) c	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Active Test	Over Speed Warning Chime	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Active Test	Washer Pump Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Active Test	Accessory Delay Relay	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Active Test	Heated Backlight Relay	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Active Test	Center Axle Disconnect Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Active Test	One Touch Down Motor Relay	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Active Test	Up Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Generic Electronic Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Generic Electronic Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Generic Electronic Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Generic Electronic Module	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Generic Electronic Module	Active Test	Door Ajar Warning Lamp circuit	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Generic Electronic Module	Active Test	Center Axle Engage Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Generic Electronic Module	Active Test	Speed Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Generic Electronic Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Generic Electronic Module	Active Test	Wiper Run Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Generic Electronic Module	Active Test	Transfer Case Shift Relay (LZH) c	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Generic Electronic Module	Active Test	Pulse-width modulation status C	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Generic Electronic Module	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Generic Electronic Module	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Generic Electronic Module	Active Test	Washer Pump Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Generic Electronic Module	Active Test	Accessory Delay Relay	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Generic Electronic Module	Active Test	Neutral Tow Light	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Generic Electronic Module	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Generic Electronic Module	Active Test	Heated Backlight Relay	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Generic Electronic Module	Active Test	Center Axle Disconnect Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Generic Electronic Module	Active Test	One Touch Down Motor Relay	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Integrated Air Bag Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Integrated Air Bag Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Integrated Air Bag Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Integrated Air Bag Module	Active Test	Airbag Warning Lamp and Chime	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001

Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Remote Anti-Theft / Personality Modu	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Remote Anti-Theft / Personality Modu	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Remote Anti-Theft / Personality Modu	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Remote Anti-Theft / Personality Modu	Active Test	Parking Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Remote Anti-Theft / Personality Modu	Active Test	Horn Output	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Remote Anti-Theft / Personality Modu	Active Test	All Door Unlock	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Remote Anti-Theft / Personality Modu	Active Test	Interior Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 Remote Anti-Theft / Personality Modu	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 4X4 Control Module	Read DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 4X4 Control Module	Erase DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 4X4 Control Module	Live Data		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 4X4 Control Module	Active Test	Pulse-width modulation status C	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 4X4 Control Module	Active Test	Four wheel drive Mode Lamp	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Antilock braking system	Read DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Antilock braking system	Erase DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Antilock braking system	Live Data		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Antilock braking system	Active Test	Right Rear Isolation Valve	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Antilock braking system	Active Test	Right Rear Dump	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Antilock braking system	Active Test	Left Rear Isolation Valve	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Antilock braking system	Active Test	Left Rear Dump	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Antilock braking system	Active Test	Right Front Isolation Valve	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Antilock braking system	Active Test	Right Front Dump	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Antilock braking system	Active Test	Left Front Isolation valve	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Antilock braking system	Active Test	Left Front Dump	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Antilock braking system	Active Test	Right Front/Left Rear Traction C	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Antilock braking system	Active Test	Left Front/Right Rear Traction C	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Antilock braking system	Active Test	Right Front/Left Rear Traction C	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Antilock braking system	Active Test	Left Front/Right Rear Traction C	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Antilock braking system	Active Test	Right Rear Brake Pressure	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Antilock braking system	Active Test	ABS Booster Solenoid Current	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Antilock braking system	Active Test	Left Front Brake Pressure	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Antilock braking system	Active Test	Left Rear Brake Pressure	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Antilock braking system	Active Test	Pedal Simulator Unit Cutoff Valv	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Antilock braking system	Active Test	Right Front Brake Pressure	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Antilock braking system	Active Test	Vacuum Pump Status	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Air Conditioning Control Module	Read DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Air Conditioning Control Module	Erase DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Air Conditioning Control Module	Live Data		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Accessory Protocol Interface Module	Read DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Accessory Protocol Interface Module	Erase DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Accessory Protocol Interface Module	Live Data		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Battery Control Module	Read DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Battery Control Module	Erase DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Battery Control Module	Live Data		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Front Controls Interface Module	Read DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Front Controls Interface Module	Erase DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Front Controls Interface Module	Live Data		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Front Controls Interface Module	Active Test	Bezel Illumination	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Front Display Interface Module	Read DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Front Display Interface Module	Erase DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Front Display Interface Module	Live Data		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Read DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Erase DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Live Data		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	Horn	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	Dimmable Backlighting	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	Brake/Shift Interlock	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	Parking Lamp	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	Key Pad Backlighting	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	Accessory Delay Relay Circuit	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	White Lighting Circuit	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	Floor Lamp Output Circuit	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	Interior Lighting Circuit	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	Right Front Turn Lamp Output S	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	Smart Window Control	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	Right Rear Turn Signal/Trailer R	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	Right Rear Turn Signal Lamp Sta	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	Left Rear Turn Signal/Trailer Rel	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	Left Rear Turn Signal Lamp Stat	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	Left Front Mirror Turn Signal Lar	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	Left Front Turn Lamp Output St	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	Low Beam Circuit Status Right F	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	Low Beam Circuit Status Left Frc	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	Fog Lamp	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	Mirror Puddle Lamps	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	Right Front Mirror Turn Signal L	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	All Door Unlock	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	All Door Lock	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	Liftgate release	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	Liftglass/Trunk Release	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Generic Electronic Module / Smart Jun	Active Test	High Beam	V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Global Positioning System Module	Read DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Global Positioning System Module	Erase DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Global Positioning System Module	Live Data		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Read DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Erase DTC		V1.20.001

Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Live Data		Speedometer	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Speedometer	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Fuel Gauge Indicator Control	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Assist Gauge Pointer Placement	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		High Beam Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		All Warning Lamps	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Safety Belt Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Door Ajar Warning Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Low Fuel Warning Indication	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Oil Pressure Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Check Engine Malfunction Indica	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Generator lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Antilock braking system Warnin	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Brake Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Tire Pressure Monitoring System	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Airbag	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Right Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Left Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Engine over-temperature light	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Cruise control lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Wrench Telltale Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Traction Assist Active Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Turn Signal Left On Warning Chi	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Turn Signal Click (turn signal TT	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Turn Signal Clack (turn signal TT	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Belt Minder Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Key In Ignition Reminder Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Message Center Warning Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Park Brake Warning Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Seatbelt Warning Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Headlamps on Reminder Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Airbag Secondary Warning	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Anti-Theft Indicator Lamp Contr	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Charge Gauge Pointer Placemer	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		HEV Hazard Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		HEV Ready Light	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Anti-Theft RF Enable and Transn	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Roll Stability Control	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		Tachometer	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Instrument Cluster	Active Test		ABS / TCS / IVD	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Occupant Classification System Modul	Read DTC			V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Occupant Classification System Modul	Erase DTC			V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Occupant Classification System Modul	Live Data			V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Parking Aid Module	Read DTC			V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Parking Aid Module	Erase DTC			V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Parking Aid Module	Live Data			V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Powertrain Control Module	Read DTC			V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Powertrain Control Module	Erase DTC			V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Powertrain Control Module	Live Data			V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Powertrain Control Module	Active Test		Spark Advance	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Powertrain Control Module	Active Test		Fan control high speed	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Powertrain Control Module	Active Test		Fan control low speed	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Powertrain Control Module	Active Test		Exhaust Gas Recirculation valve	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Powertrain Control Module	Active Test		Injector 1 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Powertrain Control Module	Active Test		Injector 2 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Powertrain Control Module	Active Test		Injector 3 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Powertrain Control Module	Active Test		Injector 4 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Powertrain Control Module	Active Test		Heater control for Heated Exha	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Powertrain Control Module	Active Test		Evaporative Emission Canister V	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Powertrain Control Module	Active Test		Heater control for Heated Exha	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Powertrain Control Module	Active Test		Evaporative Emission Canister P	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Powertrain Control Module	Active Test		Fuel pump	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Powertrain Control Module	Active Test		DC to DC Converter Enable	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Powertrain Control Module	Active Test		Heater Pump Commanded	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Powertrain Control Module	Active Test		Motor Electronics Coolant Pump	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Powertrain Control Module	Active Test		Desired camshaft angle for all b	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Powertrain Control Module	Active Test		Evaporative Emission System Va	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Power Steering Control Module	Read DTC			V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Power Steering Control Module	Erase DTC			V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Restraint Control Module	Read DTC			V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Restraint Control Module	Erase DTC			V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Restraint Control Module	Live Data			V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Transmission Control Module	Read DTC			V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Transmission Control Module	Erase DTC			V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Transmission Control Module	Live Data			V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Audio Control Module	Read DTC			V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Audio Control Module	Erase DTC			V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Audio Control Module	Live Data			V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Heating Ventilation Air Conditioning	Read DTC			V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Heating Ventilation Air Conditioning	Erase DTC			V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Heating Ventilation Air Conditioning	Live Data			V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Heating Ventilation Air Conditioning	Active Test		Blower motor control command	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Heating Ventilation Air Conditioning	Active Test		Left Blend Door Position	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Heating Ventilation Air Conditioning	Active Test		Right Blend Door Position	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Heating Ventilation Air Conditioning	Active Test		Dimming Control Command	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Heating Ventilation Air Conditioning	Active Test		Front Blower Relay	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Heating Ventilation Air Conditioning	Active Test		Heated Backlight Relay	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Heating Ventilation Air Conditioning	Active Test		Rear Window Defog Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Heating Ventilation Air Conditioning	Active Test		All segments	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Heating Ventilation Air Conditioning	Active Test		recirculation door close comman	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Heating Ventilation Air Conditioning	Active Test		recirculation door open comman	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2011 Heating Ventilation Air Conditioning	Active Test		Air conditioning Floor Servo Pos	V1.20.001

Escape/Tribute / Mariner	3.0L	4V	2011 4X4 Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 4X4 Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 4X4 Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 4X4 Control Module	Active Test	Pulse-width modulation status C	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 4X4 Control Module	Active Test	Four wheel drive Mode Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Antilock braking system	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Antilock braking system	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Antilock braking system	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Antilock braking system	Active Test	Booster Learn Cycle	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Antilock braking system	Active Test	Longitudinal Acceleration Senso	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Antilock braking system	Active Test	Primary Low Pressure supply V	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Antilock braking system	Active Test	Pressure transducer	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Antilock braking system	Active Test	Lateral Accel Sensor Initializatio	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Antilock braking system	Active Test	Right Rear Traction Assist Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Antilock braking system	Active Test	rear-only dump valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Antilock braking system	Active Test	rear-only isolation valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Antilock braking system	Active Test	Left Rear Traction Control Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Accessory Protocol Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Accessory Protocol Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Accessory Protocol Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Front Controls Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Front Controls Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Front Controls Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Front Controls Interface Module	Active Test	Bezel Illumination	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Front Display Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Front Display Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Front Display Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	Horn	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	Dimmable Backlighting	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	Brake/Shift Interlock	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	Parking Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	Key Pad Backlighting	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	Accessory Delay Relay Circuit	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	White Lighting Circuit	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	Floor Lamp Output Circuit	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	Interior Lighting Circuit	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	Right Front Turn Lamp Output S	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	Smart Window Control	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	Right Rear Turn Signal/Trailer Rt	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	Right Rear Turn Signal Lamp Sta	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	Left Rear Turn Signal/Trailer Rel	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	Left Rear Turn Signal Lamp Stat	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	Left Front Mirror Turn Signal Lar	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	Left Front Turn Lamp Output Sta	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	Low Beam Circuit Status Right Fr	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	Low Beam Circuit Status Left Fr	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	Fog Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	Mirror Puddle Lamps	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	Right Front Mirror Turn Signal Li	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	All Door Unlock	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	All Door Lock	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	Liftgate release	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	Liftglass/Trunk Release	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Generic Electronic Module / Smart Jun	Active Test	High Beam	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Global Positioning System Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Global Positioning System Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Global Positioning System Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	All segments	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	High Beam Indicator	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Low Fuel Warning Indication	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Oil Pressure Warning Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Check Engine Malfunction Indica	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Generator lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Over Drive (O/D) off	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Brake Warning Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Tire Pressure Monitoring System	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Airbag	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Right Turn signal Lamp Status	V1.20.001

Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Left Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Cruise control lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Wrench Telltale Indicator	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Traction Assist Active Indicator	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Turn Signal Left On Warning Chi	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Turn Signal Click (turn signal TT	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Turn Signal Clack (turn signal TT	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Belt Minder Chime	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Key In Ignition Reminder Chime	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Message Center Warning Chime	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Park Brake Warning Chime	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Seatbelt Warning Chime	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Headlamps on Reminder Chime	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Airbag Secondary Warning	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Speedometer Gauge Indicator C	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Roll Stability Control	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	Tachometer	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Instrument Cluster	Active Test	ABS / TCS / IVD	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Occupant Classification System Modul	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Occupant Classification System Modul	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Occupant Classification System Modul	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Parking Aid Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Parking Aid Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Parking Aid Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Power Steering Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Power Steering Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Restraint Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Restraint Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Restraint Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Audio Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Audio Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Audio Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Heating Ventilation Air Conditioning	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Heating Ventilation Air Conditioning	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Heating Ventilation Air Conditioning	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Heating Ventilation Air Conditioning	Active Test	Blower motor control command	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Heating Ventilation Air Conditioning	Active Test	Left Blend Door Position	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Heating Ventilation Air Conditioning	Active Test	Right Blend Door Position	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Heating Ventilation Air Conditioning	Active Test	Dimming Control Command	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Heating Ventilation Air Conditioning	Active Test	Front Blower Relay	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Heating Ventilation Air Conditioning	Active Test	Heated Backlight Relay	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Heating Ventilation Air Conditioning	Active Test	Rear Window Defog Indicator	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Heating Ventilation Air Conditioning	Active Test	All segments	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Heating Ventilation Air Conditioning	Active Test	recirculation door close comman	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Heating Ventilation Air Conditioning	Active Test	recirculation door open comman	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Heating Ventilation Air Conditioning	Active Test	Air conditioning Floor Servo Pos	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Starter Motor Control Output D	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	One-Touch Start Status	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Fan control high speed	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Fan control low speed	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Air Conditioning Compressor Co	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Injector 1 Disable	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Injector 2 Disable	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Injector 3 Disable	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Injector 4 Disable	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Heater control for Heated Exha	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Firm Shift	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Heater control for Heated Exha	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Engine Revolutions Per Minute	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Injector 5 Disable	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Injector 6 Disable	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Converter Pressure Control	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Gear Command by Output State	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Desired camshaft angle for all b	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2011 Powertrain Control Module	Active Test	Line Pressure Control measured	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 4X4 Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 4X4 Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 4X4 Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 4X4 Control Module	Active Test	Pulse-width modulation status C	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 4X4 Control Module	Active Test	Four wheel drive Mode Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Antilock braking system	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Antilock braking system	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Antilock braking system	Live Data		V1.20.001

Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Antilock braking system	Active Test	Booster Learn Cycle	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Antilock braking system	Active Test	Longitudinal Acceleration Senso	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Antilock braking system	Active Test	Primary Low Pressure supply V:	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Antilock braking system	Active Test	Secondary Low Pressure Feed V	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Antilock braking system	Active Test	Pressure transducer	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Antilock braking system	Active Test	Right Rear Traction Assist Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Antilock braking system	Active Test	rear-only dump valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Antilock braking system	Active Test	rear-only isolation valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Antilock braking system	Active Test	Left Rear Traction Control Valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Accessory Protocol Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Accessory Protocol Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Accessory Protocol Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Front Controls Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Front Controls Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Front Controls Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Front Controls Interface Module	Active Test	Bezel Illumination	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Front Display Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Front Display Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Front Display Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Horn	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Dimmable Backlighting	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Brake/Shift Interlock	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Parking Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Key Pad Backlighting	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Accessory Delay Relay Circuit	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	White Lighting Circuit	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Floor Lamp Output Circuit	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Interior Lighting Circuit	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Right Front Turn Lamp Output S	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Smart Window Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Right Rear Turn Signal/Trailer R	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Right Rear Turn Signal Lamp Sta	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Left Rear Turn Signal/Trailer Rel	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Left Rear Turn Signal Lamp Statu	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Left Front Mirror Turn Signal Lar	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Left Front Turn Lamp Output St	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Low Beam Circuit Status Right Fr	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Low Beam Circuit Status Left Fr	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Fog Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Mirror Puddle Lamps	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Right Front Mirror Turn Signal L	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	All Door Unlock	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	All Door Lock	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Liftgate release	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Liftglass/Trunk Release	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	High Beam	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Global Positioning System Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Global Positioning System Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Global Positioning System Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	All segments	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	High Beam Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Low Fuel Warning Indication	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Oil Pressure Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Check Engine Malfunction Indica	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Generator Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Over Drive (O/D) off	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Brake Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Tire Pressure Monitoring System	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Airbag	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Right Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Left Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Cruise control lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Wrench Telltale Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Traction Assist Active Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Turn Signal Left On Warning Chi	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Turn Signal Click (turn signal TT	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Turn Signal Clack (turn signal TT	V1.20.001

Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Belt Minder Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Key In Ignition Reminder Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Message Center Warning Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Park Brake Warning Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Seatbelt Warning Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Headlamps on Reminder Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Airbag Secondary Warning	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Speedometer Gauge Indicator C	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Roll Stability Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Tachometer	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Instrument Cluster	Active Test	ABS / TCS / IVD	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Occupant Classification System Modul	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Occupant Classification System Modul	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Occupant Classification System Modul	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Parking Aid Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Parking Aid Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Parking Aid Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Power Steering Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Power Steering Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Restraint Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Restraint Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Restraint Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Audio Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Audio Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Audio Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Heating Ventilation Air Conditioning	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Heating Ventilation Air Conditioning	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Heating Ventilation Air Conditioning	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Heating Ventilation Air Conditioning	Active Test	Blower motor control command	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Heating Ventilation Air Conditioning	Active Test	Left Blend Door Position	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Heating Ventilation Air Conditioning	Active Test	Right Blend Door Position	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Heating Ventilation Air Conditioning	Active Test	Dimming Control Command	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Heating Ventilation Air Conditioning	Active Test	Front Blower Relay	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Heating Ventilation Air Conditioning	Active Test	Heated Backlight Relay	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Heating Ventilation Air Conditioning	Active Test	Rear Window Defog Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Heating Ventilation Air Conditioning	Active Test	All segments	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Heating Ventilation Air Conditioning	Active Test	recirculation door close comma	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Heating Ventilation Air Conditioning	Active Test	recirculation door open comma	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Heating Ventilation Air Conditioning	Active Test	Air conditioning Floor Servo Pos	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Starter Motor Control Output D	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	One-Touch Start Status	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Fan control high speed	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Fan control low speed	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Air Conditioning Compressor Co	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Injector 1 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Injector 2 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Injector 3 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Injector 4 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Heater control for Heated Exha	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Firm Shift	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Heater control for Heated Exha	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Engine Revolutions Per Minute	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Converter Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Gear Command by Output State V	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Desired camshaft angle for all b	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Line Pressure Control measured V	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	1.8L	L8	2010 Antilock braking system	Read DTC		V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	1.8L	L8	2010 Antilock braking system	Erase DTC		V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	1.8L	L8	2010 Antilock braking system	Live Data		V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	1.8L	L8	2010 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	1.8L	L8	2010 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	1.8L	L8	2010 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	1.8L	L8	2010 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	1.8L	L8	2010 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	1.8L	L8	2010 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	1.8L	L8	2010 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	1.8L	L8	2010 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	1.8L	L8	2010 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	1.8L	L8	2010 Instrument Cluster	Read DTC		V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	1.8L	L8	2010 Instrument Cluster	Erase DTC		V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	1.8L	L8	2010 Instrument Cluster	Live Data		V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	1.8L	L8	2010 Powertrain Control Module	Read DTC		V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	1.8L	L8	2010 Powertrain Control Module	Erase DTC		V1.20.001

BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010 Powertrain Control Module	Live Data		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010 Powertrain Control Module	Active Test	Injector 1	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010 Powertrain Control Module	Active Test	Injector 2	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010 Powertrain Control Module	Active Test	Injector 3	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010 Powertrain Control Module	Active Test	Injector 4	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010 Transmission Control Module	Read DTC		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010 Transmission Control Module	Erase DTC		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010 Transmission Control Module	Live Data		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010 Transmission Control Module	Active Test	Electronic Pressure Control sole	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010 Transmission Control Module	Active Test	Low and Reverse Brake Duty Sol	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010 Transmission Control Module	Active Test	2-4 Brake Solenoid	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010 Transmission Control Module	Active Test	High Clutch Solenoid	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2010 Transmission Control Module	Active Test	Low Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 4X4 Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 4X4 Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 4X4 Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 4X4 Control Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 4X4 Control Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 4X4 Control Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 4X4 Control Module	Active Test	Neutral Tow Light	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Antilock braking system	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Antilock braking system	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Antilock braking system	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Antilock braking system	Active Test	Disable Valve Toggling	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Park Lamp Output	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	All Doors Lock Relay	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Wiper Run Relay Driver State	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Fog Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Horn Control Driver	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Illuminated entry relay circuit	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Drivers Door Unlock Output	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Battery Saver Relay Status.	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Generic Electronic Module / Smart Jun	Active Test	Clear History	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Speedometer	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Tachometer	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	All segments	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Brake Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Check Engine Malfunction Indici	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Overdrive OFF Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Oil Pressure Low Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Tire Pressure Monitoring System	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Check fuel cap indicator lamp cc	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Restraints Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Fuel Level Low Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Engine over-temperature light	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Speed Control Set Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Fog Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Brake Input Switch Status - Brak	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Check Traction Control Indicato	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Instrument Cluster	Active Test	Traction Control Off Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Occupant Classification System Modul	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Occupant Classification System Modul	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Occupant Classification System Modul	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Powertrain Control Module	Live Data		V1.20.001

Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	EGR Motor Position Desired	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Evaporative Emission Vapor Ma	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Satellite Digital Audio Receiver System	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Satellite Digital Audio Receiver System	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Satellite Digital Audio Receiver System	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2011 Satellite Digital Audio Receiver System	Active Test	Satellite Digital Audio Receiver C	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 4X4 Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 4X4 Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 4X4 Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 4X4 Control Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 4X4 Control Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 4X4 Control Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 4X4 Control Module	Active Test	Neutral Tow Light	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Antilock braking system	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Antilock braking system	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Antilock braking system	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Antilock braking system	Active Test	Disable Valve Toggling	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Generic Electronic Module / Smart Jun	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Generic Electronic Module / Smart Jun	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Generic Electronic Module / Smart Jun	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Generic Electronic Module / Smart Jun	Active Test	Park Lamp Output	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Generic Electronic Module / Smart Jun	Active Test	All Doors Lock Relay	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Generic Electronic Module / Smart Jun	Active Test	Wiper Run Relay Driver State	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Generic Electronic Module / Smart Jun	Active Test	Fog Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Generic Electronic Module / Smart Jun	Active Test	Horn Control Relay	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Generic Electronic Module / Smart Jun	Active Test	Illuminated entry driver circuit	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Generic Electronic Module / Smart Jun	Active Test	Drivers Door Unlock Output	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Generic Electronic Module / Smart Jun	Active Test	Battery Saver Relay Status.	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Generic Electronic Module / Smart Jun	Active Test	Clear History	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Speedometer	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Tachometer	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	All segments	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Brake Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Check Engine Malfunction Indic	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Overdrive OFF Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Oil Pressure Low Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Tire Pressure Monitoring System	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Check fuel cap indicator lamp cc	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Restraints Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Fuel Level Low Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Engine over-temperature light	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Speed Control Set Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Fog Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Brake Input Switch Status - Brak	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Check Traction Control Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Instrument Cluster	Active Test	Traction Control Off Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Occupant Classification System Modul	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Occupant Classification System Modul	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Occupant Classification System Modul	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2011 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001

Ranger / Mazda B-Series / Courier	2.3L	OHC	1995	Generic Electronic Module	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1995	Generic Electronic Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1995	Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1995	Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1995	Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1995	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1995	Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1995	Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1995	Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1995	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1995	Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1995	Remote Anti-Theft / Personality Modu	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1995	Remote Anti-Theft / Personality Modu	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1995	Remote Anti-Theft / Personality Modu	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1995	Remote Anti-Theft / Personality Modu	Active Test	Parking Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1995	Remote Anti-Theft / Personality Modu	Active Test	Horn Output	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1995	Remote Anti-Theft / Personality Modu	Active Test	All Door Unlock	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1995	Remote Anti-Theft / Personality Modu	Active Test	Interior Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	OHC	1995	Remote Anti-Theft / Personality Modu	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994,5	Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994,5	Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994,5	Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994,5	Security module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994,5	Security module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994,5	Hybrid Electronic Cluster	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994,5	Hybrid Electronic Cluster	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994,5	Hybrid Electronic Cluster	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994,5	Hybrid Electronic Cluster	Active Test	Tachometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994,5	Hybrid Electronic Cluster	Active Test	Temperature Gauge	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994,5	Hybrid Electronic Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994,5	Hybrid Electronic Cluster	Active Test	All segments	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994,5	Hybrid Electronic Cluster	Active Test	Speedometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994,5	Powertrain Control Module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994,5	Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Generic Electronic Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Generic Electronic Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Generic Electronic Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Generic Electronic Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Generic Electronic Module	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Generic Electronic Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Remote Anti-Theft / Personality Modu	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Remote Anti-Theft / Personality Modu	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Remote Anti-Theft / Personality Modu	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Remote Anti-Theft / Personality Modu	Active Test	Parking Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Remote Anti-Theft / Personality Modu	Active Test	Horn Output	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Remote Anti-Theft / Personality Modu	Active Test	All Door Unlock	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Remote Anti-Theft / Personality Modu	Active Test	Interior Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1995	Remote Anti-Theft / Personality Modu	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	4X4 Control Module	Read DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	4X4 Control Module	Erase DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	4X4 Control Module	Live Data		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	4X4 Control Module	Active Test	Pulse-width modulation status C	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	4X4 Control Module	Active Test	Four wheel drive Mode Lamp	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Antilock braking system	Read DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Antilock braking system	Erase DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Antilock braking system	Live Data		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Antilock braking system	Active Test	Booster Learn Cycle	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Antilock braking system	Active Test	Longitudinal Acceleration Senso	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Antilock braking system	Active Test	rear-only dump valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Antilock braking system	Active Test	rear-only isolation valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Antilock braking system	Active Test	Primary Low Pressure supply V:	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Antilock braking system	Active Test	Right Rear Traction Assist Valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Antilock braking system	Active Test	Secondary Low Pressure Feed V:	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Antilock braking system	Active Test	Pressure transducer	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Antilock braking system	Active Test	Left Rear Traction Control Valve	V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Accessory Protocol Interface Module	Read DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Accessory Protocol Interface Module	Erase DTC		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Accessory Protocol Interface Module	Live Data		V1.20.001
Escape / Tribute / Mariner	2.5L	DURATEC-HE /	2012	Front Controls Interface Module	Read DTC		V1.20.001

Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Front Controls Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Front Controls Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Front Controls Interface Module	Active Test	Bezel Illumination	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Front Display Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Front Display Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Front Display Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	Horn	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	Dimmable Backlighting	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	Brake/Shift Interlock	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	Parking Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	Key Pad Backlighting	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	Accessory Delay Relay Circuit	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	White Lighting Circuit	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	Floor Lamp Output Circuit	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	Interior Lighting Circuit	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	Right Front Turn Lamp Output S	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	Smart Window Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	Right Rear Turn Signal/Trailer Rt	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	Right Rear Turn Signal Lamp Sta	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	Left Rear Turn Signal/Trailer Rel	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	Left Rear Turn Signal Lamp Stat	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	Left Front Mirror Turn Signal Lar	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	Left Front Turn Lamp Output Sta	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	Low Beam Circuit Status Right Fr	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	Low Beam Circuit Status Left Frc	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	Fog Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	Mirror Puddle Lamps	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	Right Front Mirror Turn Signal Li	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	All Door Unlock	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	All Door Lock	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	Liftgate release	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	Liftglass/Trunk Release	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Generic Electronic Module / Smart Jun	Active Test	High Beam	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Global Positioning System Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Global Positioning System Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Global Positioning System Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	All segments	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	High Beam Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Low Fuel Warning Indication	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Oil Pressure Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Check Engine Malfunction Indici	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Generator lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Over Drive (O/D) off	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Brake Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Tire Pressure Monitoring System	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Airbag	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Right Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Left Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Cruise control lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Wrench Telltale Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Traction Assist Active Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Turn Signal Left On Warning Chi	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Turn Signal Click (turn signal TT	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Turn Signal Clack (turn signal TT	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Belt Minder Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Key In Ignition Reminder Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Message Center Warning Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Park Brake Warning Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Seatbelt Warning Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Headlamps on Reminder Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Airbag Secondary Warning	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Speedometer Gauge Indicator C	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Roll Stability Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	Tachometer	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Instrument Cluster	Active Test	ABS / TCS / IVD	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Occupant Classification System Modul	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Occupant Classification System Modul	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Occupant Classification System Modul	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Parking Aid Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Parking Aid Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Parking Aid Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Starter Motor Control Output D	V1.20.001

Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	One-Touch Start Status	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Fan control high speed	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Fan control low speed	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Air Conditioning Compressor Co	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Injector 1 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Injector 2 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Injector 3 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Injector 4 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Heater control for Heated Exha	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Firm Shift	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Heater control for Heated Exha	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Engine Revolutions Per Minute	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Converter Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Gear Command by Output State	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Desired camshaft angle for all b	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Powertrain Control Module	Active Test	Line Pressure Control measured	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Power Steering Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Power Steering Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Restraint Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Restraint Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Restraint Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Audio Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Audio Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Audio Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Heating Ventilation Air Conditioning	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Heating Ventilation Air Conditioning	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Heating Ventilation Air Conditioning	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Heating Ventilation Air Conditioning	Active Test	Blower motor control command	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Heating Ventilation Air Conditioning	Active Test	recirculation door close comma	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Heating Ventilation Air Conditioning	Active Test	recirculation door open comma	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Heating Ventilation Air Conditioning	Active Test	Left Blend Door Position	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Heating Ventilation Air Conditioning	Active Test	Right Blend Door Position	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Heating Ventilation Air Conditioning	Active Test	Dimming Control Command	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Heating Ventilation Air Conditioning	Active Test	Heated Backlight Relay	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Heating Ventilation Air Conditioning	Active Test	All segments	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Heating Ventilation Air Conditioning	Active Test	Front Blower Relay	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Heating Ventilation Air Conditioning	Active Test	Rear Window Defog Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	DURATEC-HE /	2012 Heating Ventilation Air Conditioning	Active Test	Air conditioning Floor Servo Pos	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 4X4 Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 4X4 Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 4X4 Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 4X4 Control Module	Active Test	Pulse-width modulation status C	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 4X4 Control Module	Active Test	Four wheel drive Mode Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Antilock braking system	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Antilock braking system	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Antilock braking system	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Antilock braking system	Active Test	Booster Learn Cycle	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Antilock braking system	Active Test	Longitudinal Acceleration Senso	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Antilock braking system	Active Test	rear-only dump valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Antilock braking system	Active Test	rear-only isolation valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Antilock braking system	Active Test	Primary Low Pressure supply V:	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Antilock braking system	Active Test	Right Rear Traction Assist Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Antilock braking system	Active Test	Pressure transducer	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Antilock braking system	Active Test	Left Rear Traction Control Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Accessory Protocol Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Accessory Protocol Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Accessory Protocol Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Front Controls Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Front Controls Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Front Controls Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Front Controls Interface Module	Active Test	Bezel Illumination	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Front Display Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Front Display Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Front Display Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun	Active Test	Horn	V1.20.001

Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	Dimmable Backlighting	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	Brake/Shift Interlock	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	Parking Lamp	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	Key Pad Backlighting	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	Accessory Delay Relay Circuit	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	White Lighting Circuit	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	Floor Lamp Output Circuit	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	Interior Lighting Circuit	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	Right Front Turn Lamp Output S	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	Smart Window Control	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	Right Rear Turn Signal/Trailer R	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	Right Rear Turn Signal Lamp Sta	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	Left Rear Turn Signal/Trailer Rel	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	Left Rear Turn Signal Lamp Stati	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	Left Front Mirror Turn Signal Lar	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	Left Front Turn Lamp Output Sta	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	Low Beam Circuit Status Right Fi	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	Low Beam Circuit Status Left Frc	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	Fog Lamp	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	Mirror Puddle Lamps	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	Right Front Mirror Turn Signal Li	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	All Door Unlock	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	All Door Lock	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	Liftgate release	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	Liftglass/Trunk Release	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Generic Electronic Module / Smart Jun Active Test	High Beam	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Global Positioning System Module	Read DTC	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Global Positioning System Module	Erase DTC	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Global Positioning System Module	Live Data	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Read DTC	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Erase DTC	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Live Data	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	All segments	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	High Beam Indicator	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Low Fuel Warning Indication	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Oil Pressure Warning Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Check Engine Malfunction Indica	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Generator Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Over Drive (O/D) off	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Brake Warning Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Tire Pressure Monitoring System	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Airbag	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Right Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Left Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Cruise control lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Wrench Telltale Indicator	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Traction Assist Active Indicator	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Turn Signal Left On Warning Chi	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Turn Signal Click (turn signal TT	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Turn Signal Clack (turn signal TT	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Belt Minder Chime	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Key In Ignition Reminder Chime	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Message Center Warning Chime	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Park Brake Warning Chime	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Seatbelt Warning Chime	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Headlamps on Reminder Chime	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Airbag Secondary Warning	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Speedometer Gauge Indicator C	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Roll Stability Control	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	Tachometer	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Instrument Cluster	Active Test	ABS / TCS / IVD	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Occupant Classification System Modul	Read DTC	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Occupant Classification System Modul	Erase DTC	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Occupant Classification System Modul	Live Data	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Parking Aid Module	Read DTC	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Parking Aid Module	Erase DTC	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Parking Aid Module	Live Data	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Powertrain Control Module	Read DTC	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Powertrain Control Module	Erase DTC	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Powertrain Control Module	Live Data	V1.20.001	
Escape/Tribute / Mariner	3.0L	4V	2012 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Powertrain Control Module	Active Test	Starter Motor Control Output D	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Powertrain Control Module	Active Test	One-Touch Start Status	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Powertrain Control Module	Active Test	Fan control high speed	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Powertrain Control Module	Active Test	Fan control low speed	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Powertrain Control Module	Active Test	Air Conditioning Compressor Co	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Powertrain Control Module	Active Test	Injector 1 Disable	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Powertrain Control Module	Active Test	Injector 2 Disable	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Powertrain Control Module	Active Test	Injector 3 Disable	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Powertrain Control Module	Active Test	Injector 4 Disable	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2012 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001

Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	Brake/Shift Interlock	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	Parking Lamp	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	Key Pad Backlighting	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	Accessory Delay Relay Circuit	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	White Lighting Circuit	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	Floor Lamp Output Circuit	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	Interior Lighting Circuit	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	Right Front Turn Lamp Output S	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	Smart Window Control	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	Right Rear Turn Signal/Trailer R	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	Right Rear Turn Signal Lamp Sta	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	Left Rear Turn Signal/Trailer Rel	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	Left Rear Turn Signal Lamp Statu	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	Left Front Mirror Turn Signal Lar	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	Left Front Turn Lamp Output Sta	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	Low Beam Circuit Status Right Fr	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	Low Beam Circuit Status Left Frc	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	Fog Lamp	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	Mirror Puddle Lamps	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	Right Front Mirror Turn Signal Li	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	All Door Unlock	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	All Door Lock	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	Liftgate release	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	Liftglass/Trunk Release	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Generic Electronic Module / Smart Jun Active Test	High Beam	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Global Positioning System Module	Read DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Global Positioning System Module	Erase DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Global Positioning System Module	Live Data	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Read DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Erase DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Live Data	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Speedometer	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Assist Gauge Pointer Placement	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	High Beam Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Low Fuel Warning Indication	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Oil Pressure Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Check Engine Malfunction Indica	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Generator lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Brake Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Tire Pressure Monitoring System	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Airbag	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Right Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Left Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Engine over-temperature light	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Cruise control lamp	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Wrench Telltale Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Traction Assist Active Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Turn Signal Left On Warning Chi	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Turn Signal Click (turn signal TT	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Turn Signal Clack (turn signal TT	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Belt Minder Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Key In Ignition Reminder Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Message Center Warning Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Park Brake Warning Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Seatbelt Warning Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Headlamps on Reminder Chime	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Airbag Secondary Warning	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Charge Gauge Pointer Placemer	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	HEV Hazard Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	HEV Ready Light	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Roll Stability Control	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	Tachometer	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Instrument Cluster	Active Test	ABS / TCS / IVD	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Occupant Classification System Modul	Read DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Occupant Classification System Modul	Erase DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Occupant Classification System Modul	Live Data	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Parking Aid Module	Read DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Parking Aid Module	Erase DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Parking Aid Module	Live Data	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Powertrain Control Module	Read DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Powertrain Control Module	Erase DTC	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Powertrain Control Module	Live Data	V1.20.001	
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Powertrain Control Module	Active Test	Fan control high speed	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Powertrain Control Module	Active Test	Fan control low speed	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Powertrain Control Module	Active Test	Injector 1 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Powertrain Control Module	Active Test	Injector 2 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Powertrain Control Module	Active Test	Injector 3 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Powertrain Control Module	Active Test	Injector 4 Disable	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Powertrain Control Module	Active Test	Heater control for Heated Exhau	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Powertrain Control Module	Active Test	Heater control for Heated Exhau	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001

Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Powertrain Control Module	Active Test	DC to DC Converter Enable	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Powertrain Control Module	Active Test	Heater Pump Commanded	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Powertrain Control Module	Active Test	Motor Electronics Cooled Pump	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Powertrain Control Module	Active Test	Desired camshaft angle for all b	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Powertrain Control Module	Active Test	Evaporative Emission System Va	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Power Steering Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Power Steering Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Restraint Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Restraint Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Restraint Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Transmission Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Transmission Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Transmission Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Audio Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Audio Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Audio Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Heating Ventilation Air Conditioning	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Heating Ventilation Air Conditioning	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Heating Ventilation Air Conditioning	Live Data		V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Heating Ventilation Air Conditioning	Active Test	Blower motor control command	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Heating Ventilation Air Conditioning	Active Test	recirculation door close comman	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Heating Ventilation Air Conditioning	Active Test	recirculation door open comman	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Heating Ventilation Air Conditioning	Active Test	Left Blend Door Position	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Heating Ventilation Air Conditioning	Active Test	Right Blend Door Position	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Heating Ventilation Air Conditioning	Active Test	Dimming Control Command	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Heating Ventilation Air Conditioning	Active Test	Heated Backlight Relay	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Heating Ventilation Air Conditioning	Active Test	All segments	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Heating Ventilation Air Conditioning	Active Test	Front Blower Relay	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Heating Ventilation Air Conditioning	Active Test	Rear Window Defog Indicator	V1.20.001
Escape/Tribute / Mariner	2.5L	HEV / ATKINSO	2012 Heating Ventilation Air Conditioning	Active Test	Air conditioning Floor Servo Pos	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Audio Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Audio Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Audio Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Audio Control Module	Active Test	Volume	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Accessory Protocol Interface Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Accessory Protocol Interface Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Accessory Protocol Interface Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Accessory Protocol Interface Module	Active Test	Source of Audio Input	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Body Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Body Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Body Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Body Control Module	Active Test	Fuel pump relay	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Body Control Module	Active Test	Right Headlamp Low Beam	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Body Control Module	Active Test	Right Stop Lamp Duty Cycle	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Body Control Module	Active Test	Left Stop Lamp Duty Cycle	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Body Control Module	Active Test	Left Headlamp Low Beam	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Body Control Module	Active Test	Left Position Lights Duty Cycle	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Body Control Module	Active Test	Right Position Lights Duty Cycle	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Body Control Module	Active Test	Central High Mounted Stop Lam	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Body Control Module	Active Test	License Plate Light	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Body Control Module	Active Test	Brake/Shift Interlock	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Driver Front Door Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Driver Front Door Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Driver Front Door Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Driver Front Door Module	Active Test	Blind Spot Information LED Duty	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Driver Front Door Module	Active Test	Front Door Lock Status LED Duty	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Driver Front Door Module	Active Test	Illumination dimming level	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Driver Front Door Module	Active Test	Rear Door Lock Status LED Duty	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Driver Front Door Module	Active Test	Side Mirror Heating Output Con	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Driver Front Door Module	Active Test	Side Mirror Turn Signal Lamp Cc	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Driver Front Door Module	Active Test	Puddle Lamp Control	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Global Positioning System Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Global Positioning System Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Heating Ventilation Air Conditioning	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Heating Ventilation Air Conditioning	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Heating Ventilation Air Conditioning	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Heating Ventilation Air Conditioning	Active Test	Left Blend Door Position	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Heating Ventilation Air Conditioning	Active Test	air mode actuator	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Safety Belt Warning Lamp Statu	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Front Fog Lamp Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	General Warning Indicator 1 (Re	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	General Warning Indicator 2 (Ar	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Rear Fog Lamp Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Illumination PWM Value	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	All Liquid Crystal Display Segme	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Speedometer	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	LCD Illumination Level	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Illumination	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Passive sounder	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Lights on Warning	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Low Fuel Warning Indication	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Park Brake Applied Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Airbag Warning Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	High Beam Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Right Turn signal Lamp Status	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Warning Lamp Status 1 - Charge	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Malfunction Indicator Lamp	V1.20.001

Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Audio Control Module	Active Test	Volume	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Accessory Protocol Interface Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Accessory Protocol Interface Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Accessory Protocol Interface Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Accessory Protocol Interface Module	Active Test	Source of Audio Input	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Body Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Body Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Body Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Body Control Module	Active Test	Fuel pump relay	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Body Control Module	Active Test	Right Headlamp Low Beam	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Body Control Module	Active Test	Right Stop Lamp Duty Cycle	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Body Control Module	Active Test	Left Stop Lamp Duty Cycle	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Body Control Module	Active Test	Left Headlamp Low Beam	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Body Control Module	Active Test	Left Position Lights Duty Cycle	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Body Control Module	Active Test	Right Position Lights Duty Cycle	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Body Control Module	Active Test	Central High Mounted Stop Lam	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Body Control Module	Active Test	License Plate Light	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Body Control Module	Active Test	Brake/Shift Interlock	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Driver Front Door Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Driver Front Door Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Driver Front Door Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Driver Front Door Module	Active Test	Blind Spot Information LED Duty	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Driver Front Door Module	Active Test	Front Door Lock Status LED Duty	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Driver Front Door Module	Active Test	Illumination dimming level	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Driver Front Door Module	Active Test	Rear Door Lock Status LED Duty	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Driver Front Door Module	Active Test	Side Mirror Heating Output Con	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Driver Front Door Module	Active Test	Side Mirror Turn Signal Lamp Cc	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Driver Front Door Module	Active Test	Puddle Lamp Control	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Global Positioning System Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Global Positioning System Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Heating Ventilation Air Conditioning	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Heating Ventilation Air Conditioning	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Heating Ventilation Air Conditioning	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Heating Ventilation Air Conditioning	Active Test	Left Blend Door Position	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Heating Ventilation Air Conditioning	Active Test	air mode actuator	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Safety Belt Warning Lamp Status	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Front Fog Lamp Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	General Warning Indicator 1 (Re	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	General Warning Indicator 2 (Ar	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Rear Fog Lamp Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Illumination PWM Value	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	All Liquid Crystal Display Segme	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Speedometer	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	LCD Illumination Level	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Illumination	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Passive sounder	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Lights on Warning	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Low Fuel Warning Indication	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Park Brake Applied Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Airbag Warning Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	High Beam Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Right Turn signal Lamp Status	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Warning Lamp Status 1 - Charge	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Malfunction Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Oil Pressure Low Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Transmission System Malfunction	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Traction Control Off Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Antilock braking system Warning	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Left Turn signal Lamp Status	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Traction Control Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Temperature Gauge	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Tachometer Gauge Indicator Co	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Fuel Gauge Indicator Control	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Cruise control lamp	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Adaptive Cruise Control Warning	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Check Engine Malfunction Indica	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Oil Pressure Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Coolant Overtemp	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Hill Descent Control	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Brake System Fault Indicator Lar	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Adaptive Front Lighting Fault	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Tire Pressure Telltale Status	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Side Light Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Check fuel cap indicator lamp cc	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Instrument Panel Control Module	Active Test	Glow plug lamp	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Parking Aid Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Parking Aid Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Parking Aid Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Passenger Front Door Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Passenger Front Door Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Passenger Front Door Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Passenger Front Door Module	Active Test	Blind Spot Information LED Duty	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Passenger Front Door Module	Active Test	Front Door Lock Status LED Duty	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Passenger Front Door Module	Active Test	Illumination dimming level	V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbc	2011 Passenger Front Door Module	Active Test	Rear Door Lock Status LED Duty	V1.20.001

Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	General Warning Indicator 2 (Ar	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Rear Fog Lamp Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Illumination PWM Value	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	All Liquid Crystal Display Segme	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Speedometer	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	LCD Illumination Level	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Illumination	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Passive sounder	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Lights on Warning	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Low Fuel Warning Indication	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Park Brake Applied Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Airbag Warning Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	High Beam Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Right Turn signal Lamp Status	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Warning Lamp Status 1 - Charge	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Malfunction Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Oil Pressure Low Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Transmission System Malfunction	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Traction Control Off Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Left Turn signal Lamp Status	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Traction Control Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Temperature Gauge	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Tachometer Gauge Indicator Co	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Fuel Gauge Indicator Control	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Cruise control lamp	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Adaptive Cruise Control Warnin	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Check Engine Malfunction Indici	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Oil Pressure Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Coolant Overtemp	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Hill Descent Control	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Brake System Fault Indicator Lar	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Adaptive Front Lighting Fault	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Tire Pressure Telltale Status	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Side Light Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Check fuel cap indicator lamp cc	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Instrument Panel Control Module	Active Test	Glow plug lamp	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Parking Aid Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Parking Aid Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Parking Aid Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Starter Motor Control Output D	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	One-Touch Start Status	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Fan control high speed	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Fan control low speed	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Injector 1 Disable	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Injector 2 Disable	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Injector 3 Disable	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Injector 4 Disable	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Shift Solenoid A	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Heater control for Heated Exha	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Heater control for Heated Exha	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Converter Clutch Soleno	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Fan Speed Desired	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Converter Pressure Control	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Desired camshaft angle for all b	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Desired Intake A Camshaft Posit	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Rear Locking Diff Output Duty C	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Line Pressure Control measured	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Firm Shift	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Gear Command by Output State	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Grill Shutter A Position - Comm	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Cold Start Fuel System Relay Co	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Cold Start Fuel Valve Command	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	Lambda Equivalence Ratio Bank	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	CW Relay	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Powertrain Control Module	Active Test	CCW Relay	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Passenger Front Door Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Passenger Front Door Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Passenger Front Door Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Passenger Front Door Module	Active Test	Blind Spot Information LED Duty	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Passenger Front Door Module	Active Test	Front Door Lock Status LED Duty	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Passenger Front Door Module	Active Test	Illumination dimming level	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Passenger Front Door Module	Active Test	Rear Door Lock Status LED Duty	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Passenger Front Door Module	Active Test	Side Mirror Heating Output Con	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	DURATEC-HE /	2011 Passenger Front Door Module	Active Test	Side Mirror Turn Signal Lamp Cc	V1.20.001

Ranger / Mazda B-Series / Courier	2.5L	Other	2000 Generic Electronic Module	Active Test	Down Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	2000 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	2000 Generic Electronic Module	Active Test	Transfer Case Shift Relay (LZH) c	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	2000 Generic Electronic Module	Active Test	Over Speed Warning Chime	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	2000 Generic Electronic Module	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	2000 Generic Electronic Module	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	2000 Generic Electronic Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	2000 Generic Electronic Module	Active Test	Washer Pump Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	2000 Generic Electronic Module	Active Test	Accessory Delay Relay	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	2000 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	2000 Generic Electronic Module	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	2000 Generic Electronic Module	Active Test	Heated Backlight Relay	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	2000 Generic Electronic Module	Active Test	Center Axle Disconnect Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	2000 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	2000 Generic Electronic Module	Active Test	One Touch Down Motor Relay	V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	2000 Generic Electronic Module	Active Test	Up Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Anti-Lock Brake / Traction Control Mo	Active Test	4WD Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Active	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Passive Anti-Theft System	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Passive Anti-Theft System	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Passive Anti-Theft System	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Passive Anti-Theft System	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Passive Anti-Theft System	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	Interior Pressure Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Remote Anti-Theft / Personality Modu	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Remote Anti-Theft / Personality Modu	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Remote Anti-Theft / Personality Modu	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Remote Anti-Theft / Personality Modu	Active Test	Parking Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Remote Anti-Theft / Personality Modu	Active Test	LOCK	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Remote Anti-Theft / Personality Modu	Active Test	Horn Output	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Remote Anti-Theft / Personality Modu	Active Test	All Door Unlock	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Remote Anti-Theft / Personality Modu	Active Test	Interior Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Remote Anti-Theft / Personality Modu	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Restraint Control Module	Active Test	Airbag Warning Lamp and Chim	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Active Test	Door Ajar Warning Lamp circuit	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Active Test	Center Axle Engage Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Active Test	Speed Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Active Test	Wiper Run Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Active Test	Down Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Active Test	Transfer Case Shift Relay (LZH) c	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Active Test	Over Speed Warning Chime	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Active Test	Washer Pump Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Active Test	Accessory Delay Relay	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Active Test	Heated Backlight Relay	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Active Test	Center Axle Disconnect Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Active Test	One Touch Down Motor Relay	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Generic Electronic Module	Active Test	Up Relay Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1999 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1999 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1999 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1999 Security module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1999 Security module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1999 Electronic Crash Sensor	Read DTC		V1.20.001

Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 Powertrain Control Module	Active Test	Injector 1	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	Injector 2	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	Injector 4	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solen	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	Injector 3	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	FFV	2000 Powertrain Control Module	Active Test	Injector 1	V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Electronic Crash Sensor	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Electronic Crash Sensor	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Electronic Crash Sensor	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Generic Electronic Module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Generic Electronic Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Generic Electronic Module	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Generic Electronic Module	Active Test	Wiper Run Relay Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Hybrid Electronic Cluster	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Hybrid Electronic Cluster	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Hybrid Electronic Cluster	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Hybrid Electronic Cluster	Active Test	Tachometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Hybrid Electronic Cluster	Active Test	Temperature Gauge	V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Hybrid Electronic Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Hybrid Electronic Cluster	Active Test	All segments	V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Hybrid Electronic Cluster	Active Test	Speedometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Powertrain Control Module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Powertrain Control Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Powertrain Control Module	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000 Powertrain Control Module	Active Test	Engine cooling fan	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	(PT-E)	2000 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	(PT-E)	2000 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	(PT-E)	2000 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	(PT-E)	2000 Security module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	(PT-E)	2000 Security module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	(PT-E)	2000 Electronic Crash Sensor	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	(PT-E)	2000 Electronic Crash Sensor	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	(PT-E)	2000 Electronic Crash Sensor	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	(PT-E)	2000 Hybrid Electronic Cluster	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	(PT-E)	2000 Hybrid Electronic Cluster	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	(PT-E)	2000 Hybrid Electronic Cluster	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	(PT-E)	2000 Hybrid Electronic Cluster	Active Test	Tachometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	(PT-E)	2000 Hybrid Electronic Cluster	Active Test	Temperature Gauge	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	(PT-E)	2000 Hybrid Electronic Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	(PT-E)	2000 Hybrid Electronic Cluster	Active Test	All segments	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	(PT-E)	2000 Hybrid Electronic Cluster	Active Test	Speedometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	(PT-E)	2000 Powertrain Control Module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	(PT-E)	2000 Powertrain Control Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	(PT-E)	2000 Powertrain Control Module	Live Data		V1.20.001
Courier	2.5L	WL	1999 Powertrain Control Module	Read DTC		V1.20.001
Courier	2.5L	WL	1999 Powertrain Control Module	Erase DTC		V1.20.001
Courier	2.5L	WL	1999 Powertrain Control Module	Live Data		V1.20.001
Courier	2.5L	WL	1999 Transmission Control Module	Read DTC		V1.20.001
Courier	2.5L	WL	1999 Transmission Control Module	Erase DTC		V1.20.001
Courier	2.9L	W9	1999 Powertrain Control Module	Read DTC		V1.20.001
Courier	2.9L	W9	1999 Powertrain Control Module	Erase DTC		V1.20.001
Courier	2.9L	W9	1999 Powertrain Control Module	Live Data		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Antilock braking system	Read DTC		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Antilock braking system	Erase DTC		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Antilock braking system	Live Data		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Antilock braking system	Active Test	Antilock braking system Power f	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Powertrain Control Module	Read DTC		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Powertrain Control Module	Erase DTC		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Powertrain Control Module	Live Data		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Powertrain Control Module	Active Test	Injector 1	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Powertrain Control Module	Active Test	Injector 2	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	1999 Transmission Control Module	Read DTC		V1.20.001

FAMILIA / LASER	1.3L	B3	1998 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Air Conditioning	Read DTC		V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Air Conditioning	Erase DTC		V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Read DTC		V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Erase DTC		V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Live Data		V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Active Test	Injector 4	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Active Test	Injector 3	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Active Test	Injector 1	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Active Test	3-2 Timing Solenoid Valve	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Active Test	Overflow control valve	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Powertrain Control Module	Active Test	Injector 2	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Antilock braking system	Read DTC		V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Antilock braking system	Erase DTC		V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Antilock braking system	Live Data		V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Antilock braking system	Active Test	Antilock braking system Power f	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
FAMILIA / LASER	1.5L	ZL	1998 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Air Conditioning	Read DTC		V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Air Conditioning	Erase DTC		V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Powertrain Control Module	Read DTC		V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Powertrain Control Module	Erase DTC		V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Powertrain Control Module	Live Data		V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Powertrain Control Module	Active Test	Injector 4	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Powertrain Control Module	Active Test	Injector 3	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Powertrain Control Module	Active Test	Injector 1	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Powertrain Control Module	Active Test	3-2 Timing Solenoid Valve	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Powertrain Control Module	Active Test	Injector 2	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Antilock braking system	Read DTC		V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Antilock braking system	Erase DTC		V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Antilock braking system	Live Data		V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Antilock braking system	Active Test	Antilock braking system Power f	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
FAMILIA / LASER	1.8L	FP	1998 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Air Conditioning	Read DTC		V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Air Conditioning	Erase DTC		V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Powertrain Control Module	Read DTC		V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Powertrain Control Module	Erase DTC		V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Powertrain Control Module	Live Data		V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Powertrain Control Module	Active Test	Electric Governor	V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Powertrain Control Module	Active Test	intake air shutter valve	V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Powertrain Control Module	Active Test	Glow plug control	V1.20.001

FAMILIA / LASER	2.0L	RF	1998 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Powertrain Control Module	Active Test	timer control valve signal	V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solenoid	V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Powertrain Control Module	Active Test	Fuel Shut Off Valve	V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Powertrain Control Module	Active Test	Glow plug lamp	V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solenoid	V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Transmission Control Module	Read DTC		V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Transmission Control Module	Erase DTC		V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Transmission Control Module	Live Data		V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Antilock braking system	Read DTC		V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Antilock braking system	Erase DTC		V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Antilock braking system	Live Data		V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Antilock braking system	Active Test	Antilock braking system Power F	V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
FAMILIA / LASER	2.0L	RF	1998 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Antilock braking system	Read DTC		V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Antilock braking system	Erase DTC		V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Antilock braking system	Live Data		V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Antilock braking system	Active Test	Antilock braking system Power F	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Antilock braking system	Active Test	Engine Torque Signal	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Air Conditioning	Read DTC		V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Air Conditioning	Erase DTC		V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Read DTC		V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Erase DTC		V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Live Data		V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Active Test	Injector 4	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Active Test	Torque Converter Clutch Solenoid	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Active Test	Injector 3	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Active Test	Injector 1	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Active Test	Air conditioning compressor cycle	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Active Test	3-2 Timing Solenoid Valve	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
FAMILIA / LASER	2.0L	FS	1999 Powertrain Control Module	Active Test	Injector 2	V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.0L	FE	1999 Anti-Lock Brake / Traction Control Module	Read DTC		V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.0L	FE	1999 Anti-Lock Brake / Traction Control Module	Erase DTC		V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.0L	FE	1999 Powertrain Control Module	Read DTC		V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.0L	FE	1999 Powertrain Control Module	Erase DTC		V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.0L	FE	1999 Powertrain Control Module	Live Data		V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.0L	FE	1999 Powertrain Control Module	Active Test	Injector 1	V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.0L	FE	1999 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.0L	FE	1999 Powertrain Control Module	Active Test	Air conditioning compressor cycle	V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.0L	FE	1999 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.0L	FE	1999 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.0L	FE	1999 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.0L	FE	1999 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.0L	FE	1999 Powertrain Control Module	Active Test	Injector 2	V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.0L	FE	1999 Transmission Control Module	Read DTC		V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.0L	FE	1999 Transmission Control Module	Erase DTC		V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.0L	FE	1999 Transmission Control Module	Live Data		V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.0L	FE	1999 Transmission Control Module	Active Test	Electronic Pressure Control solenoid	V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.0L	FE	1999 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.0L	FE	1999 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.0L	FE	1999 Transmission Control Module	Active Test	Torque Converter Clutch Control	V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.0L	FE	1999 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.0L	FE	1999 Transmission Control Module	Active Test	C F	V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.0L	FE	1999 Transmission Control Module	Active Test	Transmission Fluid Temperature	V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.5L	J5	1999 Anti-Lock Brake / Traction Control Module	Read DTC		V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.5L	J5	1999 Anti-Lock Brake / Traction Control Module	Erase DTC		V1.20.001
FRIENDEE / FREDIA / BONGO FRIENDEE	2.5L	J5	1999 Powertrain Control Module	Read DTC		V1.20.001

626 / 626 WAGON / TELSTAR	2.0L	RF_T	1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solenoid	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	1999 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	1999 Powertrain Control Module	Active Test	Glow plug lamp	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	1999 Powertrain Control Module	Active Test	Fuel Shut Off Valve	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	1999 Powertrain Control Module	Active Test	Spill Valve Relay	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Antilock braking system	Read DTC		V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Antilock braking system	Erase DTC		V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Antilock braking system	Live Data		V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Antilock braking system	Active Test	Antilock braking system Power f	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Air Conditioning	Read DTC		V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Air Conditioning	Erase DTC		V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Read DTC		V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Erase DTC		V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Live Data		V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	Injector 4	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	Injector 3	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	Injector 1	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	Injector 2	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Antilock braking system	Read DTC		V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Antilock braking system	Erase DTC		V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Antilock braking system	Live Data		V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Antilock braking system	Active Test	Antilock braking system Power f	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Air Conditioning	Read DTC		V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Air Conditioning	Erase DTC		V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Read DTC		V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Erase DTC		V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Live Data		V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Active Test	Injector 4	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Active Test	Torque Converter Clutch Solenoid	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Active Test	Injector 3	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Active Test	Injector 1	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Active Test	3-2 Timing Solenoid Valve	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Powertrain Control Module	Active Test	Injector 2	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Antilock braking system	Read DTC		V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Antilock braking system	Erase DTC		V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Antilock braking system	Live Data		V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Antilock braking system	Active Test	Left Front Traction Control Valve	V1.20.001
PREMACY/ IXION	1.8L	FP_DE	1999 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001

DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Antilock braking system	Active Test	Left Front DSC Valve	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Antilock braking system	Active Test	Antilock braking system Power f	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Antilock braking system	Active Test	Stability Control Active Indicato	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Antilock braking system	Active Test	Right Front Traction Control Val	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Antilock braking system	Active Test	Right Front DSC Valve	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Antilock braking system	Active Test	DSC Active Chime	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Powertrain Control Module	Read DTC		V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Powertrain Control Module	Erase DTC		V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Powertrain Control Module	Live Data		V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Powertrain Control Module	Active Test	Injector 4	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Powertrain Control Module	Active Test	Injector 3	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Powertrain Control Module	Active Test	Injector 1	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 Powertrain Control Module	Active Test	Injector 2	V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.0L	FE	1997 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.0L	FE	1997 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.0L	FE	1997 Air Conditioning	Read DTC		V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.0L	FE	1997 Air Conditioning	Erase DTC		V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.0L	FE	1997 Powertrain Control Module	Read DTC		V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.0L	FE	1997 Powertrain Control Module	Erase DTC		V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.0L	FE	1997 Powertrain Control Module	Live Data		V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.0L	FE	1997 Powertrain Control Module	Active Test	Injector 1	V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.0L	FE	1997 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.0L	FE	1997 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.0L	FE	1997 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.0L	FE	1997 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.0L	FE	1997 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.0L	FE	1997 Powertrain Control Module	Active Test	Injector 2	V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.0L	FE	1997 Transmission Control Module	Read DTC		V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.0L	FE	1997 Transmission Control Module	Erase DTC		V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	J5	1997 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	J5	1997 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	J5	1997 Air Conditioning	Read DTC		V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	J5	1997 Air Conditioning	Erase DTC		V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	J5	1997 Powertrain Control Module	Read DTC		V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	J5	1997 Powertrain Control Module	Erase DTC		V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	J5	1997 Powertrain Control Module	Live Data		V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	J5	1997 Powertrain Control Module	Active Test	Injector 4	V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	J5	1997 Powertrain Control Module	Active Test	Injector 3	V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	J5	1997 Powertrain Control Module	Active Test	Injector 5	V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	J5	1997 Powertrain Control Module	Active Test	Injector 1	V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	J5	1997 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	J5	1997 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	J5	1997 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	J5	1997 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	J5	1997 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	J5	1997 Powertrain Control Module	Active Test	Variable Resonance Induction S	V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	J5	1997 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	J5	1997 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	J5	1997 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	J5	1997 Powertrain Control Module	Active Test	Injector 6	V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	J5	1997 Powertrain Control Module	Active Test	Injector 2	V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	J5	1997 Transmission Control Module	Read DTC		V1.20.001
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	J5	1997 Transmission Control Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 Security module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 Security module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 Hybrid Electronic Cluster	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 Hybrid Electronic Cluster	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 Hybrid Electronic Cluster	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 Hybrid Electronic Cluster	Active Test	Tachometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 Hybrid Electronic Cluster	Active Test	Temperature Gauge	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 Hybrid Electronic Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 Hybrid Electronic Cluster	Active Test	All segments	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 Hybrid Electronic Cluster	Active Test	Speedometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 Powertrain Control Module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 Powertrain Control Module	Erase DTC		V1.20.001

Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 Powertrain Control Module	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Longitudinal Acceleration Senso	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Generic Electronic Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Generic Electronic Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Generic Electronic Module	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Generic Electronic Module	Active Test	Rear Wiper Relay	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Generic Electronic Module	Active Test	Horn	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Generic Electronic Module	Active Test	Lock/Unlock Double Lock	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Generic Electronic Module	Active Test	Lock/Unlock Central Lock	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Generic Electronic Module	Active Test	Parking Lamps	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Generic Electronic Module	Active Test	Accessory Delay Relay	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Generic Electronic Module	Active Test	Head Lamps	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Generic Electronic Module	Active Test	Hazard Flashers	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Generic Electronic Module	Active Test	Security Horn Alarm	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	Speedometer	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	Anti-Theft Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	Rear Fog Lamps	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	Drive	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	Tachometer	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	Overspeed Warning Configurati	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	Neutral Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	Park	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	Overdrive OFF Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	Gear Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	All segments	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	Engine Coolant Level Lamp Out	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	Reverse Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	2nd Gear Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	1st Gear Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	Dimming Control Command	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	Check Engine Malfunction Indici	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	Brake Lamp	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	Fuel Level Low Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	Generator lamp circuit	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Instrument Cluster	Active Test	Chimer control	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Powertrain Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Powertrain Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Powertrain Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Powertrain Control Module	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Powertrain Control Module	Active Test	Anti-Theft RF Enable and Trans	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Restraint Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Restraint Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Restraint Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2001 Restraint Control Module	Active Test	Airbag Warning Lamp and Chim	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Longitudinal Acceleration Senso	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001

Escape / Tribute / Maverick	2.0L	Zetec	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Generic Electronic Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Generic Electronic Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Generic Electronic Module	Live Data		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Generic Electronic Module	Active Test	Rear Wiper Relay	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Generic Electronic Module	Active Test	Horn	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Generic Electronic Module	Active Test	Lock/Unlock Double Lock	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Generic Electronic Module	Active Test	Lock/Unlock Central Lock	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Generic Electronic Module	Active Test	Parking Lamps	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Generic Electronic Module	Active Test	Accessory Delay Relay	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Generic Electronic Module	Active Test	Head Lamps	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Generic Electronic Module	Active Test	Hazard Flashers	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Generic Electronic Module	Active Test	Security Horn Alarm	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Live Data		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	Speedometer	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	Anti-Theft Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	Rear Fog Lamps	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	Drive	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	Tachometer	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	Over speed Warning Configurati	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	Neutral Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	Park	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	Overdrive OFF Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	Gear Indicator'	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	All segments	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	Engine Coolant Level Lamp Outp	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	Reverse Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	2nd Gear Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	1st Gear Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	Dimming Control Command	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	Check Engine Malfunction Indica	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	Brake Lamp	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	Fuel Level Low Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	Generator lamp circuit	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Instrument Cluster	Active Test	Chimer control	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Powertrain Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Powertrain Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Powertrain Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Powertrain Control Module	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Powertrain Control Module	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Restraint Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Restraint Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Restraint Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2001 Restraint Control Module	Active Test	Airbag Warning Lamp and Chim	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001 Security module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001 Security module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001 Generic Electronic Module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001 Generic Electronic Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001 Generic Electronic Module	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001 Generic Electronic Module	Active Test	Wiper Run Relay Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001 Hybrid Electronic Cluster	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001 Hybrid Electronic Cluster	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001 Hybrid Electronic Cluster	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001 Hybrid Electronic Cluster	Active Test	Tachometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001 Hybrid Electronic Cluster	Active Test	Temperature Gauge	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001 Hybrid Electronic Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001 Hybrid Electronic Cluster	Active Test	All segments	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001 Hybrid Electronic Cluster	Active Test	Speedometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001 Powertrain Control Module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001 Powertrain Control Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001 Powertrain Control Module	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbo	2015 Audio Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbo	2015 Audio Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	3.2L	Duratorq-Turbo	2015 Audio Control Module	Active Test	Volume	V1.20.001

Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	Fuel Pump Relay	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	Central High Mounted Stop Lam	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	Anti-Theft Horn Status	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	Left Headlamp High Beam	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	Right Headlamp High Beam	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	Brake/Shift Interlock	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	Courtesy Lamps	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	Delayed Accessory Power	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	Run / Accessory Output Control	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	Run / Start Output Control	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	Powertrain Control Module Wal	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	Global Window Open/Close Con	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	Start Button Mode Indicator Cor	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	Liftgate Release Output Status	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	Load Shed Output Control	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	Horn Relay	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	Key (Removal) Inhibit	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	Right Front Fog Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	Left Front Fog Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	Front Park Lamps Output	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	Crash Sensed Status	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	Rear Park Lamps Output	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	All Door Lock	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	All Door Unlock	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Body Control Module	Active Test	Driver Door Unlock	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Active Test	Airbag Warning Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Active Test	Warning Lamp Status 1 - Charge	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Active Test	Right Turn signal Lamp Status	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Active Test	High Beam Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Active Test	Left Turn signal Lamp Status	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Active Test	Traction Control Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Active Test	Park Brake Applied Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Active Test	Transmission System Malfunction	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Active Test	Tire Pressure Telltale Status	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Active Test	Fuel Gauge Indicator Control	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Active Test	Door Ajar Warning Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Active Test	Malfunction Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Active Test	Traction Control Off Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Active Test	Tachometer Gauge Indicator Co	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Active Test	Temperature Gauge	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Active Test	Speedometer	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Active Test	All Warning Lamps	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Active Test	Rear Fog Lamp Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Active Test	Front Fog Lamp Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Active Test	Adaptive Front Lighting Fault	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Active Test	Side Light Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Instrument Panel Control Module	Active Test	Frost warning	V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.2L	Duratorq-Turbc	2015	Powertrain Control Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996,25	Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996,25	Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996,25	Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996,25	Security module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996,25	Security module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996,25	Electronic Crash Sensor	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996,25	Electronic Crash Sensor	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996,25	Electronic Crash Sensor	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996,25	Hybrid Electronic Cluster	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996,25	Hybrid Electronic Cluster	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996,25	Hybrid Electronic Cluster	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996,25	Hybrid Electronic Cluster	Active Test	Tachometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996,25	Hybrid Electronic Cluster	Active Test	Temperature Gauge	V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996,25	Hybrid Electronic Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996,25	Hybrid Electronic Cluster	Active Test	All segments	V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996,25	Hybrid Electronic Cluster	Active Test	Speedometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996,25	Powertrain Control Module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996,25	Powertrain Control Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996,25	Powertrain Control Module	Live Data		V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1997	Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1997	Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1997	Cruise Control	Read DTC		V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1997	Cruise Control	Erase DTC		V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1997	Powertrain Control Module	Read DTC		V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1997	Powertrain Control Module	Erase DTC		V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1997	Powertrain Control Module	Live Data		V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1997	Powertrain Control Module	Active Test	Variable Resonance Induction S _y	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1997	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1997	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1997	Powertrain Control Module	Active Test	Injector 2	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1997	Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1997	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1997	Powertrain Control Module	Active Test	Injector 4	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1997	Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1997	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1997	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1997	Powertrain Control Module	Active Test	Injector 3	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1997	Powertrain Control Module	Active Test	Exhaust Gas Recirculation	V1.20.001

Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 4X4 Control Module	Active Test	Four wheel drive Mode Lamp	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Antilock braking system	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Antilock braking system	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Antilock braking system	Live Data		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Antilock braking system	Active Test	Longitudinal Acceleration Senso	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Antilock braking system	Active Test	Brake Two-Wheel Dyno Mode	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Battery Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Battery Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Battery Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Front Controls Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Front Controls Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Front Controls Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Front Controls Interface Module	Active Test	Bezel Illumination	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Front Display Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Front Display Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Front Display Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Front Display Interface Module	Active Test	Bezel Illumination	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Live Data		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	Accessory Delay Relay Circuit	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	White Lighting Circuit	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	Right Rear Turn Signal/Trailer Re	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	Parking Lamp	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	Horn	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	Dimmable Backlighting	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	Brake/Shift Interlock	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	Floor Lamp Output Circuit	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	Key Pad Backlighting	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	Interior Lighting Circuit	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	Left Rear Turn Signal Lamp Statu	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	Low Beam Circuit Status Left Frc	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	Low Beam Circuit Status Right Fr	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	Left Front Turn Lamp Output Sta	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	Right Front Turn Lamp Output S	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	Left Front Mirror Turn Signal Lar	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	Left Rear Turn Signal/Trailer Rel	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	Right Front Mirror Turn Signal Li	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	All Door Unlock	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	All Door Lock	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	Smart Window Control	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	Liftglass/Trunk Release	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	Right Rear Turn Signal Lamp Sta	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	Liftgate release	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	Fog Lamp	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	Mirror Puddle Lamps	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Generic Electronic Module / Smart Jun	Active Test	High Beam	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Live Data		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Speedometer	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Assist Gauge Pointer Placement	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	High Beam Indicator	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Low Fuel Warning Indication	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Oil Pressure Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Check Engine Malfunction Indica	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Generator lamp	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Over Drive (O/D) off	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Brake Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Tire Pressure Monitoring System	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Airbag	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Right Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Left Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Engine over-temperature light	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Cruise control lamp	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Check fuel cap indicator lamp cc	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Wrench Telltale Indicator	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Traction Assist Active Indicator	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Turn Signal Left On Warning Chi	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Turn Signal Click (turn signal TT	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Turn Signal Clack (turn signal TT	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Belt Minder Chime	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Key In Ignition Reminder Chime	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Park Brake Warning Chime	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Seatbelt Warning Chime	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Headlamps on Reminder Chime	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Airbag Secondary Warning	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Charge Gauge Pointer Placemer	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Instrument Cluster	Active Test	Tachometer	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Occupant Classification System Modul	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Occupant Classification System Modul	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Occupant Classification System Modul	Live Data		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Parking Aid Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Parking Aid Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Parking Aid Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Parking Aid Module	Active Test	Activate System	V1.20.001

Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Parking Aid Module	Active Test	Activate Light Emitting Diode	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Parking Aid Module	Active Test	Activate Rear Speaker	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Powertrain Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Powertrain Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Powertrain Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Powertrain Control Module	Active Test	Air conditioning clutch	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Powertrain Control Module	Active Test	DC to DC Converter Enable	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Powertrain Control Module	Active Test	EGR Motor Position Desired	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Powertrain Control Module	Active Test	Heater Pump Commanded	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Powertrain Control Module	Active Test	Motor Electronics Coolant Pump	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Powertrain Control Module	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Powertrain Control Module	Active Test	Starter Motor Control Output D	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Powertrain Control Module	Active Test	One-Touch Start Status	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Power Steering Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Power Steering Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Restraint Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Restraint Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Restraint Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Restraint Control Module	Active Test	Restraints Indicator Lamp	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Restraint Control Module	Active Test	Passenger Airbag Deactivation L	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Satellite Digital Audio Receiver System	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Satellite Digital Audio Receiver System	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Satellite Digital Audio Receiver System	Live Data		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Satellite Digital Audio Receiver System	Active Test	Satellite Digital Audio Receiver (V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Transmission Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Transmission Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Transmission Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Audio Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Audio Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Audio Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Audio Control Module	Active Test	Bezel Illumination	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Heating Ventilation Air Conditioning	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Heating Ventilation Air Conditioning	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Heating Ventilation Air Conditioning	Live Data		V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Heating Ventilation Air Conditioning	Active Test	Blower motor control command	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Heating Ventilation Air Conditioning	Active Test	recirculation door close comma	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Heating Ventilation Air Conditioning	Active Test	recirculation door open comma	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Heating Ventilation Air Conditioning	Active Test	Left Blend Door Position	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Heating Ventilation Air Conditioning	Active Test	Right Blend Door Position	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Heating Ventilation Air Conditioning	Active Test	Dimming Control Command	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Heating Ventilation Air Conditioning	Active Test	Heated Backlight Relay	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Heating Ventilation Air Conditioning	Active Test	All segments	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Heating Ventilation Air Conditioning	Active Test	Front Blower Relay	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Heating Ventilation Air Conditioning	Active Test	Rear Window Defog Indicator	V1.20.001
Escape/Tribute / Mariner	2.3L	HEV / ATKINSO	2008 Heating Ventilation Air Conditioning	Active Test	Air conditioning Floor Servo Pos	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Audio Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Audio Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Audio Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Audio Control Module	Active Test	Volume	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Audio Control Module	Active Test	FM radio band	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Audio Control Module	Active Test	SUBWOOFER STATUS	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Audio Control Module	Active Test	CENTER SPEAKER STATUS	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Audio Control Module	Active Test	LEFT REAR SPEAKER STATUS	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Audio Control Module	Active Test	RIGHT REAR SPEAKER STATUS	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Audio Control Module	Active Test	LEFT FRONT SPEAKER STATUS	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Audio Control Module	Active Test	RIGHT FRONT SPEAKER STATUS	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Audio Control Module	Active Test	Tuned AM Radio Station Freque	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Audio Control Module	Active Test	Internal Tuner Selection Status	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Accessory Protocol Interface Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Accessory Protocol Interface Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Accessory Protocol Interface Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Accessory Protocol Interface Module	Active Test	Source of Audio Input	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 All Terrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 All Terrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 All Terrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Cruise-Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Cruise-Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Cruise-Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Driver Front Door Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Driver Front Door Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Driver Front Door Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Control/Display Interface Modul	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Control/Display Interface Modul	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Control/Display Interface Modul	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Control/Display Interface Modul	Active Test	Dimmer Switch Input Status	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Control/Display Interface Modul	Active Test	Primary Audio Source	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Control/Display Interface Modul	Active Test	Channel A Audio Control Modul	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Control/Display Interface Modul	Active Test	CHANNEL A FAMILY ENTERTAINI	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Control/Display Interface Modul	Active Test	CHANNEL A FAMILY ENTERTAINI	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Control/Display Interface Modul	Active Test	Channel A Satellite Digital Audic	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Control/Display Interface Modul	Active Test	Channel B Audio Control Modul	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Control/Display Interface Modul	Active Test	CHANNEL B FAMILY ENTERTAINI	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Control/Display Interface Modul	Active Test	CHANNEL B FAMILY ENTERTAINI	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Control/Display Interface Modul	Active Test	Channel B Satellite Digital	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Control/Display Interface Modul	Active Test	FAMILY ENTERTAINMENT SYST	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Control/Display Interface Modul	Active Test	Infotainment System Power	V1.20.001

Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Control/Display Interface Modul	Active Test	Electronic control unit Mono Pri	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Control/Display Interface Modul	Active Test	Electronic control unit Stereo Pr	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Control/Display Interface Modul	Active Test	Electronic control unit Stereo Se	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Control/Display Interface Modul	Active Test	Electronic control unit Voice Ses	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Control/Display Interface Modul	Active Test	Electronic control unit Phone Ca	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Control/Display Interface Modul	Active Test	Satellite Digital Audio Receiver f	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Control/Display Interface Modul	Active Test	Satellite Digital Audio Receiver s	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Control/Display Interface Modul	Active Test	Vehicle Speed	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Controls Interface Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Controls Interface Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Controls Interface Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Controls Interface Module	Active Test	Left Seat Heater	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Controls Interface Module	Active Test	Right Seat Heater	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Controls Interface Module	Active Test	Front Blower Relay	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Controls Interface Module	Active Test	Dimmer Switch Input Status	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Controls Interface Module	Active Test	Rear Defrost (Heated Backlight)	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Controls Interface Module	Active Test	Air Inlet Door Position	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Controls Interface Module	Active Test	air mode actuator	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Controls Interface Module	Active Test	Left Blend Door Position	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Controls Interface Module	Active Test	Right Blend Door Position	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Front Controls Interface Module	Active Test	Blower Motor Speed	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Global Positioning System Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Global Positioning System Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Global Positioning System Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Gateway Module A	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Gateway Module A	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Gateway Module A	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Headlamp Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Headlamp Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Headlamp Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Headlamp Control Module	Active Test	Headlamp Position	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Head Up Display	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Head Up Display	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Head Up Display	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Head Up Display	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Image Processing Module A	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Image Processing Module A	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Image Processing Module A	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Image Processing Module A	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Parking Aid Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Parking Aid Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Parking Aid Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Powertrain Control Module	Active Test	Heater control for Heated Exhau	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Powertrain Control Module	Active Test	Air Conditioning Compressor Co	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Powertrain Control Module	Active Test	Gear Command by Output State	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Powertrain Control Module	Active Test	Heater control for Heated Exhau	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Powertrain Control Module	Active Test	Commanded Equivalence Ratio	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Powertrain Control Module	Active Test	Engine Revolutions Per Minute	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Powertrain Control Module	Active Test	Firm Shift	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Powertrain Control Module	Active Test	Grill Shutter A Position - Comm	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Powertrain Control Module	Active Test	Engine Idle Shutdown Extended	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Powertrain Control Module	Active Test	Charge Air Cooler Cooling Fan S	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Passenger Front Door Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Passenger Front Door Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Passenger Front Door Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Power Steering Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Power Steering Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Power Steering Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Power Steering Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Rear Gate/Trunk Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Rear Gate/Trunk Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Rear Gate/Trunk Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Radio Transceiver Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Radio Transceiver Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Radio Transceiver Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Steering Column Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Steering Column Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Steering Column Control Module	Active Test	Forward Pedal Position Control	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Steering Column Control Module	Active Test	Backward Pedal Position Contro	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Steering Column Control Module	Active Test	Headlight Switch Mode	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Steering Column Control Module	Active Test	Steering Column Movement	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Tracking and Blocking Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Tracking and Blocking Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Tracking and Blocking Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Telematic Control Unit Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Telematic Control Unit Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Telematic Control Unit Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Trailer Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Trailer Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Trailer Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Trailer Module	Active Test	Power Point Output Relay	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Trailer Module	Active Test	Right Stop Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Trailer Module	Active Test	Right Rear Turn Signal/Trailer R	V1.20.001

Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Trailer Module	Active Test	Left Stop Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Trailer Module	Active Test	Left Rear Turn Signal/Trailer Rel	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Trailer Module	Active Test	Central High Mounted Stop Lam	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Antilock braking system	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Antilock braking system	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Antilock braking system	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Antilock braking system	Active Test	Left Front/Right Rear Traction C	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Antilock braking system	Active Test	Right Front/Left Rear Traction C	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Antilock braking system	Active Test	Left Front/Right Rear Traction C	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Antilock braking system	Active Test	Right Front/Left Rear Traction C	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Antilock braking system	Active Test	Left Front Dump	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Antilock braking system	Active Test	Left Front Isolation valve	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Antilock braking system	Active Test	Right Front Dump	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Antilock braking system	Active Test	Right Front Isolation Valve	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Antilock braking system	Active Test	Left Rear Dump	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Antilock braking system	Active Test	Left Rear Isolation Valve	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Antilock braking system	Active Test	Right Rear Dump	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Antilock braking system	Active Test	Right Rear Isolation Valve	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Right Rear Turn Signal Lamp Sta	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Left Rear Turn Signal Lamp Stat	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Right Front Turn Signal Lamp St	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Left Front Turn Signal Lamp Stat	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Keypad Lamp Output Status	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Reverse Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Right Rear Turn Signal/Trailer Rt	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Left Rear Turn Signal/Trailer Rel	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Left Headlamp Low Beam	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Right Headlamp Low Beam	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Courtesy Puddle Step Lamps	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Demand lighting	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	White Lighting (Reflective Contr	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Light Emitting Diode Backlightin	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Fuel Pump Relay	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Central High Mounted Stop Lam	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Anti-Theft Horn Status	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Left Headlamp High Beam	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Right Headlamp High Beam	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Brake/Shift Interlock	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Courtesy Lamps	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Delayed Accessory Power	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Run / Accessory Output Control	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Run / Start Output Control	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Powertrain Control Module Wal	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Global Window Open/Close Con	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Start Button Mode Indicator Cor	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Liftgate Release Output Status	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Load Shed Output Control	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Horn Relay	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Key (Removal) Inhibit	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Right Front Fog Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Left Front Fog Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Front Park Lamps Output	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Crash Sensed Status	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Rear Park Lamps Output	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	All Door Lock	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	All Door Unlock	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Body Control Module	Active Test	Driver Door Unlock	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Active Test	Airbag Warning Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Active Test	Warning Lamp Status 1 - Charge	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Active Test	Right Turn signal Lamp Status	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Active Test	High Beam Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Active Test	Left Turn signal Lamp Status	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Active Test	Traction Control Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Active Test	Park Brake Applied Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Active Test	Transmission System Malfunction	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Active Test	Tire Pressure Telltale Status	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Active Test	Fuel Gauge Indicator Control	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Active Test	Door Ajar Warning Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Active Test	Malfunction Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Active Test	Traction Control Off Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Active Test	Tachometer Gauge Indicator Co	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Active Test	Temperature Gauge	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Active Test	Speedometer	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Active Test	All Warning Lamps	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Active Test	Rear Fog Lamp Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Active Test	Front Fog Lamp Indicator	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Active Test	Adaptive Front Lighting Fault	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Active Test	Side Light Lamp	V1.20.001
Ranger / Mazda B-Series / Troller	2.5L	IVCT	2015 Instrument Panel Control Module	Active Test	Frost warning	V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	1.8L	L8	2016 Antilock braking system	Read DTC		V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	1.8L	L8	2016 Antilock braking system	Erase DTC		V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	1.8L	L8	2016 Antilock braking system	Live Data		V1.20.001
BONGO / BONGO BRAUNNY / SPECTRON	1.8L	L8	2016 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001

BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Instrument Cluster	Read DTC		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Instrument Cluster	Erase DTC		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Instrument Cluster	Live Data		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Powertrain Control Module	Read DTC		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Powertrain Control Module	Erase DTC		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Powertrain Control Module	Live Data		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Powertrain Control Module	Active Test	Injector 1	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Powertrain Control Module	Active Test	Injector 2	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Powertrain Control Module	Active Test	Injector 3	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Powertrain Control Module	Active Test	Injector 4	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Transmission Control Module	Read DTC		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Transmission Control Module	Erase DTC		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Transmission Control Module	Live Data		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Transmission Control Module	Active Test	Commanded current for the tra	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Transmission Control Module	Active Test	Commanded current for the Tra	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Transmission Control Module	Active Test	Commanded current for the tra	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Transmission Control Module	Active Test	Commanded current for the Tor	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Transmission Control Module	Active Test	Commanded current for the Tra	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Transmission Control Module	Active Test	Commanded current for the Tra	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	L8	2016 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 4X4 Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 4X4 Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 4X4 Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 4X4 Control Module	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 4X4 Control Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 4X4 Control Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 4X4 Control Module	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 4X4 Control Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Powertrain Control Module	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Powertrain Control Module	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Remote Anti-Theft / Personality Modu	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Remote Anti-Theft / Personality Modu	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Remote Anti-Theft / Personality Modu	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Remote Anti-Theft / Personality Modu	Active Test	Parking Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Remote Anti-Theft / Personality Modu	Active Test	Horn Output	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Remote Anti-Theft / Personality Modu	Active Test	All Door Unlock	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Remote Anti-Theft / Personality Modu	Active Test	Interior Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Remote Anti-Theft / Personality Modu	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Remote Anti-Theft / Personality Modu	Active Test	All Door Lock	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Restraint Control Module	Active Test	Airbag Warning Lamp and Chim	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Generic Electronic Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Generic Electronic Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Generic Electronic Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Generic Electronic Module	Active Test	Door Ajar Warning Lamp circuit	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Generic Electronic Module	Active Test	Speed Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 Generic Electronic Module	Active Test	Wiper Run Relay Control	V1.20.001

Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Powertrain Control Module	Active Test	Intake Manifold Runner Lamp Contr	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Powertrain Control Module	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Powertrain Control Module	Active Test	Evaporative Emission Vapor Ma	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Remote Anti-Theft / Personality Modu	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Remote Anti-Theft / Personality Modu	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Remote Anti-Theft / Personality Modu	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Remote Anti-Theft / Personality Modu	Active Test	Parking Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Remote Anti-Theft / Personality Modu	Active Test	Horn Output	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Remote Anti-Theft / Personality Modu	Active Test	All Door Unlock	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Remote Anti-Theft / Personality Modu	Active Test	Interior Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Remote Anti-Theft / Personality Modu	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Remote Anti-Theft / Personality Modu	Active Test	All Door Lock	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Restraint Control Module	Active Test	Airbag Warning Lamp and Chime	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Generic Electronic Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Generic Electronic Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Generic Electronic Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Generic Electronic Module	Active Test	Door Ajar Warning Lamp circuit	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Generic Electronic Module	Active Test	Speed Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Generic Electronic Module	Active Test	Wiper Run Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Generic Electronic Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Generic Electronic Module	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Generic Electronic Module	Active Test	Washer Pump Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Generic Electronic Module	Active Test	One Touch Down Motor Relay	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 Generic Electronic Module	Active Test	Clockwise Relay Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Generic Electronic Module	Active Test	Door Ajar Warning Lamp circuit	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Generic Electronic Module	Active Test	Speed Relay Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Generic Electronic Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Generic Electronic Module	Active Test	Chimer control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Generic Electronic Module	Active Test	Washer Pump Relay Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Generic Electronic Module	Active Test	One Touch Down Motor Relay	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Generic Electronic Module	Active Test	Clockwise Relay Control	V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Powertrain Control Module	Read DTC		V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Powertrain Control Module	Erase DTC		V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Powertrain Control Module	Live Data		V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solen	V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Powertrain Control Module	Active Test	intake air shutter valve	V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Powertrain Control Module	Active Test	variable boost control solenoid	V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Powertrain Control Module	Active Test	Glow plug control	V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Powertrain Control Module	Active Test	Fuel Shut Off Valve	V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Powertrain Control Module	Active Test	Glow plug lamp	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solen	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	intake air shutter valve	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	variable boost control solenoid	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Glow plug control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Fuel Shut Off Valve	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Glow plug lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1993 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1993 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1993 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1993 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1993 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solen	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1993 Powertrain Control Module	Active Test	intake air shutter valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1993 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1993 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1993 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1993 Powertrain Control Module	Active Test	variable boost control solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1993 Powertrain Control Module	Active Test	Glow plug control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1993 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	1993 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001

CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Live Data		V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Active Test	Injector 4	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Active Test	Injector 3	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Active Test	Injector 1	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Active Test	3-2 Timing Solenoid Valve	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999 Powertrain Control Module	Active Test	Injector 2	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1997 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1997 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Air Conditioning	Read DTC		V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Air Conditioning	Erase DTC		V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Read DTC		V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Erase DTC		V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Live Data		V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Active Test	Injector 4	V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Active Test	air mix control valve	V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Active Test	Injector 3	V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Active Test	Injector 1	V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Active Test	tumble swirl control solenoid va	V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solen	V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
FAMILIA / LASER	1.5L	Z5	1996 Powertrain Control Module	Active Test	Injector 2	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1997 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1997 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1997 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1997 Powertrain Control Module	Active Test	air mix control valve	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1997 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1997 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1997 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1997 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1997 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1997 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1997 Powertrain Control Module	Active Test	tumble swirl control solenoid va	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996,5 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996,5 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996,5 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996,5 Security module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996,5 Security module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996,5 Hybrid Electronic Cluster	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996,5 Hybrid Electronic Cluster	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996,5 Hybrid Electronic Cluster	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996,5 Hybrid Electronic Cluster	Active Test	Tachometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996,5 Hybrid Electronic Cluster	Active Test	Temperature Gauge	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996,5 Hybrid Electronic Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996,5 Hybrid Electronic Cluster	Active Test	All segments	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996,5 Hybrid Electronic Cluster	Active Test	Speedometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996,5 Powertrain Control Module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996,5 Powertrain Control Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996,5 Powertrain Control Module	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996,5 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996,5 Powertrain Control Module	Active Test	Engine cooling fan	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996,5 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996,5 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996,5 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996,5 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996,5 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996,75 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996,75 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001

Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996,75 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996,75 Security module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996,75 Security module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996,75 Hybrid Electronic Cluster	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996,75 Hybrid Electronic Cluster	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996,75 Hybrid Electronic Cluster	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996,75 Hybrid Electronic Cluster	Active Test	Tachometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996,75 Hybrid Electronic Cluster	Active Test	Temperature Gauge	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996,75 Hybrid Electronic Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996,75 Hybrid Electronic Cluster	Active Test	All segments	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996,75 Hybrid Electronic Cluster	Active Test	Speedometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996,75 Powertrain Control Module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996,75 Powertrain Control Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996,75 Powertrain Control Module	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996,75 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996,75 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996,75 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996,75 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996,75 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996,75 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	1998 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	1998 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	1998 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	1998 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Traction Control Off Indicator	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power F	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Powertrain Control Module	Read DTC		V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Powertrain Control Module	Erase DTC		V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Powertrain Control Module	Live Data		V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1995 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1995 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1995 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1995 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1995 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Antilock braking system	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Antilock braking system	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Accessory Protocol Interface Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Accessory Protocol Interface Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Body Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Body Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Reductant Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Reductant Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Reductant Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Driver Front Door Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Driver Front Door Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Front Control/Display Interface Modul	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Front Control/Display Interface Modul	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Front Controls Interface Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Front Controls Interface Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Global Positioning System Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Global Positioning System Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Gateway Module A	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Gateway Module A	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Headlamp Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Headlamp Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Head Up Display	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Head Up Display	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Instrument Panel Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Instrument Panel Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Image Processing Module A	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Image Processing Module A	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Parking Aid Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Parking Aid Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Powertrain Control Module	Active Test	Service Tool Fuel Multiplier for C	V1.20.001
Ranger / Mazda B-Series / Troller	2.0L	Duratorq-Turbc	2018 Powertrain Control Module	Active Test	Service Tool Fuel Multiplier for C	V1.20.001

FAMILIA / LASER	2.0L	FS	2000 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Antilock braking system	Active Test	Engine Torque Signal	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Air Conditioning	Read DTC		V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Air Conditioning	Erase DTC		V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Read DTC		V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Erase DTC		V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Live Data		V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Active Test	Injector 4	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Active Test	Injector 3	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Active Test	Shift solenoid E/5	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Active Test	Injector 1	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Active Test	3-2 Timing Solenoid Valve	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
FAMILIA / LASER	2.0L	FS	2000 Powertrain Control Module	Active Test	Injector 2	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Antilock braking system	Read DTC		V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Antilock braking system	Erase DTC		V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Antilock braking system	Live Data		V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Antilock braking system	Active Test	Antilock braking system Power f	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Air Conditioning	Read DTC		V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Air Conditioning	Erase DTC		V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Powertrain Control Module	Read DTC		V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Powertrain Control Module	Erase DTC		V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Powertrain Control Module	Live Data		V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solen	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Powertrain Control Module	Active Test	Glow plug control	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Powertrain Control Module	Active Test	Intake Air Shutter Valve	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Powertrain Control Module	Active Test	Variable Boost Control Solenoid	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Powertrain Control Module	Active Test	Fuel Shut Off Valve	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Powertrain Control Module	Active Test	Glow Plug Lamp	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	RF_T	2000 Powertrain Control Module	Active Test	Spill Valve Relay	V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Air Conditioning	Read DTC		V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Air Conditioning	Erase DTC		V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Antilock braking system	Read DTC		V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Antilock braking system	Erase DTC		V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Antilock braking system	Live Data		V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Antilock braking system	Active Test	Antilock braking system Power f	V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Powertrain Control Module	Read DTC		V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Powertrain Control Module	Erase DTC		V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Powertrain Control Module	Live Data		V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Powertrain Control Module	Active Test	Injector 4	V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Powertrain Control Module	Active Test	Injector 3	V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Powertrain Control Module	Active Test	Shift solenoid E/5	V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Powertrain Control Module	Active Test	Injector 1	V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001

Ranger / Mazda B-Series / Troller	2.3L	EcoBoost - Gas	2019 Steering Column Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.3L	EcoBoost - Gas	2019 Tracking and Blocking Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.3L	EcoBoost - Gas	2019 Tracking and Blocking Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.3L	EcoBoost - Gas	2019 Tracking and Blocking Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Troller	2.3L	EcoBoost - Gas	2019 Telematic Control Unit Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.3L	EcoBoost - Gas	2019 Telematic Control Unit Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.3L	EcoBoost - Gas	2019 Trailer Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Troller	2.3L	EcoBoost - Gas	2019 Trailer Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Fan control high speed	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Fan control low speed	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Air Conditioning Compressor Co	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Injector 1 Disable	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Injector 2 Disable	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Injector 3 Disable	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Injector 4 Disable	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Heater control for Heated Exhau	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Heater control for Heated Exhau	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Engine Revolutions Per Minute	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Converter Pressure Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Shift Solenoid Pressure Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Evaporative Emission System Va	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Fuel Rail Pressure Desired	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Fuel Volume Control Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Turbocharger Bypass Valve 1	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Turbocharger Wastegate	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Variable Camshaft Timing Exhau	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Variable Camshaft Timing Intake	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Electric Transmission Fluid Pum	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Grill Shutter A Position - Comm	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Commanded Equivalence Ratio	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Commanded Equivalence Ratio	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Coolant Pump 'A' Is Commande	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 Powertrain Control Module	Active Test	Gear Command by Output State	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Antilock braking system	Read DTC		V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Antilock braking system	Erase DTC		V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Antilock braking system	Live Data		V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Antilock braking system	Active Test	Antilock braking system Power F	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Antilock braking system	Active Test	Engine Torque Signal	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Air Conditioning	Read DTC		V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Air Conditioning	Erase DTC		V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Cruise Control	Read DTC		V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Cruise Control	Erase DTC		V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Powertrain Control Module	Read DTC		V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Powertrain Control Module	Erase DTC		V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Powertrain Control Module	Live Data		V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Powertrain Control Module	Active Test	Injector 4	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Powertrain Control Module	Active Test	Injector 3	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Powertrain Control Module	Active Test	Injector 1	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1999 Powertrain Control Module	Active Test	Injector 2	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1999 Air Conditioning	Read DTC		V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1999 Air Conditioning	Erase DTC		V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1999 Cruise Control	Read DTC		V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1999 Cruise Control	Erase DTC		V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1999 Powertrain Control Module	Read DTC		V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1999 Powertrain Control Module	Erase DTC		V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1999 Powertrain Control Module	Live Data		V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1999 Powertrain Control Module	Active Test	Injector 4	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1999 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1999 Powertrain Control Module	Active Test	Injector 3	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1999 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1999 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1999 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001

Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Powertrain Control Module	Active Test	Evaporative Emission Vapor Ma	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Remote Anti-Theft / Personality Modu	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Remote Anti-Theft / Personality Modu	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Remote Anti-Theft / Personality Modu	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Remote Anti-Theft / Personality Modu	Active Test	Parking Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Remote Anti-Theft / Personality Modu	Active Test	LOCK	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Remote Anti-Theft / Personality Modu	Active Test	Horn Output	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Remote Anti-Theft / Personality Modu	Active Test	All Door Unlock	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Remote Anti-Theft / Personality Modu	Active Test	Interior Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Remote Anti-Theft / Personality Modu	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Restraint Control Module	Active Test	Airbag Warning Lamp and Chim	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Active Test	Door Ajar Warning Lamp circuit	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Active Test	Center Axle Engage Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Active Test	Speed Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Active Test	Wiper Run Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Active Test	Down Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Active Test	Over Speed Warning Chime	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Active Test	Washer Pump Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Active Test	Accessory Delay Relay	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Active Test	Heated Backlight Relay	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Active Test	Center Axle Disconnect Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Active Test	One Touch Down Motor Relay	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	1999	Generic Electronic Module	Active Test	Up Relay Control	V1.20.001
LASER / 323 / TIERRA	2.0L	KF	Null	Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
LASER / 323 / TIERRA	2.0L	KF	Null	Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
LASER / 323 / TIERRA	2.0L	KF	Null	Powertrain Control Module	Read DTC		V1.20.001
LASER / 323 / TIERRA	2.0L	KF	Null	Powertrain Control Module	Erase DTC		V1.20.001
LASER / 323 / TIERRA	2.0L	KF	Null	Transmission Control Module	Read DTC		V1.20.001
LASER / 323 / TIERRA	2.0L	KF	Null	Transmission Control Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1996,75	Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1996,75	Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1996,75	Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1996,75	Security module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1996,75	Security module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1996,75	Hybrid Electronic Cluster	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1996,75	Hybrid Electronic Cluster	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1996,75	Hybrid Electronic Cluster	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1996,75	Hybrid Electronic Cluster	Active Test	Tachometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1996,75	Hybrid Electronic Cluster	Active Test	Temperature Gauge	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1996,75	Hybrid Electronic Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1996,75	Hybrid Electronic Cluster	Active Test	All segments	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1996,75	Hybrid Electronic Cluster	Active Test	Speedometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1996,75	Powertrain Control Module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1996,75	Powertrain Control Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1996,75	Powertrain Control Module	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1996,75	Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1996,75	Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1996,75	Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1996,75	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1996,75	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1996,75	Powertrain Control Module	Active Test	Evaporative Emission Vapor Ma	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2002	4X4 Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2002	4X4 Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2002	4X4 Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2002	4X4 Control Module	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2002	4X4 Control Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2002	4X4 Control Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2002	4X4 Control Module	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2002	4X4 Control Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2002	Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2002	Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001

626 / 626 WAGON / TELSTAR	1.8L	FP	1997 Cruise Control	Erase DTC		V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1997 Powertrain Control Module	Read DTC		V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1997 Powertrain Control Module	Erase DTC		V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1997 Powertrain Control Module	Live Data		V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1997 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1997 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1997 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1997 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1997 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1997 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1997 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1997 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1997 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1997 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
626 / 626 WAGON / TELSTAR	1.8L	FP	1997 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
PREMACY/ IXION	1.8L	FP	1999 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
PROBE / MX-6	2.0L	Other	1996 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
PROBE / MX-6	2.0L	Other	1996 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
LASER / 323 / TIERRA	2.0L	FS	2001 Antilock braking system	Read DTC		V1.20.001
LASER / 323 / TIERRA	2.0L	FS	2001 Antilock braking system	Erase DTC		V1.20.001
LASER / 323 / TIERRA	2.0L	FS	2001 Antilock braking system	Live Data		V1.20.001
LASER / 323 / TIERRA	2.0L	FS	2001 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
LASER / 323 / TIERRA	2.0L	FS	2001 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
LASER / 323 / TIERRA	2.0L	FS	2001 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
LASER / 323 / TIERRA	2.0L	FS	2001 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
LASER / 323 / TIERRA	2.0L	FS	2001 Antilock braking system	Active Test	Antilock braking system Power f	V1.20.001
LASER / 323 / TIERRA	2.0L	FS	2001 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
LASER / 323 / TIERRA	2.0L	FS	2001 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
LASER / 323 / TIERRA	2.0L	FS	2001 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
LASER / 323 / TIERRA	2.0L	FS	2001 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
LASER / 323 / TIERRA	2.0L	FS	2001 Antilock braking system	Active Test	Engine Torque Signal	V1.20.001
LASER / 323 / TIERRA	2.0L	FS	2001 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
LASER / 323 / TIERRA	2.0L	FS	2001 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
LASER / 323 / TIERRA	2.0L	FS	2001 Transmission Control Module	Read DTC		V1.20.001
LASER / 323 / TIERRA	2.0L	FS	2001 Transmission Control Module	Erase DTC		V1.20.001
LASER / 323 / TIERRA	2.0L	FS	2001 Powertrain Control Module	Read DTC		V1.20.001
LASER / 323 / TIERRA	2.0L	FS	2001 Powertrain Control Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Anti-Lock Brake / Traction Control Mo	Active Test	Traction Control Off Indicator	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Anti-Lock Brake / Traction Control Mo	Active Test	Engine Torque Signal	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front DSC Valve	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Traction Control Valve	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Anti-Lock Brake / Traction Control Mo	Active Test	DSC Active Chime	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Stability Control Active Indicator	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front DSC Valve	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Traction Control Val	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Traction Control Off Indicator	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Air Conditioning	Read DTC		V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Air Conditioning	Erase DTC		V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Read DTC		V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Erase DTC		V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Live Data		V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Active Test	Injector 2	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Active Test	Injector 4	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001

PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Active Test	Injector 3	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
PREMACY/ IXION	2.0L	FS	2001 Powertrain Control Module	Active Test	Injector 1	V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
FAMILIA / LASER	1.5L	ZL	2000 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Injector 2	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Shift solenoid E/5	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Injector 4	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Injector 3	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Injector 1	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Antilock braking system	Read DTC		V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Antilock braking system	Erase DTC		V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Read DTC		V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Erase DTC		V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Live Data		V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Active Test	Injector 2	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Active Test	Injector 4	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Active Test	Injector 3	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Powertrain Control Module	Active Test	Injector 1	V1.20.001
Courier	2.5L	WL	2001 Antilock braking system	Read DTC		V1.20.001
Courier	2.5L	WL	2001 Antilock braking system	Erase DTC		V1.20.001
Courier	2.5L	WL	2001 Antilock braking system	Live Data		V1.20.001
Courier	2.5L	WL	2001 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
Courier	2.5L	WL	2001 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Courier	2.5L	WL	2001 Antilock braking system	Active Test	Antilock braking system Power F	V1.20.001
Courier	2.5L	WL	2001 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Courier	2.5L	WL	2001 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
Courier	2.5L	WL	2001 Antilock braking system	Active Test	Rear Inlet Valve	V1.20.001
Courier	2.5L	WL	2001 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
Courier	2.5L	WL	2001 Antilock braking system	Active Test	Rear Outlet Valve	V1.20.001
Courier	2.5L	WL	2001 Powertrain Control Module	Read DTC		V1.20.001
Courier	2.5L	WL	2001 Powertrain Control Module	Erase DTC		V1.20.001
Courier	2.5L	WL_T	2001 Antilock braking system	Read DTC		V1.20.001
Courier	2.5L	WL_T	2001 Antilock braking system	Erase DTC		V1.20.001
Courier	2.5L	WL_T	2001 Antilock braking system	Live Data		V1.20.001
Courier	2.5L	WL_T	2001 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
Courier	2.5L	WL_T	2001 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Courier	2.5L	WL_T	2001 Antilock braking system	Active Test	Antilock braking system Power F	V1.20.001
Courier	2.5L	WL_T	2001 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Courier	2.5L	WL_T	2001 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
Courier	2.5L	WL_T	2001 Antilock braking system	Active Test	Rear Inlet Valve	V1.20.001
Courier	2.5L	WL_T	2001 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
Courier	2.5L	WL_T	2001 Antilock braking system	Active Test	Rear Outlet Valve	V1.20.001
Courier	2.5L	WL_T	2001 Powertrain Control Module	Read DTC		V1.20.001
Courier	2.5L	WL_T	2001 Powertrain Control Module	Erase DTC		V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power F	V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
LASER / 323 / TIERRA	2.0L	RF_T	1998 Anti-Lock Brake / Traction Control Mo	Active Test		V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Antilock braking system	Live Data		V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001

LASER / 323 / TIERRA	1.3L	B3	2001 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Antilock braking system	Active Test	Antilock braking system Power f	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Antilock braking system	Active Test	Rear Inlet Valve	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
LASER / 323 / TIERRA	1.3L	B3	2001 Antilock braking system	Active Test	Rear Outlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Anti-Lock Brake / Traction Control Mo	Read DTC	Left Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Anti-Lock Brake / Traction Control Mo	Erase DTC	Right Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Anti-Lock Brake / Traction Control Mo	Live Data	Right Front Outlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Generic Electronic Module	Read DTC	Right Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Generic Electronic Module	Erase DTC	Left Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Generic Electronic Module	Live Data	Right Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Generic Electronic Module	Active Test	Rear Wiper Relay	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Generic Electronic Module	Active Test	Horn	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Generic Electronic Module	Active Test	Lock/Unlock Double Lock	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Generic Electronic Module	Active Test	Lock/Unlock Central Lock	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Generic Electronic Module	Active Test	Parking Lamps	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Generic Electronic Module	Active Test	Accessory Delay Relay	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Generic Electronic Module	Active Test	Head Lamps	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Generic Electronic Module	Active Test	Hazard Flashers	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Generic Electronic Module	Active Test	Security Horn Alarm	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	Speedometer	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	Anti-Theft Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	Rear Fog Lamps	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	Drive	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	Tachometer	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	Overspeed Warning Configurati	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	Neutral Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	Park	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	Overdrive OFF Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	Gear Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	All segments	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	Engine Coolant Level Lamp Outp	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	Reverse Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	2nd Gear Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	1st Gear Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	Dimming Control Command	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	Check Engine Malfunction Indici	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	Brake Lamp	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	Fuel Level Low Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Instrument Cluster	Active Test	Chimer control	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Powertrain Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Powertrain Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Powertrain Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Powertrain Control Module	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Powertrain Control Module	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Restraint Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Restraint Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Restraint Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2002 Restraint Control Module	Active Test	Airbag Warning Lamp and Chim	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Longitudinal Acceleration Senso	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001

Escape / Tribute / Maverick	2.0L	Zetec	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Generic Electronic Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Generic Electronic Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Generic Electronic Module	Live Data		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Generic Electronic Module	Active Test	Rear Wiper Relay	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Generic Electronic Module	Active Test	Horn	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Generic Electronic Module	Active Test	Lock/Unlock Double Lock	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Generic Electronic Module	Active Test	Lock/Unlock Central Lock	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Generic Electronic Module	Active Test	Parking Lamps	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Generic Electronic Module	Active Test	Accessory Delay Relay	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Generic Electronic Module	Active Test	Head Lamps	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Generic Electronic Module	Active Test	Hazard Flashers	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Generic Electronic Module	Active Test	Security Horn Alarm	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Live Data		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	Speedometer	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	Anti-Theft Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	Rear Fog Lamps	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	Drive	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	Tachometer	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	Overspeed Warning Configurati	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	Neutral Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	Park	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	Overdrive OFF Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	Gear Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	All segments	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	Engine Coolant Level Lamp Outç	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	Reverse Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	2nd Gear Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	1st Gear Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	Dimming Control Command	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	Check Engine Malfunction Indica	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	Brake Lamp	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	Fuel Level Low Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Instrument Cluster	Active Test	Chimer control	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Powertrain Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Powertrain Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Powertrain Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Powertrain Control Module	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Powertrain Control Module	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Restraint Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Restraint Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Restraint Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2002 Restraint Control Module	Active Test	Airbag Warning Lamp and Chime	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 4X4 Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 4X4 Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 4X4 Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 4X4 Control Module	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 4X4 Control Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 4X4 Control Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 4X4 Control Module	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 4X4 Control Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 Generic Electronic Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 Generic Electronic Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 Generic Electronic Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 Generic Electronic Module	Active Test	Door Ajar Warning Lamp circuit	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 Generic Electronic Module	Active Test	Speed Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 Generic Electronic Module	Active Test	Wiper Run Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	2002 Generic Electronic Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001

Ranger / Mazda B-Series / Courier	4.0L	Other	2002 Remote Anti-Theft / Personality Modu	Active Test	Horn Output	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2002 Remote Anti-Theft / Personality Modu	Active Test	All Door Unlock	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2002 Remote Anti-Theft / Personality Modu	Active Test	Head Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2002 Remote Anti-Theft / Personality Modu	Active Test	Interior Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2002 Remote Anti-Theft / Personality Modu	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2002 Remote Anti-Theft / Personality Modu	Active Test	All Door Lock	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2002 Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2002 Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2002 Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	Other	2002 Restraint Control Module	Active Test	Airbag Warning Lamp and Chim	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power F	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Air Conditioning	Read DTC		V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Air Conditioning	Erase DTC		V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Read DTC		V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Erase DTC		V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Live Data		V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Active Test	Injector 2	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Active Test	Injector 4	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Active Test	3-2 Timing Solenoid Valve	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Active Test	Injector 3	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
PREMACY/ IXION	1.8L	FP	2002 Powertrain Control Module	Active Test	Injector 1	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Active	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Passive Anti-Theft System	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Passive Anti-Theft System	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Passive Anti-Theft System	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Passive Anti-Theft System	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Passive Anti-Theft System	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Remote Anti-Theft / Personality Modu	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Remote Anti-Theft / Personality Modu	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Remote Anti-Theft / Personality Modu	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Remote Anti-Theft / Personality Modu	Active Test	Parking Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Remote Anti-Theft / Personality Modu	Active Test	LOCK	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Remote Anti-Theft / Personality Modu	Active Test	Horn Output	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Remote Anti-Theft / Personality Modu	Active Test	All Door Unlock	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Remote Anti-Theft / Personality Modu	Active Test	Interior Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Remote Anti-Theft / Personality Modu	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Restraint Control Module	Active Test	Airbag Warning Lamp and Chim	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Live Data		V1.20.001

Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Active Test	Door Ajar Warning Lamp circuit	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Active Test	Center Axle Engage Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Active Test	Speed Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Active Test	Wiper Run Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Active Test	Down Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Active Test	Over Speed Warning Chime	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Active Test	Washer Pump Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Active Test	Accessory Delay Relay	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Active Test	Heated Backlight Relay	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Active Test	Center Axle Disconnect Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Active Test	One Touch Down Motor Relay	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 Generic Electronic Module	Active Test	Up Relay Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994 Security module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994 Security module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994 Hybrid Electronic Cluster	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994 Hybrid Electronic Cluster	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994 Hybrid Electronic Cluster	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994 Hybrid Electronic Cluster	Active Test	Tachometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994 Hybrid Electronic Cluster	Active Test	Temperature Gauge	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994 Hybrid Electronic Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994 Hybrid Electronic Cluster	Active Test	All segments	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994 Hybrid Electronic Cluster	Active Test	Speedometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994 Powertrain Control Module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1994 Powertrain Control Module	Erase DTC		V1.20.001
Courier	2.5L	WL	2002 Antilock braking system	Read DTC		V1.20.001
Courier	2.5L	WL	2002 Antilock braking system	Erase DTC		V1.20.001
Courier	2.5L	WL	2002 Antilock braking system	Live Data		V1.20.001
Courier	2.5L	WL	2002 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
Courier	2.5L	WL	2002 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Courier	2.5L	WL	2002 Antilock braking system	Active Test	Antilock braking system Power F	V1.20.001
Courier	2.5L	WL	2002 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Courier	2.5L	WL	2002 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
Courier	2.5L	WL	2002 Antilock braking system	Active Test	Rear Inlet Valve	V1.20.001
Courier	2.5L	WL	2002 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
Courier	2.5L	WL	2002 Antilock braking system	Active Test	Rear Outlet Valve	V1.20.001
Courier	2.5L	WL	2002 Powertrain Control Module	Read DTC		V1.20.001
Courier	2.5L	WL	2002 Powertrain Control Module	Erase DTC		V1.20.001
Courier	2.5L	WL_T	2002 Antilock braking system	Read DTC		V1.20.001
Courier	2.5L	WL_T	2002 Antilock braking system	Erase DTC		V1.20.001
Courier	2.5L	WL_T	2002 Antilock braking system	Live Data		V1.20.001
Courier	2.5L	WL_T	2002 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
Courier	2.5L	WL_T	2002 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Courier	2.5L	WL_T	2002 Antilock braking system	Active Test	Antilock braking system Power F	V1.20.001
Courier	2.5L	WL_T	2002 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Courier	2.5L	WL_T	2002 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
Courier	2.5L	WL_T	2002 Antilock braking system	Active Test	Rear Inlet Valve	V1.20.001
Courier	2.5L	WL_T	2002 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
Courier	2.5L	WL_T	2002 Antilock braking system	Active Test	Rear Outlet Valve	V1.20.001
Courier	2.5L	WL_T	2002 Powertrain Control Module	Read DTC		V1.20.001
Courier	2.5L	WL_T	2002 Powertrain Control Module	Erase DTC		V1.20.001
Courier	2.5L	WL_T	2002 Transmission Control Module	Read DTC		V1.20.001
Courier	2.5L	WL_T	2002 Transmission Control Module	Erase DTC		V1.20.001
Courier	2.9L	W9	2002 Antilock braking system	Read DTC		V1.20.001
Courier	2.9L	W9	2002 Antilock braking system	Erase DTC		V1.20.001
Courier	2.9L	W9	2002 Antilock braking system	Live Data		V1.20.001
Courier	2.9L	W9	2002 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
Courier	2.9L	W9	2002 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Courier	2.9L	W9	2002 Antilock braking system	Active Test	Antilock braking system Power F	V1.20.001
Courier	2.9L	W9	2002 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Courier	2.9L	W9	2002 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
Courier	2.9L	W9	2002 Antilock braking system	Active Test	Rear Inlet Valve	V1.20.001
Courier	2.9L	W9	2002 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
Courier	2.9L	W9	2002 Antilock braking system	Active Test	Rear Outlet Valve	V1.20.001
Courier	2.9L	W9	2002 Powertrain Control Module	Read DTC		V1.20.001
Courier	2.9L	W9	2002 Powertrain Control Module	Erase DTC		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	2002 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	2002 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	2002 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	2002 Powertrain Control Module	Read DTC		V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	1.8L	F8	2002 Powertrain Control Module	Erase DTC		V1.20.001

FAMILIA / LASER	1.5L	ZL		2002 Powertrain Control Module	Active Test	3-2 Timing Solenoid Valve	V1.20.001
FAMILIA / LASER	1.5L	ZL		2002 Powertrain Control Module	Active Test	Injector 3	V1.20.001
FAMILIA / LASER	1.5L	ZL		2002 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
FAMILIA / LASER	1.5L	ZL		2002 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
FAMILIA / LASER	1.5L	ZL		2002 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
FAMILIA / LASER	1.5L	ZL		2002 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
FAMILIA / LASER	1.5L	ZL		2002 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
FAMILIA / LASER	1.5L	ZL		2002 Powertrain Control Module	Active Test	Injector 1	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	2.2L	R2		1999 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	2.2L	R2		1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	2.2L	R2		1999 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	2.2L	R2		1999 Powertrain Control Module	Active Test	Injector 2	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	2.2L	R2		1999 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	2.2L	R2		1999 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	2.2L	R2		1999 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	2.2L	R2		1999 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	2.2L	R2		1999 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	2.2L	R2		1999 Powertrain Control Module	Active Test	Injector 4	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	2.2L	R2		1999 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	2.2L	R2		1999 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	2.2L	R2		1999 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	2.2L	R2		1999 Powertrain Control Module	Active Test	Overflow control valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	2.2L	R2		1999 Powertrain Control Module	Active Test	3-2 Timing Solenoid Valve	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	2.2L	R2		1999 Powertrain Control Module	Active Test	Injector 3	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	2.2L	R2		1999 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	2.2L	R2		1999 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	2.2L	R2		1999 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	2.2L	R2		1999 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	2.2L	R2		1999 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
BONGO / BONGO BRAUNY / SPECTRON	2.2L	R2		1999 Powertrain Control Module	Active Test	Injector 1	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.3L	B3	Null	Powertrain Control Module	Read DTC		V1.20.001
DEMIO / FESTIVA MINI WAGON	1.3L	B3	Null	Powertrain Control Module	Erase DTC		V1.20.001
DEMIO / FESTIVA MINI WAGON	1.3L	B3	Null	Powertrain Control Module	Live Data		V1.20.001
DEMIO / FESTIVA MINI WAGON	1.3L	B3	Null	Powertrain Control Module	Active Test	Injector 4	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.3L	B3	Null	Powertrain Control Module	Active Test	Generator field current control	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.3L	B3	Null	Powertrain Control Module	Active Test	Injector 3	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.3L	B3	Null	Powertrain Control Module	Active Test	Injector 1	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.3L	B3	Null	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.3L	B3	Null	Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.3L	B3	Null	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.3L	B3	Null	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.3L	B3	Null	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.3L	B3	Null	Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.3L	B3	Null	Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
DEMIO / FESTIVA MINI WAGON	1.3L	B3	Null	Powertrain Control Module	Active Test	Injector 2	V1.20.001
LASER / 323 / TIERRA	2.0L	FS		2000 Powertrain Control Module	Live Data		V1.20.001
LASER / 323 / TIERRA	2.0L	FS		2000 Powertrain Control Module	Active Test	Injector 4	V1.20.001
LASER / 323 / TIERRA	2.0L	FS		2000 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
LASER / 323 / TIERRA	2.0L	FS		2000 Powertrain Control Module	Active Test	Injector 3	V1.20.001
LASER / 323 / TIERRA	2.0L	FS		2000 Powertrain Control Module	Active Test	Injector 1	V1.20.001
LASER / 323 / TIERRA	2.0L	FS		2000 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
LASER / 323 / TIERRA	2.0L	FS		2000 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
LASER / 323 / TIERRA	2.0L	FS		2000 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
LASER / 323 / TIERRA	2.0L	FS		2000 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
LASER / 323 / TIERRA	2.0L	FS		2000 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
LASER / 323 / TIERRA	2.0L	FS		2000 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
LASER / 323 / TIERRA	2.0L	FS		2000 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
LASER / 323 / TIERRA	2.0L	FS		2000 Powertrain Control Module	Active Test	Injector 2	V1.20.001
Courier	2.2L	F2		2002 Powertrain Control Module	Read DTC		V1.20.001
Courier	2.2L	F2		2002 Powertrain Control Module	Erase DTC		V1.20.001
Courier	2.2L	F2		2002 Powertrain Control Module	Live Data		V1.20.001
Courier	2.2L	F2		2002 Powertrain Control Module	Active Test	Injector 4	V1.20.001
Courier	2.2L	F2		2002 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
Courier	2.2L	F2		2002 Powertrain Control Module	Active Test	Injector 3	V1.20.001
Courier	2.2L	F2		2002 Powertrain Control Module	Active Test	Injector 1	V1.20.001
Courier	2.2L	F2		2002 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Courier	2.2L	F2		2002 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
Courier	2.2L	F2		2002 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
Courier	2.2L	F2		2002 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
Courier	2.2L	F2		2002 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
Courier	2.2L	F2		2002 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
Courier	2.2L	F2		2002 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Courier	2.2L	F2		2002 Powertrain Control Module	Active Test	Injector 2	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE		1997 Powertrain Control Module	Active Test	Injector 4	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE		1997 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE		1997 Powertrain Control Module	Active Test	Injector 3	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE		1997 Powertrain Control Module	Active Test	Injector 1	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE		1997 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE		1997 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE		1997 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE		1997 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE		1997 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE		1997 Powertrain Control Module	Active Test	Injector 2	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other		2003 4X4 Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other		2003 4X4 Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other		2003 4X4 Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other		2003 4X4 Control Module	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other		2003 4X4 Control Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other		2003 4X4 Control Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other		2003 4X4 Control Module	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other		2003 4X4 Control Module	Active Test	Transfer Case Shift Relay (L2H)	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other		2003 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001

Escape / Tribute / Maverick	3.0L	4V	2003 Anti-Lock Brake / Traction Control Mo	Live Data	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Longitudinal Acceleration Senso V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Generic Electronic Module	Read DTC	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Generic Electronic Module	Erase DTC	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Generic Electronic Module	Live Data	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step) V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Generic Electronic Module	Active Test	Rear Wiper Relay V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Generic Electronic Module	Active Test	Horn V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Generic Electronic Module	Active Test	Interior courtesy lamps V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Generic Electronic Module	Active Test	Lock/Unlock Double Lock V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Generic Electronic Module	Active Test	Lock/Unlock Central Lock V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Generic Electronic Module	Active Test	Parking Lamps V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Generic Electronic Module	Active Test	Accessory Delay Relay V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Generic Electronic Module	Active Test	Head Lamps V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Generic Electronic Module	Active Test	Battery Saver Relay Control V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Generic Electronic Module	Active Test	Hazard Flashers V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Generic Electronic Module	Active Test	Security Horn Alarm V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Read DTC	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Erase DTC	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Live Data	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	Speedometer V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	Anti-Theft Indicator V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	Rear Fog Lamps V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	Drive V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	Tachometer V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	Overspeed Warning Configurati V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	Neutral Indicator V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	Antilock braking system Warnin V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	Park V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	Fuel Gauge Indicator Control V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	Overdrive OFF Indicator V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	Gear Indicator' V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	All Warning Lamps V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	All segments V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	Engine Coolant Level Lamp Outp V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	Reverse Indicator V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	2nd Gear Indicator V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	1st Gear Indicator V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	Dimming Control Command V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	Check Engine Malfunction Indici V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	Temperature Gauge V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	Safety Belt Warning Lamp V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	Brake Lamp V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	Fuel Level Low Indicator V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Instrument Cluster	Active Test	Chimer control V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Parking Aid Module	Read DTC	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Parking Aid Module	Erase DTC	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Parking Aid Module	Live Data	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Parking Aid Module	Active Test	Activate Rear Speaker V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Parking Aid Module	Active Test	Deactivate Light Emitting Diode V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Parking Aid Module	Active Test	Activate Light Emitting Diode V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Parking Aid Module	Active Test	Activate System V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Parking Aid Module	Active Test	Deactivate System V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Parking Aid Module	Active Test	Deactivate Chime/Buzzer/Speak V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Powertrain Control Module	Read DTC	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Powertrain Control Module	Erase DTC	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Powertrain Control Module	Live Data	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Powertrain Control Module	Active Test	Shift Solenoid 1 V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Powertrain Control Module	Active Test	Anti-Theft Indicator Lamp Contr V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Powertrain Control Module	Active Test	Spark Advance V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Powertrain Control Module	Active Test	Anti- Theft RF Enable and Transn V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Powertrain Control Module	Active Test	Idle Air Control V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Powertrain Control Module	Active Test	Evaporative Emission Canister V V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Powertrain Control Module	Active Test	Fuel pump V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Powertrain Control Module	Active Test	Shift Solenoid 2 V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Powertrain Control Module	Active Test	Electronic Pressure Control V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Powertrain Control Module	Active Test	Coast Clutch Solenoid V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Restraint Control Module	Read DTC	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Restraint Control Module	Erase DTC	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Restraint Control Module	Live Data	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2003 Restraint Control Module	Active Test	Airbag Warning Lamp and Chim V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Anti-Lock Brake / Traction Control Mo	Read DTC	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Anti-Lock Brake / Traction Control Mo	Erase DTC	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Anti-Lock Brake / Traction Control Mo	Live Data	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Longitudinal Acceleration Senso V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor V1.20.001

Escape / Tribute / Maverick	2.0L	Zetec	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Generic Electronic Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Generic Electronic Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Generic Electronic Module	Live Data		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Generic Electronic Module	Active Test	Rear Wiper Relay	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Generic Electronic Module	Active Test	Horn	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Generic Electronic Module	Active Test	Lock/Unlock Double Lock	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Generic Electronic Module	Active Test	Lock/Unlock Central Lock	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Generic Electronic Module	Active Test	Parking Lamps	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Generic Electronic Module	Active Test	Accessory Delay Relay	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Generic Electronic Module	Active Test	Head Lamps	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Generic Electronic Module	Active Test	Hazard Flashers	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Generic Electronic Module	Active Test	Security Horn Alarm	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Live Data		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	Speedometer	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	Anti-Theft Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	Rear Fog Lamps	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	Drive	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	Tachometer	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	Overspeed Warning Configurati	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	Neutral Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	Park	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	Overdrive OFF Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	Gear Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	All segments	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	Engine Coolant Level Lamp Outç	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	Reverse Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	2nd Gear Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	1st Gear Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	Dimming Control Command	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	Check Engine Malfunction Indica	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	Brake Lamp	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	Fuel Level Low Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Instrument Cluster	Active Test	Chimer control	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Parking Aid Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Parking Aid Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Parking Aid Module	Live Data		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Parking Aid Module	Active Test	Activate Rear Speaker	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Parking Aid Module	Active Test	Deactivate Light Emitting Diode	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Parking Aid Module	Active Test	Activate Light Emitting Diode	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Parking Aid Module	Active Test	Activate System	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Parking Aid Module	Active Test	Deactivate System	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Parking Aid Module	Active Test	Deactivate Chime/Buzzer/Speak	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Powertrain Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Powertrain Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Powertrain Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Powertrain Control Module	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Powertrain Control Module	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Restraint Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Restraint Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Restraint Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2003 Restraint Control Module	Active Test	Airbag Warning Lamp and Chim	V1.20.001
Courier	2.5L	WL_T	1999 Transmission Control Module	Read DTC		V1.20.001
Courier	2.5L	WL_T	1999 Transmission Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2004 4X4 Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2004 4X4 Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2004 4X4 Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2004 4X4 Control Module	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2004 4X4 Control Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2004 4X4 Control Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2004 4X4 Control Module	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2004 4X4 Control Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2004 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2004 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2004 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Warnin	V1.20.001

Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1997,5 Hybrid Electronic Cluster	Active Test	Temperature Gauge	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1997,5 Hybrid Electronic Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1997,5 Hybrid Electronic Cluster	Active Test	All segments	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1997,5 Hybrid Electronic Cluster	Active Test	Speedometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1997,5 Powertrain Control Module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1997,5 Powertrain Control Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1997,5 Powertrain Control Module	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1997,5 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1997,5 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1997,5 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1997,5 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1997,5 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1997,5 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Longitudinal Acceleration Senso	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Generic Electronic Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Generic Electronic Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Generic Electronic Module	Live Data		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Generic Electronic Module	Active Test	Rear Wiper Relay	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Generic Electronic Module	Active Test	Horn	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Generic Electronic Module	Active Test	Lock/Unlock Double Lock	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Generic Electronic Module	Active Test	Lock/Unlock Central Lock	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Generic Electronic Module	Active Test	Parking Lamps	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Generic Electronic Module	Active Test	Accessory Delay Relay	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Generic Electronic Module	Active Test	Head Lamps	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Generic Electronic Module	Active Test	Hazard Flashers	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Generic Electronic Module	Active Test	Security Horn Alarm	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Live Data		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	Speedometer	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	Anti-Theft Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	Rear Fog Lamps	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	Drive	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	Tachometer	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	Overspeed Warning Configurati	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	Neutral Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	Park	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	Overdrive OFF Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	Gear Indicator'	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	All segments	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	Engine Coolant Level Lamp Outp	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	Reverse Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	2nd Gear Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	1st Gear Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	Dimming Control Command	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	Check Engine Malfunction Indici	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	Brake Lamp	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	Fuel Level Low Indicator	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Instrument Cluster	Active Test	Chimer control	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Parking Aid Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Parking Aid Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Parking Aid Module	Live Data		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Parking Aid Module	Active Test	Activate Rear Speaker	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Parking Aid Module	Active Test	Deactivate Light Emitting Diode	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Parking Aid Module	Active Test	Activate Light Emitting Diode	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Parking Aid Module	Active Test	Activate System	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Parking Aid Module	Active Test	Deactivate System	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Parking Aid Module	Active Test	Deactivate Chime/Buzzer/Speak	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Powertrain Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Powertrain Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Powertrain Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Powertrain Control Module	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Powertrain Control Module	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001

Escape / Tribute / Maverick	2.0L	Zetec	2004 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Restraint Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Restraint Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Restraint Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	2.0L	Zetec	2004 Restraint Control Module	Active Test	Airbag Warning Lamp and Chime	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Anti-Lock Brake / Traction Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Anti-Lock Brake / Traction Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Anti-Lock Brake / Traction Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Anti-Lock Brake / Traction Control Module	Active Test	Longitudinal Acceleration Sensor	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Anti-Lock Brake / Traction Control Module	Active Test	Left Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Anti-Lock Brake / Traction Control Module	Active Test	Right Rear Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Anti-Lock Brake / Traction Control Module	Active Test	Right Front Outlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Anti-Lock Brake / Traction Control Module	Active Test	Left Rear Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Anti-Lock Brake / Traction Control Module	Active Test	Hydraulic Pump Motor	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Anti-Lock Brake / Traction Control Module	Active Test	Right Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Anti-Lock Brake / Traction Control Module	Active Test	Left Rear Outlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Anti-Lock Brake / Traction Control Module	Active Test	Left Front Outlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Anti-Lock Brake / Traction Control Module	Active Test	Right Rear Outlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Generic Electronic Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Generic Electronic Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Generic Electronic Module	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Generic Electronic Module	Active Test	Rear Wiper Relay	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Generic Electronic Module	Active Test	Horn	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Generic Electronic Module	Active Test	Lock/Unlock Double Lock	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Generic Electronic Module	Active Test	Lock/Unlock Central Lock	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Generic Electronic Module	Active Test	Parking Lamps	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Generic Electronic Module	Active Test	Accessory Delay Relay	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Generic Electronic Module	Active Test	Head Lamps	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Generic Electronic Module	Active Test	Hazard Flashers	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Generic Electronic Module	Active Test	Security Horn Alarm	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	Speedometer	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	Anti-Theft Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	Rear Fog Lamps	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	Drive	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	Tachometer	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	Overspeed Warning Configuration	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	Neutral Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	Antilock braking system Warning	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	Park	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	Overdrive OFF Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	Gear Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	All segments	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	Engine Coolant Level Lamp Output	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	Reverse Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	2nd Gear Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	1st Gear Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	Dimming Control Command	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	Check Engine Malfunction Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	Brake Lamp	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	Fuel Level Low Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Instrument Cluster	Active Test	Chimer control	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Parking Aid Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Parking Aid Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Parking Aid Module	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Parking Aid Module	Active Test	Activate Rear Speaker	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Parking Aid Module	Active Test	Deactivate Light Emitting Diode	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Parking Aid Module	Active Test	Activate Light Emitting Diode	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Parking Aid Module	Active Test	Activate System	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Parking Aid Module	Active Test	Deactivate System	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Parking Aid Module	Active Test	Deactivate Chime/Buzzer/Speak	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Powertrain Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Powertrain Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Powertrain Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Powertrain Control Module	Active Test	Anti-Theft Indicator Lamp Control	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Powertrain Control Module	Active Test	Anti-Theft RF Enable and Trans	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Powertrain Control Module	Active Test	Torque Converter Clutch Solenoid	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Powertrain Control Module	Active Test	Evaporative Emission Canister Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Powertrain Control Module	Active Test	Evaporative Emission Vapor Monitor	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Restraint Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Restraint Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Restraint Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2004 Restraint Control Module	Active Test	Airbag Warning Lamp and Chime	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 4X4 Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 4X4 Control Module	Erase DTC		V1.20.001

Ranger / Mazda B-Series / Courier	Null	Null	2004 4X4 Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 4X4 Control Module	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 4X4 Control Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 4X4 Control Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 4X4 Control Module	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 4X4 Control Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power F	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Generic Electronic Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Generic Electronic Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Generic Electronic Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Generic Electronic Module	Active Test	All Door Lock	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Generic Electronic Module	Active Test	All Door Unlock	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Generic Electronic Module	Active Test	One Touch Down Motor Relay	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Generic Electronic Module	Active Test	Speed Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Generic Electronic Module	Active Test	Horn	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Generic Electronic Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Generic Electronic Module	Active Test	Daytime Running Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Generic Electronic Module	Active Test	Parking Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Generic Electronic Module	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Generic Electronic Module	Active Test	Washer Pump Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Generic Electronic Module	Active Test	Courtesy Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Generic Electronic Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Generic Electronic Module	Active Test	Fog Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Instrument Cluster	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Instrument Cluster	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Instrument Cluster	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Powertrain Control Module	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Powertrain Control Module	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	Null	Null	2004 Restraint Control Module	Active Test	Airbag Warning Lamp and Chirn	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 4X4 Control Module	Read DTC		V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 4X4 Control Module	Erase DTC		V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 4X4 Control Module	Live Data		V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 4X4 Control Module	Active Test	Pulse-width modulation status C	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 4X4 Control Module	Active Test	Antilock braking system Active	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Antilock braking system	Read DTC		V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Antilock braking system	Erase DTC		V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Antilock braking system	Live Data		V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Generic Electronic Module	Read DTC		V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Generic Electronic Module	Erase DTC		V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Generic Electronic Module	Live Data		V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Generic Electronic Module	Active Test	Rear Defrost Relay Circuit	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Generic Electronic Module	Active Test	Horn Control Driver	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Instrument Cluster	Read DTC		V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Instrument Cluster	Erase DTC		V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Instrument Cluster	Live Data		V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Instrument Cluster	Active Test	All segments	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Instrument Cluster	Active Test	2nd Gear Indicator	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Instrument Cluster	Active Test	Dimming Control Command	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Instrument Cluster	Active Test	Neutral Indicator	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Instrument Cluster	Active Test	Tachometer	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Instrument Cluster	Active Test	Trip Lamp	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Instrument Cluster	Active Test	Drive	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Instrument Cluster	Active Test	Chimer control	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Instrument Cluster	Active Test	Park	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Instrument Cluster	Active Test	1st Gear Indicator	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001

(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE /	2005 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE /	2005 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE /	2005 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE /	2005 Restraint Control Module	Read DTC		V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE /	2005 Restraint Control Module	Erase DTC		V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE /	2005 Restraint Control Module	Live Data		V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE /	2005 Restraint Control Module	Active Test	Airbag or Passenger Airbag Dea	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1996 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1996 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1996 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1996 Security module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1996 Security module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1996 Hybrid Electronic Cluster	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1996 Hybrid Electronic Cluster	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1996 Hybrid Electronic Cluster	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1996 Hybrid Electronic Cluster	Active Test	Tachometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1996 Hybrid Electronic Cluster	Active Test	Temperature Gauge	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1996 Hybrid Electronic Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1996 Hybrid Electronic Cluster	Active Test	All segments	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1996 Hybrid Electronic Cluster	Active Test	Speedometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1996 Powertrain Control Module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.4L	1.4 Pent roof h	1996 Powertrain Control Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1997,5 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1997,5 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1997,5 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1997,5 Security module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1997,5 Security module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1997,5 Hybrid Electronic Cluster	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1997,5 Hybrid Electronic Cluster	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1997,5 Hybrid Electronic Cluster	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1997,5 Hybrid Electronic Cluster	Active Test	Tachometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1997,5 Hybrid Electronic Cluster	Active Test	Temperature Gauge	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1997,5 Hybrid Electronic Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1997,5 Hybrid Electronic Cluster	Active Test	All segments	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1997,5 Hybrid Electronic Cluster	Active Test	Speedometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1997,5 Powertrain Control Module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1997,5 Powertrain Control Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1997,5 Powertrain Control Module	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1997,5 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1997,5 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1997,5 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1997,5 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1997,5 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Fiesta / Mazda 121 / Bantam	1.0L	High compressi	1997,5 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 4X4 Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 4X4 Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 4X4 Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 4X4 Control Module	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 4X4 Control Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 4X4 Control Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 4X4 Control Module	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 4X4 Control Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Generic Electronic Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Generic Electronic Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Generic Electronic Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Generic Electronic Module	Active Test	All Door Lock	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Generic Electronic Module	Active Test	All Door Unlock	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Generic Electronic Module	Active Test	One Touch Down Motor Relay	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Generic Electronic Module	Active Test	Speed Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Generic Electronic Module	Active Test	Horn	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Generic Electronic Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Generic Electronic Module	Active Test	Daytime Running Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Generic Electronic Module	Active Test	Parking Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Generic Electronic Module	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Generic Electronic Module	Active Test	Washer Pump Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Generic Electronic Module	Active Test	Courtesy Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Generic Electronic Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Generic Electronic Module	Active Test	Fog Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Restraint Control Module	Active Test	Airbag Warning Lamp and Chime	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Instrument Cluster	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Instrument Cluster	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Instrument Cluster	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Instrument Cluster	Active Test	Low Fuel Warning Indication	V1.20.001

Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Instrument Cluster	Active Test	Oil Pressure Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Instrument Cluster	Active Test	Antilock Braking System Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Powertrain Control Module	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Powertrain Control Module	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	4.0L	V6 Single over	2005 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 4X4 Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 4X4 Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 4X4 Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 4X4 Control Module	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 4X4 Control Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 4X4 Control Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 4X4 Control Module	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 4X4 Control Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Generic Electronic Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Generic Electronic Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Generic Electronic Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Generic Electronic Module	Active Test	All Door Lock	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Generic Electronic Module	Active Test	All Door Unlock	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Generic Electronic Module	Active Test	One Touch Down Motor Relay	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Generic Electronic Module	Active Test	Speed Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Generic Electronic Module	Active Test	Horn	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Generic Electronic Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Generic Electronic Module	Active Test	Daytime Running Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Generic Electronic Module	Active Test	Parking Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Generic Electronic Module	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Generic Electronic Module	Active Test	Washer Pump Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Generic Electronic Module	Active Test	Courtesy Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Generic Electronic Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Generic Electronic Module	Active Test	Fog Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Restraint Control Module	Active Test	Airbag Warning Lamp and Chime	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Instrument Cluster	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Instrument Cluster	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Instrument Cluster	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Instrument Cluster	Active Test	Low Fuel Warning Indication	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Instrument Cluster	Active Test	Oil Pressure Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Instrument Cluster	Active Test	Antilock Braking System Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2005 Powertrain Control Module	Active Test	Safety Belt Warning Lamp	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE /	2005 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE /	2005 Instrument Cluster	Active Test	Low Fuel Warning Indication	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE /	2005 Instrument Cluster	Active Test	Oil Pressure Warning Lamp	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE /	2005 Instrument Cluster	Active Test	Antilock Braking System Warnin	V1.20.001
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE /	2005 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	LF	2005 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	LF	2005 Instrument Cluster	Active Test	Low Fuel Warning Indication	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	LF	2005 Instrument Cluster	Active Test	Oil Pressure Warning Lamp	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	LF	2005 Instrument Cluster	Active Test	Antilock Braking System Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 4X4 Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 4X4 Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 4X4 Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 4X4 Control Module	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 4X4 Control Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 4X4 Control Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 4X4 Control Module	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 4X4 Control Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001

Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Generic Electronic Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Generic Electronic Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Generic Electronic Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Generic Electronic Module	Active Test	All Door Lock	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Generic Electronic Module	Active Test	All Door Unlock	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Generic Electronic Module	Active Test	One Touch Down Motor Relay	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Generic Electronic Module	Active Test	Speed Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Generic Electronic Module	Active Test	Horn	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Generic Electronic Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Generic Electronic Module	Active Test	Daytime Running Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Generic Electronic Module	Active Test	Parking Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Generic Electronic Module	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Generic Electronic Module	Active Test	Washer Pump Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Generic Electronic Module	Active Test	Courtesy Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Generic Electronic Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Generic Electronic Module	Active Test	Fog Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Restraint Control Module	Active Test	Airbag Warning Lamp and Chim	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Instrument Cluster	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Instrument Cluster	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Instrument Cluster	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Instrument Cluster	Active Test	Low Fuel Warning Indication	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Instrument Cluster	Active Test	Oil Pressure Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Instrument Cluster	Active Test	Antilock Braking System Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2005 Powertrain Control Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1998,5 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1998,5 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1998,5 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1998,5 Security module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1998,5 Security module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1998,5 Hybrid Electronic Cluster	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1998,5 Hybrid Electronic Cluster	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1998,5 Hybrid Electronic Cluster	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1998,5 Hybrid Electronic Cluster	Active Test	Tachometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1998,5 Hybrid Electronic Cluster	Active Test	Temperature Gauge	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1998,5 Hybrid Electronic Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1998,5 Hybrid Electronic Cluster	Active Test	All segments	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1998,5 Hybrid Electronic Cluster	Active Test	Speedometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1998,5 Powertrain Control Module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1998,5 Powertrain Control Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1998,5 Powertrain Control Module	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1998,5 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1998,5 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1998,5 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1998,5 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1998,5 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1998,5 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Courier	2.5L	WL_T	2001 Transmission Control Module	Read DTC		V1.20.001
Courier	2.5L	WL_T	2001 Transmission Control Module	Erase DTC		V1.20.001
Courier	2.5L	WL_T	2001 Powertrain Control Module	Live Data		V1.20.001
Courier	2.5L	WL_T	2001 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Courier	2.5L	WL_T	2001 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Courier	2.5L	WL_T	2001 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Courier	2.5L	WL_T	2001 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Courier	2.5L	WL_T	2001 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Courier	2.5L	WL_T	2001 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Courier / Mazda B-Series / Bravo	4.0L	V6 Single over	2003 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Courier / Mazda B-Series / Bravo	4.0L	V6 Single over	2003 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Courier / Mazda B-Series / Bravo	4.0L	V6 Single over	2003 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Courier / Mazda B-Series / Bravo	4.0L	V6 Single over	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Courier / Mazda B-Series / Bravo	4.0L	V6 Single over	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Courier / Mazda B-Series / Bravo	4.0L	V6 Single over	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Courier / Mazda B-Series / Bravo	4.0L	V6 Single over	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Courier / Mazda B-Series / Bravo	4.0L	V6 Single over	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Courier / Mazda B-Series / Bravo	4.0L	V6 Single over	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Courier / Mazda B-Series / Bravo	4.0L	V6 Single over	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Courier / Mazda B-Series / Bravo	4.0L	V6 Single over	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Hub Lock LOCK Solenoid	V1.20.001
Ranger / Courier / Mazda B-Series / Bravo	4.0L	V6 Single over	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Hublock Indicator Lamp	V1.20.001
Ranger / Courier / Mazda B-Series / Bravo	4.0L	V6 Single over	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Hub LOCK / UNLOCK Solenoid	V1.20.001
Ranger / Courier / Mazda B-Series / Bravo	4.0L	V6 Single over	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Courier / Mazda B-Series / Bravo	4.0L	V6 Single over	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Courier / Mazda B-Series / Bravo	4.0L	V6 Single over	2003 Anti-Lock Brake / Traction Control Mo	Active Test	4WD Low Range Signal	V1.20.001
Ranger / Courier / Mazda B-Series / Bravo	4.0L	V6 Single over	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Four wheel drive Mode Lamp	V1.20.001
Ranger / Courier / Mazda B-Series / Bravo	4.0L	V6 Single over	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Mode Switch / MTR Positive Grc	V1.20.001
Ranger / Courier / Mazda B-Series / Bravo	4.0L	V6 Single over	2003 Powertrain Control Module	Read DTC		V1.20.001

Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Generic Electronic Module	Active Test	Courtesy Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Generic Electronic Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Generic Electronic Module	Active Test	Fog Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Instrument Cluster	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Instrument Cluster	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Instrument Cluster	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Instrument Cluster	Active Test	Low Fuel Warning Indication	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Instrument Cluster	Active Test	Oil Pressure Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Instrument Cluster	Active Test	Antilock Braking System Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	EGR Motor Position Desired	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Electronic Pressure Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 4X4 Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 4X4 Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 4X4 Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 4X4 Control Module	Active Test	Pulse-width modulation status C	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 4X4 Control Module	Active Test	Antilock braking system Active	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 4X4 Control Module	Active Test	Four wheel drive Mode Lamp	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Antilock braking system	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Antilock braking system	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Antilock braking system	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Instrument Cluster	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Instrument Cluster	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Instrument Cluster	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Instrument Cluster	Active Test	All segments	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Instrument Cluster	Active Test	2nd Gear Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Instrument Cluster	Active Test	Neutral Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Instrument Cluster	Active Test	Tachometer	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Instrument Cluster	Active Test	Trip Lamp	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Instrument Cluster	Active Test	Drive	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Instrument Cluster	Active Test	Dimming Control Command	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Instrument Cluster	Active Test	Chimer control	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Instrument Cluster	Active Test	Park	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Instrument Cluster	Active Test	1st Gear Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Instrument Cluster	Active Test	Gear Indicator'	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Instrument Cluster	Active Test	Reverse Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Parking Aid Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Parking Aid Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Parking Aid Module	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Parking Aid Module	Active Test	Activate Rear Speaker	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Parking Aid Module	Active Test	Activate Light Emitting Diode	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Parking Aid Module	Active Test	Activate System	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Powertrain Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Powertrain Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Powertrain Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Powertrain Control Module	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Powertrain Control Module	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Powertrain Control Module	Active Test	Pressure Control Solenoid B	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001

Escape / Tribute / Maverick	3.0L	4V	2006 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Restraint Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Restraint Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Restraint Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Restraint Control Module	Active Test	Airbag Warning Lamp and Chime	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Restraint Control Module	Active Test	Airbag or Passenger Airbag Deact	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Generic Electronic Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Generic Electronic Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Generic Electronic Module	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Generic Electronic Module	Active Test	Rear Defrost Relay Circuit	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2006 Generic Electronic Module	Active Test	Horn Control Driver	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 4X4 Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 4X4 Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 4X4 Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 4X4 Control Module	Active Test	Pulse-width modulation status C	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 4X4 Control Module	Active Test	Antilock braking system Active	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 4X4 Control Module	Active Test	Four wheel drive Mode Lamp	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Antilock braking system	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Antilock braking system	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Antilock braking system	Live Data		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Instrument Cluster	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Instrument Cluster	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Instrument Cluster	Live Data		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Instrument Cluster	Active Test	All segments	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Instrument Cluster	Active Test	2nd Gear Indicator	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Instrument Cluster	Active Test	Neutral Indicator	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Instrument Cluster	Active Test	Tachometer	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Instrument Cluster	Active Test	Trip Lamp	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Instrument Cluster	Active Test	Drive	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Instrument Cluster	Active Test	Dimming Control Command	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Instrument Cluster	Active Test	Chimer control	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Instrument Cluster	Active Test	Park	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Instrument Cluster	Active Test	1st Gear Indicator	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Instrument Cluster	Active Test	Gear Indicator'	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Instrument Cluster	Active Test	Reverse Indicator	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Parking Aid Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Parking Aid Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Parking Aid Module	Live Data		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Parking Aid Module	Active Test	Activate Rear Speaker	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Parking Aid Module	Active Test	Activate Light Emitting Diode	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Parking Aid Module	Active Test	Activate System	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Anti-Theft RF Enable and Trans	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	EGR Motor Position Desired	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Pressure Control Solenoid B	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Restraint Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Restraint Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Restraint Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Restraint Control Module	Active Test	Airbag Warning Lamp and Chime	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Restraint Control Module	Active Test	Airbag or Passenger Airbag Deact	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Generic Electronic Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Generic Electronic Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Generic Electronic Module	Live Data		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Generic Electronic Module	Active Test	Rear Defrost Relay Circuit	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Generic Electronic Module	Active Test	Horn Control Driver	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1998 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1998 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1998 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Traction Control Off Indicator	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power F	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
626 / 626 WAGON / TELSTAR	2.0L	FS	1998 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001

Courier	2.5L	WL_T	2005 Antilock braking system	Active Test	Rear Outlet Valve	V1.20.001
Courier	2.5L	WL_T	2005 Transmission Control Module	Read DTC		V1.20.001
Courier	2.5L	WL_T	2005 Transmission Control Module	Erase DTC		V1.20.001
Courier	2.5L	WL_T	2005 Powertrain Control Module	Read DTC		V1.20.001
Courier	2.5L	WL_T	2005 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 4X4 Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 4X4 Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 4X4 Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 4X4 Control Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 4X4 Control Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 4X4 Control Module	Active Test	Neutral Tow Light	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 4X4 Control Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Generic Electronic Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Generic Electronic Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Generic Electronic Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Generic Electronic Module	Active Test	Fog Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Generic Electronic Module	Active Test	Park Lamp Output	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Generic Electronic Module	Active Test	All Doors Lock Relay	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Generic Electronic Module	Active Test	Drivers Door Unlock Output	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Generic Electronic Module	Active Test	Wiper Run Relay Driver State	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Generic Electronic Module	Active Test	Horn Control Driver	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Generic Electronic Module	Active Test	Illuminated entry relay circuit	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Generic Electronic Module	Active Test	Battery Saver Relay Status.	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Generic Electronic Module	Active Test	Clear History	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Active Test	Check fuel cap indicator lamp cc	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Active Test	Engine over-temperature light	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Active Test	Tire Pressure Monitoring System	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Active Test	Speed Control Set Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Active Test	Restraints Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Active Test	Fog Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Active Test	Speedometer	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Active Test	Tachometer	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Active Test	Fuel Level Low Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Active Test	Check Engine Malfunction Indici	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Active Test	Brake Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Active Test	Overdrive OFF Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Instrument Cluster	Active Test	Oil Pressure Low Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Occupant Classification System Modul	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Occupant Classification System Modul	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Occupant Classification System Modul	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Restraint Control Module	Active Test	Passenger Airbag Deactivation L	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Restraint Control Module	Active Test	Restraints Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Satellite Digital Audio Receiver System	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Satellite Digital Audio Receiver System	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Satellite Digital Audio Receiver System	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 Satellite Digital Audio Receiver System	Active Test	Satellite Digital Audio Receiver (V1.20.001

Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 4X4 Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 4X4 Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 4X4 Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 4X4 Control Module	Active Test	Antilock braking system Active	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 4X4 Control Module	Active Test	Pulse-width modulation status C	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Antilock braking system	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Antilock braking system	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Antilock braking system	Live Data		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Instrument Cluster	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Instrument Cluster	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Instrument Cluster	Live Data		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	All segments	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Chimer control	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Drive	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Gear Indicator	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	1st Gear Indicator	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	2nd Gear Indicator	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Neutral Indicator	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Park	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Reverse Indicator	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Tachometer	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Trip Lamp	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Speedometer Gauge Indicator C	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Instrument Cluster	Active Test	Dimming Control Command	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Parking Aid Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Parking Aid Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Parking Aid Module	Live Data		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Parking Aid Module	Active Test	Activate Light Emitting Diode	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Parking Aid Module	Active Test	Activate Rear Speaker	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Parking Aid Module	Active Test	Activate System	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	EGR Motor Position Desired	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Pressure Control Solenoid B	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Restraint Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Restraint Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Restraint Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Restraint Control Module	Active Test	Airbag Warning Lamp and Chim	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Restraint Control Module	Active Test	Airbag or Passenger Airbag Dea	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Generic Electronic Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Generic Electronic Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Generic Electronic Module	Live Data		V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Generic Electronic Module	Active Test	Rear Defrost Relay Circuit	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2007 Generic Electronic Module	Active Test	Horn Control Driver	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 4X4 Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 4X4 Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 4X4 Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 4X4 Control Module	Active Test	Antilock braking system Active	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 4X4 Control Module	Active Test	Pulse-width modulation status C	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Antilock braking system	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Antilock braking system	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Antilock braking system	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Instrument Cluster	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Instrument Cluster	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Instrument Cluster	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Instrument Cluster	Active Test	All segments	V1.20.001

Escape / Tribute / Maverick	3.0L	4V	2007 Instrument Cluster	Active Test	Chimer control	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Instrument Cluster	Active Test	Drive	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Instrument Cluster	Active Test	Gear Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Instrument Cluster	Active Test	1st Gear Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Instrument Cluster	Active Test	2nd Gear Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Instrument Cluster	Active Test	Neutral Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Instrument Cluster	Active Test	Park	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Instrument Cluster	Active Test	Reverse Indicator	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Instrument Cluster	Active Test	Tachometer	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Instrument Cluster	Active Test	Trip Lamp	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Instrument Cluster	Active Test	Speedometer Gauge Indicator C	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Instrument Cluster	Active Test	Dimming Control Command	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Parking Aid Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Parking Aid Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Parking Aid Module	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Parking Aid Module	Active Test	Activate Light Emitting Diode	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Parking Aid Module	Active Test	Activate Rear Speaker	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Parking Aid Module	Active Test	Activate System	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Powertrain Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Powertrain Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Powertrain Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Powertrain Control Module	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Powertrain Control Module	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Powertrain Control Module	Active Test	Pressure Control Solenoid B	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Restraint Control Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Restraint Control Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Restraint Control Module	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Restraint Control Module	Active Test	Airbag Warning Lamp and Chirp	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Restraint Control Module	Active Test	Airbag or Passenger Airbag Dea	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Generic Electronic Module	Read DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Generic Electronic Module	Erase DTC		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Generic Electronic Module	Live Data		V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Generic Electronic Module	Active Test	Rear Defrost Relay Circuit	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Generic Electronic Module	Active Test	Horn Control Driver	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Generic Electronic Module	Active Test	Rear Defrost Relay Circuit	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Generic Electronic Module	Active Test	Horn Control Driver	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Generic Electronic Module	Active Test	Rear Defrost Relay Circuit	V1.20.001
Escape / Tribute / Maverick	3.0L	4V	2007 Generic Electronic Module	Active Test	Horn Control Driver	V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	LF	2005 Generic Electronic Module	Active Test		V1.20.001
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	LF	2005 Generic Electronic Module	Active Test		V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Active Test		V1.20.001
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 Generic Electronic Module	Active Test		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Security module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Security module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Electronic Crash Sensor	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Electronic Crash Sensor	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Electronic Crash Sensor	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Hybrid Electronic Cluster	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Hybrid Electronic Cluster	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Hybrid Electronic Cluster	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Hybrid Electronic Cluster	Active Test	Tachometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Hybrid Electronic Cluster	Active Test	Temperature Gauge	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Hybrid Electronic Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Hybrid Electronic Cluster	Active Test	All segments	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Hybrid Electronic Cluster	Active Test	Speedometer	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Powertrain Control Module	Read DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Powertrain Control Module	Erase DTC		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Powertrain Control Module	Live Data		V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Generic Electronic Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Generic Electronic Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Generic Electronic Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Generic Electronic Module	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Generic Electronic Module	Active Test	Door Ajar Warning Lamp circuit	V1.20.001

Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Generic Electronic Module	Active Test	Center Axle Engage Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Generic Electronic Module	Active Test	Speed Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Generic Electronic Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Generic Electronic Module	Active Test	Wiper Run Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Generic Electronic Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Generic Electronic Module	Active Test	Pulse-width modulation status C	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Generic Electronic Module	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Generic Electronic Module	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Generic Electronic Module	Active Test	Washer Pump Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Generic Electronic Module	Active Test	Accessory Delay Relay	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Generic Electronic Module	Active Test	Neutral Tow Light	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Generic Electronic Module	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Generic Electronic Module	Active Test	Heated Backlight Relay	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Generic Electronic Module	Active Test	Center Axle Disconnect Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Generic Electronic Module	Active Test	One Touch Down Motor Relay	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1997 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Escape / Tribute / Maverick	2.3L	DURATEC-HE /	2006 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Generic Electronic Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Generic Electronic Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Generic Electronic Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Generic Electronic Module	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Generic Electronic Module	Active Test	Door Ajar Warning Lamp circuit	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Generic Electronic Module	Active Test	Center Axle Engage Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Generic Electronic Module	Active Test	Speed Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Generic Electronic Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Generic Electronic Module	Active Test	Wiper Run Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Generic Electronic Module	Active Test	Interior courtesy lamps	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Generic Electronic Module	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Generic Electronic Module	Active Test	Pulse-width modulation status C	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Generic Electronic Module	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Generic Electronic Module	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Generic Electronic Module	Active Test	Washer Pump Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Generic Electronic Module	Active Test	Accessory Delay Relay	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Generic Electronic Module	Active Test	Neutral Tow Light	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Generic Electronic Module	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Generic Electronic Module	Active Test	Heated Backlight Relay	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Generic Electronic Module	Active Test	Center Axle Disconnect Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Generic Electronic Module	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Generic Electronic Module	Active Test	Battery Saver Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Generic Electronic Module	Active Test	One Touch Down Motor Relay	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Escape / Tribute / Mariner	3.0L	4V	2008 4X4 Control Module	Read DTC		V1.20.001
Escape / Tribute / Mariner	3.0L	4V	2008 4X4 Control Module	Erase DTC		V1.20.001
Escape / Tribute / Mariner	3.0L	4V	2008 4X4 Control Module	Live Data		V1.20.001
Escape / Tribute / Mariner	3.0L	4V	2008 4X4 Control Module	Active Test	Pulse-width modulation status C	V1.20.001
Escape / Tribute / Mariner	3.0L	4V	2008 4X4 Control Module	Active Test	Four wheel drive Mode Lamp	V1.20.001
Escape / Tribute / Mariner	3.0L	4V	2008 Antilock braking system	Read DTC		V1.20.001
Escape / Tribute / Mariner	3.0L	4V	2008 Antilock braking system	Erase DTC		V1.20.001
Escape / Tribute / Mariner	3.0L	4V	2008 Antilock braking system	Live Data		V1.20.001
Escape / Tribute / Mariner	3.0L	4V	2008 Antilock braking system	Active Test	Booster Learn Cycle	V1.20.001
Escape / Tribute / Mariner	3.0L	4V	2008 Antilock braking system	Active Test	Longitudinal Acceleration Senso	V1.20.001
Escape / Tribute / Mariner	3.0L	4V	2008 Antilock braking system	Active Test	rear-only dump valve	V1.20.001
Escape / Tribute / Mariner	3.0L	4V	2008 Antilock braking system	Active Test	rear-only isolation valve	V1.20.001
Escape / Tribute / Mariner	3.0L	4V	2008 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
Escape / Tribute / Mariner	3.0L	4V	2008 Antilock braking system	Active Test	Primary Low Pressure supply V	V1.20.001
Escape / Tribute / Mariner	3.0L	4V	2008 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
Escape / Tribute / Mariner	3.0L	4V	2008 Antilock braking system	Active Test	Right Rear Traction Assist Valve	V1.20.001
Escape / Tribute / Mariner	3.0L	4V	2008 Antilock braking system	Active Test	Pressure transducer	V1.20.001
Escape / Tribute / Mariner	3.0L	4V	2008 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Escape / Tribute / Mariner	3.0L	4V	2008 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
Escape / Tribute / Mariner	3.0L	4V	2008 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
Escape / Tribute / Mariner	3.0L	4V	2008 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
Escape / Tribute / Mariner	3.0L	4V	2008 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001

Escape/Tribute / Mariner	3.0L	4V	2008 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Antilock braking system	Active Test	Left Rear Traction Control Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Front Controls Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Front Controls Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Front Controls Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Front Controls Interface Module	Active Test	Bezel Illumination	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Front Display Interface Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Front Display Interface Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Front Display Interface Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Front Display Interface Module	Active Test	Bezel Illumination	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	Accessory Delay Relay Circuit	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	White Lighting Circuit	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	Right Rear Turn Signal/Trailer Re	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	Parking Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	Horn	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	Dimmable Backlighting	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	Brake/Shift Interlock	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	Floor Lamp Output Circuit	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	Key Pad Backlighting	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	Interior Lighting Circuit	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	Left Rear Turn Signal Lamp Statu	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	Low Beam Circuit Status Left Frc	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	Low Beam Circuit Status Right Fr	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	Left Front Turn Lamp Output Sta	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	Right Front Turn Lamp Output S	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	Left Front Mirror Turn Signal Lar	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	Left Rear Turn Signal/Trailer Rel	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	Right Front Mirror Turn Signal L	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	All Door Unlock	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	Driver's Door Unlock (or 2-Step)	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	All Door Lock	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	Smart Window Control	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	Liftglass/Trunk Release	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	Right Rear Turn Signal Lamp Sta	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	Liftgate release	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	Fog Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	Mirror Puddle Lamps	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Generic Electronic Module / Smart Jun	Active Test	High Beam	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	High Beam Indicator	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Low Fuel Warning Indication	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Oil Pressure Warning Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Check engine Malfunction Indici	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Generator lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Over Drive (O/D) off	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Brake Warning Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Tire Pressure Monitoring System	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Airbag	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Right Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Left Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Cruise control lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Check fuel cap indicator lamp cc	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Wrench Telltale Indicator	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Traction Assist Active Indicator	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Turn Signal Left On Warning Chi	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Turn Signal Click (turn signal TT	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Turn Signal Clack (turn signal TT	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Belt Minder Chime	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Key In Ignition Reminder Chime	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Park Brake Warning Chime	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Seatbelt Warning Chime	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Headlamps on Reminder Chime	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Airbag Secondary Warning	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Speedometer Gauge Indicator C	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Instrument Cluster	Active Test	Tachometer	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Occupant Classification System Modul	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Occupant Classification System Modul	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Occupant Classification System Modul	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Parking Aid Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Parking Aid Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Parking Aid Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Parking Aid Module	Active Test	Activate System	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Parking Aid Module	Active Test	Activate Light Emitting Diode	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Parking Aid Module	Active Test	Activate Rear Speaker	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Powertrain Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Powertrain Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Powertrain Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001

Escape/Tribute / Mariner	3.0L	4V	2008 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Powertrain Control Module	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Powertrain Control Module	Active Test	Starter Motor Control Output D	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Powertrain Control Module	Active Test	One-Touch Start Status	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Powertrain Control Module	Active Test	Pressure Control Solenoid B	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Power Steering Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Power Steering Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Restraint Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Restraint Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Restraint Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Restraint Control Module	Active Test	Restraints Indicator Lamp	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Restraint Control Module	Active Test	Passenger Airbag Deactivation L	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Satellite Digital Audio Receiver System	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Satellite Digital Audio Receiver System	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Satellite Digital Audio Receiver System	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Satellite Digital Audio Receiver System	Active Test	Satellite Digital Audio Receiver C	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Audio Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Audio Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Audio Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Audio Control Module	Active Test	Bezel Illumination	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Heating Ventilation Air Conditioning	Read DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Heating Ventilation Air Conditioning	Erase DTC		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Heating Ventilation Air Conditioning	Live Data		V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Heating Ventilation Air Conditioning	Active Test	Blower motor control command	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Heating Ventilation Air Conditioning	Active Test	recirculation door close commai	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Heating Ventilation Air Conditioning	Active Test	recirculation door open commai	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Heating Ventilation Air Conditioning	Active Test	Left Blend Door Position	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Heating Ventilation Air Conditioning	Active Test	Right Blend Door Position	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Heating Ventilation Air Conditioning	Active Test	Dimming Control Command	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Heating Ventilation Air Conditioning	Active Test	Heated Backlight Relay	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Heating Ventilation Air Conditioning	Active Test	All segments	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Heating Ventilation Air Conditioning	Active Test	Front Blower Relay	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Heating Ventilation Air Conditioning	Active Test	Rear Window Defog Indicator	V1.20.001
Escape/Tribute / Mariner	3.0L	4V	2008 Heating Ventilation Air Conditioning	Active Test	Air conditioning Floor Servo Pos	V1.20.001
BT-50 / Ranger	2.2L	F2	2007 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
BT-50 / Ranger	2.2L	F2	2007 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
BT-50 / Ranger	2.2L	F2	2007 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
BT-50 / Ranger	2.2L	F2	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
BT-50 / Ranger	2.2L	F2	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve State	V1.20.001
BT-50 / Ranger	2.2L	F2	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve State	V1.20.001
BT-50 / Ranger	2.2L	F2	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve State	V1.20.001
BT-50 / Ranger	2.2L	F2	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve State	V1.20.001
BT-50 / Ranger	2.2L	F2	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve State	V1.20.001
BT-50 / Ranger	2.2L	F2	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve State	V1.20.001
BT-50 / Ranger	2.2L	F2	2007 Powertrain Control Module	Read DTC		V1.20.001
BT-50 / Ranger	2.2L	F2	2007 Powertrain Control Module	Erase DTC		V1.20.001
BT-50 / Ranger	2.2L	F2	2007 Powertrain Control Module	Live Data		V1.20.001
BT-50 / Ranger	2.2L	F2	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
BT-50 / Ranger	2.2L	F2	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
BT-50 / Ranger	2.2L	F2	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
BT-50 / Ranger	2.2L	F2	2007 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
BT-50 / Ranger	2.2L	F2	2007 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
BT-50 / Ranger	2.2L	F2	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
BT-50 / Ranger	2.2L	F2	2007 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
BT-50 / Ranger	2.2L	F2	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
BT-50 / Ranger	2.2L	F2	2007 Restraint Control Module	Read DTC		V1.20.001
BT-50 / Ranger	2.2L	F2	2007 Restraint Control Module	Erase DTC		V1.20.001
BT-50 / Ranger	2.2L	F2	2007 Restraint Control Module	Live Data		V1.20.001
BT-50 / Ranger	2.5L	WL	2007 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
BT-50 / Ranger	2.5L	WL	2007 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
BT-50 / Ranger	2.5L	WL	2007 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
BT-50 / Ranger	2.5L	WL	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
BT-50 / Ranger	2.5L	WL	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve State	V1.20.001
BT-50 / Ranger	2.5L	WL	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve State	V1.20.001
BT-50 / Ranger	2.5L	WL	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve State	V1.20.001
BT-50 / Ranger	2.5L	WL	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve State	V1.20.001
BT-50 / Ranger	2.5L	WL	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve State	V1.20.001
BT-50 / Ranger	2.5L	WL	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve State	V1.20.001
BT-50 / Ranger	2.5L	WL	2007 Powertrain Control Module	Read DTC		V1.20.001
BT-50 / Ranger	2.5L	WL	2007 Powertrain Control Module	Erase DTC		V1.20.001
BT-50 / Ranger	2.5L	WL	2007 Powertrain Control Module	Live Data		V1.20.001
BT-50 / Ranger	2.5L	WL	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
BT-50 / Ranger	2.5L	WL	2007 Powertrain Control Module	Active Test	Fuel Shut Off Valve	V1.20.001
BT-50 / Ranger	2.5L	WL	2007 Powertrain Control Module	Active Test	Glow plug lamp	V1.20.001
BT-50 / Ranger	2.5L	WL	2007 Powertrain Control Module	Active Test	Glow plug control	V1.20.001
BT-50 / Ranger	2.5L	WL	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solen	V1.20.001
BT-50 / Ranger	2.5L	WL	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
BT-50 / Ranger	2.5L	WL	2007 Powertrain Control Module	Active Test	Electric Governor	V1.20.001
BT-50 / Ranger	2.5L	WL	2007 Powertrain Control Module	Active Test	timer control valve signal	V1.20.001
BT-50 / Ranger	2.5L	WL	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
BT-50 / Ranger	2.5L	WL	2007 Restraint Control Module	Read DTC		V1.20.001

BT-50 / Ranger	2.5L	WL	2007 Restraint Control Module	Erase DTC	V1.20.001
BT-50 / Ranger	2.5L	WL	2007 Restraint Control Module	Live Data	V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Powertrain Control Module	Active Test	Air conditioning compressor cyc V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Powertrain Control Module	Active Test	Fuel Shut Off Valve V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Powertrain Control Module	Active Test	Glow plug lamp V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Powertrain Control Module	Active Test	Glow plug control V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solen V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Powertrain Control Module	Active Test	Electric Governor V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Powertrain Control Module	Active Test	timer control valve signal V1.20.001
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999,75 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 4X4 Control Module	Read DTC	V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 4X4 Control Module	Erase DTC	V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 4X4 Control Module	Live Data	V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 4X4 Control Module	Active Test	Pulse-width modulation status C V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 4X4 Control Module	Active Test	Four wheel drive Mode Lamp V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Antilock braking system	Read DTC	V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Antilock braking system	Erase DTC	V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Antilock braking system	Live Data	V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Antilock braking system	Active Test	Booster Learn Cycle V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Antilock braking system	Active Test	Longitudinal Acceleration Senso V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Antilock braking system	Active Test	rear-only dump valve V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Antilock braking system	Active Test	rear-only isolation valve V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Antilock braking system	Active Test	Lateral Accel Sensor Initialization V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Antilock braking system	Active Test	Primary Low Pressure supply V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Antilock braking system	Active Test	Right Rear Traction Assist Valve V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Antilock braking system	Active Test	Secondary Low Pressure Feed V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Antilock braking system	Active Test	Pressure transducer V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Antilock braking system	Active Test	Hydraulic Pump Motor V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Antilock braking system	Active Test	Right Front Outlet Valve V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Antilock braking system	Active Test	Right Front Inlet Valve V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Antilock braking system	Active Test	Left Front Outlet Valve V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Antilock braking system	Active Test	Left Front Inlet Valve V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Antilock braking system	Active Test	Right Rear Outlet Valve V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Antilock braking system	Active Test	Right Rear Inlet Valve V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Antilock braking system	Active Test	Left Rear Outlet Valve V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Antilock braking system	Active Test	Left Rear Inlet Valve V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Antilock braking system	Active Test	Left Rear Traction Control Valve V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Front Controls Interface Module	Read DTC	V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Front Controls Interface Module	Erase DTC	V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Front Controls Interface Module	Live Data	V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Front Controls Interface Module	Active Test	Bezel Illumination V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Front Display Interface Module	Read DTC	V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Front Display Interface Module	Erase DTC	V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Front Display Interface Module	Live Data	V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Front Display Interface Module	Active Test	Bezel Illumination V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Read DTC	Read DTC	V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Erase DTC	Erase DTC	V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Live Data	Live Data	V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	Accessory Delay Relay Circuit V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	White Lighting Circuit V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	Right Rear Turn Signal/Trailer Re V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	Parking Lamp V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	Horn V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	Dimmable Backlighting V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	Brake/Shift Interlock V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	Floor Lamp Output Circuit V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	Key Pad Backlighting V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	Interior Lighting Circuit V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	Left Rear Turn Signal Lamp Statu V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	Low Beam Circuit Status Left Frc V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	Low Beam Circuit Status Right Fr V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	Left Front Turn Lamp Output St V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	Right Front Turn Lamp Output S V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	Left Front Mirror Turn Signal Lar V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	Left Rear Turn Signal/Trailer Rel V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	Right Front Mirror Turn Signal L V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	All Door Unlock V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	Driver's Door Unlock (or 2-Step) V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	All Door Lock V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	Smart Window Control V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	Liftglass/Trunk Release V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	Right Rear Turn Signal Lamp Sta V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	Liftgate release V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	Fog Lamp V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	Mirror Puddle Lamps V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Generic Electronic Module / Smart Jun Active Test	Active Test	High Beam V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Read DTC	V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Erase DTC	V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Live Data	V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Fuel Gauge Indicator Control V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Temperature Gauge V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	All segments V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	All Liquid Crystal Display Segme V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	High Beam Indicator V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	All Warning Lamps V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Safety Belt Warning Lamp V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Door Ajar Warning Indicator V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Low Fuel Warning Indication V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Oil Pressure Warning Lamp V1.20.001
Escape / Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Check Engine Malfunction Indici V1.20.001

Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Generator lamp	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Over Drive (O/D) off	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Brake Warning Lamp	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Tire Pressure Monitoring System	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Airbag	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Right Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Left Turn signal Lamp Status	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Cruise control lamp	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Check fuel cap indicator lamp cc	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Wrench Telltale Indicator	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Traction Assist Active Indicator	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Turn Signal Left On Warning Chi	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Turn Signal Click (turn signal TT	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Turn Signal Clack (turn signal TT	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Belt Minder Chime	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Key In Ignition Reminder Chime	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Park Brake Warning Chime	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Seatbelt Warning Chime	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Headlamps on Reminder Chime	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Airbag Secondary Warning	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Speedometer Gauge Indicator C	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Instrument Cluster	Active Test	Tachometer	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Occupant Classification System Modul	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Occupant Classification System Modul	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Occupant Classification System Modul	Live Data		V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Parking Aid Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Parking Aid Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Parking Aid Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Parking Aid Module	Active Test	Activate System	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Parking Aid Module	Active Test	Activate Light Emitting Diode	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Parking Aid Module	Active Test	Activate Rear Speaker	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	EGR Motor Position Desired	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Evaporative Emission Vapor Ma	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Starter Motor Control Output D	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	One-Touch Start Status	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Powertrain Control Module	Active Test	Pressure Control Solenoid B	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Power Steering Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Power Steering Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Restraint Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Restraint Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Restraint Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Restraint Control Module	Active Test	Restraints Indicator Lamp	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Restraint Control Module	Active Test	Passenger Airbag Deactivation L	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Satellite Digital Audio Receiver System	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Satellite Digital Audio Receiver System	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Satellite Digital Audio Receiver System	Live Data		V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Satellite Digital Audio Receiver System	Active Test	Satellite Digital Audio Receiver (V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Audio Control Module	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Audio Control Module	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Audio Control Module	Live Data		V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Audio Control Module	Active Test	Bezel Illumination	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Heating Ventilation Air Conditioning	Read DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Heating Ventilation Air Conditioning	Erase DTC		V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Heating Ventilation Air Conditioning	Live Data		V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Heating Ventilation Air Conditioning	Active Test	Blower motor control command	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Heating Ventilation Air Conditioning	Active Test	recirculation door close comman	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Heating Ventilation Air Conditioning	Active Test	recirculation door open comman	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Heating Ventilation Air Conditioning	Active Test	Left Blend Door Position	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Heating Ventilation Air Conditioning	Active Test	Right Blend Door Position	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Heating Ventilation Air Conditioning	Active Test	Dimming Control Command	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Heating Ventilation Air Conditioning	Active Test	Heated Backlight Relay	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Heating Ventilation Air Conditioning	Active Test	All segments	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Heating Ventilation Air Conditioning	Active Test	Front Blower Relay	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Heating Ventilation Air Conditioning	Active Test	Rear Window Defog Indicator	V1.20.001
Escape/Tribute / Mariner	2.3L	DURATEC-HE /	2008 Heating Ventilation Air Conditioning	Active Test	Air conditioning Floor Servo Pos	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 4X4 Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 4X4 Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 4X4 Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 4X4 Control Module	Active Test	Clockwise Relay Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 4X4 Control Module	Transfer Test	Transfer Case Shift Relay (L2H) c	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 4X4 Control Module	Active Test	Contact Plate Power	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 4X4 Control Module	Active Test	Neutral Tow Light	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001

Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Generic Electronic Module / Smart Jun	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Generic Electronic Module / Smart Jun	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Generic Electronic Module / Smart Jun	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Generic Electronic Module / Smart Jun	Active Test	Park Lamp Output	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Generic Electronic Module / Smart Jun	Active Test	All Doors Lock Relay	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Generic Electronic Module / Smart Jun	Active Test	Fog Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Generic Electronic Module / Smart Jun	Active Test	Horn Control Driver	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Generic Electronic Module / Smart Jun	Active Test	Illuminated entry relay circuit	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Generic Electronic Module / Smart Jun	Active Test	Drivers Door Unlock Output	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Generic Electronic Module / Smart Jun	Active Test	Passenger Unlock Activated	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Generic Electronic Module / Smart Jun	Active Test	Battery Saver Relay Status.	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Generic Electronic Module / Smart Jun	Active Test	Accessory Delay Relay Circuit	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Generic Electronic Module / Smart Jun	Active Test	Clear History	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	Speedometer	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	Tachometer	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	All segments	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	Anti-Theft RF Enable and Transn	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	Antilock braking system Warnin	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	All Warning Lamps	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	Brake Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	Door Ajar Warning Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	Four wheel drive HIGH Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	4WD Low Indicator Status	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	Check Engine Malfunction Indica	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	Overdrive OFF Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	Temperature Gauge	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	Oil Pressure Low Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	Tire Pressure Monitoring System	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	Check fuel cap indicator lamp cc	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	Safety Belt Warning Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	Chimer control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	Restraints Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	Fuel Level Low Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	Engine over-temperature light	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	Speed Control Set Indicator	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	Fog Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Instrument Cluster	Active Test	Fuel Gauge Indicator Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Occupant Classification System Modul	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Occupant Classification System Modul	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Occupant Classification System Modul	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Powertrain Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Powertrain Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Powertrain Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Powertrain Control Module	Active Test	Evaporative Emission Vapor Ma	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Powertrain Control Module	Active Test	Coast Clutch Solenoid	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Restraint Control Module	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Restraint Control Module	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Restraint Control Module	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Restraint Control Module	Active Test	Restraints Indicator Lamp	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Restraint Control Module	Active Test	Passenger Airbag Deactivation L	V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Satellite Digital Audio Receiver System	Read DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Satellite Digital Audio Receiver System	Erase DTC		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Satellite Digital Audio Receiver System	Live Data		V1.20.001
Ranger / Mazda B-Series / Courier	3.0L	Other	2008 Satellite Digital Audio Receiver System	Active Test	Satellite Digital Audio Receiver (V1.20.001
BT-50 / Ranger	4.0L	V6 Single overt	2007 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
BT-50 / Ranger	4.0L	V6 Single overt	2007 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
BT-50 / Ranger	4.0L	V6 Single overt	2007 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
BT-50 / Ranger	4.0L	V6 Single overt	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
BT-50 / Ranger	4.0L	V6 Single overt	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve State	V1.20.001
BT-50 / Ranger	4.0L	V6 Single overt	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve State	V1.20.001
BT-50 / Ranger	4.0L	V6 Single overt	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve State	V1.20.001
BT-50 / Ranger	4.0L	V6 Single overt	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve State	V1.20.001
BT-50 / Ranger	4.0L	V6 Single overt	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve State	V1.20.001
BT-50 / Ranger	4.0L	V6 Single overt	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve State	V1.20.001
BT-50 / Ranger	4.0L	V6 Single overt	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Hub Lock LOCK Solenoid	V1.20.001
BT-50 / Ranger	4.0L	V6 Single overt	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Hublock Indicator Lamp	V1.20.001
BT-50 / Ranger	4.0L	V6 Single overt	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Hub LOCK / UNLOCK Solenoid	V1.20.001
BT-50 / Ranger	4.0L	V6 Single overt	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Clockwise Relay Control	V1.20.001

BT-50 / Ranger	4.0L	V6 Single over	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Transfer Case Shift Relay (L2H) c	V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Anti-Lock Brake / Traction Control Mo	Active Test	4WD Low Range Signal	V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Four wheel drive Mode Lamp	V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Motor Output	V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Anti-Lock Brake / Traction Control Mo	Active Test	High pressure switch - electrom	V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Anti-Lock Brake / Traction Control Mo	Active Test	Mode Switch / MTR Positive Grc	V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Powertrain Control Module	Read DTC		V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Powertrain Control Module	Erase DTC		V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Powertrain Control Module	Live Data		V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Spark Advance	V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Anti-Theft RF Enable and Transn	V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Restraint Control Module	Read DTC		V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Restraint Control Module	Erase DTC		V1.20.001	
BT-50 / Ranger	4.0L	V6 Single over	2007 Restraint Control Module	Live Data		V1.20.001	
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Anti-Theft RF Enable and Transn	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999,5 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1996 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1996 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1996 Powertrain Control Module	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1996 Powertrain Control Module	Active Test	Anti-Theft RF Enable and Transn	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1996 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1996 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1996 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1996 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1996 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1997,5 Powertrain Control Module	Active Test	Output State Control of Torque	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1997,5 Powertrain Control Module	Active Test	Gear Commanded	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1997,5 Powertrain Control Module	Active Test	Anti-Theft Indicator Lamp Contr	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1997,5 Powertrain Control Module	Active Test	Anti-Theft RF Enable and Transn	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1997,5 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1997,5 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1997,5 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1997,5 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001	
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1997,5 Powertrain Control Module	Active Test	Line Pressure Control Desired	V1.20.001	
Courier	2.6L	G6	1996 Powertrain Control Module	Read DTC		V1.20.001	
Courier	2.6L	G6	1996 Powertrain Control Module	Erase DTC		V1.20.001	
Courier	2.6L	G6	1996 Powertrain Control Module	Live Data		V1.20.001	
Courier	2.6L	G6	1996 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001	
Courier	2.6L	G6	1996 Powertrain Control Module	Active Test	Injector 1	V1.20.001	
Courier	2.6L	G6	1996 Powertrain Control Module	Active Test	Fuel pump	V1.20.001	
Courier	2.6L	G6	1996 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001	
Courier	2.6L	G6	1996 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001	
Courier	2.6L	G6	1996 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001	
Courier	2.6L	G6	1996 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001	
Courier	2.6L	G6	1996 Powertrain Control Module	Active Test	Injector 2	V1.20.001	
LASER / 323 / TIERRA	1.3L	Other	Other	Anti-Lock Brake / Traction Control Mo	Read DTC	V1.20.001	
LASER / 323 / TIERRA	1.3L	Other	Other	Anti-Lock Brake / Traction Control Mo	Erase DTC	V1.20.001	
LASER / 323 / TIERRA	1.3L	Other	Other	Powertrain Control Module	Read DTC	V1.20.001	
LASER / 323 / TIERRA	1.3L	Other	Other	Powertrain Control Module	Erase DTC	V1.20.001	
LASER / 323 / TIERRA	1.3L	Other	Other	Powertrain Control Module	Live Data	V1.20.001	
LASER / 323 / TIERRA	1.3L	Other	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
LASER / 323 / TIERRA	1.3L	Other	Other	Powertrain Control Module	Active Test	Generator field current control	V1.20.001
LASER / 323 / TIERRA	1.3L	Other	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
LASER / 323 / TIERRA	1.3L	Other	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
LASER / 323 / TIERRA	1.3L	Other	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
LASER / 323 / TIERRA	1.3L	Other	Other	Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
LASER / 323 / TIERRA	1.3L	Other	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
LASER / 323 / TIERRA	1.3L	Other	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
LASER / 323 / TIERRA	1.3L	Other	Other	Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
LASER / 323 / TIERRA	1.3L	Other	Other	Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
LASER / 323 / TIERRA	1.3L	Other	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
LASER / 323 / TIERRA	1.5L	Other	Other	Anti-Lock Brake / Traction Control Mo	Read DTC	V1.20.001	
LASER / 323 / TIERRA	1.5L	Other	Other	Anti-Lock Brake / Traction Control Mo	Erase DTC	V1.20.001	
LASER / 323 / TIERRA	1.5L	Other	Other	Powertrain Control Module	Read DTC	V1.20.001	
LASER / 323 / TIERRA	1.5L	Other	Other	Powertrain Control Module	Erase DTC	V1.20.001	
LASER / 323 / TIERRA	1.5L	Other	Other	Powertrain Control Module	Live Data	V1.20.001	
LASER / 323 / TIERRA	1.5L	Other	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
LASER / 323 / TIERRA	1.5L	Other	Other	Powertrain Control Module	Active Test	Generator field current control	V1.20.001
LASER / 323 / TIERRA	1.5L	Other	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
LASER / 323 / TIERRA	1.5L	Other	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
LASER / 323 / TIERRA	1.5L	Other	Other	Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
LASER / 323 / TIERRA	1.5L	Other	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
LASER / 323 / TIERRA	1.5L	Other	Other	Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
LASER / 323 / TIERRA	1.5L	Other	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
LASER / 323 / TIERRA	1.5L	Other	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001

MAZDA6 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA6 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA6 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA6 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA6 (North America / General)	2.3L	L3	2004 Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (North America / General)	2.3L	L3	2004 Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (North America / General)	2.3L	L3	2004 Restraint Control Module	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Antilock braking system	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Antilock braking system	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Antilock braking system	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Generic Electronic Module	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Generic Electronic Module	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Generic Electronic Module	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Generic Electronic Module	Active Test	Room Light	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Generic Electronic Module	Active Test	Hazard Flashers	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Generic Electronic Module	Active Test	Air Conditioning Indicator	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Generic Electronic Module	Active Test	Key Reminder Warning Alarm	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Generic Electronic Module	Active Test	Seat Belt Reminder Warning Ala	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Generic Electronic Module	Active Test	Light Reminder Warning Alarm	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Generic Electronic Module	Active Test	Reverse Alarm	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Generic Electronic Module	Active Test	Taillight	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Generic Electronic Module	Active Test	Headlamp	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Generic Electronic Module	Active Test	Front windshield wiper	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Generic Electronic Module	Active Test	Rear wiper	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Instrument Cluster	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Instrument Cluster	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Instrument Cluster	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Intelligent Power Distribution Module	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Intelligent Power Distribution Module	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Intelligent Power Distribution Module	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Intelligent Power Distribution Module	Active Test	Front windshield wiper	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Intelligent Power Distribution Module	Active Test	Cooling Fan State	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Intelligent Power Distribution Module	Active Test	Exterior Light	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Powertrain Control Module	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Powertrain Control Module	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Powertrain Control Module	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Powertrain Control Module	Active Test	Low Cooling Fan State	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Powertrain Control Module	Active Test	High Cooling Fan State	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Powertrain Control Module	Active Test	Short term fuel trim 1	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Powertrain Control Module	Active Test	Variable Camshaft Timing Angle	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Restraint Control Module	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Restraint Control Module	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Transmission Control Module	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Transmission Control Module	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Transmission Control Module	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Electronic-Controlled Power Steering	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2007 Electronic-Controlled Power Steering	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Antilock braking system	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Antilock braking system	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Antilock braking system	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Generic Electronic Module	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Generic Electronic Module	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Generic Electronic Module	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Generic Electronic Module	Active Test	Room Light	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Generic Electronic Module	Active Test	Hazard Flashers	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Generic Electronic Module	Active Test	Air Conditioning Indicator	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Generic Electronic Module	Active Test	Key Reminder Warning Alarm	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Generic Electronic Module	Active Test	Seat Belt Reminder Warning Ala	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Generic Electronic Module	Active Test	Light Reminder Warning Alarm	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Generic Electronic Module	Active Test	Reverse Alarm	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Generic Electronic Module	Active Test	Taillight	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Generic Electronic Module	Active Test	Headlamp	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Generic Electronic Module	Active Test	Front windshield wiper	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Generic Electronic Module	Active Test	Rear wiper	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Instrument Cluster	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Instrument Cluster	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2007 Instrument Cluster	Live Data		V1.20.001

FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Generic Electronic Module	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Generic Electronic Module	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Generic Electronic Module	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Generic Electronic Module	Active Test	Room Light	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Generic Electronic Module	Active Test	Hazard Flashers	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Generic Electronic Module	Active Test	Air Conditioning Indicator	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Generic Electronic Module	Active Test	Key Reminder Warning Alarm	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Generic Electronic Module	Active Test	Seat Belt Reminder Warning Ala	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Generic Electronic Module	Active Test	Light Reminder Warning Alarm	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Generic Electronic Module	Active Test	Reverse Alarm	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Generic Electronic Module	Active Test	Taillight	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Generic Electronic Module	Active Test	Headlamp	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Generic Electronic Module	Active Test	Front windshield wiper	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Generic Electronic Module	Active Test	Rear wiper	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Instrument Cluster	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Instrument Cluster	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Instrument Cluster	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Intelligent Power Distribution Module	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Intelligent Power Distribution Module	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Intelligent Power Distribution Module	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Intelligent Power Distribution Module	Active Test	Front windshield wiper	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Intelligent Power Distribution Module	Active Test	Cooling Fan State	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Intelligent Power Distribution Module	Active Test	Exterior Light	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Powertrain Control Module	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Powertrain Control Module	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Powertrain Control Module	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Powertrain Control Module	Active Test	Low Cooling Fan State	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Powertrain Control Module	Active Test	High Cooling Fan State	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Powertrain Control Module	Active Test	Short term fuel trim 1	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Powertrain Control Module	Active Test	Variable Camshaft Timing Angle	V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Restraint Control Module	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Restraint Control Module	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Transmission Control Module	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Transmission Control Module	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Transmission Control Module	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Electronic-Controlled Power Steering	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007 Electronic-Controlled Power Steering	Live Data		V1.20.001
Biante(Japan)	2.0L	LF	2008 4X4 Control Module	Read DTC		V1.20.001
Biante(Japan)	2.0L	LF	2008 4X4 Control Module	Erase DTC		V1.20.001
Biante(Japan)	2.0L	LF	2008 Antilock braking system	Read DTC		V1.20.001
Biante(Japan)	2.0L	LF	2008 Antilock braking system	Erase DTC		V1.20.001
Biante(Japan)	2.0L	LF	2008 Antilock braking system	Live Data		V1.20.001
Biante(Japan)	2.0L	LF	2008 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Biante(Japan)	2.0L	LF	2008 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
Biante(Japan)	2.0L	LF	2008 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
Biante(Japan)	2.0L	LF	2008 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
Biante(Japan)	2.0L	LF	2008 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
Biante(Japan)	2.0L	LF	2008 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
Biante(Japan)	2.0L	LF	2008 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
Biante(Japan)	2.0L	LF	2008 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
Biante(Japan)	2.0L	LF	2008 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
Biante(Japan)	2.0L	LF	2008 Antilock braking system	Active Test	Right Stability Control Solenoid	V1.20.001
Biante(Japan)	2.0L	LF	2008 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
Biante(Japan)	2.0L	LF	2008 Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
Biante(Japan)	2.0L	LF	2008 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
Biante(Japan)	2.0L	LF	2008 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
Biante(Japan)	2.0L	LF	2008 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
Biante(Japan)	2.0L	LF	2008 Electronic Automatic Temperature Cor	Live Data		V1.20.001
Biante(Japan)	2.0L	LF	2008 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
Biante(Japan)	2.0L	LF	2008 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
Biante(Japan)	2.0L	LF	2008 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
Biante(Japan)	2.0L	LF	2008 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
Biante(Japan)	2.0L	LF	2008 Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
Biante(Japan)	2.0L	LF	2008 Electronic-Controlled Power Steering	Read DTC		V1.20.001
Biante(Japan)	2.0L	LF	2008 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
Biante(Japan)	2.0L	LF	2008 Electronic-Controlled Power Steering	Live Data		V1.20.001
Biante(Japan)	2.0L	LF	2008 Generic Electronic Module	Read DTC		V1.20.001
Biante(Japan)	2.0L	LF	2008 Generic Electronic Module	Erase DTC		V1.20.001
Biante(Japan)	2.0L	LF	2008 Generic Electronic Module	Live Data		V1.20.001
Biante(Japan)	2.0L	LF	2008 Instrument Cluster	Read DTC		V1.20.001
Biante(Japan)	2.0L	LF	2008 Instrument Cluster	Erase DTC		V1.20.001
Biante(Japan)	2.0L	LF	2008 Instrument Cluster	Live Data		V1.20.001
Biante(Japan)	2.0L	LF	2008 Left Power Sliding Door Module	Read DTC		V1.20.001
Biante(Japan)	2.0L	LF	2008 Left Power Sliding Door Module	Erase DTC		V1.20.001
Biante(Japan)	2.0L	LF	2008 Left Power Sliding Door Module	Live Data		V1.20.001
Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Read DTC		V1.20.001
Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Erase DTC		V1.20.001
Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Live Data		V1.20.001
Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Active Test	Generator field current control	V1.20.001

Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Active Test	Injector 1	V1.20.001
Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Active Test	Injector 2	V1.20.001
Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Active Test	Injector 3	V1.20.001
Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Active Test	Injector 4	V1.20.001
Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
Biante(Japan)	2.0L	LF	2008 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
Biante(Japan)	2.0L	LF	2008 Restraint Control Module	Read DTC		V1.20.001
Biante(Japan)	2.0L	LF	2008 Restraint Control Module	Erase DTC		V1.20.001
Biante(Japan)	2.0L	LF	2008 Restraint Control Module	Live Data		V1.20.001
Biante(Japan)	2.0L	LF	2008 Remote Keyless Entry	Read DTC		V1.20.001
Biante(Japan)	2.0L	LF	2008 Remote Keyless Entry	Erase DTC		V1.20.001
Biante(Japan)	2.0L	LF	2008 Remote Keyless Entry	Live Data		V1.20.001
Biante(Japan)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
Biante(Japan)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
Biante(Japan)	2.0L	LF	2008 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
Biante(Japan)	2.0L	LF	2008 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
Biante(Japan)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
Biante(Japan)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
Biante(Japan)	2.0L	LF	2008 Right Power Sliding Door Module	Read DTC		V1.20.001
Biante(Japan)	2.0L	LF	2008 Right Power Sliding Door Module	Erase DTC		V1.20.001
Biante(Japan)	2.0L	LF	2008 Right Power Sliding Door Module	Live Data		V1.20.001
Biante(Japan)	2.0L	LF	2008 Transmission Control Module	Read DTC		V1.20.001
Biante(Japan)	2.0L	LF	2008 Transmission Control Module	Erase DTC		V1.20.001
Biante(Japan)	2.0L	LF	2008 Transmission Control Module	Live Data		V1.20.001
Biante(Japan)	2.0L	LF	2008 Transmission Control Module	Active Test	1-2 Shift Solenoid	V1.20.001
Biante(Japan)	2.0L	LF	2008 Transmission Control Module	Active Test	2-3 Shift Solenoid	V1.20.001
Biante(Japan)	2.0L	LF	2008 Transmission Control Module	Active Test	3-4 Shift Solenoid	V1.20.001
Biante(Japan)	2.0L	LF	2008 Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Biante(Japan)	2.0L	LF	2008 Transmission Control Module	Active Test	3-2 Timing Solenoid	V1.20.001
Biante(Japan)	2.0L	LF	2008 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 4X4 Control Module	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 4X4 Control Module	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Steering Angle Sensor Initializati	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Stability Control Active Indicato	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Right Traction Control Solenoid V	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Amplifier Module	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Amplifier Module	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Electronic Automatic Temperature Cor	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Electronic Automatic Temperature Cor	Active Test	Information Display	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Generic Electronic Module	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Generic Electronic Module	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Generic Electronic Module	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Instrument Cluster	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Instrument Cluster	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Instrument Cluster	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Lighting Control Module	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Lighting Control Module	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001

CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Injector 4	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Injector 2	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Variable Fan Duty Cycle 1	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Injector 3	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Restraint Control Module	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Restraint Control Module	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Restraint Control Module	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Remote Keyless Entry	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Remote Keyless Entry	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Remote Keyless Entry	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2006 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Antilock braking system	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Antilock braking system	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Antilock braking system	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Antilock braking system	Active Test	Steering Angle Sensor Initializati	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Antilock braking system	Active Test	Stability Control Active Indicator	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Antilock braking system	Active Test	Right Stability Control Solenoid	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Amplifier Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Amplifier Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Electronic Automatic Temperature Cor	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Electronic Automatic Temperature Cor	Active Test	Information Display	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Generic Electronic Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Generic Electronic Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Generic Electronic Module	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Instrument Cluster	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Instrument Cluster	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Instrument Cluster	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Instrument Cluster	Active Test	ID Regist Mode	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Powertrain Control Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Powertrain Control Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Powertrain Control Module	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Powertrain Control Module	Active Test	Variable Fan Duty Cycle 1	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Restraint Control Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Restraint Control Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Restraint Control Module	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Remote Keyless Entry	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Remote Keyless Entry	Erase DTC		V1.20.001

CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Remote Keyless Entry	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Transmission Control Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Transmission Control Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Transmission Control Module	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Transmission Control Module	Active Test	Shift Solenoid E	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 Transmission Control Module	Active Test	C F	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Antilock braking system	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Antilock braking system	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Antilock braking system	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Antilock braking system	Active Test	Steering Angle Sensor Initializati	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Antilock braking system	Active Test	Stability Control Active Indicato	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Antilock braking system	Active Test	Right Stability Control Solenoid	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Amplifier Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Amplifier Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Electronic Automatic Temperature Cor	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Electronic Automatic Temperature Cor	Active Test	Information Display	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Generic Electronic Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Generic Electronic Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Generic Electronic Module	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Instrument Cluster	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Instrument Cluster	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Instrument Cluster	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Instrument Cluster	Active Test	ID Regist Mode	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Powertrain Control Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Powertrain Control Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Powertrain Control Module	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Powertrain Control Module	Active Test	Injector 4	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Powertrain Control Module	Active Test	Injector 2	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Powertrain Control Module	Active Test	Variable Fan Duty Cycle 1	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Powertrain Control Module	Active Test	Injector 3	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Restraint Control Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Restraint Control Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Restraint Control Module	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Remote Keyless Entry	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Remote Keyless Entry	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Remote Keyless Entry	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Transmission Control Module	Read DTC		V1.20.001

CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Transmission Control Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Transmission Control Module	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Transmission Control Module	Active Test	Shift Solenoid E	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2008 Transmission Control Module	Active Test	C F	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Steering Angle Sensor Initializati	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Stability Control Active Indicato	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Right Stability Control Solenoid `	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Right Traction Control Solenoid `	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Amplifier Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Amplifier Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Electronic Automatic Temperature Cor	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Electronic Automatic Temperature Cor	Active Test	Information Display	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Generic Electronic Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Generic Electronic Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Generic Electronic Module	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Instrument Cluster	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Instrument Cluster	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Instrument Cluster	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Instrument Cluster	Active Test	ID Regist Mode	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Injector 2	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Injector 3	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Injector 4	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Variable Fan Duty Cycle 1	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Restraint Control Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Restraint Control Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Restraint Control Module	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001

CX-9 (North America / General Specs.)	3.7L	CA	2009 Liftgate/Trunk Module	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Powertrain Control Module	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Powertrain Control Module	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Powertrain Control Module	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Restraint Control Module	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Restraint Control Module	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Restraint Control Module	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Remote Keyless Entry	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Remote Keyless Entry	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Remote Keyless Entry	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Transmission Control Module	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Transmission Control Module	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Transmission Control Module	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Transmission Control Module	Active Test	Torque Converter Clutch Control	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Transmission Control Module	Active Test	Shift Solenoid E	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Transmission Control Module	Active Test	C F	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2009 Transmission Control Module	Active Test		V1.20.001
Biante(Japan)	2.3L	L3	2008 Antilock braking system	Read DTC		V1.20.001
Biante(Japan)	2.3L	L3	2008 Antilock braking system	Erase DTC		V1.20.001
Biante(Japan)	2.3L	L3	2008 Antilock braking system	Live Data		V1.20.001
Biante(Japan)	2.3L	L3	2008 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Biante(Japan)	2.3L	L3	2008 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
Biante(Japan)	2.3L	L3	2008 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
Biante(Japan)	2.3L	L3	2008 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
Biante(Japan)	2.3L	L3	2008 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
Biante(Japan)	2.3L	L3	2008 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
Biante(Japan)	2.3L	L3	2008 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
Biante(Japan)	2.3L	L3	2008 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
Biante(Japan)	2.3L	L3	2008 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
Biante(Japan)	2.3L	L3	2008 Antilock braking system	Active Test	Right Stability Control Solenoid	V1.20.001
Biante(Japan)	2.3L	L3	2008 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
Biante(Japan)	2.3L	L3	2008 Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
Biante(Japan)	2.3L	L3	2008 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
Biante(Japan)	2.3L	L3	2008 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
Biante(Japan)	2.3L	L3	2008 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
Biante(Japan)	2.3L	L3	2008 Electronic Automatic Temperature Cor	Live Data		V1.20.001
Biante(Japan)	2.3L	L3	2008 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
Biante(Japan)	2.3L	L3	2008 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
Biante(Japan)	2.3L	L3	2008 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
Biante(Japan)	2.3L	L3	2008 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
Biante(Japan)	2.3L	L3	2008 Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
Biante(Japan)	2.3L	L3	2008 Electronic-Controlled Power Steering	Read DTC		V1.20.001
Biante(Japan)	2.3L	L3	2008 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
Biante(Japan)	2.3L	L3	2008 Electronic-Controlled Power Steering	Live Data		V1.20.001
Biante(Japan)	2.3L	L3	2008 Generic Electronic Module	Read DTC		V1.20.001
Biante(Japan)	2.3L	L3	2008 Generic Electronic Module	Erase DTC		V1.20.001
Biante(Japan)	2.3L	L3	2008 Generic Electronic Module	Live Data		V1.20.001
Biante(Japan)	2.3L	L3	2008 Instrument Cluster	Read DTC		V1.20.001
Biante(Japan)	2.3L	L3	2008 Instrument Cluster	Erase DTC		V1.20.001
Biante(Japan)	2.3L	L3	2008 Instrument Cluster	Live Data		V1.20.001
Biante(Japan)	2.3L	L3	2008 Left Power Sliding Door Module	Read DTC		V1.20.001
Biante(Japan)	2.3L	L3	2008 Left Power Sliding Door Module	Erase DTC		V1.20.001
Biante(Japan)	2.3L	L3	2008 Left Power Sliding Door Module	Live Data		V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Read DTC		V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Erase DTC		V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Live Data		V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Active Test	Rich-to-lean delayed time	V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Active Test	Injector 1	V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Active Test	Injector 2	V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Active Test	Injector 3	V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Active Test	Injector 4	V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
Biante(Japan)	2.3L	L3	2008 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001

Biante(Japan)	2.3L	L3	2008 Restraint Control Module	Read DTC		V1.20.001
Biante(Japan)	2.3L	L3	2008 Restraint Control Module	Erase DTC		V1.20.001
Biante(Japan)	2.3L	L3	2008 Restraint Control Module	Live Data		V1.20.001
Biante(Japan)	2.3L	L3	2008 Remote Keyless Entry	Read DTC		V1.20.001
Biante(Japan)	2.3L	L3	2008 Remote Keyless Entry	Erase DTC		V1.20.001
Biante(Japan)	2.3L	L3	2008 Remote Keyless Entry	Live Data		V1.20.001
Biante(Japan)	2.3L	L3	2008 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
Biante(Japan)	2.3L	L3	2008 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
Biante(Japan)	2.3L	L3	2008 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
Biante(Japan)	2.3L	L3	2008 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
Biante(Japan)	2.3L	L3	2008 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
Biante(Japan)	2.3L	L3	2008 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
Biante(Japan)	2.3L	L3	2008 Right Power Sliding Door Module	Read DTC		V1.20.001
Biante(Japan)	2.3L	L3	2008 Right Power Sliding Door Module	Erase DTC		V1.20.001
Biante(Japan)	2.3L	L3	2008 Right Power Sliding Door Module	Live Data		V1.20.001
Biante(Japan)	2.3L	L3	2008 Transmission Control Module	Read DTC		V1.20.001
Biante(Japan)	2.3L	L3	2008 Transmission Control Module	Erase DTC		V1.20.001
Biante(Japan)	2.3L	L3	2008 Transmission Control Module	Live Data		V1.20.001
Biante(Japan)	2.3L	L3	2008 Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
Biante(Japan)	2.3L	L3	2008 Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
Biante(Japan)	2.3L	L3	2008 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
Biante(Japan)	2.3L	L3	2008 Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
Biante(Japan)	2.3L	L3	2008 Transmission Control Module	Active Test	shift solenoid E/5	V1.20.001
Biante(Japan)	2.3L	L3	2008 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
Biante(Japan)	2.3L	L3	2008 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
Biante(Japan)	2.3L	L3	2008 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Antilock braking system	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Antilock braking system	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Antilock braking system	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Antilock braking system	Active Test	Left Front Traction Control Prim	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Antilock braking system	Active Test	Left Front Traction Control Switc	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Antilock braking system	Active Test	Calibrate Master Cylinder Pressi	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Antilock braking system	Active Test	Traction control priming valve fr	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Antilock braking system	Active Test	Traction control switching valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Generic Electronic Module	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Generic Electronic Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Generic Electronic Module	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Instrument Cluster	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Instrument Cluster	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Instrument Cluster	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Powertrain Control Module	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Powertrain Control Module	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Restraint Control Module	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Restraint Control Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Restraint Control Module	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Tire Pressure Monitor	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Tire Pressure Monitor	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2009 Tire Pressure Monitor	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2008 Antilock braking system	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2008 Antilock braking system	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2008 Antilock braking system	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2008 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2008 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2008 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2008 Antilock braking system	Active Test	Left Front Traction Control Prim	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2008 Antilock braking system	Active Test	Left Front Traction Control Switc	V1.20.001

MAZDA3 (North America / General)	2.0L	LF	2009 Antilock braking system	Active Test	Traction control switching valve	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Generic Electronic Module	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Generic Electronic Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Generic Electronic Module	Live Data		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Instrument Cluster	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Instrument Cluster	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Instrument Cluster	Live Data		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Live Data		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Restraint Control Module	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Restraint Control Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Restraint Control Module	Live Data		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Tire Pressure Monitor	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Tire Pressure Monitor	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2009 Tire Pressure Monitor	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Antilock braking system	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Antilock braking system	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Antilock braking system	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Antilock braking system	Active Test	Left Front Traction Control Prim	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Antilock braking system	Active Test	Left Front Traction Control Switc	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Antilock braking system	Active Test	Traction control priming valve fr	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Antilock braking system	Active Test	Traction control switching valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Antilock braking system	Active Test	Calibrate Master Cylinder Press	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Electronic Automatic Temperature Cor	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Generic Electronic Module	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Generic Electronic Module	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Generic Electronic Module	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Instrument Cluster	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Instrument Cluster	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Instrument Cluster	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Powertrain Control Module	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Powertrain Control Module	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001

MAZDA5 (North America Specs.)	2.3L	L3	2009 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Restraint Control Module	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Restraint Control Module	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Restraint Control Module	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Tire Pressure Monitor	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Tire Pressure Monitor	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Tire Pressure Monitor	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2009 Tire Pressure Monitor	Active Test	ID Regist Mode	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Antilock braking system	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Antilock braking system	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Antilock braking system	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Antilock braking system	Active Test	Left Front Traction Control Prim	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Antilock braking system	Active Test	Left Front Traction Control Switc	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Antilock braking system	Active Test	Traction control priming valve fr	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Antilock braking system	Active Test	Traction control switching valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Antilock braking system	Active Test	Calibrate Master Cylinder Pressi	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Electronic Automatic Temperature Cor	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Electronic Automatic Temperature Cor	Active Test	Information Display	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Generic Electronic Module	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Generic Electronic Module	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Generic Electronic Module	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Instrument Cluster	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Instrument Cluster	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Instrument Cluster	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Powertrain Control Module	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Powertrain Control Module	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Restraint Control Module	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Restraint Control Module	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Restraint Control Module	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Tire Pressure Monitor	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Tire Pressure Monitor	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Tire Pressure Monitor	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2008 Tire Pressure Monitor	Active Test	ID Regist Mode	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Antilock braking system	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Antilock braking system	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Antilock braking system	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001

MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Antilock braking system	Active Test	Left Linear Control Solenoid Valve	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Antilock braking system	Active Test	Right Linear Control Solenoid Valve	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Body Control Module / Generic Electrical Read DTC			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Body Control Module / Generic Electrical Erase DTC			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Body Control Module / Generic Electrical Live Data			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Electronic Automatic Temperature Control Read DTC			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Electronic Automatic Temperature Control Erase DTC			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Electronic Automatic Temperature Control Live Data			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Electronic Automatic Temperature Control Active Test		Air Mix Actuator	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Electronic Automatic Temperature Control Active Test		REC/FRESH Switch	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Electronic Automatic Temperature Control Active Test		Blower Motor	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Electronic Automatic Temperature Control Active Test		Airflow Mode Actuator	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Electronic Automatic Temperature Control Active Test		Information Display	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Electronic-Controlled Power Steering Read DTC			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Electronic-Controlled Power Steering Erase DTC			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Electronic-Controlled Power Steering Live Data			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Instrument Cluster Read DTC			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Instrument Cluster Erase DTC			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Instrument Cluster Live Data			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Instrument Cluster Active Test		Speedometer	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Instrument Cluster Active Test		Tachometer	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Instrument Cluster Active Test		Fuel Gauge	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Instrument Cluster Active Test		Engine Coolant Temperature Gauge	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Instrument Cluster Active Test		Alarm	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Instrument Cluster Active Test		All Liquid Crystal Display Segments	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Instrument Cluster Active Test		All Warning Lights and Indicator	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Lighting Control Module Read DTC			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Lighting Control Module Erase DTC			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Powertrain Control Module Read DTC			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Powertrain Control Module Erase DTC			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Powertrain Control Module Live Data			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Powertrain Control Module Active Test		Injector 1	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Powertrain Control Module Active Test		Injector 2	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Powertrain Control Module Active Test		Injector 3	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Powertrain Control Module Active Test		Injector 4	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Powertrain Control Module Active Test		Exhaust Gas Recirculation Valve	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Powertrain Control Module Active Test		Camshaft Position Commanded	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Powertrain Control Module Active Test		Heated Exhaust Gas Oxygen Sensor	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Powertrain Control Module Active Test		Heated Exhaust Gas Oxygen Sensor	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Powertrain Control Module Active Test		Intake Manifold Runner Control	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Powertrain Control Module Active Test		Intake Manifold Tuning Valve	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Powertrain Control Module Active Test		TEN Terminal (Data Link Connector)	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Powertrain Control Module Active Test		FAN1 Control Signal	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Powertrain Control Module Active Test		Air conditioning compressor cycle	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Powertrain Control Module Active Test		Evaporative Emission Canister Purge	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Powertrain Control Module Active Test		Generator field current control	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Powertrain Control Module Active Test		Fuel pump	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Powertrain Control Module Active Test		Rich-to-lean delayed time	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Powertrain Control Module Active Test		Intake air shutter valve	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Powertrain Control Module Active Test		FAN3 Control Signal	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Powertrain Control Module Active Test		FAN2 Control Signal	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Powertrain Control Module Active Test		Desired RPM	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Restraint Control Module Read DTC			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Restraint Control Module Erase DTC			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Restraint Control Module Live Data			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Remote Keyless Entry Read DTC			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Remote Keyless Entry Erase DTC			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Remote Keyless Entry Live Data			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Remote Keyless Entry Active Test		Outer Buzzer	V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Rear Vehicle Monitoring Read DTC			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Rear Vehicle Monitoring Erase DTC			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Rear Vehicle Monitoring Live Data			V1.20.001
MAZDA6 (GH, Before Facelift)	2.5L	L5	2007 Rear Vehicle Monitoring Active Test		Buzzer	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Antilock braking system Read DTC			V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Antilock braking system Erase DTC			V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Antilock braking system Live Data			V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Antilock braking system Active Test		Hydraulic Pump Motor	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Antilock braking system Active Test		Right Rear Inlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Antilock braking system Active Test		Right Rear Outlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Antilock braking system Active Test		Left Rear Inlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Antilock braking system Active Test		Left Rear Outlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Antilock braking system Active Test		Right Front Inlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Antilock braking system Active Test		Right Front Outlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Antilock braking system Active Test		Left Front Inlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Antilock braking system Active Test		Left Front Outlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Antilock braking system Active Test		Left Linear Control Solenoid Valve	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Antilock braking system Active Test		Right Linear Control Solenoid Valve	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Body Control Module / Generic Electrical Read DTC			V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Body Control Module / Generic Electrical Erase DTC			V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Body Control Module / Generic Electrical Live Data			V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Electronic Automatic Temperature Control Read DTC			V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Electronic Automatic Temperature Control Erase DTC			V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Electronic Automatic Temperature Control Live Data			V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Electronic Automatic Temperature Control Active Test		Air Mix Actuator	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Electronic Automatic Temperature Control Active Test		REC/FRESH Switch	V1.20.001

MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Instrument Cluster	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Instrument Cluster	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Lighting Control Module	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Lighting Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Powertrain Control Module	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Restraint Control Module	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Remote Keyless Entry	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Rear Vehicle Monitoring	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Rear Vehicle Monitoring	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Rear Vehicle Monitoring	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	1.8L	L8	2007 Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Antilock braking system	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Antilock braking system	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Antilock braking system	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Antilock braking system	Active Test	Left Linear Control Solenoid Vah	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Antilock braking system	Active Test	Right Linear Control Solenoid Va	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Body Control Module / Generic Electrc	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Body Control Module / Generic Electrc	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Body Control Module / Generic Electrc	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Instrument Cluster	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Instrument Cluster	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Lighting Control Module	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Lighting Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Powertrain Control Module	Live Data		V1.20.001

MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Restraint Control Module	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Remote Keyless Entry	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Rear Vehicle Monitoring	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Rear Vehicle Monitoring	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Rear Vehicle Monitoring	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	LF	2007 Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Antilock braking system	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Antilock braking system	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Antilock braking system	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Antilock braking system	Active Test	Left Linear Control Solenoid Val	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Antilock braking system	Active Test	Right Linear Control Solenoid Va	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Body Control Module / Generic Electrc	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Body Control Module / Generic Electrc	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Body Control Module / Generic Electrc	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Electronic Automatic Temperature Cor	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Fuel Fired Coolant Heating Module	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Fuel Fired Coolant Heating Module	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Fuel Fired Coolant Heating Module	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Instrument Cluster	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Instrument Cluster	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Lighting Control Module	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Lighting Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Powertrain Control Module	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Glow plug control	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Powertrain Control Module	Active Test	variable boost control solenoid	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Glow plug lamp	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Intake Shatter Valve Control De	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Restraint Control Module	Erase DTC		V1.20.001

MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Restraint Control Module	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Remote Keyless Entry	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Rear Vehicle Monitoring	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Rear Vehicle Monitoring	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Rear Vehicle Monitoring	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.0L	RF_T	2007 Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Antilock braking system	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Antilock braking system	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Antilock braking system	Live Data		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Antilock braking system	Active Test	Left Linear Control Solenoid Va	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Antilock braking system	Active Test	Right Linear Control Solenoid Va	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Body Control Module / Generic Electrc	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Body Control Module / Generic Electrc	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Body Control Module / Generic Electrc	Live Data		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Electronic Automatic Temperature Cor	Live Data		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Electronic Automatic Temperature Cor	Active Test	Rear Vent Actuator	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Electronic Automatic Temperature Cor	Active Test	Rear Fan	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Instrument Cluster	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Instrument Cluster	Live Data		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Lighting Control Module	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Lighting Control Module	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Lighting Control Module	Live Data		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Powertrain Control Module	Live Data		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Generator field current control c	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Injector 5	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Injector 6	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Desired Intake Camshaft Positio	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Restraint Control Module	Live Data		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Remote Keyless Entry	Live Data		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Transmission Control Module	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Transmission Control Module	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Transmission Control Module	Live Data		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001

MAZDA6 (Middle East / General)	3.7L	CA	2009 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Transmission Control Module	Active Test	Shift Solenoid E	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Transmission Control Module	Active Test	C F	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2009 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Antilock braking system	Read DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Antilock braking system	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Antilock braking system	Live Data		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Antilock braking system	Active Test	Left Linear Control Solenoid Vah	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Antilock braking system	Active Test	Right Linear Control Solenoid Va	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Body Control Module / Generic Electr	Read DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Body Control Module / Generic Electr	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Body Control Module / Generic Electr	Live Data		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Electronic Automatic Temperature Cor	Live Data		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Instrument Cluster	Read DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Instrument Cluster	Live Data		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Lighting Control Module	Read DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Lighting Control Module	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Lighting Control Module	Live Data		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Powertrain Control Module	Live Data		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Injector 5	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Injector 6	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Powertrain Control Module	Active Test	Desired Intake Camshaft Positio	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Restraint Control Module	Live Data		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Remote Keyless Entry	Live Data		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Transmission Control Module	Read DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Transmission Control Module	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Transmission Control Module	Live Data		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Transmission Control Module	Active Test	Shift Solenoid E	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Transmission Control Module	Active Test	C F	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2009 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Antilock braking system	Read DTC		V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Antilock braking system	Erase DTC		V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Antilock braking system	Live Data		V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001

MAZDA2 (China)	1.3L	ZJ	2007 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Read DTC		V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Erase DTC		V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Live Data		V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Active Test	Front Fog Lamp Relay	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Active Test	Low Beam Relay	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Active Test	Turn Lamp - Left	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Active Test	Turn Lamp - Right	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Fast speed	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Low speed	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Active Test	Rear Wiper Relay	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Instrument Cluster	Read DTC		V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Instrument Cluster	Erase DTC		V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Instrument Cluster	Live Data		V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Read DTC		V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Live Data		V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Restraint Control Module	Read DTC		V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Restraint Control Module	Erase DTC		V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Restraint Control Module	Live Data		V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA2 (China)	1.3L	ZJ	2007 Remote Keyless Entry	Live Data		V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Antilock braking system	Read DTC		V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Antilock braking system	Erase DTC		V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Antilock braking system	Live Data		V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Body Control Module / Generic Electrc	Read DTC		V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Body Control Module / Generic Electrc	Erase DTC		V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Body Control Module / Generic Electrc	Live Data		V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Body Control Module / Generic Electrc	Active Test	Front Fog Lamp Relay	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Body Control Module / Generic Electrc	Active Test	Low Beam Relay	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Body Control Module / Generic Electrc	Active Test	Turn Lamp - Left	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Body Control Module / Generic Electrc	Active Test	Turn Lamp - Right	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Fast speed	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Low speed	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Body Control Module / Generic Electrc	Active Test	Rear Wiper Relay	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Instrument Cluster	Read DTC		V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Instrument Cluster	Erase DTC		V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Instrument Cluster	Live Data		V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001

MAZDA2 (China)	1.5L	ZY	2007 Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Read DTC		V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Live Data		V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Restraint Control Module	Read DTC		V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Restraint Control Module	Erase DTC		V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Restraint Control Module	Live Data		V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA2 (China)	1.5L	ZY	2007 Remote Keyless Entry	Live Data		V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Antilock braking system	Read DTC		V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Antilock braking system	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Antilock braking system	Live Data		V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Antilock braking system	Active Test	Right Stability Control Solenoid	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Antilock braking system	Active Test	Left Stability Control Solenoid	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Antilock braking system	Active Test	Left Traction Control Solenoid	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Body Control Module / Generic Electrc	Read DTC		V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Body Control Module / Generic Electrc	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Body Control Module / Generic Electrc	Live Data		V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Fast speed	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Low speed	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Body Control Module / Generic Electrc	Active Test	Rear Wiper Relay	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Body Control Module / Generic Electrc	Active Test	Turn Lamp - Right	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Body Control Module / Generic Electrc	Active Test	Turn Lamp - Left	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Body Control Module / Generic Electrc	Active Test	Low Beam Relay	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Body Control Module / Generic Electrc	Active Test	Rear Fog Lamp Relay	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Body Control Module / Generic Electrc	Active Test	Front Fog Lamp Relay	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Instrument Cluster	Read DTC		V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Instrument Cluster	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Instrument Cluster	Live Data		V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Powertrain Control Module	Read DTC		V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Powertrain Control Module	Live Data		V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Powertrain Control Module	Active Test	Glow plug control	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Restraint Control Module	Read DTC		V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Restraint Control Module	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Restraint Control Module	Live Data		V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Remote Keyless Entry	Erase DTC		V1.20.001

MAZDA2 (Europe)	1.4L	Y4	2007 Remote Keyless Entry	Live Data		V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Vehicle Security Module	Read DTC		V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Vehicle Security Module	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.4L	Y4	2007 Vehicle Security Module	Live Data		V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Antilock braking system	Read DTC		V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Antilock braking system	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Antilock braking system	Live Data		V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Antilock braking system	Active Test	Right Traction Control Solenoid V	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Read DTC		V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Live Data		V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Fast speed	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Low speed	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Active Test	Rear Wiper Relay	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Active Test	Turn Lamp - Right	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Active Test	Turn Lamp - Left	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Active Test	Low Beam Relay	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Active Test	Rear Fog Lamp Relay	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Active Test	Front Fog Lamp Relay	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Instrument Cluster	Read DTC		V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Instrument Cluster	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Instrument Cluster	Live Data		V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Powertrain Control Module	Read DTC		V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Powertrain Control Module	Live Data		V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Restraint Control Module	Read DTC		V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Restraint Control Module	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Restraint Control Module	Live Data		V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Remote Keyless Entry	Live Data		V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Vehicle Security Module	Read DTC		V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Vehicle Security Module	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.3L	ZJ	2007 Vehicle Security Module	Live Data		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Antilock braking system	Read DTC		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Antilock braking system	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Antilock braking system	Live Data		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Antilock braking system	Active Test	Right Traction Control Solenoid V	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Body Control Module / Generic Electrc	Read DTC		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Body Control Module / Generic Electrc	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Body Control Module / Generic Electrc	Live Data		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Fast speed	V1.20.001

MAZDA2 (Europe)	1.5L	ZY	2007 Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Low speed	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Body Control Module / Generic Electrc	Active Test	Rear Wiper Relay	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Body Control Module / Generic Electrc	Active Test	Turn Lamp - Right	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Body Control Module / Generic Electrc	Active Test	Turn Lamp - Left	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Body Control Module / Generic Electrc	Active Test	Low Beam Relay	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Body Control Module / Generic Electrc	Active Test	Rear Fog Lamp Relay	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Body Control Module / Generic Electrc	Active Test	Front Fog Lamp Relay	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Instrument Cluster	Read DTC		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Instrument Cluster	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Instrument Cluster	Live Data		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Read DTC		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Live Data		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Restraint Control Module	Read DTC		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Restraint Control Module	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Restraint Control Module	Live Data		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Restraint Control Module	Active Test		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Remote Keyless Entry	Live Data		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Remote Keyless Entry	Active Test		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Vehicle Security Module	Read DTC		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Vehicle Security Module	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Vehicle Security Module	Live Data		V1.20.001
MAZDA2 (Europe)	1.5L	ZY	2007 Vehicle Security Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Antilock braking system	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Antilock braking system	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Fast speed	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Low speed	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Active Test	Rear Wiper Relay	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Active Test	Turn Lamp - Right	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Active Test	Turn Lamp - Left	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Active Test	Low Beam Relay	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Body Control Module / Generic Electrc	Active Test	Front Fog Lamp Relay	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Electronic-Controlled Power Steering	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Electronic-Controlled Power Steering	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Instrument Cluster	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Instrument Cluster	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Instrument Cluster	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Instrument Cluster	Active Test	Alarm	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Instrument Cluster	Active Test	Speedometer	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Instrument Cluster	Active Test	Tachometer	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001

DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Restraint Control Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Restraint Control Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Restraint Control Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Remote Keyless Entry	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Remote Keyless Entry	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007 Remote Keyless Entry	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Antilock braking system	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Antilock braking system	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Antilock braking system	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Body Control Module / Generic Electr	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Body Control Module / Generic Electr	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Body Control Module / Generic Electr	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Body Control Module / Generic Electr	Active Test	Front Wiper Relay - Fast speed	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Body Control Module / Generic Electr	Active Test	Front Wiper Relay - Low speed	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Body Control Module / Generic Electr	Active Test	Rear Wiper Relay	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Body Control Module / Generic Electr	Active Test	Turn Lamp - Right	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Body Control Module / Generic Electr	Active Test	Turn Lamp - Left	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Body Control Module / Generic Electr	Active Test	Low Beam Relay	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Body Control Module / Generic Electr	Active Test	Front Fog Lamp Relay	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Electronic-Controlled Power Steering	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Electronic-Controlled Power Steering	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Instrument Cluster	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Instrument Cluster	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Instrument Cluster	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Instrument Cluster	Active Test	Alarm	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Instrument Cluster	Active Test	Speedometer	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Instrument Cluster	Active Test	Tachometer	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Powertrain Control Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Powertrain Control Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Powertrain Control Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Restraint Control Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Restraint Control Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Restraint Control Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Remote Keyless Entry	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Remote Keyless Entry	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007 Remote Keyless Entry	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 4X4 Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 4X4 Control Module	Erase DTC		V1.20.001

MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Antilock braking system	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Antilock braking system	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Antilock braking system	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Antilock braking system	Active Test	Steering Angle Sensor Initializati	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Antilock braking system	Active Test	Stability Control Active Indicato	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Antilock braking system	Active Test	Right Traction Control Solenoid V	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Amplifier Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Amplifier Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Generic Electronic Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Generic Electronic Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Generic Electronic Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Headlamp Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Headlamp Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Headlamp Control Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Instrument Cluster	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Instrument Cluster	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Instrument Cluster	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Instrument Cluster	Active Test	Display Segment Check	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Intelligent Cruise Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Intelligent Cruise Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Intelligent Cruise Control Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Lighting Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Lighting Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Left Power Sliding Door Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Left Power Sliding Door Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Liftgate/Trunk Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Liftgate/Trunk Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Liftgate/Trunk Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Powertrain Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Powertrain Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Powertrain Control Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Restraint Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Restraint Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Restraint Control Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Right Power Sliding Door Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Right Power Sliding Door Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Transmission Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Transmission Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Transmission Control Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Transmission Control Module	Active Test	Shift Solenoid E	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Transmission Control Module	Active Test	C F	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Remote Keyless Entry	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Remote Keyless Entry	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Remote Keyless Entry	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Antilock braking system	Read DTC		V1.20.001

MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Antilock braking system	Erase DTC		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Antilock braking system	Live Data		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Antilock braking system	Active Test	Left Front Traction Control Prim	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Antilock braking system	Active Test	Left Front Traction Control Switc	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Antilock braking system	Active Test	Calibrate Master Cylinder Press	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Antilock braking system	Active Test	Traction control priming valve fr	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Antilock braking system	Active Test	Traction control switching valve	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Generic Electronic Module	Read DTC		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Generic Electronic Module	Erase DTC		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Generic Electronic Module	Live Data		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Instrument Cluster	Read DTC		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Instrument Cluster	Erase DTC		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Instrument Cluster	Live Data		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Read DTC		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Live Data		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Shift solenoid E/5	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Restraint Control Module	Read DTC		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Restraint Control Module	Erase DTC		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Restraint Control Module	Live Data		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Remote Keyless Entry	Live Data		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006 Remote Keyless Entry	Active Test	Super Lock	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Antilock braking system	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Antilock braking system	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Antilock braking system	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Antilock braking system	Active Test	Left Front Traction Control Prim	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Antilock braking system	Active Test	Left Front Traction Control Switc	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Antilock braking system	Active Test	Calibrate Master Cylinder Press	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Antilock braking system	Active Test	Traction control priming valve fr	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Antilock braking system	Active Test	Traction control switching valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Generic Electronic Module	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Generic Electronic Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Generic Electronic Module	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2007 Instrument Cluster	Read DTC		V1.20.001

MAZDA3 (North America / General)	2.0L	LF	2007 Restraint Control Module	Live Data		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2007 Tire Pressure Monitor	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2007 Tire Pressure Monitor	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2007 Tire Pressure Monitor	Live Data		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2007 Tire Pressure Monitor	Active Test	ID Regist Mode	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Antilock braking system	Read DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Antilock braking system	Erase DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Antilock braking system	Live Data		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Steering Angle Sensor Initializati	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Stability Control Active Indicato	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Right Traction Control Solenoid V	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Lateral Accel Sensor Initializatio	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Deployable Hood System	Read DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Deployable Hood System	Erase DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Deployable Hood System	Live Data		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Instrument Cluster	Read DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Instrument Cluster	Erase DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Instrument Cluster	Live Data		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Read DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Erase DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Live Data		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Injector 1	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Injector 2	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Injector 3	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Injector 4	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Restraint Control Module	Read DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Restraint Control Module	Erase DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Restraint Control Module	Live Data		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Retractable Hard Top	Read DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Retractable Hard Top	Erase DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Retractable Hard Top	Live Data		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Read DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Erase DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Live Data		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Outer Test	Outer Buzzer	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Antenna (Lift Gate/Trunk Lid)	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Inner Antenna 1	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Inner Antenna 2	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Inner Antenna 3	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Inner Antenna 4	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Antenna (Left Front Door)	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Antenna (Right Front Door)	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Hazard Flashers	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Antilock braking system	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Antilock braking system	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Antilock braking system	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Antilock braking system	Active Test	Steering Angle Sensor Initializati	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Antilock braking system	Active Test	Stability Control Active Indicato	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001

MX-5 (North America / General Specs.)	2.0L	LF	2009 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Antilock braking system	Active Test	Right Traction Control Solenoid V	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Instrument Cluster	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Instrument Cluster	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Instrument Cluster	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Instrument Cluster	Active Test	ID Regist Mode	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Active Test	Generator field current control c	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Restraint Control Module	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Restraint Control Module	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Restraint Control Module	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Retractable Hard Top	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Retractable Hard Top	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Retractable Hard Top	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Remote Keyless Entry	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Remote Keyless Entry	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Remote Keyless Entry	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Remote Keyless Entry	Active Test	Antenna (Lift Gate/Trunk Lid)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Remote Keyless Entry	Active Test	Inner Antenna 1	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Remote Keyless Entry	Active Test	Inner Antenna 2	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Remote Keyless Entry	Active Test	Inner Antenna 3	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Remote Keyless Entry	Active Test	Inner Antenna 4	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Remote Keyless Entry	Active Test	Antenna (Left Front Door)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Remote Keyless Entry	Active Test	Antenna (Right Front Door)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Remote Keyless Entry	Active Test	Hazard Flashers	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2009 Remote Keyless Entry	Active Test	Two Stage Unlocking	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Electronic-Controlled Power Steering	Read DTC		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Electronic-Controlled Power Steering	Live Data		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Electronic-Controlled Power Steering	Active Test	Torque Sensor Calibration Comr	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Instrument Cluster	Read DTC		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Instrument Cluster	Erase DTC		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Instrument Cluster	Live Data		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Lighting Control Module	Read DTC		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Lighting Control Module	Erase DTC		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Read DTC		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Erase DTC		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Live Data		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Active Test	Electronic Throttle Control Desir	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Active Test	Generator field current control c	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Active Test	intake air shutter valve	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Active Test	secondary air injection pump rel	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Active Test	port air bypass control solenoid	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Active Test	Fuel pump resistor relay	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Active Test	Auxiliary Port Valve	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Active Test	Dynamic Effect Intake	V1.20.001

RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Active Test	Secondary Port Shutter Valve	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Active Test	Oil Control Valve Close Mode	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Active Test	Electromagnetic Metering Oil Pt	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Powertrain Control Module	Active Test	Electromagnetic Metering Oil Pt	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Restraint Control Module	Read DTC	Electromagnetic Metering Oil Pt	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Restraint Control Module	Erase DTC		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Restraint Control Module	Live Data		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Steering Angle Sensor Module	Read DTC		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Steering Angle Sensor Module	Erase DTC		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power F	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Remote Keyless Entry	Read DTC		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Remote Keyless Entry	Erase DTC		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008 Remote Keyless Entry	Live Data		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Electronic-Controlled Power Steering	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Electronic-Controlled Power Steering	Live Data		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Electronic-Controlled Power Steering	Active Test	Torque Sensor Calibration Comr	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Instrument Cluster	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Instrument Cluster	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Instrument Cluster	Live Data		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Lighting Control Module	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Lighting Control Module	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Lighting Control Module	Live Data		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Live Data		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Active Test	Electronic Throttle Control Desir	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Active Test	Generator field current control c	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Active Test	intake air shutter valve	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Active Test	secondary air injection pump rel	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Active Test	port air bypass control solenoid	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Active Test	Fuel pump resistor relay	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Active Test	Auxiliary Port Valve	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Active Test	Dynamic Effect Intake	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Active Test	Secondary Port Shutter Valve	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Active Test	Oil Control Valve Close Mode	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Active Test	Electromagnetic Metering Oil Pt	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Powertrain Control Module	Active Test	Electromagnetic Metering Oil Pt	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Restraint Control Module	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Restraint Control Module	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Restraint Control Module	Live Data		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Steering Angle Sensor Module	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Steering Angle Sensor Module	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Transmission Control Module	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Transmission Control Module	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Transmission Control Module	Live Data		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Transmission Control Module	Active Test	Shift Solenoid E	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Transmission Control Module	Active Test	C F	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Transmission Control Module	Active Test	Shift Solenoid G	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Tire Pressure Monitor	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Tire Pressure Monitor	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Tire Pressure Monitor	Live Data		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Tire Pressure Monitor	Active Test	ID Regist Mode	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Remote Keyless Entry	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Remote Keyless Entry	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2009 Remote Keyless Entry	Live Data		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2008 Antilock braking system	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2008 Antilock braking system	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2008 Antilock braking system	Live Data		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2008 Antilock braking system	Active Test	Steering Angle Sensor Initializati	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2008 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF				
MX-5 (Europe / General Specs.)	2.0L	LF				
MX-5 (Europe / General Specs.)	2.0L	LF				
MX-5 (Europe / General Specs.)	2.0L	LF				
MX-5 (Europe / General Specs.)	2.0L	LF				

MX-5 (Europe / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Stability Control Active Indicator	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Right Traction Control Solenoid V	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Deployable Hood System	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Deployable Hood System	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Deployable Hood System	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Instrument Cluster	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Instrument Cluster	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Instrument Cluster	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Instrument Cluster	Active Test	ID Regist Mode	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Restraint Control Module	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Restraint Control Module	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Restraint Control Module	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Retractable Hard Top	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Retractable Hard Top	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Retractable Hard Top	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Super Lock	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Antenna (Lift Gate/Trunk Lid)	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Inner Antenna 1	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Inner Antenna 2	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Inner Antenna 3	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Inner Antenna 4	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Antenna (Left Front Door)	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Antenna (Right Front Door)	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Hazard Flashers	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Transmission Control Module	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Transmission Control Module	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Transmission Control Module	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Transmission Control Module	Active Test	C F	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Transmission Control Module	Active Test	Shift Solenoid G	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2008 Transmission Control Module	Active Test	Shift Solenoid E	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 4X4 Control Module	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 4X4 Control Module	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 Left High Intensity Discharge Lamp	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 Left High Intensity Discharge Lamp	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 Left High Intensity Discharge Lamp	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 Left High Intensity Discharge Lamp	Active Test	Headlamp Position	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 Left High Intensity Discharge Lamp	Active Test	Calibrate Front and Rear Axle Le	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 Right High Intensity Discharge Lamp	Read DTC		V1.20.001

MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Restraint Control Module	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Right High Intensity Discharge Lamp	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Right High Intensity Discharge Lamp	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Right High Intensity Discharge Lamp	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Remote Keyless Entry	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Remote Keyless Entry	Active Test	Super Lock	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Transmission Control Module	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Transmission Control Module	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Transmission Control Module	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Transmission Control Module	Active Test	High Clutch Solenoid	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Transmission Control Module	Active Test	N-Shift Timing Solenoid	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Transmission Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Transmission Control Module	Active Test	Reduction Timing Solenoid	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005 Transmission Control Module	Active Test	2-4 Brake Solenoid	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 4X4 Control Module	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 4X4 Control Module	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front DSC Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Traction Control Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Stability Control Active Indicato	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front DSC Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Traction Control Valh	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Traction Control Off Indicator	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Generic Electronic Module	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Generic Electronic Module	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Generic Electronic Module	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Instrument Cluster	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Instrument Cluster	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Lighting Control Module	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Lighting Control Module	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Left High Intensity Discharge Lamp	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Left High Intensity Discharge Lamp	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Left High Intensity Discharge Lamp	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Left High Intensity Discharge Lamp	Active Test	Headlamp Position	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Left High Intensity Discharge Lamp	Active Test	Calibrate Front and Rear Axle Le	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Powertrain Control Module	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Powertrain Control Module	Active Test	Rich-to-lean delayed time	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005 Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001

MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Restraint Control Module	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Right High Intensity Discharge Lamp	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Right High Intensity Discharge Lamp	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Right High Intensity Discharge Lamp	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Remote Keyless Entry	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Super Lock	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Transmission Control Module	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Transmission Control Module	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Transmission Control Module	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Transmission Control Module	Active Test	High Clutch Solenoid	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Transmission Control Module	Active Test	N-Shift Timing Solenoid	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Transmission Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Transmission Control Module	Active Test	Reduction Timing Solenoid	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005 Transmission Control Module	Active Test	2-4 Brake Solenoid	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front DSC Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Traction Control Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Stability Control Active Indicator	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front DSC Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Traction Control Val	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Traction Control Off Indicator	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Fuel Fired Coolant Heating Module	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Fuel Fired Coolant Heating Module	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Fuel Fired Coolant Heating Module	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Fuel Fired Coolant Heating Module	Active Test	FUEL_PRIMEŞI	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Fuel Fired Coolant Heating Module	Active Test	CLR_LOCKOUTŞI	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Instrument Cluster	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Instrument Cluster	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Left High Intensity Discharge Lamp	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Left High Intensity Discharge Lamp	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Left High Intensity Discharge Lamp	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Left High Intensity Discharge Lamp	Active Test	Headlamp Position	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Left High Intensity Discharge Lamp	Active Test	Calibrate Front and Rear Axle Le	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Restraint Control Module	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Right High Intensity Discharge Lamp	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Right High Intensity Discharge Lamp	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Right High Intensity Discharge Lamp	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2002 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front DSC Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Traction Control Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001

MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2004 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2004 Powertrain Control Module	Active Test	Glow plug lamp	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2004 Powertrain Control Module	Active Test	intake air shutter valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2004 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2004 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2004 Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2004 Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2004 Restraint Control Module	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2004 Right High Intensity Discharge Lamp	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2004 Right High Intensity Discharge Lamp	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2004 Right High Intensity Discharge Lamp	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front DSC Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Traction Control Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Stability Control Active Indicator	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front DSC Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power F	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Traction Control Valv	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Traction Control Off Indicator	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Fuel Fired Coolant Heating Module	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Fuel Fired Coolant Heating Module	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Fuel Fired Coolant Heating Module	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Fuel Fired Coolant Heating Module	Active Test	FUEL_PRIMEŞİ	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Fuel Fired Coolant Heating Module	Active Test	CLR_LOCKOUTŞİ	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Generic Electronic Module	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Generic Electronic Module	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Generic Electronic Module	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Instrument Cluster	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Instrument Cluster	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Lighting Control Module	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Lighting Control Module	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Left High Intensity Discharge Lamp	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Left High Intensity Discharge Lamp	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Left High Intensity Discharge Lamp	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Left High Intensity Discharge Lamp	Active Test	Headlamp Position	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Left High Intensity Discharge Lamp	Active Test	Calibrate Front and Rear Axle Le	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Powertrain Control Module	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Powertrain Control Module	Active Test	variable boost control solenoid	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Powertrain Control Module	Active Test	Glow plug lamp	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Powertrain Control Module	Active Test	Glow plug control	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Powertrain Control Module	Active Test	Electronic Throttle Control Desir	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Restraint Control Module	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Right High Intensity Discharge Lamp	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Right High Intensity Discharge Lamp	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Right High Intensity Discharge Lamp	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Remote Keyless Entry	Live Data		V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Remote Keyless Entry	Active Test	Super Lock	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MAZDA6 (EURO STG3/4 and General)	2.0L	RF_T	2005 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2002 4X4 Control Module	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2002 4X4 Control Module	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2002 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2002 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2002 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front DSC Valve	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Traction Control Valve	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Stability Control Active Indicator	V1.20.001

ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Injector 4	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Intake air shutter valve	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Injector 2	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Injector 3	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Injector 1	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Restraint Control Module	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Restraint Control Module	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Restraint Control Module	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Right High Intensity Discharge Lamp	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Right High Intensity Discharge Lamp	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Right High Intensity Discharge Lamp	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Remote Keyless Entry	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Remote Keyless Entry	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Remote Keyless Entry	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Transmission Control Module	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Transmission Control Module	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Transmission Control Module	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Transmission Control Module	Active Test	2-4 Brake Solenoid	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Transmission Control Module	Active Test	High Clutch Solenoid	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Transmission Control Module	Active Test	N-Shift Timing Solenoid	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Transmission Control Module	Active Test	Reduction Timing Solenoid	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Transmission Control Module	Active Test	shift solenoid E/5	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3	2005 Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 4X4 Control Module	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 4X4 Control Module	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front DSC Valve	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Traction Control Valve	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Stability Control Active Indicator	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front DSC Valve	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	AntiLock braking system Power F	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Lateral Accel Sensor Initialization	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Traction Control Valv	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Traction Control Off Indicator	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Generic Electronic Module	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Generic Electronic Module	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Generic Electronic Module	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Instrument Cluster	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Instrument Cluster	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Instrument Cluster	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Lighting Control Module	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Lighting Control Module	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Left High Intensity Discharge Lamp	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Left High Intensity Discharge Lamp	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Left High Intensity Discharge Lamp	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Left High Intensity Discharge Lamp	Active Test	Headlamp Position	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Left High Intensity Discharge Lamp	Active Test	Calibrate Front and Rear Axle Le	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Powertrain Control Module	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Powertrain Control Module	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Powertrain Control Module	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Powertrain Control Module	Active Test	Generator field current control c	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.3L	L3_T	2005 Powertrain Control Module	Active Test	Desired RPM	V1.20.001

ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Left High Intensity Discharge Lamp	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Left High Intensity Discharge Lamp	Active Test	Headlamp Position	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Left High Intensity Discharge Lamp	Active Test	Calibrate Front and Rear Axle Le	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Generator field current control c	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Injector 4	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Active Test	intake air shutter valve	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Injector 2	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Injector 3	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Injector 1	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Restraint Control Module	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Restraint Control Module	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Restraint Control Module	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Right High Intensity Discharge Lamp	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Right High Intensity Discharge Lamp	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Right High Intensity Discharge Lamp	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Remote Keyless Entry	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Remote Keyless Entry	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Remote Keyless Entry	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Transmission Control Module	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Transmission Control Module	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Transmission Control Module	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Transmission Control Module	Active Test	Shift Solenoid E/5	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2005 Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Traction Control Off Indicator	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Air Conditioning	Read DTC		V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Air Conditioning	Erase DTC		V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Read DTC		V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Erase DTC		V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Live Data		V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Active Test	Fuel Pulse Width #2	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Active Test	Intake Manifold Communication	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Active Test	Generator field current control c	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Active Test	Barometric pressure/Exhaust G	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Active Test	Injector 5	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Active Test	Injector 6	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Transmission Control Module	Read DTC		V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Transmission Control Module	Erase DTC		V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Transmission Control Module	Live Data		V1.20.001
MPV (JPN/General)	3.0L	AJ	2004 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001

AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Generator field current control c	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Injector 4	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Injector 2	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Injector 3	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Injector 1	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Restraint Control Module	Read DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Restraint Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Restraint Control Module	Live Data		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Remote Keyless Entry	Read DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Remote Keyless Entry	Erase DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Remote Keyless Entry	Live Data		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Transmission Control Module	Read DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Transmission Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Transmission Control Module	Live Data		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Transmission Control Module	Active Test	shift solenoid E/5	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Read DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Erase DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Live Data		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Lateral Accel Sensor Initializati	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Left Front Traction Control Prim	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Left Front Traction Control Switc	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Calibrate Master Cylinder Pressu	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Traction control priming valve fr	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Traction control switching valve	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Longitudinal Acceleration Senso	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Generic Electronic Module	Read DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Generic Electronic Module	Erase DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Generic Electronic Module	Live Data		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Instrument Cluster	Read DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Instrument Cluster	Erase DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Instrument Cluster	Live Data		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Read DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Live Data		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Generator field current control c	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Injector 4	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Injector 2	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Injector 3	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Injector 1	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Restraint Control Module	Read DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Restraint Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006 Restraint Control Module	Live Data		V1.20.001

AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Electronic-Controlled Power Steering	Live Data		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Generic Electronic Module	Read DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Generic Electronic Module	Erase DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Generic Electronic Module	Live Data		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Instrument Cluster	Read DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Instrument Cluster	Erase DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Instrument Cluster	Live Data		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Read DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Live Data		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	1-2 Shift Solenoid	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	2-3 Shift Solenoid	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	3-2 Timing Solenoid	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	3-4 Shift Solenoid	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Injector 4	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Injector 2	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Injector 3	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Injector 1	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Restraint Control Module	Read DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Restraint Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Restraint Control Module	Live Data		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Read DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Erase DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Live Data		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Transmission Control Module	Read DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Transmission Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Transmission Control Module	Live Data		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	shift solenoid E/5	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Antilock braking system	Read DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Antilock braking system	Erase DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Antilock braking system	Live Data		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Antilock braking system	Active Test	Left Front Traction Control Prim	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Antilock braking system	Active Test	Left Front Traction Control Switc	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Antilock braking system	Active Test	Calibrate Master Cylinder Pressi	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Antilock braking system	Active Test	Traction control priming valve fr	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Antilock braking system	Active Test	Traction control switching valve	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Electronic-Controlled Power Steering	Read DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Electronic-Controlled Power Steering	Live Data		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Generic Electronic Module	Read DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Generic Electronic Module	Erase DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Generic Electronic Module	Live Data		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Instrument Cluster	Read DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 Instrument Cluster	Erase DTC		V1.20.001

AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2006 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2006 Restraint Control Module	Read DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2006 Restraint Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2006 Restraint Control Module	Live Data		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2006 Remote Keyless Entry	Read DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2006 Remote Keyless Entry	Erase DTC		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2006 Remote Keyless Entry	Live Data		V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2006 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2006 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2006 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2006 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Antilock braking system	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Antilock braking system	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Antilock braking system	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Antilock braking system	Active Test	Left Front Traction Control Prim	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Antilock braking system	Active Test	Left Front Traction Control Switc	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Antilock braking system	Active Test	Calibrate Master Cylinder Press	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Antilock braking system	Active Test	Traction control priming valve fr	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Antilock braking system	Active Test	Traction control switching valve V	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Generic Electronic Module	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Generic Electronic Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Generic Electronic Module	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Instrument Cluster	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Instrument Cluster	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Instrument Cluster	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	actual valve timing	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	Generator field current control r	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Restraint Control Module	Read DTC	Camshaft Position Commanded	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Restraint Control Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Restraint Control Module	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Tire Pressure Monitor	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Tire Pressure Monitor	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2004 Tire Pressure Monitor	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Antilock braking system	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Antilock braking system	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Antilock braking system	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Antilock braking system	Active Test	Left Front Traction Control Prim	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Antilock braking system	Active Test	Left Front Traction Control Switc	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Antilock braking system	Active Test	Calibrate Master Cylinder Press	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Antilock braking system	Active Test	Traction control priming valve fr	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Antilock braking system	Active Test	Traction control switching valve	V1.20.001

MAZDA3 (North America / General)	2.3L	L3	2005 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Generic Electronic Module	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Generic Electronic Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Generic Electronic Module	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Instrument Cluster	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Instrument Cluster	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Instrument Cluster	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	actual valve timing	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Restraint Control Module	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Restraint Control Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Restraint Control Module	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Tire Pressure Monitor	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Tire Pressure Monitor	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2005 Tire Pressure Monitor	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Antilock braking system	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Antilock braking system	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Antilock braking system	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Antilock braking system	Active Test	Left Front Traction Control Prim	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Antilock braking system	Active Test	Left Front Traction Control Swit	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Antilock braking system	Active Test	Calibrate Master Cylinder Press	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Antilock braking system	Active Test	Traction control priming valve fr	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Antilock braking system	Active Test	Traction control switching valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Generic Electronic Module	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Generic Electronic Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Generic Electronic Module	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Instrument Cluster	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Instrument Cluster	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Instrument Cluster	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Restraint Control Module	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Restraint Control Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Restraint Control Module	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Remote Keyless Entry	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Transmission Control Module	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Transmission Control Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Transmission Control Module	Live Data		V1.20.001
MAZDA3 (North America / General)	2.3L	L3	2006 Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001

MAZDA3 (North America / General)	2.0L	LF	2006 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Antilock braking system	Active Test	Traction control priming valve fr	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Antilock braking system	Active Test	Traction control switching valve	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Generic Electronic Module	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Generic Electronic Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Generic Electronic Module	Live Data		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Instrument Cluster	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Instrument Cluster	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Instrument Cluster	Live Data		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Restraint Control Module	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Restraint Control Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Restraint Control Module	Live Data		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Remote Keyless Entry	Live Data		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Tire Pressure Monitor	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Tire Pressure Monitor	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Tire Pressure Monitor	Live Data		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Read DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Live Data		V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA3 (North America / General)	2.0L	LF	2006 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Antilock braking system	Read DTC		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Antilock braking system	Erase DTC		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Antilock braking system	Live Data		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Antilock braking system	Active Test	Left Front Traction Control Prim	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Antilock braking system	Active Test	Left Front Traction Control Switc	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Antilock braking system	Active Test	Calibrate Master Cylinder Pressi	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Antilock braking system	Active Test	Traction control priming valve fr	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Antilock braking system	Active Test	Traction control switching valve	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Generic Electronic Module	Read DTC		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Generic Electronic Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Generic Electronic Module	Live Data		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Instrument Cluster	Read DTC		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Instrument Cluster	Erase DTC		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Instrument Cluster	Live Data		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Read DTC		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Live Data		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Fuel pump	V1.20.001

MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Restraint Control Module	Read DTC		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Restraint Control Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Restraint Control Module	Live Data		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Remote Keyless Entry	Live Data		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Tire Pressure Monitor	Read DTC		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Tire Pressure Monitor	Erase DTC		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2006 Tire Pressure Monitor	Live Data		V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Antilock braking system	Read DTC		V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Antilock braking system	Erase DTC		V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Antilock braking system	Live Data		V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Generic Electronic Module	Read DTC		V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Generic Electronic Module	Erase DTC		V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Generic Electronic Module	Live Data		V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Instrument Cluster	Read DTC		V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Instrument Cluster	Erase DTC		V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Instrument Cluster	Live Data		V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Read DTC		V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Live Data		V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Restraint Control Module	Read DTC		V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Restraint Control Module	Erase DTC		V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Restraint Control Module	Live Data		V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Remote Keyless Entry	Erase DTC		V1.20.001

MAZDA3 (China / General)	2.0L	LF	2007 Remote Keyless Entry	Live Data		V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
MAZDA3 (China / General)	2.0L	LF	2007 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Antilock braking system	Read DTC		V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Antilock braking system	Erase DTC		V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Antilock braking system	Live Data		V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Generic Electronic Module	Read DTC		V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Generic Electronic Module	Erase DTC		V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Generic Electronic Module	Live Data		V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Instrument Cluster	Read DTC		V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Instrument Cluster	Erase DTC		V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Instrument Cluster	Live Data		V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Read DTC		V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Live Data		V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Ser	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Restraint Control Module	Read DTC		V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Restraint Control Module	Erase DTC		V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Restraint Control Module	Live Data		V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Remote Keyless Entry	Live Data		V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
MAZDA3 (China / General)	1.6L	Z6	2007 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Air Conditioning	Read DTC		V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Air Conditioning	Erase DTC		V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Cruise Control	Read DTC		V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Cruise Control	Erase DTC		V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Powertrain Control Module	Read DTC		V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Powertrain Control Module	Erase DTC		V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Powertrain Control Module	Live Data		V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Powertrain Control Module	Active Test	Fuel Pulse Width #2	V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Powertrain Control Module	Active Test	Intake Manifold Communication	V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MPV (North America / General)	3.0L	AJ	2005 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Ser	V1.20.001

TITAN DASH	2.0L	RF_T	2004	Powertrain Control Module	Live Data		V1.20.001
TITAN DASH	2.0L	RF_T	2004	Powertrain Control Module	Active Test	Warm Up Solenoid	V1.20.001
TITAN DASH	2.0L	RF_T	2004	Powertrain Control Module	Active Test	Glow plug lamp	V1.20.001
TITAN DASH	2.0L	RF_T	2004	Powertrain Control Module	Active Test	Exhaust Gas Recirculation solenoid	V1.20.001
TITAN DASH	2.0L	RF_T	2004	Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solenoid	V1.20.001
TITAN DASH	2.0L	RF_T	2004	Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solenoid	V1.20.001
TITAN DASH	2.0L	RF_T	2004	Powertrain Control Module	Active Test	Glow plug control	V1.20.001
TITAN DASH	2.0L	RF_T	2004	Powertrain Control Module	Active Test	Torque Converter Clutch Control	V1.20.001
TITAN DASH	2.0L	RF_T	2004	Powertrain Control Module	Active Test	Air conditioning compressor cycle	V1.20.001
TITAN DASH	2.0L	RF_T	2004	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
TITAN DASH	2.0L	RF_T	2004	Transmission Control Module	Read DTC		V1.20.001
TITAN DASH	2.0L	RF_T	2004	Transmission Control Module	Erase DTC		V1.20.001
TITAN DASH	2.0L	RF_T	2004	Transmission Control Module	Live Data		V1.20.001
TITAN DASH	2.0L	RF_T	2004	Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
TITAN DASH	2.0L	RF_T	2004	Transmission Control Module	Active Test	C F	V1.20.001
TITAN DASH	2.0L	RF_T	2004	Transmission Control Module	Active Test	Torque Converter Clutch Control	V1.20.001
TITAN DASH	2.0L	RF_T	2004	Transmission Control Module	Active Test	Transmission Fluid Temperature	V1.20.001
TITAN DASH	2.0L	RF_T	2004	Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
TITAN DASH	2.0L	RF_T	2004	Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
TITAN DASH	2.0L	RF_T	2004	Transmission Control Module	Active Test	Electronic Pressure Control solenoid	V1.20.001
TITAN DASH	2.0L	RF_T	2004,5	Powertrain Control Module	Read DTC		V1.20.001
TITAN DASH	2.0L	RF_T	2004,5	Powertrain Control Module	Erase DTC		V1.20.001
TITAN DASH	2.0L	RF_T	2004,5	Powertrain Control Module	Live Data		V1.20.001
TITAN DASH	2.0L	RF_T	2004,5	Powertrain Control Module	Active Test	Warm Up Solenoid	V1.20.001
TITAN DASH	2.0L	RF_T	2004,5	Powertrain Control Module	Active Test	Glow plug lamp	V1.20.001
TITAN DASH	2.0L	RF_T	2004,5	Powertrain Control Module	Active Test	Exhaust Gas Recirculation solenoid	V1.20.001
TITAN DASH	2.0L	RF_T	2004,5	Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solenoid	V1.20.001
TITAN DASH	2.0L	RF_T	2004,5	Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solenoid	V1.20.001
TITAN DASH	2.0L	RF_T	2004,5	Powertrain Control Module	Active Test	Glow plug control	V1.20.001
TITAN DASH	2.0L	RF_T	2004,5	Powertrain Control Module	Active Test	Electronic Throttle Control Desired	V1.20.001
TITAN DASH	2.0L	RF_T	2004,5	Powertrain Control Module	Active Test	Air conditioning compressor cycle	V1.20.001
TITAN DASH	2.0L	RF_T	2004,5	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
TITAN DASH	2.0L	RF_T	2004,5	Transmission Control Module	Read DTC		V1.20.001
TITAN DASH	2.0L	RF_T	2004,5	Transmission Control Module	Erase DTC		V1.20.001
TITAN DASH	2.0L	RF_T	2004,5	Transmission Control Module	Live Data		V1.20.001
TITAN DASH	2.0L	RF_T	2004,5	Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
TITAN DASH	2.0L	RF_T	2004,5	Transmission Control Module	Active Test	C F	V1.20.001
TITAN DASH	2.0L	RF_T	2004,5	Transmission Control Module	Active Test	Torque Converter Clutch Control	V1.20.001
TITAN DASH	2.0L	RF_T	2004,5	Transmission Control Module	Active Test	Transmission Fluid Temperature	V1.20.001
TITAN DASH	2.0L	RF_T	2004,5	Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
TITAN DASH	2.0L	RF_T	2004,5	Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
TITAN DASH	2.0L	RF_T	2004,5	Transmission Control Module	Active Test	Electronic Pressure Control solenoid	V1.20.001
TITAN DASH	2.0L	RF_T	2004,5	Transmission Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Antilock braking system	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Antilock braking system	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Antilock braking system	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Antilock braking system	Active Test	Longitudinal Acceleration Sensor	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Antilock braking system	Active Test	Traction control priming valve front	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Antilock braking system	Active Test	Calibrate Master Cylinder Pressure	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Antilock braking system	Active Test	Left Front Traction Control Switch	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Antilock braking system	Active Test	Traction control switching valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Antilock braking system	Active Test	Left Front Traction Control Primary	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Antilock braking system	Active Test	Yaw Rate Sensor Initialization Status	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Electronic Automatic Temperature Control	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Electronic Automatic Temperature Control	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Electronic Automatic Temperature Control	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Electronic Automatic Temperature Control	Active Test	Air Mix Actuator	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Electronic Automatic Temperature Control	Active Test	REC/FRESH Switch	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Electronic Automatic Temperature Control	Active Test	Information Display	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Electronic Automatic Temperature Control	Active Test	Blower Motor	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Electronic Automatic Temperature Control	Active Test	Airflow Mode Actuator	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Electronic-Controlled Power Steering	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Electronic-Controlled Power Steering	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Generic Electronic Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Generic Electronic Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Generic Electronic Module	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Instrument Cluster	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Instrument Cluster	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Instrument Cluster	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Powertrain Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Powertrain Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Powertrain Control Module	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Powertrain Control Module	Active Test	Generator field current control	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Powertrain Control Module	Active Test	Air conditioning compressor cycle	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Powertrain Control Module	Active Test	Evaporative Emission Canister Purge	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005	Powertrain Control Module	Active Test	Fuel pump	V1.20.001

PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Powertrain Control Module	Active Test	Injector 4	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Powertrain Control Module	Active Test	Injector 2	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Powertrain Control Module	Active Test	Injector 3	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Powertrain Control Module	Active Test	Injector 1	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Restraint Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Restraint Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Restraint Control Module	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Remote Keyless Entry	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Remote Keyless Entry	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Remote Keyless Entry	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Antilock braking system	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Antilock braking system	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Antilock braking system	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Longitudinal Acceleration Senso	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Traction control priming valve fr	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Calibrate Master Cylinder Pressi	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Left Front Traction Control Switc	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Traction control switching valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Left Front Traction Control Prim	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Electronic Automatic Temperature Cor	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Electronic Automatic Temperature Cor	Active Test	Information Display	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Electronic-Controlled Power Steering	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Electronic-Controlled Power Steering	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Generic Electronic Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Generic Electronic Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Generic Electronic Module	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Instrument Cluster	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Instrument Cluster	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Instrument Cluster	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Left Power Sliding Door Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Left Power Sliding Door Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Left Power Sliding Door Module	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Powertrain Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Powertrain Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Powertrain Control Module	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Generator field current control r	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Restraint Control Module	Read DTC		V1.20.001

PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Restraint Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Restraint Control Module	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Remote Keyless Entry	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Remote Keyless Entry	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Remote Keyless Entry	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Right Power Sliding Door Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Right Power Sliding Door Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Right Power Sliding Door Module	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Transmission Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Transmission Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Transmission Control Module	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Transmission Control Module	Active Test	shift solenoid E/5	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 4X4 Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 4X4 Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Longitudinal Acceleration Senso	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Traction control priming valve fr	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Calibrate Master Cylinder Pressu	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Left Front Traction Control Switc	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Traction control switching valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Left Front Traction Control Prim	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Electronic Automatic Temperature Cor	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Electronic-Controlled Power Steering	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Electronic-Controlled Power Steering	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Generic Electronic Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Generic Electronic Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Generic Electronic Module	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Instrument Cluster	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Instrument Cluster	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Instrument Cluster	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Injector 4	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	1-2 Shift Solenoid	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	2-3 Shift Solenoid	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	3-2 Timing Solenoid	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	3-4 Shift Solenoid	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Injector 2	V1.20.001

PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Injector 3	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Injector 1	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Restraint Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Restraint Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Restraint Control Module	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 4X4 Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 4X4 Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Antilock braking system	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Antilock braking system	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Antilock braking system	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Longitudinal Acceleration Senso	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Traction control priming valve fr	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Calibrate Master Cylinder Pressu	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Left Front Traction Control Switc	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Traction control switching valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Left Front Traction Control Prim	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Electronic Automatic Temperature Cor	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Electronic-Controlled Power Steering	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Electronic-Controlled Power Steering	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Generic Electronic Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Generic Electronic Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Generic Electronic Module	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Instrument Cluster	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Instrument Cluster	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Instrument Cluster	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Left Power Sliding Door Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Left Power Sliding Door Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Left Power Sliding Door Module	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Injector 4	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Injector 2	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Injector 3	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Injector 1	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Restraint Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Restraint Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Restraint Control Module	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001

PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Right Power Sliding Door Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Right Power Sliding Door Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Right Power Sliding Door Module	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Transmission Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Transmission Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Transmission Control Module	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	Shift Solenoid E/5	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 4X4 Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 4X4 Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Antilock braking system	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Antilock braking system	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Antilock braking system	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Longitudinal Acceleration Senso	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Traction control priming valve fr	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Calibrate Master Cylinder Pressi	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Left Front Traction Control Switc	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Traction control switching valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Left Front Traction Control Prim	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	Information Display	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Electronic-Controlled Power Steering	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Electronic-Controlled Power Steering	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Generic Electronic Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Generic Electronic Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Generic Electronic Module	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Instrument Cluster	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Instrument Cluster	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Instrument Cluster	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Left Power Sliding Door Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Left Power Sliding Door Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Left Power Sliding Door Module	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Rich-to-lean delayed time	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	1-2 Shift Solenoid	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	2-3 Shift Solenoid	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	3-2 Timing Solenoid	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	3-4 Shift Solenoid	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Restraint Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Restraint Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Restraint Control Module	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Erase DTC		V1.20.001

PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Right Power Sliding Door Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Right Power Sliding Door Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Right Power Sliding Door Module	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Transmission Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Transmission Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Transmission Control Module	Live Data		V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Transmission Control Module	Active Test	shift solenoid E/5	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2007 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Antilock braking system	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Antilock braking system	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Antilock braking system	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Antilock braking system	Active Test	Left Front Traction Control Prim	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Antilock braking system	Active Test	Left Front Traction Control Switc	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Antilock braking system	Active Test	Traction control priming valve fr	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Antilock braking system	Active Test	Traction control switching valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Antilock braking system	Active Test	Calibrate Master Cylinder Pressi	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Electronic Automatic Temperature Cor	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Electronic Automatic Temperature Cor	Active Test	Information Display	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Generic Electronic Module	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Generic Electronic Module	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Generic Electronic Module	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Instrument Cluster	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Instrument Cluster	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Instrument Cluster	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Restraint Control Module	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Restraint Control Module	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Restraint Control Module	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Tire Pressure Monitor	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Tire Pressure Monitor	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2006 Tire Pressure Monitor	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Antilock braking system	Read DTC		V1.20.001

MAZDA5 (North America Specs.)	2.3L	L3	2007 Antilock braking system	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Antilock braking system	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Left Front Traction Control Prim	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Left Front Traction Control Switc	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Traction control priming valve fr	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Traction control switching valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Antilock braking system	Active Test	Calibrate Master Cylinder Press	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Electronic Automatic Temperature Cor	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Electronic Automatic Temperature Cor	Active Test	Information Display	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Generic Electronic Module	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Generic Electronic Module	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Generic Electronic Module	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Instrument Cluster	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Instrument Cluster	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Instrument Cluster	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Inject Gas Recirculation valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Restraint Control Module	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Restraint Control Module	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Restraint Control Module	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Tire Pressure Monitor	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Tire Pressure Monitor	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2007 Tire Pressure Monitor	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Antilock braking system	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Antilock braking system	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Antilock braking system	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Antilock braking system	Active Test	Steering Angle Sensor Initializat	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Antilock braking system	Active Test	Stability Control Active Indicato	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Antilock braking system	Active Test	Right Stability Control Solenoid	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Deployable Hood System	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Deployable Hood System	Erase DTC		V1.20.001

MX-5 (Europe / General Specs.)	1.8L	L8	2005 Deployable Hood System	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Instrument Cluster	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Instrument Cluster	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Instrument Cluster	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Instrument Cluster	Active Test	ID Regist Mode	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Powertrain Control Module	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Powertrain Control Module	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Powertrain Control Module	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Restraint Control Module	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Restraint Control Module	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Restraint Control Module	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Retractable Hard Top	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Retractable Hard Top	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Retractable Hard Top	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Remote Keyless Entry	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Remote Keyless Entry	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Remote Keyless Entry	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Remote Keyless Entry	Active Test	Super Lock	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Remote Keyless Entry	Active Test	Antenna (Lift Gate/Trunk Lid)	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Remote Keyless Entry	Active Test	Inner Antenna 1	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Remote Keyless Entry	Active Test	Inner Antenna 2	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Remote Keyless Entry	Active Test	Inner Antenna 3	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Remote Keyless Entry	Active Test	Inner Antenna 4	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Remote Keyless Entry	Active Test	Antenna (Left Front Door)	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Remote Keyless Entry	Active Test	Antenna (Right Front Door)	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Remote Keyless Entry	Active Test	Hazard Flashers	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Transmission Control Module	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2005 Transmission Control Module	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Antilock braking system	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Antilock braking system	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Antilock braking system	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Steering Angle Sensor Initializat	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Stability Control Active Indicator	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Right Traction Control Solenoid V	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Deployable Hood System	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Deployable Hood System	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Deployable Hood System	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Instrument Cluster	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Instrument Cluster	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Instrument Cluster	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Instrument Cluster	Active Test	ID Regist Mode	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001

MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Restraint Control Module	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Restraint Control Module	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Restraint Control Module	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Retractable Hard Top	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Retractable Hard Top	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Retractable Hard Top	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Super Lock	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Antenna (Lift Gate/Trunk Lid)	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Inner Antenna 1	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Inner Antenna 2	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Inner Antenna 3	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Inner Antenna 4	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Antenna (Left Front Door)	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Antenna (Right Front Door)	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Hazard Flashers	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Transmission Control Module	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Transmission Control Module	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Transmission Control Module	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Transmission Control Module	Active Test	Shift Solenoid E	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Transmission Control Module	Active Test	C F	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Transmission Control Module	Active Test	Shift Solenoid G	V1.20.001
MX-5 (Europe / General Specs.)	2.0L	LF	2005 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Read DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Erase DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Live Data		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Steering Angle Sensor Initializati	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Stability Control Active Indicator	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Right Traction Control Solenoid V	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Deployable Hood System	Read DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Deployable Hood System	Erase DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Deployable Hood System	Live Data		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Instrument Cluster	Read DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Instrument Cluster	Erase DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Instrument Cluster	Live Data		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Read DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Erase DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Live Data		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Injector 4	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Injector 2	V1.20.001

ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Injector 3	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Injector 1	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Restraint Control Module	Read DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Restraint Control Module	Erase DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Restraint Control Module	Live Data		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Retractable Hard Top	Read DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Retractable Hard Top	Erase DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Retractable Hard Top	Live Data		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Read DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Erase DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Live Data		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Antenna (Lift Gate/Trunk Lid)	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Inner Antenna 1	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Inner Antenna 2	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Inner Antenna 3	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Inner Antenna 4	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Antenna (Left Front Door)	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Antenna (Right Front Door)	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Remote Keyless Entry	Active Test	Hazard Flashers	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Transmission Control Module	Read DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Transmission Control Module	Erase DTC		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Transmission Control Module	Live Data		V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Transmission Control Module	Active Test	Shift Solenoid E	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Transmission Control Module	Active Test	C F	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Transmission Control Module	Active Test	Shift Solenoid G	V1.20.001
ROADSTER / MX-5 (Japan / General Specs.)	2.0L	LF	2005 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Antilock braking system	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Antilock braking system	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Antilock braking system	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Steering Angle Sensor Initializati	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Stability Control Active Indicato	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Right Stability Control Solenoid	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Instrument Cluster	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Instrument Cluster	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Instrument Cluster	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Instrument Cluster	Active Test	ID Regist Mode	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001

MX-5 (North America / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Restraint Control Module	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Restraint Control Module	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Restraint Control Module	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Antenna (Lift Gate/Trunk Lid)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Inner Antenna 1	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Inner Antenna 2	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Inner Antenna 3	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Inner Antenna 4	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Antenna (Left Front Door)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Antenna (Right Front Door)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Hazard Flashers	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Remote Keyless Entry	Active Test	Two Stage Unlocking	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Transmission Control Module	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Transmission Control Module	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Transmission Control Module	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	Shift Solenoid E	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	C F	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	Shift Solenoid G	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2006 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Antilock braking system	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Antilock braking system	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Antilock braking system	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Steering Angle Sensor Initializati	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Left Stability Control Active Indicator	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Right Traction Control Solenoid V	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Instrument Cluster	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Instrument Cluster	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Instrument Cluster	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Instrument Cluster	Active Test	ID Regist Mode	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Generator field current control r	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Restraint Control Module	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Restraint Control Module	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Restraint Control Module	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Retractable Hard Top	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Retractable Hard Top	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Retractable Hard Top	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Erase DTC		V1.20.001

MX-5 (North America / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Active Test	Antenna (Lift Gate/Trunk Lid)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Active Test	Inner Antenna 1	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Active Test	Inner Antenna 2	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Active Test	Inner Antenna 3	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Active Test	Inner Antenna 4	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Active Test	Antenna (Left Front Door)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Active Test	Antenna (Right Front Door)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Active Test	Hazard Flashers	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Remote Keyless Entry	Active Test	Two Stage Unlocking	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Transmission Control Module	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Transmission Control Module	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Transmission Control Module	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Transmission Control Module	Active Test	Shift Solenoid E	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Transmission Control Module	Active Test	C F	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Transmission Control Module	Active Test	Shift Solenoid G	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2007 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Antilock braking system	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Antilock braking system	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Antilock braking system	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Steering Angle Sensor Initializati	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Stability Control Active Indicato	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Right Traction Control Solenoid V	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Instrument Cluster	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Instrument Cluster	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Instrument Cluster	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Instrument Cluster	Active Test	ID Regist Mode	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Generator field current control v	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Restraint Control Module	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Restraint Control Module	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Restraint Control Module	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Retractable Hard Top	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Retractable Hard Top	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Retractable Hard Top	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001

MX-5 (North America / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Antenna (Lift Gate/Trunk Lid)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Inner Antenna 1	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Inner Antenna 2	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Inner Antenna 3	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Inner Antenna 4	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Antenna (Left Front Door)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Antenna (Right Front Door)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Hazard Flashers	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Remote Keyless Entry	Active Test	Two Stage Unlocking	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Transmission Control Module	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Transmission Control Module	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Transmission Control Module	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Transmission Control Module	Active Test	Shift Solenoid E	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Transmission Control Module	Active Test	C F	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Transmission Control Module	Active Test	Shift Solenoid G	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2008 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Antilock braking system	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Antilock braking system	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Antilock braking system	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Antilock braking system	Active Test	Steering Angle Sensor Initializati	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Antilock braking system	Active Test	Stability Control Active Indicato	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Antilock braking system	Active Test	Right Stability Control Solenoid	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Instrument Cluster	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Instrument Cluster	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Instrument Cluster	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Instrument Cluster	Active Test	ID Regist Mode	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Restraint Control Module	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Restraint Control Module	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Restraint Control Module	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Retractable Hard Top	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Retractable Hard Top	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Retractable Hard Top	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Remote Keyless Entry	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Remote Keyless Entry	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Remote Keyless Entry	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Remote Keyless Entry	Active Test	Antenna (Lift Gate/Trunk Lid)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Remote Keyless Entry	Active Test	Inner Antenna 1	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Remote Keyless Entry	Active Test	Inner Antenna 2	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Remote Keyless Entry	Active Test	Inner Antenna 3	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	2010 Remote Keyless Entry	Active Test	Inner Antenna 4	V1.20.001

RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Lateral Accel Sensor Initializatio	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front DSC Valve	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Traction Control Valv	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front DSC Valve	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Traction Control Val	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Steering Angle Sensor Initializati	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Electronic-Controlled Power Steering	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Electronic-Controlled Power Steering	Live Data		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Electronic-Controlled Power Steering	Active Test	Torque Sensor Calibration Compr	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Instrument Cluster	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Instrument Cluster	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Instrument Cluster	Live Data		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Powertrain Control Module	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Powertrain Control Module	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Powertrain Control Module	Live Data		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Powertrain Control Module	Active Test	Dynamic Effect Intake	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Powertrain Control Module	Active Test	Metering Oil Pump Position	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Powertrain Control Module	Active Test	Electronic Throttle Control Desir	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Powertrain Control Module	Active Test	Fuel pump resistor relay	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Powertrain Control Module	Active Test	Secondary Port Shutter Valve	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Powertrain Control Module	Active Test	secondary air injection pump rel	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Powertrain Control Module	Active Test	port air bypass control solenoid	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Restraint Control Module	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Restraint Control Module	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Restraint Control Module	Live Data		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Remote Keyless Entry	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Remote Keyless Entry	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Remote Keyless Entry	Live Data		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Steering Angle Sensor Module	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Steering Angle Sensor Module	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Steering Angle Sensor Module	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Transmission Control Module	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Transmission Control Module	Live Data		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Transmission Control Module	Active Test	Low and Reverse Brake Duty Sol	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Transmission Control Module	Active Test	High Clutch Solenoid	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Transmission Control Module	Active Test	Torque Converter Clutch Control	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Transmission Control Module	Active Test	2-4 Brake Solenoid	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Transmission Control Module	Active Test	Electronic Pressure Control sole	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Transmission Control Module	Active Test	Low Clutch Solenoid	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Tire Pressure Monitor	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Tire Pressure Monitor	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B-MSP Stand	2005 Tire Pressure Monitor	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 4X4 Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 4X4 Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Antilock braking system	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Antilock braking system	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Antilock braking system	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Antilock braking system	Active Test	Steering Angle Sensor Initializati	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Antilock braking system	Active Test	Stability Control Active Indicato	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Antilock braking system	Active Test	Right Traction Control Solenoid V	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Antilock braking system	Active Test	Lateral Accel Sensor Initializatio	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Amplifier Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Amplifier Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Generic Electronic Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Generic Electronic Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Generic Electronic Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Headlamp Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Headlamp Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Headlamp Control Module	Live Data		V1.20.001

MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Instrument Cluster	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Instrument Cluster	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Instrument Cluster	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Instrument Cluster	Active Test	Display Segment Check	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Intelligent Cruise Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Intelligent Cruise Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Intelligent Cruise Control Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Lighting Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Lighting Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Left Power Sliding Door Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Left Power Sliding Door Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Liftgate/Trunk Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Liftgate/Trunk Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Liftgate/Trunk Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Powertrain Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Powertrain Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Powertrain Control Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Restraint Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Restraint Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Restraint Control Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Right Power Sliding Door Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Right Power Sliding Door Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Transmission Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Transmission Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Transmission Control Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Transmission Control Module	Active Test	Shift Solenoid E	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Transmission Control Module	Active Test	C F	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Remote Keyless Entry	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Remote Keyless Entry	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Remote Keyless Entry	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Electronic-Controlled Power Steering	Read DTC		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Electronic-Controlled Power Steering	Live Data		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Electronic-Controlled Power Steering	Active Test	Torque Sensor Calibration Comr	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Instrument Cluster	Read DTC		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Instrument Cluster	Erase DTC		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Instrument Cluster	Live Data		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Powertrain Control Module	Read DTC		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Powertrain Control Module	Erase DTC		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Powertrain Control Module	Live Data		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Ser	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Powertrain Control Module	Active Test	secondary air injection pump rel	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Powertrain Control Module	Active Test	Electronic Throttle Control Desir	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Powertrain Control Module	Active Test	Fuel pump resistor relay	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Powertrain Control Module	Active Test	Metering Oil Pump Position	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Powertrain Control Module	Active Test	port air bypass control solenoid	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Powertrain Control Module	Active Test	Secondary Port Shutter Valve	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Powertrain Control Module	Active Test	Dynamic Effect Intake	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Powertrain Control Module	Active Test	Auxiliary Port Valve	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Powertrain Control Module	Active Test	intake air shutter valve	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-	2003 Restraint Control Module	Read DTC		V1.20.001

RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Stand	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Lateral Accel Sensor Initialization	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Stand	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Stand	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front DSC Valve	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Stand	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Traction Control Valve	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Stand	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front DSC Valve	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Stand	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Traction Control Val	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Stand	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Steering Angle Sensor Initializati	V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Stand	2003 Remote Keyless Entry	Read DTC		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Stand	2003 Remote Keyless Entry	Erase DTC		V1.20.001
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Stand	2003 Remote Keyless Entry	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 4X4 Control Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 4X4 Control Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Antilock braking system	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Antilock braking system	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Antilock braking system	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Antilock braking system	Active Test	Steering Angle Sensor Initializati	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Antilock braking system	Active Test	Stability Control Active Indicato	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Antilock braking system	Active Test	Right Stability Control Solenoid	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Audio Control Unit	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Audio Control Unit	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Amplifier Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Amplifier Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Blind Spot Monitoring (Left)	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Blind Spot Monitoring (Left)	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Blind Spot Monitoring (Right)	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Blind Spot Monitoring (Right)	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Electronic Automatic Temperature Cor	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Electronic Automatic Temperature Cor	Active Test	Information Display	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Generic Electronic Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Generic Electronic Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Instrument Cluster	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Instrument Cluster	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Instrument Cluster	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Instrument Cluster	Active Test	Alarm	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Instrument Cluster	Active Test	Speedometer	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Instrument Cluster	Active Test	Tachometer	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Lighting Control Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Lighting Control Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Multi-Information Display	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Multi-Information Display	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Multi-Information Display	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Powertrain Control Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Powertrain Control Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Powertrain Control Module	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Powertrain Control Module	Active Test	Injector 2	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Powertrain Control Module	Active Test	Injector 3	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Powertrain Control Module	Active Test	Injector 4	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001

CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Restraint Control Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Restraint Control Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Restraint Control Module	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Remote Keyless Entry	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Remote Keyless Entry	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Remote Keyless Entry	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Transmission Control Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Transmission Control Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Transmission Control Module	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Transmission Control Module	Active Test	Shift Solenoid E	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Transmission Control Module	Active Test	C F	V1.20.001
CX-7 (North America / General Specs.)	2.3L	L3_T	2010 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 4X4 Control Module	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 4X4 Control Module	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Steering Angle Sensor Initializati	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Stability Control Active Indicato	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Right Traction Control Solenoid V	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Amplifier Module	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Amplifier Module	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Electronic Automatic Temperature Cor	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Electronic Automatic Temperature Cor	Active Test	Information Display	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Generic Electronic Module	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Generic Electronic Module	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Generic Electronic Module	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Instrument Cluster	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Instrument Cluster	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Instrument Cluster	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Intelligent Cruise Control Module	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Intelligent Cruise Control Module	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Intelligent Cruise Control Module	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Lighting Control Module	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Lighting Control Module	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Generator field current control r	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Rich-to-lean delayed time	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Injector 4	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Injector 2	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Variable Fan Duty Cycle 1	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Injector 3	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001

CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Restraint Control Module	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Restraint Control Module	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Restraint Control Module	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Remote Keyless Entry	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Remote Keyless Entry	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Remote Keyless Entry	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Transmission Control Module	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Transmission Control Module	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Transmission Control Module	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Transmission Control Module	Active Test	Torque Converter Clutch Control	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Transmission Control Module	Active Test	Shift Solenoid E	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 Transmission Control Module	Active Test	C F	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 4X4 Control Module	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 4X4 Control Module	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Antilock braking system	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Antilock braking system	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Antilock braking system	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Antilock braking system	Active Test	Steering Angle Sensor Initializati	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Antilock braking system	Active Test	Stability Control Active Indicato	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Antilock braking system	Active Test	Right Traction Control Solenoid V	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Audio Control Unit	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Audio Control Unit	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Amplifier Module	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Amplifier Module	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Active Test	Information Display	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Generic Electronic Module	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Generic Electronic Module	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Instrument Cluster	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Instrument Cluster	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Instrument Cluster	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Instrument Cluster	Active Test	Alarm	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Instrument Cluster	Active Test	Speedometer	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Instrument Cluster	Active Test	Tachometer	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Intelligent Cruise Control Module	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Intelligent Cruise Control Module	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Lighting Control Module	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Lighting Control Module	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Multi-Information Display	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Multi-Information Display	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Multi-Information Display	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Powertrain Control Module	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Powertrain Control Module	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Powertrain Control Module	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Powertrain Control Module	Active Test	Injector 2	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Powertrain Control Module	Active Test	Injector 3	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Powertrain Control Module	Active Test	Injector 4	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Powertrain Control Module	Active Test	Fuel pump	V1.20.001

CX-7 (Japan / General Specs.)	2.5L	L5	2009 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Restraint Control Module	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Restraint Control Module	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Restraint Control Module	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Remote Keyless Entry	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Remote Keyless Entry	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Remote Keyless Entry	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Rear Vehicle Monitoring	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Rear Vehicle Monitoring	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Rear Vehicle Monitoring	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Transmission Control Module	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Transmission Control Module	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Transmission Control Module	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Transmission Control Module	Active Test	shift solenoid E/5	V1.20.001
CX-7 (Japan / General Specs.)	2.5L	L5	2009 Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 4X4 Control Module	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 4X4 Control Module	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Steering Angle Sensor Initializati	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Stability Control Active Indicato	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Right Traction Control Solenoid V	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Audio Control Unit	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Audio Control Unit	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Amplifier Module	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Amplifier Module	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Electronic Automatic Temperature Cor	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Electronic Automatic Temperature Cor	Active Test	Information Display	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Generic Electronic Module	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Generic Electronic Module	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Instrument Cluster	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Instrument Cluster	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Instrument Cluster	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Instrument Cluster	Active Test	Alarm	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Instrument Cluster	Active Test	Speedometer	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Instrument Cluster	Active Test	Tachometer	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Intelligent Cruise Control Module	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Intelligent Cruise Control Module	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Lighting Control Module	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Lighting Control Module	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Multi-Information Display	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Multi-Information Display	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Multi-Information Display	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Injector 2	V1.20.001

CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Injector 3	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Injector 4	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Restraint Control Module	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Restraint Control Module	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Restraint Control Module	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Rear Vehicle Monitoring	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Rear Vehicle Monitoring	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Rear Vehicle Monitoring	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Read DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Erase DTC		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Live Data		V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Active Test	Shift Solenoid E	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Active Test	C F	V1.20.001
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 4X4 Control Module	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 4X4 Control Module	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Steering Angle Sensor Initializati	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Stability Control Active Indicato	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Right Stability Control Solenoid	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Audio Control Unit	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Audio Control Unit	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Amplifier Module	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Amplifier Module	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Electronic Automatic Temperature Cor	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Generic Electronic Module	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Generic Electronic Module	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Instrument Cluster	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Instrument Cluster	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Instrument Cluster	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Instrument Cluster	Active Test	Alarm	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Instrument Cluster	Active Test	Speedometer	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Instrument Cluster	Active Test	Tachometer	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Lighting Control Module	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Lighting Control Module	Erase DTC		V1.20.001

CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Multi-Information Display	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Multi-Information Display	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Multi-Information Display	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Injector 2	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Injector 3	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Injector 4	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Restraint Control Module	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Restraint Control Module	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Restraint Control Module	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Rear Vehicle Monitoring	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Rear Vehicle Monitoring	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Rear Vehicle Monitoring	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Active Test	Shift Solenoid E	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Active Test	C F	V1.20.001
CX-7 (Europe / General Specs.)	2.3L	L3_T	2009 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 4X4 Control Module	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 4X4 Control Module	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Antilock braking system	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Antilock braking system	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Antilock braking system	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Antilock braking system	Active Test	Steering Angle Sensor Initializati	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Antilock braking system	Active Test	Stability Control Active Indicator	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Antilock braking system	Active Test	Right Stability Control Solenoid	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Audio Control Unit	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Audio Control Unit	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Amplifier Module	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Amplifier Module	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Electronic Automatic Temperature Cor	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Electronic-Controlled Power Steering	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Electronic-Controlled Power Steering	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Fuel Fired Coolant Heating Module	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Fuel Fired Coolant Heating Module	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Fuel Fired Coolant Heating Module	Live Data		V1.20.001

CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Generic Electronic Module	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Generic Electronic Module	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Instrument Cluster	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Instrument Cluster	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Instrument Cluster	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Instrument Cluster	Active Test	Alarm	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Instrument Cluster	Active Test	Speedometer	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Instrument Cluster	Active Test	Tachometer	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Lighting Control Module	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Lighting Control Module	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Multi-Information Display	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Multi-Information Display	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Multi-Information Display	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Powertrain Control Module	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Powertrain Control Module	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Powertrain Control Module	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Powertrain Control Module	Active Test	Glow plug control	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Powertrain Control Module	Active Test	Injector 2	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Powertrain Control Module	Active Test	Injector 3	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Powertrain Control Module	Active Test	Injector 4	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Powertrain Control Module	Active Test	Intake Shatter Valve Control De	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Powertrain Control Module	Active Test	Glow plug lamp	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Powertrain Control Module	Active Test	variable boost control solenoid	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Coole	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Restraint Control Module	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Restraint Control Module	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Restraint Control Module	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Remote Keyless Entry	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Remote Keyless Entry	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Remote Keyless Entry	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Rear Vehicle Monitoring	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Rear Vehicle Monitoring	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Rear Vehicle Monitoring	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Selective Catalytic Reduction	Read DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Selective Catalytic Reduction	Erase DTC		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Selective Catalytic Reduction	Live Data		V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Selective Catalytic Reduction	Active Test	Urea Reverting Valve	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Selective Catalytic Reduction	Active Test	Urea Pump Heater	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Selective Catalytic Reduction	Active Test	Urea Tank Heater	V1.20.001
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009 Selective Catalytic Reduction	Active Test	Urea Hose Heater	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Antilock braking system	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Antilock braking system	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Antilock braking system	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Antilock braking system	Active Test	ALL Inertial Sensors Initialization	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Antilock braking system	Active Test	Antilock braking system Power F	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Antilock braking system	Active Test	Right Stability Control Solenoid '1	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Antilock braking system	Active Test	Right Traction Control Solenoid '1	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Audio Control Unit	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Audio Control Unit	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Amplifier Module	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Amplifier Module	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Blind Spot Monitoring (Left)	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Blind Spot Monitoring (Left)	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Blind Spot Monitoring (Right)	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Blind Spot Monitoring (Right)	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001

CX-9 (North America / General Specs.)	3.7L	CA	2010 Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Driver's Seat Module	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Driver's Seat Module	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Driver's Seat Module	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Generic Electronic Module	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Generic Electronic Module	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Generic Electronic Module	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Instrument Cluster	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Instrument Cluster	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Instrument Cluster	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Instrument Cluster	Active Test	ID Regist Mode	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Lighting Control Module	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Lighting Control Module	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Lighting Control Module	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Liftgate/Trunk Module	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Liftgate/Trunk Module	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Liftgate/Trunk Module	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Powertrain Control Module	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Powertrain Control Module	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Powertrain Control Module	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Powertrain Control Module	Active Test	Evaporative Emission Vapor Mai	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Restraint Control Module	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Restraint Control Module	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Restraint Control Module	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Remote Keyless Entry	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Remote Keyless Entry	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Remote Keyless Entry	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Transmission Control Module	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Transmission Control Module	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Transmission Control Module	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Transmission Control Module	Active Test	Shift Solenoid E	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 Transmission Control Module	Active Test	C F	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 4X4 Control Module	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA	2010 4X4 Control Module	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Antilock braking system	Read DTC		V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Antilock braking system	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Antilock braking system	Live Data		V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Antilock braking system	Active Test	Right Stability Control Solenoid	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Antilock braking system	Active Test	Left Stability Control Solenoid	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Antilock braking system	Active Test	Left Traction Control Solenoid	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Body Control Module / Generic Electrc	Read DTC		V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Body Control Module / Generic Electrc	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Body Control Module / Generic Electrc	Live Data		V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Fast speed	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Low speed	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Body Control Module / Generic Electrc	Active Test	Rear Wiper Relay	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Body Control Module / Generic Electrc	Active Test	Turn Lamp - Right	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Body Control Module / Generic Electrc	Active Test	Turn Lamp - Left	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Body Control Module / Generic Electrc	Active Test	Low Beam Relay	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Body Control Module / Generic Electrc	Active Test	Rear Fog Lamp Relay	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Body Control Module / Generic Electrc	Active Test	Front Fog Lamp Relay	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Instrument Cluster	Read DTC		V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Instrument Cluster	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Instrument Cluster	Live Data		V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Powertrain Control Module	Read DTC		V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Powertrain Control Module	Live Data		V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Restraint Control Module	Read DTC		V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Restraint Control Module	Erase DTC		V1.20.001

MAZDA2 (Europe)	1.6L	Y6	2008 Restraint Control Module	Live Data		V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Remote Keyless Entry	Live Data		V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Vehicle Security Module	Read DTC		V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Vehicle Security Module	Erase DTC		V1.20.001
MAZDA2 (Europe)	1.6L	Y6	2008 Vehicle Security Module	Live Data		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Antilock braking system	Read DTC		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Antilock braking system	Erase DTC		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Antilock braking system	Live Data		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Antilock braking system	Active Test	Left Linear Control Solenoid Valve	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Antilock braking system	Active Test	Right Linear Control Solenoid Valve	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Body Control Module / Generic Electrc	Read DTC		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Body Control Module / Generic Electrc	Erase DTC		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Body Control Module / Generic Electrc	Live Data		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Live Data		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Instrument Cluster	Read DTC		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Instrument Cluster	Live Data		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Instrument Cluster	Active Test	Engine Coolant Temperature Gauge	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Instrument Cluster	Active Test	All Liquid Crystal Display Segment	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Lighting Control Module	Read DTC		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Lighting Control Module	Erase DTC		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Powertrain Control Module	Live Data		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Powertrain Control Module	Active Test	Air conditioning compressor cycle	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connector)	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister Purge	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sensor	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sensor	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Restraint Control Module	Live Data		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Remote Keyless Entry	Live Data		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Transmission Control Module	Read DTC		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Transmission Control Module	Erase DTC		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Transmission Control Module	Live Data		V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Transmission Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA6 (China)	2.0L	LF	2007 Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Antilock braking system	Read DTC		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Antilock braking system	Erase DTC		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Antilock braking system	Live Data		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001

MAZDA6 (China)	2.5L	L5	2007 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Antilock braking system	Active Test	Left Linear Control Solenoid Valve	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Antilock braking system	Active Test	Right Linear Control Solenoid Valve	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Body Control Module / Generic Electric	Read DTC		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Body Control Module / Generic Electric	Erase DTC		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Body Control Module / Generic Electric	Live Data		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Electronic Automatic Temperature Control	Read DTC		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Electronic Automatic Temperature Control	Erase DTC		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Electronic Automatic Temperature Control	Live Data		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Electronic Automatic Temperature Control	Active Test	Air Mix Actuator	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Electronic Automatic Temperature Control	Active Test	REC/FRESH Switch	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Electronic Automatic Temperature Control	Active Test	Blower Motor	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Electronic Automatic Temperature Control	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Electronic Automatic Temperature Control	Active Test	Information Display	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Instrument Cluster	Read DTC		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Instrument Cluster	Live Data		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Instrument Cluster	Active Test	Engine Coolant Temperature Gauge	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Instrument Cluster	Active Test	All Liquid Crystal Display Segment	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Lighting Control Module	Read DTC		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Lighting Control Module	Erase DTC		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Powertrain Control Module	Live Data		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Powertrain Control Module	Active Test	Air conditioning compressor cycle	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connector)	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Powertrain Control Module	Active Test	Rich-to-lean delayed time	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister Purge	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sensor	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sensor	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Powertrain Control Module	Active Test	Intake air shutter valve	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Restraint Control Module	Live Data		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Remote Keyless Entry	Live Data		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Transmission Control Module	Read DTC		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Transmission Control Module	Erase DTC		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Transmission Control Module	Live Data		V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Transmission Control Module	Active Test	Shift Solenoid E/5	V1.20.001
MAZDA6 (China)	2.5L	L5	2007 Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Antilock braking system	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Antilock braking system	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Antilock braking system	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Antilock braking system	Active Test	Left Linear Control Solenoid Valve	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Antilock braking system	Active Test	Right Linear Control Solenoid Valve	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Body Control Module / Generic Electric	Read DTC		V1.20.001

MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Body Control Module / Generic Electrc	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Body Control Module / Generic Electrc	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Electronic Automatic Temperature Cor	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Fuel Fired Coolant Heating Module	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Fuel Fired Coolant Heating Module	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Fuel Fired Coolant Heating Module	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Instrument Cluster	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Instrument Cluster	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Lighting Control Module	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Lighting Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Powertrain Control Module	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Powertrain Control Module	Active Test	Glow plug control	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Powertrain Control Module	Active Test	Intake Shatter Valve Control De	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Powertrain Control Module	Active Test	Glow plug lamp	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Powertrain Control Module	Active Test	variable boost control solenoid	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Coole	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Restraint Control Module	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Remote Keyless Entry	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Rear Vehicle Monitoring	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Rear Vehicle Monitoring	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Rear Vehicle Monitoring	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Transmission Control Module	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2007 Transmission Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Antilock braking system	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Antilock braking system	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Antilock braking system	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Antilock braking system	Active Test	Left Linear Control Solenoid Vah	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Antilock braking system	Active Test	Right Linear Control Solenoid Va	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Body Control Module / Generic Electrc	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Body Control Module / Generic Electrc	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Body Control Module / Generic Electrc	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Electronic Automatic Temperature Cor	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Fuel Fired Coolant Heating Module	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Fuel Fired Coolant Heating Module	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Fuel Fired Coolant Heating Module	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Instrument Cluster	Read DTC		V1.20.001

MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Instrument Cluster	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Lighting Control Module	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Lighting Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Restraint Control Module	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Remote Keyless Entry	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Rear Vehicle Monitoring	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Rear Vehicle Monitoring	Erase DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Rear Vehicle Monitoring	Live Data		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Transmission Control Module	Read DTC		V1.20.001
MAZDA6 (GH, Before Facelift)	2.2L	R2_T	2008 Transmission Control Module	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 4X4 Control Module	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 4X4 Control Module	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Antilock braking system	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Antilock braking system	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Antilock braking system	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Antilock braking system	Active Test	Left Linear Control Solenoid Vah	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Antilock braking system	Active Test	Right Linear Control Solenoid Va	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Body Control Module / Generic Electrc	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Body Control Module / Generic Electrc	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Body Control Module / Generic Electrc	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Electronic Automatic Temperature Cor	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Electronic-Controlled Power Steering	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Electronic-Controlled Power Steering	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Instrument Cluster	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Instrument Cluster	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Instrument Cluster	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Instrument Cluster	Active Test	Speedometer	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Instrument Cluster	Active Test	Tachometer	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Instrument Cluster	Active Test	Alarm	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Intelligent Cruise Control Module	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Intelligent Cruise Control Module	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Intelligent Cruise Control Module	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Lighting Control Module	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Lighting Control Module	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Motor Pretensioner Module	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Motor Pretensioner Module	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Motor Pretensioner Module	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Motor Pretensioner Module	Active Test	Passenger Seatbelt Pretensioner	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Motor Pretensioner Module	Active Test	Drivers Seatbelt Pretensioner	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Powertrain Control Module	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Powertrain Control Module	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Powertrain Control Module	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001

ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Powertrain Control Module	Active Test	Camshaft Position Comanded	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Powertrain Control Module	Active Test	intake air shutter valve	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Restraint Control Module	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Restraint Control Module	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Restraint Control Module	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Remote Keyless Entry	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Remote Keyless Entry	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Remote Keyless Entry	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Rear Vehicle Monitoring	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Rear Vehicle Monitoring	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Rear Vehicle Monitoring	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Transmission Control Module	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Transmission Control Module	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Transmission Control Module	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Transmission Control Module	Active Test	shift solenoid E/5	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007 Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Antilock braking system	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Antilock braking system	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Antilock braking system	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Antilock braking system	Active Test	Left Linear Control Solenoid Va	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Antilock braking system	Active Test	Right Linear Control Solenoid Va	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Body Control Module / Generic Electrc	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Body Control Module / Generic Electrc	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Body Control Module / Generic Electrc	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Electronic-Controlled Power Steering	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Electronic-Controlled Power Steering	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Instrument Cluster	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Instrument Cluster	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Instrument Cluster	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Instrument Cluster	Active Test	Speedometer	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Instrument Cluster	Active Test	Tachometer	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Instrument Cluster	Active Test	Alarm	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Intelligent Cruise Control Module	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Intelligent Cruise Control Module	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Intelligent Cruise Control Module	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Lighting Control Module	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Lighting Control Module	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Motor Pretensioner Module	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Motor Pretensioner Module	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Motor Pretensioner Module	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Motor Pretensioner Module	Active Test	Passenger Seatbelt Pretensioner	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Motor Pretensioner Module	Active Test	Drivers Seatbelt Pretensioner	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Powertrain Control Module	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Powertrain Control Module	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Powertrain Control Module	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001

ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Restraint Control Module	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Restraint Control Module	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Restraint Control Module	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Remote Keyless Entry	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Remote Keyless Entry	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Remote Keyless Entry	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Rear Vehicle Monitoring	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Rear Vehicle Monitoring	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Rear Vehicle Monitoring	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Transmission Control Module	Read DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Transmission Control Module	Erase DTC		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Transmission Control Module	Live Data		V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Transmission Control Module	Active Test	shift solenoid E/5	V1.20.001
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007 Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Antilock braking system	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Antilock braking system	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Antilock braking system	Live Data		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Antilock braking system	Active Test	Left Linear Control Solenoid Va	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Antilock braking system	Active Test	Right Linear Control Solenoid Va	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Body Control Module / Generic Electrc	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Body Control Module / Generic Electrc	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Body Control Module / Generic Electrc	Live Data		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Live Data		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Active Test	Information Display	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Active Test	Rear Vent Actuator	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Active Test	Rear Fan	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Instrument Cluster	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Instrument Cluster	Live Data		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Lighting Control Module	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Lighting Control Module	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Lighting Control Module	Live Data		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Powertrain Control Module	Live Data		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001

MAZDA6 (Middle East / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Restraint Control Module	Live Data		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Remote Keyless Entry	Live Data		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Transmission Control Module	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Transmission Control Module	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Transmission Control Module	Live Data		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Transmission Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2009 Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Antilock braking system	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Antilock braking system	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Antilock braking system	Live Data		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Antilock braking system	Active Test	Left Linear Control Solenoid Va	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Antilock braking system	Active Test	Right Linear Control Solenoid Va	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Body Control Module / Generic Electrc	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Body Control Module / Generic Electrc	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Body Control Module / Generic Electrc	Live Data		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Electronic Automatic Temperature Cor	Live Data		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Electronic Automatic Temperature Cor	Active Test	Information Display	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Electronic Automatic Temperature Cor	Active Test	Rear Vent Actuator	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Electronic Automatic Temperature Cor	Active Test	Rear Fan	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Instrument Cluster	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Instrument Cluster	Live Data		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Lighting Control Module	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Lighting Control Module	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Lighting Control Module	Live Data		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Powertrain Control Module	Live Data		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Desired RPM	V1.20.001

MAZDA6 (Middle East / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Injector 5	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Injector 6	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Desired Intake Camshaft Positio	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Restraint Control Module	Live Data		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Remote Keyless Entry	Live Data		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Transmission Control Module	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Transmission Control Module	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Transmission Control Module	Live Data		V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Transmission Control Module	Active Test	Shift Solenoid E	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Transmission Control Module	Active Test	C F	V1.20.001
MAZDA6 (Middle East / General)	3.7L	CA	2010 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Antilock braking system	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Antilock braking system	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Antilock braking system	Live Data		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Antilock braking system	Active Test	Left Linear Control Solenoid Vah	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Antilock braking system	Active Test	Right Linear Control Solenoid Va	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Body Control Module / Generic Electrc	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Body Control Module / Generic Electrc	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Body Control Module / Generic Electrc	Live Data		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Live Data		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Active Test	Rear Vent Actuator	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Active Test	Rear Fan	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Instrument Cluster	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Instrument Cluster	Live Data		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Lighting Control Module	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Lighting Control Module	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Lighting Control Module	Live Data		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Powertrain Control Module	Live Data		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Ser	V1.20.001

MAZDA6 (Middle East / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Restraint Control Module	Live Data		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Remote Keyless Entry	Live Data		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Transmission Control Module	Read DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Transmission Control Module	Erase DTC		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Transmission Control Module	Live Data		V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Transmission Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA6 (Middle East / General)	2.5L	L5	2010 Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Antilock braking system	Read DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Antilock braking system	Erase DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Antilock braking system	Live Data		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Antilock braking system	Active Test	Left Linear Control Solenoid Vah	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Antilock braking system	Active Test	Right Linear Control Solenoid Va	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Body Control Module / Generic Electrc	Read DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Body Control Module / Generic Electrc	Erase DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Body Control Module / Generic Electrc	Live Data		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Live Data		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Instrument Cluster	Read DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Instrument Cluster	Live Data		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Lighting Control Module	Read DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Lighting Control Module	Erase DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Lighting Control Module	Live Data		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Powertrain Control Module	Live Data		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Generator field current control	V1.20.001

MAZDA6 (North America / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Restraint Control Module	Live Data		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Remote Keyless Entry	Live Data		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Transmission Control Module	Read DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Transmission Control Module	Erase DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Transmission Control Module	Live Data		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Transmission Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2009 Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Antilock braking system	Read DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Antilock braking system	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Antilock braking system	Live Data		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Antilock braking system	Active Test	Left Linear Control Solenoid Vah	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Antilock braking system	Active Test	Right Linear Control Solenoid Va	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Body Control Module / Generic Electrc	Read DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Body Control Module / Generic Electrc	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Body Control Module / Generic Electrc	Live Data		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Electronic Automatic Temperature Cor	Live Data		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Instrument Cluster	Read DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Instrument Cluster	Live Data		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Lighting Control Module	Read DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Lighting Control Module	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Lighting Control Module	Live Data		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Powertrain Control Module	Live Data		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Injector 5	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Injector 6	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Powertrain Control Module	Active Test	Desired Intake Camshaft Positio	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Restraint Control Module	Live Data		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Remote Keyless Entry	Read DTC		V1.20.001

MAZDA6 (North America / General)	3.7L	CA	2010 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Remote Keyless Entry	Live Data		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Transmission Control Module	Read DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Transmission Control Module	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Transmission Control Module	Live Data		V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Transmission Control Module	Active Test	Shift Solenoid E	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Transmission Control Module	Active Test	C F	V1.20.001
MAZDA6 (North America / General)	3.7L	CA	2010 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Antilock braking system	Read DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Antilock braking system	Erase DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Antilock braking system	Live Data		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Antilock braking system	Active Test	Left Linear Control Solenoid Vah	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Antilock braking system	Active Test	Right Linear Control Solenoid Va	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Body Control Module / Generic Electrc	Read DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Body Control Module / Generic Electrc	Erase DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Body Control Module / Generic Electrc	Live Data		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Live Data		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Instrument Cluster	Read DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Instrument Cluster	Live Data		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Lighting Control Module	Read DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Lighting Control Module	Erase DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Lighting Control Module	Live Data		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Powertrain Control Module	Live Data		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Restraint Control Module	Live Data		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Restraint Control Module	Active Test		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Remote Keyless Entry	Live Data		V1.20.001

MAZDA6 (North America / General)	2.5L	L5	2010 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Transmission Control Module	Read DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Transmission Control Module	Erase DTC		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Transmission Control Module	Live Data		V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Transmission Control Module	Active Test	Shift Solenoid E/5	V1.20.001
MAZDA6 (North America / General)	2.5L	L5	2010 Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Antilock braking system	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Antilock braking system	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Antilock braking system	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Antilock braking system	Active Test	Left Front Traction Control Prim	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Antilock braking system	Active Test	Left Front Traction Control Switc	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Antilock braking system	Active Test	Traction control priming valve fr	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Antilock braking system	Active Test	Traction control switching valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Antilock braking system	Active Test	Calibrate Master Cylinder Pressi	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Electronic Automatic Temperature Cor	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Generic Electronic Module	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Generic Electronic Module	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Generic Electronic Module	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Instrument Cluster	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Instrument Cluster	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Instrument Cluster	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Powertrain Control Module	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Powertrain Control Module	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Restraint Control Module	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Restraint Control Module	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Restraint Control Module	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Transmission Control Module	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Transmission Control Module	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Transmission Control Module	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Transmission Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Tire Pressure Monitor	Read DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Tire Pressure Monitor	Erase DTC		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Tire Pressure Monitor	Live Data		V1.20.001
MAZDA5 (North America Specs.)	2.3L	L3	2010 Tire Pressure Monitor	Active Test	ID Regist Mode	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 4X4 Control Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 4X4 Control Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Antilock braking system	Read DTC		V1.20.001

CX-7 (North America / General Specs.)	2.5L	L5	2010 Antilock braking system	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Antilock braking system	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Antilock braking system	Active Test	Steering Angle Sensor Initializati	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Antilock braking system	Active Test	Stability Control Active Indicator	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Antilock braking system	Active Test	Right Traction Control Solenoid V	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Audio Control Unit	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Audio Control Unit	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Amplifier Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Amplifier Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Blind Spot Monitoring (Left)	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Blind Spot Monitoring (Left)	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Blind Spot Monitoring (Right)	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Blind Spot Monitoring (Right)	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Active Test	Information Display	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Generic Electronic Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Generic Electronic Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Instrument Cluster	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Instrument Cluster	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Instrument Cluster	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Instrument Cluster	Active Test	Alarm	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Instrument Cluster	Active Test	Speedometer	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Instrument Cluster	Active Test	Tachometer	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Lighting Control Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Lighting Control Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Multi-Information Display	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Multi-Information Display	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Multi-Information Display	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Powertrain Control Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Powertrain Control Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Powertrain Control Module	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Powertrain Control Module	Active Test	Injector 2	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Powertrain Control Module	Active Test	Injector 3	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Powertrain Control Module	Active Test	Injector 4	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Restraint Control Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Restraint Control Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Restraint Control Module	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Remote Keyless Entry	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Remote Keyless Entry	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Remote Keyless Entry	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001

CX-7 (North America / General Specs.)	2.5L	L5	2010 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Transmission Control Module	Read DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Transmission Control Module	Erase DTC		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Transmission Control Module	Live Data		V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Transmission Control Module	Active Test	shift solenoid E/5	V1.20.001
CX-7 (North America / General Specs.)	2.5L	L5	2010 Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Electronic-Controlled Power Steering	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Electronic-Controlled Power Steering	Live Data		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Electronic-Controlled Power Steering	Active Test	Torque Sensor Calibration Comr	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Instrument Cluster	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Instrument Cluster	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Instrument Cluster	Live Data		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Lighting Control Module	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Lighting Control Module	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Lighting Control Module	Live Data		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Live Data		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Active Test	Electronic Throttle Control Desir	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Active Test	intake air shutter valve	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Active Test	secondary air injection pump rel	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Active Test	port air bypass control solenoid	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Active Test	Fuel pump resistor relay	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Active Test	Auxiliary Port Valve	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Active Test	Dynamic Effect Intake	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Active Test	Secondary Port Shutter Valve	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Active Test	Oil Control Valve Close Mode	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Active Test	Electromagnetic Metering Oil Pt	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Powertrain Control Module	Active Test	Electromagnetic Metering Oil Pt	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Restraint Control Module	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Restraint Control Module	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Restraint Control Module	Live Data		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Steering Angle Sensor Module	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Steering Angle Sensor Module	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Transmission Control Module	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Transmission Control Module	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Transmission Control Module	Live Data		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Transmission Control Module	Active Test	Shift Solenoid E	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Transmission Control Module	Active Test	C F	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Transmission Control Module	Active Test	Shift Solenoid G	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Tire Pressure Monitor	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Tire Pressure Monitor	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Tire Pressure Monitor	Live Data		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Tire Pressure Monitor	Active Test	ID Regist Mode	V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Remote Keyless Entry	Read DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Remote Keyless Entry	Erase DTC		V1.20.001
RX-8 (North America Specs.)	654x2cc	13B	2010 Remote Keyless Entry	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2008 Antilock braking system	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2008 Antilock braking system	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2008 Antilock braking system	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2008 Antilock braking system	Active Test	Steering Angle Sensor Initializati	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2008 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2008 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2008 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2008 Antilock braking system	Active Test	Stability Control Active Indicator	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2008 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2008 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2008 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2008 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2008 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2008 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2008 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2008 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2008 Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8	2008 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001

MX-5 (Europe / General Specs.)	1.8L	L8		2008 Antilock braking system	Active Test	Right Traction Control Solenoid V	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Antilock braking system	Active Test	Lateral Acceler Sensor Initialization	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Deployable Hood System	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Deployable Hood System	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Deployable Hood System	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Instrument Cluster	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Instrument Cluster	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Instrument Cluster	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Instrument Cluster	Active Test	ID Regist Mode	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Restraint Control Module	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Restraint Control Module	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Restraint Control Module	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Retractable Hard Top	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Retractable Hard Top	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Retractable Hard Top	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Remote Keyless Entry	Read DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Remote Keyless Entry	Erase DTC		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Remote Keyless Entry	Live Data		V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Remote Keyless Entry	Active Test	Super Lock	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Remote Keyless Entry	Active Test	Antenna (Lift Gate/Trunk Lid)	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Remote Keyless Entry	Active Test	Inner Antenna 1	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Remote Keyless Entry	Active Test	Inner Antenna 2	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Remote Keyless Entry	Active Test	Inner Antenna 3	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Remote Keyless Entry	Active Test	Inner Antenna 4	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Remote Keyless Entry	Active Test	Antenna (Left Front Door)	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Remote Keyless Entry	Active Test	Antenna (Right Front Door)	V1.20.001
MX-5 (Europe / General Specs.)	1.8L	L8		2008 Remote Keyless Entry	Active Test	Hazard Flashers	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	4X4 Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	4X4 Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Antilock braking system	Read DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Antilock braking system	Erase DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Antilock braking system	Live Data		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Antilock braking system	Active Test	Right Traction Control Solenoid V	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Audio Control Unit	Read DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Audio Control Unit	Erase DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Adaptive Front Lighting System	Live Data		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Body Control Module / Generic Electrc	Read DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Body Control Module / Generic Electrc	Erase DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Body Control Module / Generic Electrc	Live Data		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001

AXELA / MAZDA3	2.3L	L3_T	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Instrument Cluster	Read DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Instrument Cluster	Erase DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Instrument Cluster	Live Data		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Lighting Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Lighting Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Multi-Information Display	Read DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Multi-Information Display	Erase DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Multi-Information Display	Live Data		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Powertrain Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Powertrain Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Restraint Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Restraint Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Restraint Control Module	Live Data		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Remote Keyless Entry	Read DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Remote Keyless Entry	Erase DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Remote Keyless Entry	Live Data		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Transmission Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Transmission Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Transmission Control Module	Live Data		V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
AXELA / MAZDA3	2.3L	L3_T	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	4X4 Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	4X4 Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Antilock braking system	Read DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Antilock braking system	Erase DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Antilock braking system	Live Data		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Antilock braking system	Active Test	Right Stability Control Solenoid '1	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Antilock braking system	Active Test	Right Traction Control Solenoid '1	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Audio Control Unit	Read DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Audio Control Unit	Erase DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Adaptive Front Lighting System	Live Data		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Body Control Module / Generic Electrc	Read DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Body Control Module / Generic Electrc	Erase DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Body Control Module / Generic Electrc	Live Data		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001

AXELA / MAZDA3	2.5L	L5	Other	Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Instrument Cluster	Read DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Instrument Cluster	Erase DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Instrument Cluster	Live Data		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Lighting Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Lighting Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Multi-Information Display	Read DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Multi-Information Display	Erase DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Multi-Information Display	Live Data		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Powertrain Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Powertrain Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Restraint Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Restraint Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Restraint Control Module	Live Data		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Remote Keyless Entry	Read DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Remote Keyless Entry	Erase DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Remote Keyless Entry	Live Data		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Transmission Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Transmission Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Transmission Control Module	Live Data		V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
AXELA / MAZDA3	2.5L	L5	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	4X4 Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	4X4 Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Antilock braking system	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Antilock braking system	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Antilock braking system	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Antilock braking system	Active Test	Right Stability Control Solenoid	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Antilock braking system	Active Test	Left Stability Control Solenoid	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Antilock braking system	Active Test	Left Traction Control Solenoid	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Audio Control Unit	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Audio Control Unit	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Adaptive Front Lighting System	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Body Control Module / Generic Electrc	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Body Control Module / Generic Electrc	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Body Control Module / Generic Electrc	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001

AXELA / MAZDA3	2.0L	LF	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Instrument Cluster	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Instrument Cluster	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Instrument Cluster	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Lighting Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Lighting Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Multi-Information Display	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Multi-Information Display	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Multi-Information Display	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Powertrain Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Powertrain Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Restraint Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Restraint Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Restraint Control Module	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Remote Keyless Entry	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Remote Keyless Entry	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Remote Keyless Entry	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Transmission Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Transmission Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Transmission Control Module	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
AXELA / MAZDA3	2.0L	LF	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	4X4 Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	4X4 Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Antilock braking system	Read DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Antilock braking system	Erase DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Antilock braking system	Live Data		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Antilock braking system	Active Test	Right Stability Control Solenoid	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Antilock braking system	Active Test	Left Stability Control Solenoid	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Antilock braking system	Active Test	Left Traction Control Solenoid	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Audio Control Unit	Read DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Audio Control Unit	Erase DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Adaptive Front Lighting System	Live Data		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Body Control Module / Generic Electrc	Read DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Body Control Module / Generic Electrc	Erase DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Body Control Module / Generic Electrc	Live Data		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001

AXELA / MAZDA3	2.2L	R2_T	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Fuel Fired Coolant Heating Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Fuel Fired Coolant Heating Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Fuel Fired Coolant Heating Module	Live Data		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Fuel Fired Coolant Heating Module	Active Test	Heater Status	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Fuel Fired Coolant Heating Module	Active Test	Fan Control	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Fuel Fired Coolant Heating Module	Active Test	Glowplug	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Fuel Fired Coolant Heating Module	Active Test	Fuel pump	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Instrument Cluster	Read DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Instrument Cluster	Erase DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Instrument Cluster	Live Data		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Lighting Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Lighting Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Multi-Information Display	Read DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Multi-Information Display	Erase DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Multi-Information Display	Live Data		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Powertrain Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Powertrain Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Restraint Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Restraint Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Restraint Control Module	Live Data		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Restraint Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Restraint Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Remote Keyless Entry	Read DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Remote Keyless Entry	Erase DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Remote Keyless Entry	Live Data		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Transmission Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Transmission Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Transmission Control Module	Live Data		V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
AXELA / MAZDA3	2.2L	R2_T	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	4X4 Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	4X4 Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Antilock braking system	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Antilock braking system	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Antilock braking system	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Antilock braking system	Active Test	Right Stability Control Solenoid	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Antilock braking system	Active Test	Left Stability Control Solenoid	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Antilock braking system	Active Test	Left Traction Control Solenoid	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Audio Control Unit	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Audio Control Unit	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Adaptive Front Lighting System	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Body Control Module / Generic Electrc	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Body Control Module / Generic Electrc	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Body Control Module / Generic Electrc	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001

AXELA / MAZDA3	1.6L	Y6	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Fuel Additive Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Fuel Additive Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Fuel Additive Control Module	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Fuel Additive Control Module	Active Test	Additive Pump Driving State	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Fuel Additive Control Module	Active Test	Additive Gauging State	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Instrument Cluster	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Instrument Cluster	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Instrument Cluster	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Lighting Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Lighting Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Multi-Information Display	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Multi-Information Display	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Multi-Information Display	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Powertrain Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Powertrain Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Restraint Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Restraint Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Restraint Control Module	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Remote Keyless Entry	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Remote Keyless Entry	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Remote Keyless Entry	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Transmission Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Transmission Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Transmission Control Module	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
AXELA / MAZDA3	1.6L	Y6	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	4X4 Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	4X4 Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Antilock braking system	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Antilock braking system	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Antilock braking system	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Antilock braking system	Active Test	Right Stability Control Solenoid	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Antilock braking system	Active Test	Left Stability Control Solenoid	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Antilock braking system	Active Test	Left Traction Control Solenoid	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Audio Control Unit	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Audio Control Unit	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Adaptive Front Lighting System	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Body Control Module / Generic Electrc	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Body Control Module / Generic Electrc	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Body Control Module / Generic Electrc	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001

AXELA / MAZDA3	1.6L	Z6	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Instrument Cluster	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Instrument Cluster	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Instrument Cluster	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Lighting Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Lighting Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Multi-Information Display	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Multi-Information Display	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Multi-Information Display	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Powertrain Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Powertrain Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Restraint Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Restraint Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Restraint Control Module	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Remote Keyless Entry	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Remote Keyless Entry	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Remote Keyless Entry	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Transmission Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Transmission Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Transmission Control Module	Live Data		V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
AXELA / MAZDA3	1.6L	Z6	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	4X4 Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	4X4 Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Antilock braking system	Read DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Antilock braking system	Erase DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Antilock braking system	Live Data		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Antilock braking system	Active Test	Right Stability Control Solenoid	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Antilock braking system	Active Test	Left Stability Control Solenoid	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Antilock braking system	Active Test	Left Traction Control Solenoid	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Audio Control Unit	Read DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Audio Control Unit	Erase DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Adaptive Front Lighting System	Live Data		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Body Control Module / Generic Electr	Read DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Body Control Module / Generic Electr	Erase DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Body Control Module / Generic Electr	Live Data		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001

AXELA / MAZDA3	1.5L	ZY	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Instrument Cluster	Read DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Instrument Cluster	Erase DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Instrument Cluster	Live Data		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Lighting Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Lighting Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Multi-Information Display	Read DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Multi-Information Display	Erase DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Multi-Information Display	Live Data		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Powertrain Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Powertrain Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Restraint Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Restraint Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Restraint Control Module	Live Data		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Remote Keyless Entry	Read DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Remote Keyless Entry	Erase DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Remote Keyless Entry	Live Data		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Transmission Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Transmission Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Transmission Control Module	Live Data		V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
AXELA / MAZDA3	1.5L	ZY	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	4X4 Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Antilock braking system	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Antilock braking system	Active Test	Left Linear Control Solenoid Val	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Antilock braking system	Active Test	Right Linear Control Solenoid Va	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Antilock braking system	Active Test	Right Stability Control Solenoid	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Audio Control Unit	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Audio Control Unit	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Adaptive Front Lighting System	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Body Control Module / Generic Electr	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Body Control Module / Generic Electr	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Body Control Module / Generic Electr	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Body Control Module / Generic Electr	Active Test	Front Wiper Relay - Fast speed	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Body Control Module / Generic Electr	Active Test	Front Wiper Relay - Low speed	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Body Control Module / Generic Electr	Active Test	Rear Wiper Relay	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Body Control Module / Generic Electr	Active Test	Turn Lamp - Right	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Body Control Module / Generic Electr	Active Test	Turn Lamp - Left	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Body Control Module / Generic Electr	Active Test	Low Beam Relay	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Body Control Module / Generic Electr	Active Test	Front Fog Lamp Relay	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Body Control Module / Generic Electr	Active Test	Rear Fog Lamp Relay	V1.20.001

MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Electronic Automatic Temperature Cor	Active Test	Information Display	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Electronic Automatic Temperature Cor	Active Test	Rear Vent Actuator	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Electronic Automatic Temperature Cor	Active Test	Rear Fan	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Fuel Fired Coolant Heating Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Fuel Fired Coolant Heating Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Fuel Fired Coolant Heating Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Intelligent Cruise Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Intelligent Cruise Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Intelligent Cruise Control Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Lighting Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Lighting Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Lighting Control Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Motor Pretensioner Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Motor Pretensioner Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Motor Pretensioner Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Motor Pretensioner Module	Active Test	Drivers Seatbelt Pretensioner	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Motor Pretensioner Module	Active Test	Passenger Seatbelt Pretensioner	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Powertrain Control Module	Active Test	intake air shutter valve	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Remote Keyless Entry	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Remote Keyless Entry	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001

MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Transmission Control Module	Active Test	Left Solenoid 3	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Transmission Control Module	Active Test	Shift solenoid E/5	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.2L	R2_T	Other	Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	4X4 Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Antilock braking system	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Antilock braking system	Active Test	Left Linear Control Solenoid Vah	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Antilock braking system	Active Test	Right Linear Control Solenoid Va	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Antilock braking system	Active Test	Right Traction Control Solenoid V	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Audio Control Unit	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Audio Control Unit	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Adaptive Front Lighting System	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Body Control Module / Generic Electrc	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Body Control Module / Generic Electrc	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Body Control Module / Generic Electrc	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Fast speed	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Low speed	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Body Control Module / Generic Electrc	Active Test	Rear Wiper Relay	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Body Control Module / Generic Electrc	Active Test	Turn Lamp - Right	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Body Control Module / Generic Electrc	Active Test	Turn Lamp - Left	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Body Control Module / Generic Electrc	Active Test	Low Beam Relay	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Body Control Module / Generic Electrc	Active Test	Front Fog Lamp Relay	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Body Control Module / Generic Electrc	Active Test	Rear Fog Lamp Relay	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Electronic Automatic Temperature Cor	Active Test	Rear Vent Actuator	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Electronic Automatic Temperature Cor	Active Test	Rear Fan	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Fuel Fired Coolant Heating Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Fuel Fired Coolant Heating Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Fuel Fired Coolant Heating Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Intelligent Cruise Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Intelligent Cruise Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Intelligent Cruise Control Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Lighting Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Lighting Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Lighting Control Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Motor Pretensioner Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Motor Pretensioner Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Motor Pretensioner Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Motor Pretensioner Module	Active Test	Drivers Seatbelt Pretensioner	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Motor Pretensioner Module	Active Test	Passenger Seatbelt Pretensioner	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Live Data		V1.20.001

MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Active Test	Camshaft Gas Recirculation valve	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Powertrain Control Module	Active Test	intake air shutter valve	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Remote Keyless Entry	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Remote Keyless Entry	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Transmission Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	1.8L	L8	Other	Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	4X4 Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Antilock braking system	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Antilock braking system	Active Test	Left Linear Control Solenoid Val	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Antilock braking system	Active Test	Right Linear Control Solenoid Va	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Antilock braking system	Active Test	Right Stability Control Solenoid	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Audio Control Unit	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Audio Control Unit	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Adaptive Front Lighting System	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Body Control Module / Generic Electr	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Body Control Module / Generic Electr	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Body Control Module / Generic Electr	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Body Control Module / Generic Electr	Active Test	Front Wiper Relay - Fast speed	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Body Control Module / Generic Electr	Active Test	Front Wiper Relay - Low speed	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Body Control Module / Generic Electr	Active Test	Rear Wiper Relay	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Body Control Module / Generic Electr	Active Test	Turn Lamp - Right	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Body Control Module / Generic Electr	Active Test	Turn Lamp - Left	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Body Control Module / Generic Electr	Active Test	Low Beam Relay	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Body Control Module / Generic Electr	Active Test	Front Fog Lamp Relay	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Body Control Module / Generic Electr	Active Test	Rear Fog Lamp Relay	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001

MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Electronic Automatic Temperature Cor	Active Test	Information Display	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Electronic Automatic Temperature Cor	Active Test	Rear Vent Actuator	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Electronic Automatic Temperature Cor	Active Test	Rear Fan	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Fuel Fired Coolant Heating Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Fuel Fired Coolant Heating Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Fuel Fired Coolant Heating Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Intelligent Cruise Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Intelligent Cruise Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Intelligent Cruise Control Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Lighting Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Lighting Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Lighting Control Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Motor Pretensioner Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Motor Pretensioner Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Motor Pretensioner Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Motor Pretensioner Module	Active Test	Drivers Seatbelt Pretensioner	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Motor Pretensioner Module	Active Test	Passenger Seatbelt Pretensioner	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Active Test	Generator field current control c	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Powertrain Control Module	Active Test	intake air shutter valve	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Remote Keyless Entry	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Remote Keyless Entry	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Transmission Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.0L	LF	Other	Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	4X4 Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Antilock braking system	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001

MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Antilock braking system	Active Test	Left Linear Control Solenoid Vah	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Antilock braking system	Active Test	Right Linear Control Solenoid Va	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Antilock braking system	Active Test	Right Stability Control Solenoid	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Audio Control Unit	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Audio Control Unit	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Adaptive Front Lighting System	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Body Control Module / Generic Electrc	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Body Control Module / Generic Electrc	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Body Control Module / Generic Electrc	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Fast speed	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Low speed	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Body Control Module / Generic Electrc	Active Test	Rear Wiper Relay	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Body Control Module / Generic Electrc	Active Test	Turn Lamp - Right	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Body Control Module / Generic Electrc	Active Test	Turn Lamp - Left	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Body Control Module / Generic Electrc	Active Test	Low Beam Relay	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Body Control Module / Generic Electrc	Active Test	Front Fog Lamp Relay	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Body Control Module / Generic Electrc	Active Test	Rear Fog Lamp Relay	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Electronic Automatic Temperature Cor	Active Test	Rear Vent Actuator	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Electronic Automatic Temperature Cor	Active Test	Rear Fan	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Fuel Fired Coolant Heating Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Fuel Fired Coolant Heating Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Fuel Fired Coolant Heating Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Intelligent Cruise Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Intelligent Cruise Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Intelligent Cruise Control Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Lighting Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Lighting Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Lighting Control Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Motor Pretensioner Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Motor Pretensioner Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Motor Pretensioner Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Motor Pretensioner Module	Active Test	Drivers Seatbelt Pretensioner	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Motor Pretensioner Module	Active Test	Passenger Seatbelt Pretensioner	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001

MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Powertrain Control Module	Active Test	intake air shutter valve	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Remote Keyless Entry	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Remote Keyless Entry	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Transmission Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	3.7L	CA	Other	Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	4X4 Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Antilock braking system	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Antilock braking system	Active Test	Left Linear Control Solenoid Vah	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Antilock braking system	Active Test	Right Linear Control Solenoid Va	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Antilock braking system	Active Test	Right Stability Control Solenoid 1	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Audio Control Unit	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Audio Control Unit	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Adaptive Front Lighting System	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Body Control Module / Generic Electrc	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Body Control Module / Generic Electrc	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Body Control Module / Generic Electrc	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Fast speed	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Low speed	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Body Control Module / Generic Electrc	Active Test	Rear Wiper Relay	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Body Control Module / Generic Electrc	Active Test	Turn Lamp - Right	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Body Control Module / Generic Electrc	Active Test	Turn Lamp - Left	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Body Control Module / Generic Electrc	Active Test	Low Beam Relay	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Body Control Module / Generic Electrc	Active Test	Front Fog Lamp Relay	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Body Control Module / Generic Electrc	Active Test	Rear Fog Lamp Relay	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Electronic Automatic Temperature Cor	Active Test	Information Display	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Electronic Automatic Temperature Cor	Active Test	Rear Vent Actuator	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Electronic Automatic Temperature Cor	Active Test	Rear Fan	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001

MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Fuel Fired Coolant Heating Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Fuel Fired Coolant Heating Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Fuel Fired Coolant Heating Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Intelligent Cruise Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Intelligent Cruise Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Intelligent Cruise Control Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Lighting Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Lighting Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Lighting Control Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Motor Pretensioner Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Motor Pretensioner Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Motor Pretensioner Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Motor Pretensioner Module	Active Test	Drivers Seatbelt Pretensioner	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Motor Pretensioner Module	Active Test	Passenger Seatbelt Pretensione	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Powertrain Control Module	Active Test	intake air shutter valve	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Remote Keyless Entry	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Remote Keyless Entry	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Transmission Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
MPV (JPN/General)	3.0L	AJ		2002 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MPV (JPN/General)	3.0L	AJ		2002 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
MPV (JPN/General)	3.0L	AJ		2002 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
MPV (JPN/General)	3.0L	AJ		2002 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
MPV (JPN/General)	3.0L	AJ		2002 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
MPV (JPN/General)	3.0L	AJ		2002 Anti-Lock Brake / Traction Control Mo	Active Test	Traction Control Off Indicator	V1.20.001
MPV (JPN/General)	3.0L	AJ		2002 Air Conditioning	Read DTC		V1.20.001
MPV (JPN/General)	3.0L	AJ		2002 Air Conditioning	Erase DTC		V1.20.001
MPV (JPN/General)	3.0L	AJ		2002 Powertrain Control Module	Read DTC		V1.20.001
MPV (JPN/General)	3.0L	AJ		2002 Powertrain Control Module	Erase DTC		V1.20.001
MPV (JPN/General)	3.0L	AJ		2002 Powertrain Control Module	Live Data		V1.20.001
MPV (JPN/General)	3.0L	AJ		2002 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MPV (JPN/General)	3.0L	AJ		2002 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MPV (JPN/General)	3.0L	AJ		2002 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MPV (JPN/General)	3.0L	AJ		2002 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MPV (JPN/General)	3.0L	AJ		2002 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MPV (JPN/General)	3.0L	AJ		2002 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MPV (JPN/General)	3.0L	AJ		2002 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
MPV (JPN/General)	3.0L	AJ		2002 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MPV (JPN/General)	3.0L	AJ		2002 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001

AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Body Control Module	Active Test	Buzzer Control	V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Body Control Module	Active Test	Alarm Indicator Control	V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Body Control Module	Active Test	Horn Control	V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Body Control Module	Active Test	Rear Defogger Control	V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Body Control Module	Active Test	Shift Lock Solenoid	V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Instrument Cluster	Read DTC		V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Instrument Cluster	Erase DTC		V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Instrument Cluster	Live Data		V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Instrument Cluster	Active Test	Fuel Meter (Direct)	V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Instrument Cluster	Active Test	Tachometer (Direct)	V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Instrument Cluster	Active Test	Speedometer (Direct)	V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Instrument Cluster	Active Test	Warning Buzzer	V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Instrument Cluster	Active Test	Fuel Meter (Sweep)	V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Instrument Cluster	Active Test	Tachometer (Sweep)	V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Instrument Cluster	Active Test	Speedometer (Sweep)	V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Lighting Control Module	Read DTC		V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Lighting Control Module	Erase DTC		V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Lighting Control Module	Live Data		V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Lighting Control Module	Active Test	Leveling Actuator	V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Powertrain Control Module	Read DTC		V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Powertrain Control Module	Erase DTC		V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Powertrain Control Module	Live Data		V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Powertrain Control Module	Active Test	Spark Advance	V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Powertrain Control Module	Active Test	Engine cooling fan operation	V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Powertrain Control Module	Active Test	Fuel Pump Duty Cycle	V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Restraint Control Module	Read DTC		V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Restraint Control Module	Erase DTC		V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Restraint Control Module	Live Data		V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Transmission Control Module	Read DTC		V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Transmission Control Module	Erase DTC		V1.20.001	
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A-T	Other	Transmission Control Module	Live Data		V1.20.001	
PREMACY / MAZDA5	2.0L	LF	Other	4X4 Control Module	Read DTC	V1.20.001	
PREMACY / MAZDA5	2.0L	LF	Other	4X4 Control Module	Erase DTC	V1.20.001	
PREMACY / MAZDA5	2.0L	LF	Other	Antilock braking system	Read DTC	V1.20.001	
PREMACY / MAZDA5	2.0L	LF	Other	Antilock braking system	Erase DTC	V1.20.001	
PREMACY / MAZDA5	2.0L	LF	Other	Antilock braking system	Live Data	V1.20.001	
PREMACY / MAZDA5	2.0L	LF	Other	Antilock braking system	Active Test	Longitudinal Acceleration Senso	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Audio Control Unit	Read DTC		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Audio Control Unit	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Body Control Module / Generic Electrc	Read DTC		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Body Control Module / Generic Electrc	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Body Control Module / Generic Electrc	Live Data		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Fast speed	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Low speed	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Body Control Module / Generic Electrc	Active Test	Rear Wiper Relay	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Body Control Module / Generic Electrc	Active Test	Turn Lamp - Right	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Body Control Module / Generic Electrc	Active Test	Turn Lamp - Left	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Body Control Module / Generic Electrc	Active Test	Low Beam Relay	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Body Control Module / Generic Electrc	Active Test	Front Fog Lamp Relay	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Body Control Module / Generic Electrc	Active Test	Rear Fog Lamp Relay	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Electronic Automatic Temperature Cor	Active Test	Information Display	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Electronic Automatic Temperature Cor	Active Test	Rear Vent Actuator	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Electronic Automatic Temperature Cor	Active Test	Rear Fan	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Instrument Cluster	Read DTC		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Instrument Cluster	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Instrument Cluster	Live Data		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001

PREMACY / MAZDA5	2.0L	LF	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Left Power Sliding Door Module	Read DTC		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Left Power Sliding Door Module	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Left Power Sliding Door Module	Live Data		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Powertrain Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Powertrain Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Powertrain Control Module	Live Data		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculatio	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Restraint Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Restraint Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Restraint Control Module	Live Data		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Remote Keyless Entry	Read DTC		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Remote Keyless Entry	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Remote Keyless Entry	Live Data		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Right Power Sliding Door Module	Read DTC		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Right Power Sliding Door Module	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Right Power Sliding Door Module	Live Data		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Transmission Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Transmission Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Transmission Control Module	Live Data		V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
PREMACY / MAZDA5	2.0L	LF	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
AZ-OFFROAD	660cc	K6A-T		2008 Antilock braking system	Read DTC		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2008 Antilock braking system	Erase DTC		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2008 Antilock braking system	Live Data		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2008 Powertrain Control Module	Read DTC		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2008 Powertrain Control Module	Erase DTC		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2008 Powertrain Control Module	Live Data		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2008 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
AZ-OFFROAD	660cc	K6A-T		2008 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
AZ-OFFROAD	660cc	K6A-T		2008 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
AZ-OFFROAD	660cc	K6A-T		2008 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
AZ-OFFROAD	660cc	K6A-T		2008 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
AZ-OFFROAD	660cc	K6A-T		2008 Restraint Control Module	Read DTC		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2008 Restraint Control Module	Erase DTC		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2008 Restraint Control Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	4X4 Control Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	4X4 Control Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	4X4 Control Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	4X4 Control Module	Active Test	42V Relay Output	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	4X4 Control Module	Active Test	Alternator Output	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	4X4 Control Module	Active Test	Clutch Output	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	4X4 Control Module	Active Test	E4WD Relay Output	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	4X4 Control Module	Active Test	Motor Output	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	4X4 Control Module	Active Test	Motor Magnet Field Output	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Antilock braking system	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Antilock braking system	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Antilock braking system	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001

DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Antilock braking system	Active Test	Right Traction Control Solenoid V	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Auto Leveling Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Auto Leveling Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Auto Leveling Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Body Control Module / Generic Electrc	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Body Control Module / Generic Electrc	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Body Control Module / Generic Electrc	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Fast speed	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Low speed	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Body Control Module / Generic Electrc	Active Test	Rear Wiper Relay	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Body Control Module / Generic Electrc	Active Test	Turn Lamp - Right	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Body Control Module / Generic Electrc	Active Test	Turn Lamp - Left	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Body Control Module / Generic Electrc	Active Test	Low Beam Relay	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Body Control Module / Generic Electrc	Active Test	Front Fog Lamp Relay	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Body Control Module / Generic Electrc	Active Test	Rear Fog Lamp Relay	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Instrument Cluster	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Instrument Cluster	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Instrument Cluster	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Powertrain Control Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Powertrain Control Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Powertrain Control Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculatio	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Remote Keyless Entry	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Remote Keyless Entry	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Remote Keyless Entry	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Transmission Control Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Transmission Control Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Transmission Control Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Transmission Control Module	Active Test	Pressure Control Solenoid A - C	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Transmission Control Module	Active Test	ABS Fail Invalidate Mode	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Transmission Control Module	Active Test	Dynamic Pressure Control Soleno	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Transmission Control Module	Active Test	Lockup Solenoid	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Transmission Control Module	Active Test	Dynamic Pressure Control Solen	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Transmission Control Module	Active Test	Electric Transmission Oil Pump V	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Vehicle Security Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Vehicle Security Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Vehicle Security Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Restraint Control Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Restraint Control Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	Restraint Control Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	4X4 Control Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	4X4 Control Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	4X4 Control Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	4X4 Control Module	Active Test	42V Relay Output	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	4X4 Control Module	Active Test	Alternator Output	V1.20.001

DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	4X4 Control Module	Active Test	Clutch Output	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	4X4 Control Module	Active Test	E4WD Relay Output	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	4X4 Control Module	Active Test	Motor Output	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	4X4 Control Module	Active Test	Motor Magnet Field Output	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Antilock braking system	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Antilock braking system	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Antilock braking system	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Antilock braking system	Active Test	Right Traction Control Solenoid V	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Auto Leveling Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Auto Leveling Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Auto Leveling Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Body Control Module / Generic Electrc	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Body Control Module / Generic Electrc	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Body Control Module / Generic Electrc	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Fast speed	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Low speed	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Body Control Module / Generic Electrc	Active Test	Rear Wiper Relay	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Body Control Module / Generic Electrc	Active Test	Turn Lamp - Right	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Body Control Module / Generic Electrc	Active Test	Turn Lamp - Left	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Body Control Module / Generic Electrc	Active Test	Low Beam Relay	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Body Control Module / Generic Electrc	Active Test	Front Fog Lamp Relay	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Body Control Module / Generic Electrc	Active Test	Rear Fog Lamp Relay	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Instrument Cluster	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Instrument Cluster	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Instrument Cluster	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Powertrain Control Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Powertrain Control Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Powertrain Control Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculati	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Remote Keyless Entry	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Remote Keyless Entry	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Remote Keyless Entry	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Transmission Control Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Transmission Control Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Transmission Control Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Transmission Control Module	Active Test	Pressure Control Solenoid A - C	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Transmission Control Module	Active Test	ABS Fail Invalidate Mode	V1.20.001

DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Transmission Control Module	Active Test	Dynamic Pressure Control Solen	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Transmission Control Module	Active Test	Lockup Solenoid	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Transmission Control Module	Active Test	Dynamic Pressure Control Solen	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Transmission Control Module	Active Test	Electric Transmission Oil Pump	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Vehicle Security Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Vehicle Security Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Vehicle Security Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Restraint Control Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Restraint Control Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	Restraint Control Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	4X4 Control Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	4X4 Control Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	4X4 Control Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	4X4 Control Module	Active Test	42V Relay Output	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	4X4 Control Module	Active Test	Alternator Output	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	4X4 Control Module	Active Test	Clutch Output	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	4X4 Control Module	Active Test	E4WD Relay Output	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	4X4 Control Module	Active Test	Motor Output	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	4X4 Control Module	Active Test	Motor Magnet Field Output	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Antilock braking system	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Antilock braking system	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Antilock braking system	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Antilock braking system	Active Test	Right Stability Control Solenoid	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Antilock braking system	Active Test	Left Stability Control Solenoid	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Antilock braking system	Active Test	Left Traction Control Solenoid	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Auto Leveling Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Auto Leveling Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Auto Leveling Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Body Control Module / Generic Electrc	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Body Control Module / Generic Electrc	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Body Control Module / Generic Electrc	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Fast speed	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Low speed	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Body Control Module / Generic Electrc	Active Test	Rear Wiper Relay	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Body Control Module / Generic Electrc	Active Test	Turn Lamp - Right	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Body Control Module / Generic Electrc	Active Test	Turn Lamp - Left	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Body Control Module / Generic Electrc	Active Test	Low Beam Relay	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Body Control Module / Generic Electrc	Active Test	Front Fog Lamp Relay	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Body Control Module / Generic Electrc	Active Test	Rear Fog Lamp Relay	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Instrument Cluster	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Instrument Cluster	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Instrument Cluster	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Powertrain Control Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Powertrain Control Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Powertrain Control Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculati	V1.20.001

DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Remote Keyless Entry	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Remote Keyless Entry	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Remote Keyless Entry	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Transmission Control Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Transmission Control Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Transmission Control Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Transmission Control Module	Active Test	Pressure Control Solenoid A - C	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Transmission Control Module	Active Test	ABS Fail Invalidate Mode	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Transmission Control Module	Active Test	Dynamic Pressure Control Solen	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Transmission Control Module	Active Test	Lockup Solenoid	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Transmission Control Module	Active Test	Dynamic Pressure Control Solen	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Transmission Control Module	Active Test	Electric Transmission Oil Pump	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Vehicle Security Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Vehicle Security Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Vehicle Security Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Restraint Control Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Restraint Control Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	Restraint Control Module	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Antilock braking system	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Antilock braking system	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Antilock braking system	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Antilock braking system	Active Test	ALL Inertial Sensors Initialization	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Antilock braking system	Active Test	Antilock braking system Power f	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Antilock braking system	Active Test	Right Stability Control Solenoid	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Audio Control Unit	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Audio Control Unit	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Amplifier Module	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Amplifier Module	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Driver's Seat Module	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Driver's Seat Module	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Driver's Seat Module	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Forward Sensing Camera	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Forward Sensing Camera	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Forward Sensing Camera	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Generic Electronic Module	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Generic Electronic Module	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Generic Electronic Module	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Instrument Cluster	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Instrument Cluster	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Instrument Cluster	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Instrument Cluster	Active Test	ID Regist Mode	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Lighting Control Module	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Lighting Control Module	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Lighting Control Module	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Liftgate/Trunk Module	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Liftgate/Trunk Module	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Liftgate/Trunk Module	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Powertrain Control Module	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Powertrain Control Module	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Restraint Control Module	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Restraint Control Module	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Restraint Control Module	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Remote Keyless Entry	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Remote Keyless Entry	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Remote Keyless Entry	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Transmission Control Module	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Transmission Control Module	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Transmission Control Module	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Transmission Control Module	Active Test	Shift Solenoid E	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Transmission Control Module	Active Test	C F	V1.20.001

CX-9 (North America / General Specs.)	3.7L	CA		2011 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Vehicle Security Module	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Vehicle Security Module	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Vehicle Security Module	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 4X4 Control Module	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 4X4 Control Module	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Blind Spot Monitoring (Left)	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Blind Spot Monitoring (Left)	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Blind Spot Monitoring (Right)	Read DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Blind Spot Monitoring (Right)	Live Data		V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Warn In	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
CX-9 (North America / General Specs.)	3.7L	CA		2011 Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Antilock braking system	Read DTC		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Antilock braking system	Erase DTC		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Antilock braking system	Live Data		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Antilock braking system	Active Test	Longitudinal Acceleration Senso	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Audio Control Unit	Read DTC		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Audio Control Unit	Erase DTC		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Body Control Module / Generic Electrc	Read DTC		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Body Control Module / Generic Electrc	Erase DTC		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Body Control Module / Generic Electrc	Live Data		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Fast speed	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Low speed	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Body Control Module / Generic Electrc	Active Test	Rear Wiper Relay	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Body Control Module / Generic Electrc	Active Test	Turn Lamp - Right	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Body Control Module / Generic Electrc	Active Test	Turn Lamp - Left	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Body Control Module / Generic Electrc	Active Test	Low Beam Relay	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Body Control Module / Generic Electrc	Active Test	Front Fog Lamp Relay	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Body Control Module / Generic Electrc	Active Test	Rear Fog Lamp Relay	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Electronic Automatic Temperature Cor	Active Test	Information Display	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Electronic Automatic Temperature Cor	Active Test	Rear Vent Actuator	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Electronic Automatic Temperature Cor	Active Test	Rear Fan	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Instrument Cluster	Read DTC		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Instrument Cluster	Erase DTC		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Instrument Cluster	Live Data		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Left Power Sliding Door Module	Read DTC		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Left Power Sliding Door Module	Erase DTC		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Left Power Sliding Door Module	Live Data		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Live Data		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Active Test	Generator field current control	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001

PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Powertrain Control Module	Active Test	intake air shutter valve	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Restraint Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Restraint Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Restraint Control Module	Live Data		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Remote Keyless Entry	Read DTC		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Remote Keyless Entry	Erase DTC		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Remote Keyless Entry	Live Data		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Right Power Sliding Door Module	Read DTC		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Right Power Sliding Door Module	Erase DTC		V1.20.001
PREMACY / MAZDA5	1.8L	L8	Other	Right Power Sliding Door Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	4X4 Control Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	4X4 Control Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	4X4 Control Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	4X4 Control Module	Active Test	42V Relay Output	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	4X4 Control Module	Active Test	Alternator Output	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	4X4 Control Module	Active Test	Clutch Output	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	4X4 Control Module	Active Test	E4WD Relay Output	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	4X4 Control Module	Active Test	Motor Output	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	4X4 Control Module	Active Test	Motor Magnet Field Output	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Antilock braking system	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Antilock braking system	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Antilock braking system	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Antilock braking system	Active Test	Right Traction Control Solenoid V	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Auto Leveling Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Auto Leveling Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Auto Leveling Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Body Control Module / Generic Electrc	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Body Control Module / Generic Electrc	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Body Control Module / Generic Electrc	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Fast speed	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Low speed	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Body Control Module / Generic Electrc	Active Test	Rear Wiper Relay	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Body Control Module / Generic Electrc	Active Test	Turn Lamp - Right	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Body Control Module / Generic Electrc	Active Test	Turn Lamp - Left	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Body Control Module / Generic Electrc	Active Test	Low Beam Relay	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Body Control Module / Generic Electrc	Active Test	Front Fog Lamp Relay	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Body Control Module / Generic Electrc	Active Test	Rear Fog Lamp Relay	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Instrument Cluster	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Instrument Cluster	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Instrument Cluster	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Powertrain Control Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Powertrain Control Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Powertrain Control Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001

DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculati	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Remote Keyless Entry	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Remote Keyless Entry	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Remote Keyless Entry	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Transmission Control Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Transmission Control Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Transmission Control Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Transmission Control Module	Active Test	Pressure Control Solenoid A - C	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Transmission Control Module	Active Test	ABS Fail Invalidate Mode	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Transmission Control Module	Active Test	Dynamic Pressure Control Solen	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Transmission Control Module	Active Test	Lockup Solenoid	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Transmission Control Module	Active Test	Dynamic Pressure Control Solen	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Transmission Control Module	Active Test	Electric Transmission Oil Pump 1	V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Vehicle Security Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Vehicle Security Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Vehicle Security Module	Live Data		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Restraint Control Module	Read DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Restraint Control Module	Erase DTC		V1.20.001
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	Restraint Control Module	Live Data		V1.20.001
CX-5	2.5L	PY	Other	4X4 Control Module	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	4X4 Control Module	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	4X4 Control Module	Live Data		V1.20.001
CX-5	2.5L	PY	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
CX-5	2.5L	PY	Other	Antilock braking system	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Antilock braking system	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Antilock braking system	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
CX-5	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
CX-5	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
CX-5	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
CX-5	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
CX-5	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
CX-5	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
CX-5	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
CX-5	2.5L	PY	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
CX-5	2.5L	PY	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fr	V1.20.001
CX-5	2.5L	PY	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fr	V1.20.001
CX-5	2.5L	PY	Other	Antilock braking system	Active Test	Stability Control Valve (Right Fr	V1.20.001
CX-5	2.5L	PY	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fr	V1.20.001
CX-5	2.5L	PY	Other	Audio braking system	Active Test	Pump Motor Supply	V1.20.001
CX-5	2.5L	PY	Other	Audio Control Unit	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Audio Control Unit	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Adaptive Front Lighting System	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Amplifier Module	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Amplifier Module	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Blind Spot Monitoring	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Blind Spot Monitoring	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
CX-5	2.5L	PY	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-5	2.5L	PY	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-5	2.5L	PY	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
CX-5	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-5	2.5L	PY	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
CX-5	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
CX-5	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
CX-5	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-5	2.5L	PY	Other	Connectivity Master Unit	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Connectivity Master Unit	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	DC to DC Converter Control Module	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Data Communication Module	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Data Communication Module	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Data Communication Module	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Driver's Seat Module	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Driver's Seat Module	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Driver's Seat Module	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001

CX-5	2.5L	PY	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Electric Parking Brake	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Electric Parking Brake	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Electric Parking Brake	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Forward Sensing Camera	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Forward Sensing Camera	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Forward Sensing Camera	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Instrument Cluster	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Instrument Cluster	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Instrument Cluster	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
CX-5	2.5L	PY	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
CX-5	2.5L	PY	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
CX-5	2.5L	PY	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
CX-5	2.5L	PY	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
CX-5	2.5L	PY	Other	Smart City Brake Support	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Smart City Brake Support	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Smart City Brake Support	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Parking Sensor Module	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Parking Sensor Module	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Parking Sensor Module	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Restraint Control Module	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Restraint Control Module	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Restraint Control Module	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
CX-5	2.5L	PY	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-5	2.5L	PY	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-5	2.5L	PY	Other	Rear Body Control Module	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Rear Body Control Module	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Rear Body Control Module	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
CX-5	2.5L	PY	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
CX-5	2.5L	PY	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
CX-5	2.5L	PY	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
CX-5	2.5L	PY	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
CX-5	2.5L	PY	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
CX-5	2.5L	PY	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
CX-5	2.5L	PY	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
CX-5	2.5L	PY	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Start Stop Unit	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Start Stop Unit	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Start Stop Unit	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
CX-5	2.5L	PY	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
CX-5	2.5L	PY	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Front)	V1.20.001
CX-5	2.5L	PY	Other	Front Body Control Module	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Front Body Control Module	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Front Body Control Module	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
CX-5	2.5L	PY	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
CX-5	2.5L	PY	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
CX-5	2.5L	PY	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
CX-5	2.5L	PY	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
CX-5	2.5L	PY	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
CX-5	2.5L	PY	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
CX-5	2.5L	PY	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
CX-5	2.5L	PY	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculat	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	Generator field current control	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001

CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
CX-5	2.5L	PY	Other	Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
CX-5	2.5L	PY	Other	Transmission Control Module	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Transmission Control Module	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Transmission Control Module	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
CX-5	2.5L	PY	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
CX-5	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
CX-5	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
CX-5	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
CX-5	2.5L	PY	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
CX-5	2.5L	PY	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
CX-5	2.5L	PY	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
CX-5	2.5L	PY	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
CX-5	2.5L	PY	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Antilock braking system	Read DTC		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Antilock braking system	Erase DTC		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Antilock braking system	Live Data		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Antilock braking system	Active Test	Longitudinal Acceleration Senso	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Audio Control Unit	Read DTC		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Audio Control Unit	Erase DTC		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Body Control Module / Generic Electr	Read DTC		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Body Control Module / Generic Electr	Erase DTC		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Body Control Module / Generic Electr	Live Data		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Body Control Module / Generic Electr	Active Test	Front Wiper Relay - Fast speed	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Body Control Module / Generic Electr	Active Test	Front Wiper Relay - Low speed	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Body Control Module / Generic Electr	Active Test	Rear Wiper Relay	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Body Control Module / Generic Electr	Active Test	Turn Lamp - Right	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Body Control Module / Generic Electr	Active Test	Turn Lamp - Left	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Body Control Module / Generic Electr	Active Test	Low Beam Relay	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Body Control Module / Generic Electr	Active Test	Front Fog Lamp Relay	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Body Control Module / Generic Electr	Active Test	Rear Fog Lamp Relay	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Active Test	Rear Vent Actuator	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Active Test	Rear Fan	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Instrument Cluster	Read DTC		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Instrument Cluster	Erase DTC		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Instrument Cluster	Live Data		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Left Power Sliding Door Module	Read DTC		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Left Power Sliding Door Module	Erase DTC		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Left Power Sliding Door Module	Live Data		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Powertrain Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Powertrain Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Powertrain Control Module	Live Data		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Powertrain Control Module	Active Test	Generator field current control	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Powertrain Control Module	Active Test	Glow plug control	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculat	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Restraint Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Restraint Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Restraint Control Module	Live Data		V1.20.001

PREMACY / MAZDA5	1.6L	Y6	Other	Remote Keyless Entry	Read DTC		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Remote Keyless Entry	Erase DTC		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Remote Keyless Entry	Live Data		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Right Power Sliding Door Module	Read DTC		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Right Power Sliding Door Module	Erase DTC		V1.20.001
PREMACY / MAZDA5	1.6L	Y6	Other	Right Power Sliding Door Module	Live Data		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Antilock braking system	Read DTC		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Antilock braking system	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Antilock braking system	Live Data		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Antilock braking system	Active Test	Longitudinal Acceleration Senso	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Audio Control Unit	Read DTC		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Audio Control Unit	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Body Control Module / Generic Electrc	Read DTC		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Body Control Module / Generic Electrc	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Body Control Module / Generic Electrc	Live Data		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Fast speed	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Body Control Module / Generic Electrc	Active Test	Front Wiper Relay - Low speed	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Body Control Module / Generic Electrc	Active Test	Rear Wiper Relay	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Body Control Module / Generic Electrc	Active Test	Turn Lamp - Right	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Body Control Module / Generic Electrc	Active Test	Turn Lamp - Left	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Body Control Module / Generic Electrc	Active Test	Low Beam Relay	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Body Control Module / Generic Electrc	Active Test	Front Fog Lamp Relay	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Body Control Module / Generic Electrc	Active Test	Rear Fog Lamp Relay	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Electronic Automatic Temperature Cor	Active Test	Rear Vent Actuator	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Electronic Automatic Temperature Cor	Active Test	Rear Fan	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Instrument Cluster	Read DTC		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Instrument Cluster	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Instrument Cluster	Live Data		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Left Power Sliding Door Module	Read DTC		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Left Power Sliding Door Module	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Left Power Sliding Door Module	Live Data		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Live Data		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Active Test	Generator field current control c	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Powertrain Control Module	Active Test	intake air shutter valve	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Restraint Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Restraint Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Restraint Control Module	Live Data		V1.20.001

PREMACY / MAZDA5	2.5L	L5	Other	Remote Keyless Entry	Read DTC		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Remote Keyless Entry	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Remote Keyless Entry	Live Data		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Right Power Sliding Door Module	Read DTC		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Right Power Sliding Door Module	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.5L	L5	Other	Right Power Sliding Door Module	Live Data		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Antilock braking system	Read DTC		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Antilock braking system	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Antilock braking system	Live Data		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Antilock braking system	Active Test	Motor Relay	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Antilock braking system	Active Test	Right Front Retention Solenoid	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Antilock braking system	Active Test	Linear Solenoid 1	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Antilock braking system	Active Test	Solenoid Relay	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Antilock braking system	Active Test	EBD Warning Lamp	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Antilock braking system	Active Test	ABS Warning Lamp and Buzzer	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Antilock braking system	Active Test	ASR Warning Lamp and ASR Indi	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Antilock braking system	Active Test	Right Front Reduction Solenoid	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Antilock braking system	Active Test	Left Front Retention Solenoid	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Antilock braking system	Active Test	Left Front Reduction Solenoid	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Antilock braking system	Active Test	Right Rear Retention Solenoid	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Antilock braking system	Active Test	Right Rear Reduction Solenoid	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Antilock braking system	Active Test	Left Rear Retention Solenoid	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Antilock braking system	Active Test	Left Rear Reduction Solenoid	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Antilock braking system	Active Test	Linear Solenoid 2	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Powertrain Control Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Powertrain Control Module	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Powertrain Control Module	Live Data		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Powertrain Control Module	Active Test	Target Intake Throttle Position	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Powertrain Control Module	Active Test	Injector 1	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Powertrain Control Module	Active Test	Injector 2	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Powertrain Control Module	Active Test	Injector 3	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Powertrain Control Module	Active Test	Injector 4	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Powertrain Control Module	Active Test	Target Exhaust Gas Recirculation	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Powertrain Control Module	Active Test	Glow plug relay	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Powertrain Control Module	Active Test	Exhaust Brake Control	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Powertrain Control Module	Active Test	Variable Geometry Turbo positio	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Transmission Control Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Transmission Control Module	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Transmission Control Module	Live Data		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Generic Electronic Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Generic Electronic Module	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Generic Electronic Module	Live Data		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Generic Electronic Module	Active Test	Turn Signal Lamp	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Generic Electronic Module	Active Test	Cornering Lamp	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Generic Electronic Module	Active Test	Stop Lamp	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Generic Electronic Module	Active Test	A/C Fan Relay	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Generic Electronic Module	Active Test	A/C Compressor Relay	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Generic Electronic Module	Active Test	Wiper	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Generic Electronic Module	Active Test	Door Lock	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Generic Electronic Module	Active Test	Power Folding Mirror	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Generic Electronic Module	Active Test	Room Lamp	V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Idling Start and Stop/Hill Start Aid	Read DTC		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Idling Start and Stop/Hill Start Aid	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Idling Start and Stop/Hill Start Aid	Live Data		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Passive Anti Theft System	Read DTC		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Passive Anti Theft System	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Passive Anti Theft System	Live Data		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Restraint Control Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Restraint Control Module	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J11_T		2011 Restraint Control Module	Live Data		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Antilock braking system	Read DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Antilock braking system	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Antilock braking system	Live Data		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Antilock braking system	Active Test	Motor Relay	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Antilock braking system	Active Test	Right Front Retention Solenoid	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Antilock braking system	Active Test	Linear Solenoid 1	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Antilock braking system	Active Test	Solenoid Relay	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Antilock braking system	Active Test	EBD Warning Lamp	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Antilock braking system	Active Test	ABS Warning Lamp and Buzzer	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Antilock braking system	Active Test	ASR Warning Lamp and ASR Indi	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Antilock braking system	Active Test	Right Front Reduction Solenoid	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Antilock braking system	Active Test	Left Front Retention Solenoid	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Antilock braking system	Active Test	Left Front Reduction Solenoid	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Antilock braking system	Active Test	Right Rear Retention Solenoid	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Antilock braking system	Active Test	Right Rear Reduction Solenoid	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Antilock braking system	Active Test	Left Rear Retention Solenoid	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Antilock braking system	Active Test	Left Rear Reduction Solenoid	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Antilock braking system	Active Test	Linear Solenoid 2	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Powertrain Control Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Powertrain Control Module	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Powertrain Control Module	Live Data		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Powertrain Control Module	Active Test	Fuel-cut Solenoid	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Powertrain Control Module	Active Test	Target Engine Engine RPM	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Powertrain Control Module	Active Test	Fuel-cut Solenoid 2	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Powertrain Control Module	Active Test	Fuel Pulse Width	V1.20.001

TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Powertrain Control Module	Active Test	Target Throttle Position	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Powertrain Control Module	Active Test	Exhaust Brake	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Transmission Control Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Transmission Control Module	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Transmission Control Module	Live Data		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Generic Electronic Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Generic Electronic Module	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Generic Electronic Module	Live Data		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Generic Electronic Module	Active Test	Turn Signal Lamp	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Generic Electronic Module	Active Test	Cornering Lamp	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Generic Electronic Module	Active Test	Stop Lamp	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Generic Electronic Module	Active Test	A/C Fan Relay	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Generic Electronic Module	Active Test	A/C Compressor Relay	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Generic Electronic Module	Active Test	Wiper	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Generic Electronic Module	Active Test	Door Lock	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Generic Electronic Module	Active Test	Power Folding Mirror	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Generic Electronic Module	Active Test	Room Lamp	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Idling Start and Stop/Hill Start Aid	Read DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Idling Start and Stop/Hill Start Aid	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Idling Start and Stop/Hill Start Aid	Live Data		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Restraint Control Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Restraint Control Module	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG		2011 Restraint Control Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	4X4 Control Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	4X4 Control Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Antilock braking system	Live Data		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fr	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Stability Control Valve (Right Fr	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Audio Control Unit	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Audio Control Unit	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Adaptive Front Lighting System	Live Data		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Amplifier Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Amplifier Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Amplifier Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Amplifier Module	Active Test	Engine Harmonic Enhancement	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Blind Spot Monitoring	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Blind Spot Monitoring	Live Data		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	BSM OFF Indicator Light	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	Buzzer	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Connectivity Master Unit	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Connectivity Master Unit	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	DC to DC Converter Control Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Driver's Seat Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Driver's Seat Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Driver's Seat Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Electric Parking Brake	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Electric Parking Brake	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Electric Parking Brake	Live Data		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001

MAZDA6 / ATENZA	2.0L	PE	Other	Forward Sensing Camera	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Forward Sensing Camera	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Forward Sensing Camera	Live Data		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Smart City Brake Support	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Smart City Brake Support	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Smart City Brake Support	Live Data		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Parking Sensor Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Parking Sensor Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Parking Sensor Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Rear Body Control Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Rear Body Control Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Rear Body Control Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Start Stop Unit	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Start Stop Unit	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Start Stop Unit	Live Data		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Front Body Control Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Front Body Control Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Front Body Control Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculatio	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Transmission Control Module	Live Data		V1.20.001

MAZDA6 / ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
MAZDA6 / ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Antilock braking system	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Antilock braking system	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Antilock braking system	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Antilock braking system	Active Test	Right Stability Control Solenoid	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Audio Control Unit	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Audio Control Unit	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Adaptive Front Lighting System	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Body Control Module / Generic Electr	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Body Control Module / Generic Electr	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Body Control Module / Generic Electr	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Instrument Cluster	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Instrument Cluster	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Instrument Cluster	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Lighting Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Lighting Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Multi-Information Display	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Multi-Information Display	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Multi-Information Display	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Powertrain Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Powertrain Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Powertrain Control Module	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculati	V1.20.001

AXELA / MAZDA3	2.0L	PE	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Restraint Control Module	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Restraint Control Module	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Restraint Control Module	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Remote Keyless Entry	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Remote Keyless Entry	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Remote Keyless Entry	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA / MAZDA3	2.0L	PE	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-5	2.0L	PE	Other	4X4 Control Module	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	4X4 Control Module	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	4X4 Control Module	Live Data		V1.20.001
CX-5	2.0L	PE	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
CX-5	2.0L	PE	Other	Antilock braking system	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Antilock braking system	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Antilock braking system	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
CX-5	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
CX-5	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
CX-5	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
CX-5	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
CX-5	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
CX-5	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
CX-5	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
CX-5	2.0L	PE	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
CX-5	2.0L	PE	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fr	V1.20.001
CX-5	2.0L	PE	Other	Antilock braking system	Active Test	Stability Control Valve (Right Frc	V1.20.001
CX-5	2.0L	PE	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
CX-5	2.0L	PE	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
CX-5	2.0L	PE	Other	Audio Control Unit	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Audio Control Unit	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Adaptive Front Lighting System	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Amplifier Module	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Amplifier Module	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Blind Spot Monitoring	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Blind Spot Monitoring	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
CX-5	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-5	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-5	2.0L	PE	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
CX-5	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-5	2.0L	PE	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
CX-5	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
CX-5	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
CX-5	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-5	2.0L	PE	Other	Connectivity Master Unit	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Connectivity Master Unit	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Data Communication Module	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Data Communication Module	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Data Communication Module	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Driver's Seat Module	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Driver's Seat Module	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Driver's Seat Module	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Electric Parking Brake	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Electric Parking Brake	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Electric Parking Brake	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Forward Sensing Camera	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Forward Sensing Camera	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Forward Sensing Camera	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Instrument Cluster	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Instrument Cluster	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Instrument Cluster	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
CX-5	2.0L	PE	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
CX-5	2.0L	PE	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
CX-5	2.0L	PE	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
CX-5	2.0L	PE	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
CX-5	2.0L	PE	Other	Smart City Brake Support	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Smart City Brake Support	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Smart City Brake Support	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Erase DTC		V1.20.001

CX-5	2.0L	PE	Other	Powertrain Control Module	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculati	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	Generator field current control	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
CX-5	2.0L	PE	Other	Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
CX-5	2.0L	PE	Other	Parking Sensor Module	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Parking Sensor Module	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Parking Sensor Module	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Restraint Control Module	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Restraint Control Module	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Restraint Control Module	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
CX-5	2.0L	PE	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-5	2.0L	PE	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-5	2.0L	PE	Other	Rear Body Control Module	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Rear Body Control Module	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Rear Body Control Module	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
CX-5	2.0L	PE	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
CX-5	2.0L	PE	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
CX-5	2.0L	PE	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
CX-5	2.0L	PE	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
CX-5	2.0L	PE	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
CX-5	2.0L	PE	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
CX-5	2.0L	PE	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
CX-5	2.0L	PE	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Start Stop Unit	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Start Stop Unit	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Start Stop Unit	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
CX-5	2.0L	PE	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
CX-5	2.0L	PE	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
CX-5	2.0L	PE	Other	Front Body Control Module	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Front Body Control Module	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Front Body Control Module	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
CX-5	2.0L	PE	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
CX-5	2.0L	PE	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
CX-5	2.0L	PE	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
CX-5	2.0L	PE	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
CX-5	2.0L	PE	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
CX-5	2.0L	PE	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
CX-5	2.0L	PE	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
CX-5	2.0L	PE	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
AZ-OFFROAD	660cc	K6A-T		2002 Antilock braking system	Read DTC		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2002 Antilock braking system	Erase DTC		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2002 Antilock braking system	Live Data		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2002 Powertrain Control Module	Read DTC		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2002 Powertrain Control Module	Erase DTC		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2002 Powertrain Control Module	Live Data		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2002 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
AZ-OFFROAD	660cc	K6A-T		2002 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
AZ-OFFROAD	660cc	K6A-T		2002 Restraint Control Module	Read DTC		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2002 Restraint Control Module	Erase DTC		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2002 Restraint Control Module	Live Data		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2002 Transmission Control Module	Read DTC		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2002 Transmission Control Module	Erase DTC		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2002 Transmission Control Module	Live Data		V1.20.001
CX-5	2.2L	SH	Other	4X4 Control Module	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	4X4 Control Module	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	4X4 Control Module	Live Data		V1.20.001
CX-5	2.2L	SH	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
CX-5	2.2L	SH	Other	Antilock braking system	Read DTC		V1.20.001

CX-5	2.2L	SH	Other	Antilock braking system	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Antilock braking system	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
CX-5	2.2L	SH	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
CX-5	2.2L	SH	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
CX-5	2.2L	SH	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
CX-5	2.2L	SH	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
CX-5	2.2L	SH	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
CX-5	2.2L	SH	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
CX-5	2.2L	SH	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
CX-5	2.2L	SH	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
CX-5	2.2L	SH	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fr	V1.20.001
CX-5	2.2L	SH	Other	Antilock braking system	Active Test	Stability Control Valve (Right Fr	V1.20.001
CX-5	2.2L	SH	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
CX-5	2.2L	SH	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
CX-5	2.2L	SH	Other	Audio Control Unit	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Audio Control Unit	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Adaptive Front Lighting System	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Amplifier Module	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Amplifier Module	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Blind Spot Monitoring	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Blind Spot Monitoring	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
CX-5	2.2L	SH	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-5	2.2L	SH	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-5	2.2L	SH	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
CX-5	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-5	2.2L	SH	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	BSM OFF Indicator Light	V1.20.001
CX-5	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	Buzzer	V1.20.001
CX-5	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
CX-5	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-5	2.2L	SH	Other	Connectivity Master Unit	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Connectivity Master Unit	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	DC to DC Converter Control Module	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Data Communication Module	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Data Communication Module	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Data Communication Module	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Driver's Seat Module	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Driver's Seat Module	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Driver's Seat Module	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Electric Parking Brake	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Electric Parking Brake	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Electric Parking Brake	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Forward Sensing Camera	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Forward Sensing Camera	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Forward Sensing Camera	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Instrument Cluster	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Instrument Cluster	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Instrument Cluster	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
CX-5	2.2L	SH	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
CX-5	2.2L	SH	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
CX-5	2.2L	SH	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
CX-5	2.2L	SH	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
CX-5	2.2L	SH	Other	Smart City Brake Support	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Smart City Brake Support	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Smart City Brake Support	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Parking Sensor Module	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Parking Sensor Module	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Parking Sensor Module	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Restraint Control Module	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Restraint Control Module	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Restraint Control Module	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
CX-5	2.2L	SH	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-5	2.2L	SH	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-5	2.2L	SH	Other	Rear Body Control Module	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Rear Body Control Module	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Rear Body Control Module	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
CX-5	2.2L	SH	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
CX-5	2.2L	SH	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001

CX-5	2.2L	SH	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
CX-5	2.2L	SH	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
CX-5	2.2L	SH	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
CX-5	2.2L	SH	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
CX-5	2.2L	SH	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
CX-5	2.2L	SH	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Start Stop Unit	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Start Stop Unit	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Start Stop Unit	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
CX-5	2.2L	SH	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
CX-5	2.2L	SH	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
CX-5	2.2L	SH	Other	Front Body Control Module	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Front Body Control Module	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Front Body Control Module	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
CX-5	2.2L	SH	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
CX-5	2.2L	SH	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
CX-5	2.2L	SH	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
CX-5	2.2L	SH	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
CX-5	2.2L	SH	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
CX-5	2.2L	SH	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
CX-5	2.2L	SH	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
CX-5	2.2L	SH	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculatio	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Generator field current control	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
CX-5	2.2L	SH	Other	Transmission Control Module	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Transmission Control Module	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Transmission Control Module	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
CX-5	2.2L	SH	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
CX-5	2.2L	SH	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
CX-5	2.2L	SH	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
CX-5	2.2L	SH	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
CX-5	2.2L	SH	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
CX-5	2.2L	SH	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
CX-5	2.2L	SH	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
CX-5	2.2L	SH	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
CX-5	2.2L	SH	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	4X4 Control Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	4X4 Control Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Antilock braking system	Live Data		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fr	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Stability Control Valve (Right Fr	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Audio Control Unit	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Audio Control Unit	Erase DTC		V1.20.001

MAZDA6 / ATENZA	2.2L	SH	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Adaptive Front Lighting System	Live Data		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Amplifier Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Amplifier Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Amplifier Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Amplifier Module	Active Test	Engine Harmonic Enhancement	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Blind Spot Monitoring	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Blind Spot Monitoring	Live Data		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	BSM OFF Indicator Light	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	Buzzer	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Connectivity Master Unit	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Connectivity Master Unit	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	DC to DC Converter Control Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Driver's Seat Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Driver's Seat Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Driver's Seat Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Electric Parking Brake	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Electric Parking Brake	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Electric Parking Brake	Live Data		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Forward Sensing Camera	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Forward Sensing Camera	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Forward Sensing Camera	Live Data		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Smart City Brake Support	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Smart City Brake Support	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Smart City Brake Support	Live Data		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Parking Sensor Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Parking Sensor Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Parking Sensor Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Rear Body Control Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Rear Body Control Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Rear Body Control Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Start Stop Unit	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Start Stop Unit	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Start Stop Unit	Live Data		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001

MAZDA6 / ATENZA	2.2L	SH	Other	Front Body Control Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Front Body Control Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Front Body Control Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculat	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
MAZDA6 / ATENZA	2.2L	SH	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Antilock braking system	Read DTC		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Antilock braking system	Erase DTC		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Antilock braking system	Live Data		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Antilock braking system	Active Test	Left Front Traction Control Prim	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Antilock braking system	Active Test	Left Front Traction Control Switc	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Antilock braking system	Active Test	Calibrate Master Cylinder Press	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Antilock braking system	Active Test	Traction control priming valve fr	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Antilock braking system	Active Test	Traction control switching valve	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Generic Electronic Module	Read DTC		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Generic Electronic Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Generic Electronic Module	Live Data		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Instrument Cluster	Read DTC		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Instrument Cluster	Erase DTC		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Instrument Cluster	Live Data		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Powertrain Control Module	Read DTC		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Powertrain Control Module	Live Data		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	Other	2012 Powertrain Control Module	Active Test	Injector 4	V1.20.001

MAZDA3 (North America / General)	1.6L	Z6	2012 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2012 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2012 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2012 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2012 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2012 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2012 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2012 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2012 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2012 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2012 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2012 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2012 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2012 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2012 Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2012 Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2012 Restraint Control Module	Read DTC		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2012 Restraint Control Module	Erase DTC		V1.20.001
MAZDA3 (North America / General)	1.6L	Z6	2012 Restraint Control Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Antilock braking system	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Antilock braking system	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Antilock braking system	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Antilock braking system	Active Test	Steering Angle Sensor Initializati	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Antilock braking system	Active Test	Stability Control Active Indicator	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Antilock braking system	Active Test	Right Traction Control Solenoid V	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Amplifier Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Amplifier Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Generic Electronic Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Generic Electronic Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Generic Electronic Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Headlamp Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Headlamp Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Headlamp Control Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Instrument Cluster	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Instrument Cluster	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Instrument Cluster	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Instrument Cluster	Active Test	Display Segment Check	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Intelligent Cruise Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Intelligent Cruise Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Intelligent Cruise Control Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Lighting Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Lighting Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Left Power Sliding Door Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Left Power Sliding Door Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Liftgate/Trunk Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Liftgate/Trunk Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Liftgate/Trunk Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Restraint Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Restraint Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Restraint Control Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Right Power Sliding Door Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Right Power Sliding Door Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Transmission Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Transmission Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Transmission Control Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Transmission Control Module	Active Test	Shift Solenoid 4	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Transmission Control Module	Active Test	Shift Solenoid F_6	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Transmission Control Module	Active Test	shift solenoid E/5	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Transmission Control Module	Active Test	Line Pressure Solenoid B	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Powertrain Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Powertrain Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Remote Keyless Entry	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Remote Keyless Entry	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Remote Keyless Entry	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MPV / Mazda8 (JPN/General)	2.5L	L5	2012 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other 4X4 Control Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other 4X4 Control Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other 4X4 Control Module	Live Data		V1.20.001

MAZDA6 / ATENZA	2.5L	PY	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Antilock braking system	Live Data		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Traction Control Valve (Right Frc	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fro	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Stability Control Valve (Right Frc	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Audio Control Unit	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Audio Control Unit	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Adaptive Front Lighting System	Live Data		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Amplifier Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Amplifier Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Amplifier Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Amplifier Module	Active Test	Engine Harmonic Enhancement	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Blind Spot Monitoring	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Blind Spot Monitoring	Live Data		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	BSM OFF Indicator Light	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Buzzer	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Connectivity Master Unit	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Connectivity Master Unit	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	DC to DC Converter Control Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Driver's Seat Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Driver's Seat Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Driver's Seat Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Electric Parking Brake	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Electric Parking Brake	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Electric Parking Brake	Live Data		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Forward Sensing Camera	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Forward Sensing Camera	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Forward Sensing Camera	Live Data		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Smart City Brake Support	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Smart City Brake Support	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Smart City Brake Support	Live Data		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Parking Sensor Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Parking Sensor Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Parking Sensor Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Rear Body Control Module	Read DTC		V1.20.001

MAZDA6 / ATENZA	2.5L	PY	Other	Rear Body Control Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Rear Body Control Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Start Stop Unit	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Start Stop Unit	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Start Stop Unit	Live Data		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Front Body Control Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Front Body Control Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Front Body Control Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculati	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
MAZDA6 / ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A (A-STOP)	Other	Other	A-STOP System (No Idling System)	Read DTC		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A (A-STOP)	Other	Other	A-STOP System (No Idling System)	Erase DTC		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A (A-STOP)	Other	Other	A-STOP System (No Idling System)	Live Data		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A (A-STOP)	Other	Other	A-STOP System (No Idling System)	Active Test	Starting Motor	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A (A-STOP)	Other	Other	Antilock braking system	Read DTC		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A (A-STOP)	Other	Other	Antilock braking system	Erase DTC		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A (A-STOP)	Other	Other	Antilock braking system	Live Data		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A (A-STOP)	Other	Other	Body Control Module	Read DTC		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A (A-STOP)	Other	Other	Body Control Module	Erase DTC		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A (A-STOP)	Other	Other	Body Control Module	Live Data		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A (A-STOP)	Other	Other	Body Control Module	Active Test	Hazard Control	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A (A-STOP)	Other	Other	Body Control Module	Active Test	Auto Light Control	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A (A-STOP)	Other	Other	Body Control Module	Active Test	Fog Light and Cornering Light C	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A (A-STOP)	Other	Other	Body Control Module	Active Test	Key and Push Start System Illum	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A (A-STOP)	Other	Other	Body Control Module	Active Test	Courtesy Light Control	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A (A-STOP)	Other	Other	Body Control Module	Active Test	Room Light Control	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	K6A (A-STOP)	Other	Other	Body Control Module	Active Test	Door Lock Control	V1.20.001

AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Body Control Module	Active Test	Horn Control	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Body Control Module	Active Test	Rear Defogger Control	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Body Control Module	Active Test	Shift Lock Solenoid	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Instrument Cluster	Read DTC		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Instrument Cluster	Erase DTC		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Instrument Cluster	Live Data		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Instrument Cluster	Active Test	Fuel Meter (Direct)	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Instrument Cluster	Active Test	Tachometer (Direct)	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Instrument Cluster	Active Test	Speedometer (Direct)	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Instrument Cluster	Active Test	Warning Buzzer	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Instrument Cluster	Active Test	Fuel Meter (Sweep)	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Instrument Cluster	Active Test	Tachometer (Sweep)	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Instrument Cluster	Active Test	Speedometer (Sweep)	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Lighting Control Module	Read DTC		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Lighting Control Module	Erase DTC		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Lighting Control Module	Live Data		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Lighting Control Module	Active Test	Leveling Actuator	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Powertrain Control Module	Read DTC		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Powertrain Control Module	Erase DTC		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Powertrain Control Module	Live Data		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Powertrain Control Module	Active Test	Spark Advance	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Powertrain Control Module	Active Test	Variable Cam Timing	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Powertrain Control Module	Active Test	Engine cooling fan operation	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Powertrain Control Module	Active Test	Fuel Pump Duty Cycle	V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Restraint Control Module	Read DTC		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Restraint Control Module	Erase DTC		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Restraint Control Module	Live Data		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Transmission Control Module	Read DTC		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Transmission Control Module	Erase DTC		V1.20.001
AZ-WAGON/CAROL/SCRUM/AZ-OFFROAD/FLAIR V 660cc	R06A-T (A-STOI) Other	Transmission Control Module	Live Data		V1.20.001
PREMACY / MAZDA5	2.0L PE Other	4X4 Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5	2.0L PE Other	4X4 Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Antilock braking system	Read DTC		V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Antilock braking system	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Antilock braking system	Live Data		V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Antilock braking system	Active Test	Longitudinal Acceleration Senso	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Audio Control Unit	Read DTC		V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Audio Control Unit	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Body Control Module / Generic Electr	Read DTC		V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Body Control Module / Generic Electr	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Body Control Module / Generic Electr	Live Data		V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Body Control Module / Generic Electr	Active Test	Front Wiper Relay - Fast speed	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Body Control Module / Generic Electr	Active Test	Front Wiper Relay - Low speed	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Body Control Module / Generic Electr	Active Test	Rear Wiper Relay	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Body Control Module / Generic Electr	Active Test	Turn Lamp - Right	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Body Control Module / Generic Electr	Active Test	Turn Lamp - Left	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Body Control Module / Generic Electr	Active Test	Low Beam Relay	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Body Control Module / Generic Electr	Active Test	Front Fog Lamp Relay	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Body Control Module / Generic Electr	Active Test	Rear Fog Lamp Relay	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Electronic Automatic Temperature Cor	Active Test	Rear Fan	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Instrument Cluster	Read DTC		V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Instrument Cluster	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Instrument Cluster	Live Data		V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Instrument Cluster	Active Test	Alarm	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Instrument Cluster	Active Test	Engine Coolant Temperature Ga	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Instrument Cluster	Active Test	Fuel Gauge	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Instrument Cluster	Active Test	All Liquid Crystal Display Segme	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
PREMACY / MAZDA5	2.0L PE Other	Instrument Cluster	Active Test	Tachometer	V1.20.001

PREMACY / MAZDA5	2.0L	PE	Other	Instrument Cluster	Active Test	All Warning Lights and Indicator	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Left Power Sliding Door Module	Read DTC		V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Left Power Sliding Door Module	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Left Power Sliding Door Module	Live Data		V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Powertrain Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Powertrain Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Powertrain Control Module	Live Data		V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculatio	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Restraint Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Restraint Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Restraint Control Module	Live Data		V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Remote Keyless Entry	Read DTC		V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Remote Keyless Entry	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Remote Keyless Entry	Live Data		V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Right Power Sliding Door Module	Read DTC		V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Right Power Sliding Door Module	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Right Power Sliding Door Module	Live Data		V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Transmission Control Module	Read DTC		V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Transmission Control Module	Erase DTC		V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Transmission Control Module	Live Data		V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
PREMACY / MAZDA5	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
Biante(Japan)	2.0L	PE		2012 Antilock braking system	Read DTC		V1.20.001
Biante(Japan)	2.0L	PE		2012 Antilock braking system	Erase DTC		V1.20.001
Biante(Japan)	2.0L	PE		2012 Antilock braking system	Live Data		V1.20.001
Biante(Japan)	2.0L	PE		2012 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
Biante(Japan)	2.0L	PE		2012 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
Biante(Japan)	2.0L	PE		2012 Antilock braking system	Active Test	Left Front Outlet Valve State	V1.20.001
Biante(Japan)	2.0L	PE		2012 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
Biante(Japan)	2.0L	PE		2012 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
Biante(Japan)	2.0L	PE		2012 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
Biante(Japan)	2.0L	PE		2012 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
Biante(Japan)	2.0L	PE		2012 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
Biante(Japan)	2.0L	PE		2012 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
Biante(Japan)	2.0L	PE		2012 Antilock braking system	Active Test	Right Stability Control Solenoid 1	V1.20.001
Biante(Japan)	2.0L	PE		2012 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
Biante(Japan)	2.0L	PE		2012 Antilock braking system	Active Test	Right Traction Control Solenoid 1	V1.20.001
Biante(Japan)	2.0L	PE		2012 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
Biante(Japan)	2.0L	PE		2012 Electronic Automatic Temperature Cor	Read DTC		V1.20.001
Biante(Japan)	2.0L	PE		2012 Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
Biante(Japan)	2.0L	PE		2012 Electronic Automatic Temperature Cor	Live Data		V1.20.001
Biante(Japan)	2.0L	PE		2012 Electronic Automatic Temperature Cor	Active Test	Air Mix Actuator	V1.20.001
Biante(Japan)	2.0L	PE		2012 Electronic Automatic Temperature Cor	Active Test	REC/FRESH Switch	V1.20.001
Biante(Japan)	2.0L	PE		2012 Electronic Automatic Temperature Cor	Active Test	Blower Motor	V1.20.001
Biante(Japan)	2.0L	PE		2012 Electronic Automatic Temperature Cor	Active Test	Airflow Mode Actuator	V1.20.001
Biante(Japan)	2.0L	PE		2012 Electronic Automatic Temperature Cor	Active Test	Infomation Display	V1.20.001
Biante(Japan)	2.0L	PE		2012 Electronic-Controlled Power Steering	Read DTC		V1.20.001
Biante(Japan)	2.0L	PE		2012 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
Biante(Japan)	2.0L	PE		2012 Electronic-Controlled Power Steering	Live Data		V1.20.001
Biante(Japan)	2.0L	PE		2012 Generic Electronic Module	Read DTC		V1.20.001
Biante(Japan)	2.0L	PE		2012 Generic Electronic Module	Erase DTC		V1.20.001
Biante(Japan)	2.0L	PE		2012 Generic Electronic Module	Live Data		V1.20.001
Biante(Japan)	2.0L	PE		2012 Left Power Sliding Door Module	Read DTC		V1.20.001
Biante(Japan)	2.0L	PE		2012 Left Power Sliding Door Module	Erase DTC		V1.20.001
Biante(Japan)	2.0L	PE		2012 Left Power Sliding Door Module	Live Data		V1.20.001
Biante(Japan)	2.0L	PE		2012 Left Power Sliding Door Module	Read DTC		V1.20.001
Biante(Japan)	2.0L	PE		2012 Powertrain Control Module	Erase DTC		V1.20.001
Biante(Japan)	2.0L	PE		2012 Powertrain Control Module	Live Data		V1.20.001
Biante(Japan)	2.0L	PE		2012 Powertrain Control Module	Active Test	Injector 1	V1.20.001

Biante(Japan)	2.0L	PE		2012 Powertrain Control Module	Active Test	Injector 2	V1.20.001
Biante(Japan)	2.0L	PE		2012 Powertrain Control Module	Active Test	Injector 3	V1.20.001
Biante(Japan)	2.0L	PE		2012 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
Biante(Japan)	2.0L	PE		2012 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
Biante(Japan)	2.0L	PE		2012 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
Biante(Japan)	2.0L	PE		2012 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
Biante(Japan)	2.0L	PE		2012 Powertrain Control Module	Active Test	Injector 4	V1.20.001
Biante(Japan)	2.0L	PE		2012 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
Biante(Japan)	2.0L	PE		2012 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Biante(Japan)	2.0L	PE		2012 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
Biante(Japan)	2.0L	PE		2012 Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
Biante(Japan)	2.0L	PE		2012 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
Biante(Japan)	2.0L	PE		2012 Restraint Control Module	Read DTC		V1.20.001
Biante(Japan)	2.0L	PE		2012 Restraint Control Module	Erase DTC		V1.20.001
Biante(Japan)	2.0L	PE		2012 Restraint Control Module	Live Data		V1.20.001
Biante(Japan)	2.0L	PE		2012 Remote Keyless Entry	Read DTC		V1.20.001
Biante(Japan)	2.0L	PE		2012 Remote Keyless Entry	Erase DTC		V1.20.001
Biante(Japan)	2.0L	PE		2012 Remote Keyless Entry	Live Data		V1.20.001
Biante(Japan)	2.0L	PE		2012 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
Biante(Japan)	2.0L	PE		2012 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
Biante(Japan)	2.0L	PE		2012 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
Biante(Japan)	2.0L	PE		2012 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
Biante(Japan)	2.0L	PE		2012 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
Biante(Japan)	2.0L	PE		2012 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
Biante(Japan)	2.0L	PE		2012 Right Power Sliding Door Module	Read DTC		V1.20.001
Biante(Japan)	2.0L	PE		2012 Right Power Sliding Door Module	Erase DTC		V1.20.001
Biante(Japan)	2.0L	PE		2012 Right Power Sliding Door Module	Live Data		V1.20.001
Biante(Japan)	2.0L	PE		2012 Transmission Control Module	Read DTC		V1.20.001
Biante(Japan)	2.0L	PE		2012 Transmission Control Module	Erase DTC		V1.20.001
Biante(Japan)	2.0L	PE		2012 Transmission Control Module	Live Data		V1.20.001
Biante(Japan)	2.0L	PE		2012 Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
Biante(Japan)	2.0L	PE		2012 Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
Biante(Japan)	2.0L	PE		2012 Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
Biante(Japan)	2.0L	PE		2012 Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
Biante(Japan)	2.0L	PE		2012 Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
Biante(Japan)	2.0L	PE		2012 Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
Biante(Japan)	2.0L	PE		2012 Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
Biante(Japan)	2.0L	PE		2012 Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
Biante(Japan)	2.0L	PE		2012 Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
Biante(Japan)	2.0L	PE		2012 Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Biante(Japan)	2.0L	PE		2012 Instrument Cluster	Read DTC		V1.20.001
Biante(Japan)	2.0L	PE		2012 Instrument Cluster	Erase DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Air Conditioning Electronic control uni	Read DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Air Conditioning Electronic control uni	Erase DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Air Conditioning Electronic control uni	Live Data		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Air Conditioning Electronic control uni	Active Test	Blower Motor Level	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Air Conditioning Electronic control uni	Active Test	Air mix Actuator Target Pulse (D	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Air Conditioning Electronic control uni	Active Test	Air mix Actuator Target Pulse (P	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Air Conditioning Electronic control uni	Active Test	Airflow Mode Actuator Target P	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Air Conditioning Electronic control uni	Active Test	Air Intake Actuator Target Pulse	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Air Conditioning Electronic control uni	Active Test	Electric Compressor Target Spee	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Amplifier Module	Read DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Amplifier Module	Erase DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Blind Spot Monitoring	Read DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Blind Spot Monitoring	Live Data		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	BSM OFF Indicator Light	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	Buzzer	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Connectivity Master Unit	Read DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Connectivity Master Unit	Erase DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronic Air Temperature Controller	Active Test	Electric Water Pump	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronically Controlled Regenerative	Read DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronically Controlled Regenerative	Erase DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronically Controlled Regenerative	Live Data		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronically Controlled Regenerative	Active Test	Motor Relay	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronically Controlled Regenerative	Active Test	Main Relay	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronically Controlled Regenerative	Active Test	Simulator Cut Solenoid Pattern I	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronically Controlled Regenerative	Active Test	Actuator Air Bleeding Pattern D	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronically Controlled Regenerative	Active Test	Power Supply Air Bleeding Patte	V1.20.001

AXELA (Hybrid)	2.0L	PE	Other	Electronically Controlled Regenerative Active Test	Power Supply Air Bleeding Patte	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronically Controlled Regenerative Active Test	Inlet Solenoid (Right Front)	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronically Controlled Regenerative Active Test	Outlet Solenoid (Right Front)	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronically Controlled Regenerative Active Test	Inlet Solenoid (Left Front)	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronically Controlled Regenerative Active Test	Outlet Solenoid (Left Front)	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronically Controlled Regenerative Active Test	Inlet Solenoid (Right Rear)	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronically Controlled Regenerative Active Test	Outlet Solenoid (Right Rear)	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronically Controlled Regenerative Active Test	Outlet Solenoid (Left Rear)	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronically Controlled Regenerative Active Test	Outlet Solenoid (Left Rear)	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronically Controlled Regenerative Active Test	Simulator Cut Solenoid	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronically Controlled Regenerative Active Test	Communicating Solenoid	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronically Controlled Regenerative Active Test	Master Cut Solenoid	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronically Controlled Regenerative Active Test	Regulator Cut Solenoid	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronically Controlled Regenerative Active Test	Compression Linear Solenoid Cu	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronically Controlled Regenerative Active Test	Decompression Linear Solenoid	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronically Controlled Regenerative Active Test	Simulator Cut Solenoid/Master	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronic-Controlled Power Steering	Read DTC	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronic-Controlled Power Steering	Erase DTC	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Electronic-Controlled Power Steering	Live Data	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Forward Sensing Camera	Read DTC	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Forward Sensing Camera	Erase DTC	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Forward Sensing Camera	Live Data	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Hybrid Vehicle Electronic control unit	Read DTC	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Hybrid Vehicle Electronic control unit	Erase DTC	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Hybrid Vehicle Electronic control unit	Live Data	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Hybrid Vehicle Electronic control unit	Active Test	Engine Cranking
AXELA (Hybrid)	2.0L	PE	Other	Hybrid Vehicle Electronic control unit	Active Test	Hybrid Vehicle battery cooling f
AXELA (Hybrid)	2.0L	PE	Other	Hybrid Vehicle Electronic control unit	Active Test	Water pump drive request
AXELA (Hybrid)	2.0L	PE	Other	Hybrid Vehicle Electronic control unit	Active Test	TC terminal
AXELA (Hybrid)	2.0L	PE	Other	Instrument Cluster	Read DTC	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Instrument Cluster	Erase DTC	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Instrument Cluster	Live Data	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator
AXELA (Hybrid)	2.0L	PE	Other	Instrument Cluster	Active Test	Tachometer
AXELA (Hybrid)	2.0L	PE	Other	Instrument Cluster	Active Test	Speedometer
AXELA (Hybrid)	2.0L	PE	Other	Instrument Cluster	Active Test	Alarm
AXELA (Hybrid)	2.0L	PE	Other	Instrument Cluster	Active Test	All LCD Segment
AXELA (Hybrid)	2.0L	PE	Other	Smart City Brake Support	Read DTC	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Smart City Brake Support	Erase DTC	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Smart City Brake Support	Live Data	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Powertrain Control Module	Read DTC	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Powertrain Control Module	Erase DTC	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Powertrain Control Module	Live Data	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN1 Control Signal
AXELA (Hybrid)	2.0L	PE	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec
AXELA (Hybrid)	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN3 Control Signal
AXELA (Hybrid)	2.0L	PE	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculati
AXELA (Hybrid)	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN2 Control Signal
AXELA (Hybrid)	2.0L	PE	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P
AXELA (Hybrid)	2.0L	PE	Other	Powertrain Control Module	Active Test	Fuel pump
AXELA (Hybrid)	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 4
AXELA (Hybrid)	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 3
AXELA (Hybrid)	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 2
AXELA (Hybrid)	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 1
AXELA (Hybrid)	2.0L	PE	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve
AXELA (Hybrid)	2.0L	PE	Other	Powertrain Control Module	Active Test	Desired RPM
AXELA (Hybrid)	2.0L	PE	Other	Parking lock Electronic control unit	Read DTC	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Parking lock Electronic control unit	Erase DTC	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Parking lock Electronic control unit	Live Data	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Restraint Control Module	Read DTC	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Restraint Control Module	Erase DTC	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Restraint Control Module	Live Data	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Rear Vehicle Monitoring	Read DTC	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Rear Vehicle Monitoring	Erase DTC	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Rear Vehicle Monitoring	Live Data	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Rear Vehicle Monitoring	Active Test	Buzzer
AXELA (Hybrid)	2.0L	PE	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left
AXELA (Hybrid)	2.0L	PE	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right
AXELA (Hybrid)	2.0L	PE	Other	Rear Body Control Module	Read DTC	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Rear Body Control Module	Erase DTC	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Rear Body Control Module	Live Data	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)
AXELA (Hybrid)	2.0L	PE	Other	Rear Body Control Module	Active Test	Rear Fog Lamp
AXELA (Hybrid)	2.0L	PE	Other	Rear Body Control Module	Active Test	Reverse Lamp
AXELA (Hybrid)	2.0L	PE	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)
AXELA (Hybrid)	2.0L	PE	Other	Rear Body Control Module	Active Test	Burglar Horn Relay
AXELA (Hybrid)	2.0L	PE	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay
AXELA (Hybrid)	2.0L	PE	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp
AXELA (Hybrid)	2.0L	PE	Other	Rear Body Control Module	Active Test	All Door Lock Motor
AXELA (Hybrid)	2.0L	PE	Other	Start Stop Unit	Read DTC	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Start Stop Unit	Erase DTC	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Start Stop Unit	Live Data	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Start Stop Unit	Active Test	Outer Buzzer
AXELA (Hybrid)	2.0L	PE	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)
AXELA (Hybrid)	2.0L	PE	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron
AXELA (Hybrid)	2.0L	PE	Other	Front Body Control Module	Read DTC	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Front Body Control Module	Erase DTC	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Front Body Control Module	Live Data	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Front Body Control Module	Active Test	ESS Status
AXELA (Hybrid)	2.0L	PE	Other	Front Body Control Module	Active Test	Hazard Lamp
AXELA (Hybrid)	2.0L	PE	Other	Front Body Control Module	Active Test	Front Fog Lamp
AXELA (Hybrid)	2.0L	PE	Other	Front Body Control Module	Active Test	Headlight

AXELA (Hybrid)	2.0L	PE	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Air Conditioning Electronic control unit	Read DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Air Conditioning Electronic control unit	Erase DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Air Conditioning Electronic control unit	Live Data		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Air Conditioning Electronic control unit	Active Test	Blower Motor Level	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Air Conditioning Electronic control unit	Active Test	Air mix Actuator Target Pulse (D	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Air Conditioning Electronic control unit	Active Test	Air mix Actuator Target Pulse (P	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Air Conditioning Electronic control unit	Active Test	Airflow Mode Actuator Target P	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Air Conditioning Electronic control unit	Active Test	Air Intake Actuator Target Pulse	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Air Conditioning Electronic control unit	Active Test	Electric Compressor Target Spee	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Amplifier Module	Read DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Amplifier Module	Erase DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Blind Spot Monitoring	Read DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Blind Spot Monitoring	Live Data		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	BSM OFF Indicator Light	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Buzzer	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Connectivity Master Unit	Read DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Connectivity Master Unit	Erase DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronic Air Temperature Controller	Active Test	Electric Water Pump	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronically Controlled Regenerative	Read DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronically Controlled Regenerative	Erase DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronically Controlled Regenerative	Live Data		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronically Controlled Regenerative	Active Test	Motor Relay	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronically Controlled Regenerative	Active Test	Main Relay	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronically Controlled Regenerative	Active Test	Simulator Cut Solenoid Pattern I	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronically Controlled Regenerative	Active Test	Actuator Air Bleeding Pattern D	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronically Controlled Regenerative	Active Test	Power Supply Air Bleeding Patte	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronically Controlled Regenerative	Active Test	Power Supply Air Bleeding Patte	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronically Controlled Regenerative	Active Test	Inlet Solenoid (Right Front)	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronically Controlled Regenerative	Active Test	Outlet Solenoid (Right Front)	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronically Controlled Regenerative	Active Test	Inlet Solenoid (Left Front)	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronically Controlled Regenerative	Active Test	Outlet Solenoid (Left Front)	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronically Controlled Regenerative	Active Test	Inlet Solenoid (Right Rear)	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronically Controlled Regenerative	Active Test	Outlet Solenoid (Right Rear)	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronically Controlled Regenerative	Active Test	Inlet Solenoid (Left Rear)	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronically Controlled Regenerative	Active Test	Outlet Solenoid (Left Rear)	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronically Controlled Regenerative	Active Test	Simulator Cut Solenoid	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronically Controlled Regenerative	Active Test	Communicating Solenoid	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronically Controlled Regenerative	Active Test	Master Cut Solenoid	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronically Controlled Regenerative	Active Test	Regulator Cut Solenoid	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronically Controlled Regenerative	Active Test	Compression Linear Solenoid Cu	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronically Controlled Regenerative	Active Test	Decompression Linear Solenoid	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronically Controlled Regenerative	Active Test	Simulator Cut Solenoid/Master C	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Forward Sensing Camera	Read DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Forward Sensing Camera	Erase DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Forward Sensing Camera	Live Data		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Hybrid Vehicle Electronic control unit	Read DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Hybrid Vehicle Electronic control unit	Erase DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Hybrid Vehicle Electronic control unit	Live Data		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Hybrid Vehicle Electronic control unit	Active Test	Engine Cranking	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Hybrid Vehicle Electronic control unit	Active Test	Hybrid Vehicle battery cooling f	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Hybrid Vehicle Electronic control unit	Active Test	Water pump drive request	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Hybrid Vehicle Electronic control unit	Active Test	TC terminal	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Instrument Cluster	Read DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Instrument Cluster	Erase DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Instrument Cluster	Live Data		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001

AXELA (Hybrid)	2.5L	PY	Other	Smart City Brake Support	Read DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Smart City Brake Support	Erase DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Smart City Brake Support	Live Data		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Powertrain Control Module	Read DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Powertrain Control Module	Erase DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Powertrain Control Module	Live Data		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculatio	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Parking lock Electronic control unit	Read DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Parking lock Electronic control unit	Erase DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Parking lock Electronic control unit	Live Data		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Restraint Control Module	Read DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Restraint Control Module	Erase DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Restraint Control Module	Live Data		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Rear Body Control Module	Read DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Rear Body Control Module	Erase DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Rear Body Control Module	Live Data		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Start Stop Unit	Read DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Start Stop Unit	Erase DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Start Stop Unit	Live Data		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Front Body Control Module	Read DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Front Body Control Module	Erase DTC		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Front Body Control Module	Live Data		V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
AXELA (Hybrid)	2.5L	PY	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Air Conditioning Electronic control unit	Read DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Air Conditioning Electronic control unit	Erase DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Air Conditioning Electronic control unit	Live Data		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Air Conditioning Electronic control unit	Active Test	Blower Motor Level	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Air Conditioning Electronic control unit	Active Test	Air mix Actuator Target Pulse (D	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Air Conditioning Electronic control unit	Active Test	Air mix Actuator Target Pulse (P	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Air Conditioning Electronic control unit	Active Test	Airflow Mode Actuator Target P	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Air Conditioning Electronic control unit	Active Test	Air Intake Actuator Target Pulse	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Air Conditioning Electronic control unit	Active Test	Electric Compressor Target Spee	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Amplifier Module	Read DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Amplifier Module	Erase DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Blind Spot Monitoring	Read DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Blind Spot Monitoring	Live Data		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	BSM OFF Indicator Light	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	Buzzer	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001

AXELA (Hybrid)	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Connectivity Master Unit	Read DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Connectivity Master Unit	Erase DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronic Air Temperature Controller	Active Test	Electric Water Pump	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronically Controlled Regenerative	Read DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronically Controlled Regenerative	Erase DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronically Controlled Regenerative	Live Data		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronically Controlled Regenerative	Active Test	Motor Relay	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronically Controlled Regenerative	Active Test	Main Relay	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronically Controlled Regenerative	Active Test	Simulator Cut Solenoid Pattern I	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronically Controlled Regenerative	Active Test	Actuator Air Bleeding Pattern D	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronically Controlled Regenerative	Active Test	Power Supply Air Bleeding Patte	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronically Controlled Regenerative	Active Test	Power Supply Air Bleeding Patte	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronically Controlled Regenerative	Active Test	Inlet Solenoid (Right Front)	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronically Controlled Regenerative	Active Test	Outlet Solenoid (Right Front)	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronically Controlled Regenerative	Active Test	Inlet Solenoid (Left Front)	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronically Controlled Regenerative	Active Test	Outlet Solenoid (Left Front)	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronically Controlled Regenerative	Active Test	Inlet Solenoid (Right Rear)	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronically Controlled Regenerative	Active Test	Outlet Solenoid (Right Rear)	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronically Controlled Regenerative	Active Test	Inlet Solenoid (Left Rear)	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronically Controlled Regenerative	Active Test	Outlet Solenoid (Left Rear)	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronically Controlled Regenerative	Active Test	Simulator Cut Solenoid	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronically Controlled Regenerative	Active Test	Communicating Solenoid	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronically Controlled Regenerative	Active Test	Master Cut Solenoid	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronically Controlled Regenerative	Active Test	Regulator Cut Solenoid	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronically Controlled Regenerative	Active Test	Compression Linear Solenoid Cu	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronically Controlled Regenerative	Active Test	Decompression Linear Solenoid	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronically Controlled Regenerative	Active Test	Simulator Cut Solenoid/Master	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Forward Sensing Camera	Read DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Forward Sensing Camera	Erase DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Forward Sensing Camera	Live Data		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Hybrid Vehicle Electronic control unit	Read DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Hybrid Vehicle Electronic control unit	Erase DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Hybrid Vehicle Electronic control unit	Live Data		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Hybrid Vehicle Electronic control unit	Active Test	Engine Cranking	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Hybrid Vehicle Electronic control unit	Active Test	Hybrid Vehicle battery cooling f	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Hybrid Vehicle Electronic control unit	Active Test	Water pump drive request	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Hybrid Vehicle Electronic control unit	Active Test	TC terminal	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Instrument Cluster	Read DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Instrument Cluster	Erase DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Instrument Cluster	Live Data		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Smart City Brake Support	Read DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Smart City Brake Support	Erase DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Smart City Brake Support	Live Data		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Powertrain Control Module	Read DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Powertrain Control Module	Erase DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Powertrain Control Module	Live Data		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculati	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Parking lock Electronic control unit	Read DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Parking lock Electronic control unit	Erase DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Parking lock Electronic control unit	Live Data		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Restraint Control Module	Read DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Restraint Control Module	Erase DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Restraint Control Module	Live Data		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Rear Body Control Module	Read DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Rear Body Control Module	Erase DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Rear Body Control Module	Live Data		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001

AXELA (Hybrid)	2.2L	SH	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Start Stop Unit	Read DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Start Stop Unit	Erase DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Start Stop Unit	Live Data		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Front Body Control Module	Read DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Front Body Control Module	Erase DTC		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Front Body Control Module	Live Data		V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
AXELA (Hybrid)	2.2L	SH	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Air Conditioning Electronic control unii	Read DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Air Conditioning Electronic control unii	Erase DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Air Conditioning Electronic control unii	Live Data		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Air Conditioning Electronic control unii	Active Test	Blower Motor Level	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Air Conditioning Electronic control unii	Active Test	Air mix Actuator Target Pulse (D	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Air Conditioning Electronic control unii	Active Test	Air mix Actuator Target Pulse (P	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Air Conditioning Electronic control unii	Active Test	Airflow Motor Actuator Target P	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Air Conditioning Electronic control unii	Active Test	Air Intake Actuator Target Pulse	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Air Conditioning Electronic control unii	Active Test	Electric Compressor Target Spee	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Amplifier Module	Read DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Amplifier Module	Erase DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Blind Spot Monitoring	Read DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Blind Spot Monitoring	Live Data		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Blind Spot Monitoring (Left)	Active Test	BSM OFF Indicator Light	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Blind Spot Monitoring (Left)	Active Test	Buzzer	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Connectivity Master Unit	Read DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Connectivity Master Unit	Erase DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronic Air Temperature Controller	Active Test	Electric Water Pump	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronically Controlled Regenerative	Read DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronically Controlled Regenerative	Erase DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronically Controlled Regenerative	Live Data		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronically Controlled Regenerative	Active Test	Motor Relay	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronically Controlled Regenerative	Active Test	Main Relay	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronically Controlled Regenerative	Active Test	Simulator Cut Solenoid Pattern I	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronically Controlled Regenerative	Active Test	Actuator Air Bleeding Pattern Di	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronically Controlled Regenerative	Active Test	Power Supply Air Bleeding Patte	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronically Controlled Regenerative	Active Test	Power Supply Air Bleeding Patte	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronically Controlled Regenerative	Active Test	Inlet Solenoid (Right Front)	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronically Controlled Regenerative	Active Test	Outlet Solenoid (Right Front)	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronically Controlled Regenerative	Active Test	Inlet Solenoid (Left Front)	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronically Controlled Regenerative	Active Test	Outlet Solenoid (Left Front)	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronically Controlled Regenerative	Active Test	Inlet Solenoid (Right Rear)	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronically Controlled Regenerative	Active Test	Outlet Solenoid (Right Rear)	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronically Controlled Regenerative	Active Test	Inlet Solenoid (Left Rear)	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronically Controlled Regenerative	Active Test	Outlet Solenoid (Left Rear)	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronically Controlled Regenerative	Active Test	Simulator Cut Solenoid	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronically Controlled Regenerative	Active Test	Communicating Solenoid	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronically Controlled Regenerative	Active Test	Master Cut Solenoid	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronically Controlled Regenerative	Active Test	Regulator Cut Solenoid	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronically Controlled Regenerative	Active Test	Compression Linear Solenoid Cu	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronically Controlled Regenerative	Active Test	Decompression Linear Solenoid	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronically Controlled Regenerative	Active Test	Simulator Cut Solenoid/Master	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001

AXELA (Hybrid)	1.3L	P3	Other	Forward Sensing Camera	Read DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Forward Sensing Camera	Erase DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Forward Sensing Camera	Live Data		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Hybrid Vehicle Electronic control unit	Read DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Hybrid Vehicle Electronic control unit	Erase DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Hybrid Vehicle Electronic control unit	Live Data		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Hybrid Vehicle Electronic control unit	Active Test	Engine Cranking	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Hybrid Vehicle Electronic control unit	Active Test	Hybrid Vehicle battery cooling f	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Hybrid Vehicle Electronic control unit	Active Test	Water pump drive request	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Hybrid Vehicle Electronic control unit	Active Test	TC terminal	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Instrument Cluster	Read DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Instrument Cluster	Erase DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Instrument Cluster	Live Data		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Smart City Brake Support	Read DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Smart City Brake Support	Erase DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Smart City Brake Support	Live Data		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Powertrain Control Module	Read DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Powertrain Control Module	Erase DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Powertrain Control Module	Live Data		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculatio	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Parking lock Electronic control unit	Read DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Parking lock Electronic control unit	Erase DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Parking lock Electronic control unit	Live Data		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Restraint Control Module	Read DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Restraint Control Module	Erase DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Restraint Control Module	Live Data		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Rear Body Control Module	Read DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Rear Body Control Module	Erase DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Rear Body Control Module	Live Data		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Start Stop Unit	Read DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Start Stop Unit	Erase DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Start Stop Unit	Live Data		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Front Body Control Module	Read DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Front Body Control Module	Erase DTC		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Front Body Control Module	Live Data		V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
AXELA (Hybrid)	1.3L	P3	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	A-STOP System (No Idling System)	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	A-STOP System (No Idling System)	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Antilock braking system	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Antilock braking system	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Antilock braking system	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	HOT\$AVAS	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	HOT\$AVAS	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	HOT\$AVAS	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	HOT\$AVAS	Active Test	Speaker	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Body Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Body Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Body Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Body Control Module	Active Test	Hazard Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Body Control Module	Active Test	Key and Push Start System Illum	V1.20.001

CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Body Control Module	Active Test	Courtesy Light Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Body Control Module	Active Test	Room Light Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Body Control Module	Active Test	Door Lock Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Body Control Module	Active Test	Door Unlock Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Body Control Module	Active Test	Buzzer Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Body Control Module	Active Test	Alarm Indicator Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Body Control Module	Active Test	Horn Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Body Control Module	Active Test	Rear Defogger Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Body Control Module	Active Test	Shift Lock Solenoid	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Battery Management Unit	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Battery Management Unit	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Battery Management Unit	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Central Gateway	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Central Gateway	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Central Gateway	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	HOT\$CSW	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	HOT\$CSW	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	HOT\$CSW	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Rader Brake Support	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Rader Brake Support	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Rader Brake Support	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Head Up Display	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Head Up Display	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Head Up Display	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Head Up Display	Active Test	Segment	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Head Up Display	Active Test	Luminance	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Head Up Display	Active Test	Display	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Instrument Cluster	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Instrument Cluster	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Instrument Cluster	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Instrument Cluster	Active Test	Fuel Meter (Direct)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Instrument Cluster	Active Test	Tachometer (Direct)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Instrument Cluster	Active Test	Speedometer (Direct)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Instrument Cluster	Active Test	Warning Buzzer	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Instrument Cluster	Active Test	Fuel Meter (Sweep)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Instrument Cluster	Active Test	Tachometer (Sweep)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Instrument Cluster	Active Test	Speedometer (Sweep)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Integrated Starter Generator	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Integrated Starter Generator	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Integrated Starter Generator	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Lighting Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Lighting Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Lighting Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Lighting Control Module	Active Test	Leveling Actuator	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	HOT\$MFL	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	HOT\$MFL	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	HOT\$MFL	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	HOT\$MFL	Active Test	High Beam Assist Inspection Mo	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Powertrain Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Powertrain Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Powertrain Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Powertrain Control Module	Active Test	Spark Advance	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Restraint Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Restraint Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Restraint Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Rear Sonar Brake Support	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Rear Sonar Brake Support	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Rear Sonar Brake Support	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Stereo Camera	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Stereo Camera	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Stereo Camera	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Transmission Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Transmission Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	Transmission Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	View Monitor Camera	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	View Monitor Camera	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T (A-STOI) Other	View Monitor Camera	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP) Other	A-STOP System (No Idling System)	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP) Other	A-STOP System (No Idling System)	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP) Other	Antilock braking system	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP) Other	Antilock braking system	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP) Other	Antilock braking system	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP) Other	HOT\$AVAS	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP) Other	HOT\$AVAS	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP) Other	HOT\$AVAS	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP) Other	HOT\$AVAS	Active Test	Speaker	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP) Other	Body Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP) Other	Body Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP) Other	Body Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP) Other	Body Control Module	Active Test	Hazard Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP) Other	Body Control Module	Active Test	Key and Push Start System Illum	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP) Other	Body Control Module	Active Test	Courtesy Light Control	V1.20.001

CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Body Control Module	Active Test	Room Light Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Body Control Module	Active Test	Door Lock Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Body Control Module	Active Test	Door Unlock Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Body Control Module	Active Test	Buzzer Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Body Control Module	Active Test	Alarm Indicator Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Body Control Module	Active Test	Horn Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Body Control Module	Active Test	Rear Defogger Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Body Control Module	Active Test	Shift Lock Solenoid	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Battery Management Unit	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Battery Management Unit	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Battery Management Unit	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Central Gateway	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Central Gateway	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Central Gateway	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	HOT\$CSW	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	HOT\$CSW	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	HOT\$CSW	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Rader Brake Support	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Rader Brake Support	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Rader Brake Support	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Head Up Display	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Head Up Display	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Head Up Display	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Head Up Display	Active Test	Segment	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Head Up Display	Active Test	Luminance	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Head Up Display	Active Test	Display	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Instrument Cluster	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Instrument Cluster	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Integrated Starter Generator	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Integrated Starter Generator	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Integrated Starter Generator	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Lighting Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Lighting Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Lighting Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Lighting Control Module	Active Test	Leveling Actuator	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	HOT\$MFL	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	HOT\$MFL	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	HOT\$MFL	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	HOT\$MFL	Active Test	High Beam Assist Inspection Mo	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Powertrain Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Powertrain Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Powertrain Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Powertrain Control Module	Active Test	Spark Advance	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Powertrain Control Module	Active Test	VVT Control EX	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Powertrain Control Module	Active Test	VVT Control IN	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Restraint Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Restraint Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Restraint Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Rear Sonar Brake Support	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Rear Sonar Brake Support	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Rear Sonar Brake Support	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Stereo Camera	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Stereo Camera	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Stereo Camera	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Transmission Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Transmission Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Transmission Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	View Monitor Camera	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	View Monitor Camera	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	View Monitor Camera	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	A-STOP System (No Idling System)	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	A-STOP System (No Idling System)	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	A-STOP System (No Idling System)	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	A-STOP System (No Idling System)	Active Test	Starting Motor	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Antilock braking system	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Antilock braking system	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Antilock braking system	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	HOT\$AVAS	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	HOT\$AVAS	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	HOT\$AVAS	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	HOT\$AVAS	Active Test	Speaker	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Body Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Body Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Body Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Body Control Module	Active Test	Hazard Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Body Control Module	Active Test	Key and Push Start System Illum	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Body Control Module	Active Test	Courtesy Light Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Body Control Module	Active Test	Room Light Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Body Control Module	Active Test	Door Lock Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Body Control Module	Active Test	Door Unlock Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Body Control Module	Active Test	Buzzer Control	V1.20.001

CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Body Control Module	Active Test	Alarm Indicator Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Body Control Module	Active Test	Horn Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Body Control Module	Active Test	Rear Defogger Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Body Control Module	Active Test	Shift Lock Solenoid	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Battery Management Unit	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Battery Management Unit	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Battery Management Unit	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Central Gateway	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Central Gateway	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Central Gateway	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	HOT\$CSW	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	HOT\$CSW	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	HOT\$CSW	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Rader Brake Support	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Rader Brake Support	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Rader Brake Support	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Head Up Display	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Head Up Display	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Head Up Display	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Head Up Display	Active Test	Segment	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Head Up Display	Active Test	Luminance	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Head Up Display	Active Test	Display	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Instrument Cluster	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Instrument Cluster	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Instrument Cluster	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Instrument Cluster	Active Test	Fuel Meter (Direct)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Instrument Cluster	Active Test	Tachometer (Direct)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Instrument Cluster	Active Test	Speedometer (Direct)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Instrument Cluster	Active Test	Warning Buzzer	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Instrument Cluster	Active Test	Fuel Meter (Sweep)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Instrument Cluster	Active Test	Tachometer (Sweep)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Instrument Cluster	Active Test	Speedometer (Sweep)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Integrated Starter Generator	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Integrated Starter Generator	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Integrated Starter Generator	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Lighting Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Lighting Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Lighting Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Lighting Control Module	Active Test	Leveling Actuator	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	HOT\$MFL	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	HOT\$MFL	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	HOT\$MFL	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	HOT\$MFL	Active Test	High Beam Assist Inspection Mo	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Powertrain Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Powertrain Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Powertrain Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Powertrain Control Module	Active Test	Spark Advance	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Restraint Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Restraint Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Restraint Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Rear Sonar Brake Support	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Rear Sonar Brake Support	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Rear Sonar Brake Support	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Stereo Camera	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Stereo Camera	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Stereo Camera	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Transmission Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Transmission Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	Transmission Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	View Monitor Camera	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	View Monitor Camera	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	K6A	Other	View Monitor Camera	Live Data		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	4X4 Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	4X4 Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Antilock braking system	Live Data		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fro	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Stability Control Valve (Right Frc	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001

MAZDA3 / AXELA	2.2L	SH	Other	Audio Control Unit	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Audio Control Unit	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Amplifier Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Amplifier Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Amplifier Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Amplifier Module	Active Test	Engine Harmonic Enhancement	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Blind Spot Monitoring	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Blind Spot Monitoring	Live Data		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	BSM OFF Indicator Light	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	Buzzer	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Connectivity Master Unit	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Connectivity Master Unit	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	DC to DC Converter Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Driver's Seat Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Driver's Seat Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Driver's Seat Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Electric Parking Brake	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Electric Parking Brake	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Electric Parking Brake	Live Data		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Forward Sensing Camera	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Forward Sensing Camera	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Forward Sensing Camera	Live Data		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Smart City Brake Support	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Smart City Brake Support	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Smart City Brake Support	Live Data		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Parking Sensor Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Parking Sensor Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Parking Sensor Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Restraint Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Rear Body Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Rear Body Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Rear Body Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Start Stop Unit	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Start Stop Unit	Erase DTC		V1.20.001

MAZDA3 / AXELA	2.2L	SH	Other	Start Stop Unit	Live Data		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Front Body Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Front Body Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Front Body Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
MAZDA3 / AXELA	2.2L	SH	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	4X4 Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	4X4 Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Antilock braking system	Live Data		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fro	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Stability Control Valve (Right Fr	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Audio Control Unit	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Audio Control Unit	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Amplifier Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Amplifier Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Amplifier Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Amplifier Module	Active Test	Engine Harmonic Enhancement	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Blind Spot Monitoring	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Blind Spot Monitoring	Live Data		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	BSM OFF Indicator Light	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Buzzer	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Connectivity Master Unit	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Connectivity Master Unit	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	DC to DC Converter Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Driver's Seat Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Driver's Seat Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Driver's Seat Module	Live Data		V1.20.001

MAZDA3 / AXELA	2.5L	PY	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Electric Parking Brake	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Electric Parking Brake	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Electric Parking Brake	Live Data		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Forward Sensing Camera	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Forward Sensing Camera	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Forward Sensing Camera	Live Data		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Smart City Brake Support	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Smart City Brake Support	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Smart City Brake Support	Live Data		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Parking Sensor Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Parking Sensor Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Parking Sensor Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Restraint Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Rear Body Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Rear Body Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Rear Body Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Start Stop Unit	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Start Stop Unit	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Start Stop Unit	Live Data		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Front Body Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Front Body Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Front Body Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
MAZDA3 / AXELA	2.5L	PY	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	4X4 Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	4X4 Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Antilock braking system	Live Data		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001

MAZDA3 / AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fro	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Stability Control Valve (Right Frc	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Audio Control Unit	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Audio Control Unit	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Amplifier Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Amplifier Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Amplifier Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Amplifier Module	Active Test	Engine Harmonic Enhancement	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Blind Spot Monitoring	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Blind Spot Monitoring	Live Data		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	BSM OFF Indicator Light	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	Buzzer	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Connectivity Master Unit	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Connectivity Master Unit	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	DC to DC Converter Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Driver's Seat Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Driver's Seat Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Driver's Seat Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Electric Parking Brake	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Electric Parking Brake	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Electric Parking Brake	Live Data		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Forward Sensing Camera	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Forward Sensing Camera	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Forward Sensing Camera	Live Data		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Smart City Brake Support	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Smart City Brake Support	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Smart City Brake Support	Live Data		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Parking Sensor Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Parking Sensor Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Parking Sensor Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Restraint Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Rear Body Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Rear Body Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Rear Body Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001

MAZDA3 / AXELA	2.0L	PE	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Start Stop Unit	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Start Stop Unit	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Start Stop Unit	Live Data		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Front Body Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Front Body Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Front Body Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
MAZDA3 / AXELA	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	4X4 Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	4X4 Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Antilock braking system	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fro	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Antilock braking system	Active Test	Stability Control Valve (Right Fr	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Audio Control Unit	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Audio Control Unit	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Amplifier Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Amplifier Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Amplifier Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Amplifier Module	Active Test	Engine Harmonic Enhancement	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Blind Spot Monitoring	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Blind Spot Monitoring	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Blind Spot Monitoring (Left)	Active Test	BSM OFF Indicator Light	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Blind Spot Monitoring (Left)	Active Test	Buzzer	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001

MAZDA3 / AXELA	1.6L	Z6	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Connectivity Master Unit	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Connectivity Master Unit	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	DC to DC Converter Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Data Communication Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Data Communication Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Data Communication Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Driver's Seat Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Driver's Seat Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Driver's Seat Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Electric Parking Brake	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Electric Parking Brake	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Electric Parking Brake	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Forward Sensing Camera	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Forward Sensing Camera	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Forward Sensing Camera	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Head Up Display	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Head Up Display	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Head Up Display	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Head Up Display	Active Test	Maintenance mode	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Smart City Brake Support	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Smart City Brake Support	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Smart City Brake Support	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Parking Sensor Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Parking Sensor Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Parking Sensor Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Restraint Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Rear Body Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Rear Body Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Rear Body Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Start Stop Unit	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Start Stop Unit	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Start Stop Unit	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Front Body Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Front Body Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Front Body Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001

MAZDA3 / AXELA	1.6L	Z6	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
MAZDA3 / AXELA	1.6L	Z6	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	4X4 Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	4X4 Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Antilock braking system	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fro	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Stability Control Valve (Right Fr	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Audio Control Unit	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Audio Control Unit	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Amplifier Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Amplifier Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Amplifier Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Amplifier Module	Active Test	Engine Harmonic Enhancement	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Blind Spot Monitoring	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Blind Spot Monitoring	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Blind Spot Monitoring (Left)	Active Test	BSM OFF Indicator Light	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Blind Spot Monitoring (Left)	Active Test	Buzzer	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Connectivity Master Unit	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Connectivity Master Unit	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	DC to DC Converter Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Driver's Seat Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Driver's Seat Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Driver's Seat Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Electric Parking Brake	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Electric Parking Brake	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Electric Parking Brake	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Forward Sensing Camera	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Forward Sensing Camera	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Forward Sensing Camera	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Smart City Brake Support	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Smart City Brake Support	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Smart City Brake Support	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Parking Sensor Module	Read DTC		V1.20.001

MAZDA3 / AXELA	1.5L	P5	Other	Parking Sensor Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Parking Sensor Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Restraint Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Rear Body Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Rear Body Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Rear Body Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Start Stop Unit	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Start Stop Unit	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Start Stop Unit	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Front Body Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Front Body Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Front Body Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
MAZDA3 / AXELA	1.5L	P5	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
VX-1	1.4L	K14B	Other	Antilock braking system	Read DTC		V1.20.001
VX-1	1.4L	K14B	Other	Antilock braking system	Erase DTC		V1.20.001
VX-1	1.4L	K14B	Other	Antilock braking system	Live Data		V1.20.001
VX-1	1.4L	K14B	Other	Body Control Module	Read DTC		V1.20.001
VX-1	1.4L	K14B	Other	Body Control Module	Erase DTC		V1.20.001
VX-1	1.4L	K14B	Other	Body Control Module	Live Data		V1.20.001
VX-1	1.4L	K14B	Other	Body Control Module	Active Test	Hazard Control	V1.20.001
VX-1	1.4L	K14B	Other	Body Control Module	Active Test	Room Light Control	V1.20.001
VX-1	1.4L	K14B	Other	Body Control Module	Active Test	Door Lock Control	V1.20.001
VX-1	1.4L	K14B	Other	Body Control Module	Active Test	Door Unlock Control	V1.20.001
VX-1	1.4L	K14B	Other	Body Control Module	Active Test	Buzzer Control	V1.20.001
VX-1	1.4L	K14B	Other	Body Control Module	Active Test	Alarm Indicator Control	V1.20.001
VX-1	1.4L	K14B	Other	Body Control Module	Active Test	Horn Control	V1.20.001
VX-1	1.4L	K14B	Other	Body Control Module	Active Test	Rear Defogger Control	V1.20.001
VX-1	1.4L	K14B	Other	Body Control Module	Active Test	Shift Lock Solenoid	V1.20.001
VX-1	1.4L	K14B	Other	Body Control Module	Active Test	Rear End Door (Trunk) Open	V1.20.001
VX-1	1.4L	K14B	Other	Body Control Module	Active Test	Rear wiper	V1.20.001
VX-1	1.4L	K14B	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
VX-1	1.4L	K14B	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
VX-1	1.4L	K14B	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
VX-1	1.4L	K14B	Other	Instrument Cluster	Read DTC		V1.20.001
VX-1	1.4L	K14B	Other	Instrument Cluster	Erase DTC		V1.20.001
VX-1	1.4L	K14B	Other	Instrument Cluster	Live Data		V1.20.001
VX-1	1.4L	K14B	Other	Instrument Cluster	Active Test	ECT Meter (Direct)	V1.20.001
VX-1	1.4L	K14B	Other	Instrument Cluster	Active Test	Fuel Meter (Direct)	V1.20.001
VX-1	1.4L	K14B	Other	Instrument Cluster	Active Test	Tachometer (Direct)	V1.20.001
VX-1	1.4L	K14B	Other	Instrument Cluster	Active Test	Warning Buzzer	V1.20.001
VX-1	1.4L	K14B	Other	Instrument Cluster	Active Test	Fuel Meter (Sweep)	V1.20.001
VX-1	1.4L	K14B	Other	Instrument Cluster	Active Test	Tachometer (Sweep)	V1.20.001
VX-1	1.4L	K14B	Other	Instrument Cluster	Active Test	Speedometer (Sweep)	V1.20.001
VX-1	1.4L	K14B	Other	Instrument Cluster	Active Test	ECT Meter (Sweep)	V1.20.001
VX-1	1.4L	K14B	Other	Instrument Cluster	Active Test	Speedometer (Direct)	V1.20.001
VX-1	1.4L	K14B	Other	Powertrain Control Module	Read DTC		V1.20.001
VX-1	1.4L	K14B	Other	Powertrain Control Module	Erase DTC		V1.20.001

VX-1	1.4L	K14B	Other	Powertrain Control Module	Live Data		V1.20.001
VX-1	1.4L	K14B	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
VX-1	1.4L	K14B	Other	Powertrain Control Module	Active Test	Spark Advance	V1.20.001
VX-1	1.4L	K14B	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
VX-1	1.4L	K14B	Other	Powertrain Control Module	Active Test	Variable Cam Timing	V1.20.001
VX-1	1.4L	K14B	Other	Powertrain Control Module	Active Test	Engine cooling fan operation	V1.20.001
VX-1	1.4L	K14B	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
VX-1	1.4L	K14B	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
VX-1	1.4L	K14B	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
VX-1	1.4L	K14B	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
VX-1	1.4L	K14B	Other	Restraint Control Module	Read DTC		V1.20.001
VX-1	1.4L	K14B	Other	Restraint Control Module	Erase DTC		V1.20.001
VX-1	1.4L	K14B	Other	Restraint Control Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 4X4 Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 4X4 Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Antilock braking system	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Antilock braking system	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Antilock braking system	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Antilock braking system	Active Test	Steering Angle Sensor Initialization	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Antilock braking system	Active Test	Stability Control Active Indicator	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Antilock braking system	Active Test	Left Front Inlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Antilock braking system	Active Test	Left Rear Inlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Antilock braking system	Active Test	Left Rear Outlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Antilock braking system	Active Test	Right Front Inlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Antilock braking system	Active Test	Right Front Outlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Antilock braking system	Active Test	Right Rear Inlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Antilock braking system	Active Test	Right Rear Outlet Valve State	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Antilock braking system	Active Test	Right Stability Control Solenoid V	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Antilock braking system	Active Test	Right Traction Control Solenoid V	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Antilock braking system	Active Test	Yaw Rate Sensor Initialization	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Amplifier Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Amplifier Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Generic Electronic Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Generic Electronic Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Generic Electronic Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Headlamp Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Headlamp Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Headlamp Control Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Instrument Cluster	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Instrument Cluster	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Instrument Cluster	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Instrument Cluster	Active Test	Display Segment Check	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Intelligent Cruise Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Intelligent Cruise Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Intelligent Cruise Control Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Lighting Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Lighting Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Left Power Sliding Door Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Left Power Sliding Door Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Liftgate/Trunk Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Liftgate/Trunk Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Liftgate/Trunk Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Powertrain Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Powertrain Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Powertrain Control Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Restraint Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Restraint Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Restraint Control Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Right Power Sliding Door Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Right Power Sliding Door Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Transmission Control Module	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Transmission Control Module	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Transmission Control Module	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Transmission Control Module	Active Test	Shift Solenoid A	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3		2013 Transmission Control Module	Active Test	Shift Solenoid B	V1.20.001

MPV / Mazda8 (JPN/General)	2.3L	L3	2013 Transmission Control Module	Active Test	Shift Solenoid C	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2013 Transmission Control Module	Active Test	Shift Solenoid D	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2013 Transmission Control Module	Active Test	Shift Solenoid E	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2013 Transmission Control Module	Active Test	C F	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2013 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2013 Remote Keyless Entry	Read DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2013 Remote Keyless Entry	Erase DTC		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2013 Remote Keyless Entry	Live Data		V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2013 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2013 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2013 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2013 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2013 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MPV / Mazda8 (JPN/General)	2.3L	L3	2013 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Electronic-Controlled Power Steering	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Electronic-Controlled Power Steering	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Generic Electronic Module	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Generic Electronic Module	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Generic Electronic Module	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Generic Electronic Module	Active Test	Room Light	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Generic Electronic Module	Active Test	Hazard Flashers	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Generic Electronic Module	Active Test	Air Conditioning Indicator	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Generic Electronic Module	Active Test	Key Reminder Warning Alarm	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Generic Electronic Module	Active Test	Seat Belt Reminder Warning Ala	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Generic Electronic Module	Active Test	Light Reminder Warning Alarm	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Generic Electronic Module	Active Test	Reverse Alarm	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Generic Electronic Module	Active Test	Taillight	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Generic Electronic Module	Active Test	Headlamp	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Generic Electronic Module	Active Test	Front windshield wiper	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Generic Electronic Module	Active Test	Rear wiper	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Instrument Cluster	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Instrument Cluster	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Instrument Cluster	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Intelligent Power Distribution Module	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Intelligent Power Distribution Module	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Intelligent Power Distribution Module	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Intelligent Power Distribution Module	Active Test	Front windshield wiper	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Intelligent Power Distribution Module	Active Test	Cooling Fan State	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Intelligent Power Distribution Module	Active Test	Exterior Light	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Intelligent Power Distribution Module	Active Test	Rear Defogger Control	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Powertrain Control Module	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Powertrain Control Module	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Powertrain Control Module	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Powertrain Control Module	Active Test	Short term fuel trim 1	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Powertrain Control Module	Active Test	Engine coolant temperature	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Powertrain Control Module	Active Test	Alternator Commanded Duty Va	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Powertrain Control Module	Active Test	Ignition timing	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Powertrain Control Module	Active Test	Injector 1	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Powertrain Control Module	Active Test	Injector 2	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Powertrain Control Module	Active Test	Injector 3	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Powertrain Control Module	Active Test	Injector 4	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Powertrain Control Module	Active Test	Intake Variable Camshaft Timing	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Powertrain Control Module	Active Test	Air Fuel Ratio Sensor Heater (Ba	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Powertrain Control Module	Active Test	Low Cooling Fan State	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Powertrain Control Module	Active Test	High Cooling Fan State	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Restraint Control Module	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Restraint Control Module	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Transmission Control Module	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Transmission Control Module	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Transmission Control Module	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Antilock braking system	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Antilock braking system	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Antilock braking system	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15	2013 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2013 Electronic-Controlled Power Steering	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2013 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2013 Electronic-Controlled Power Steering	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2013 Generic Electronic Module	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2013 Generic Electronic Module	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2013 Generic Electronic Module	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2013 Generic Electronic Module	Active Test	Room Light	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2013 Generic Electronic Module	Active Test	Hazard Flashers	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2013 Generic Electronic Module	Active Test	Air Conditioning Indicator	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2013 Generic Electronic Module	Active Test	Key Reminder Warning Alarm	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2013 Generic Electronic Module	Active Test	Seat Belt Reminder Warning Ala	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2013 Generic Electronic Module	Active Test	Light Reminder Warning Alarm	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2013 Generic Electronic Module	Active Test	Reverse Alarm	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2013 Generic Electronic Module	Active Test	Taillight	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2013 Generic Electronic Module	Active Test	Headlamp	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2013 Generic Electronic Module	Active Test	Front windshield wiper	V1.20.001
FAMILIA VAN (BV**Y12)	1.8L	MR18	2013 Generic Electronic Module	Active Test	Rear wiper	V1.20.001

FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Instrument Cluster	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Instrument Cluster	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Instrument Cluster	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Intelligent Power Distribution Module	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Intelligent Power Distribution Module	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Intelligent Power Distribution Module	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Intelligent Power Distribution Module	Active Test	Front windshield wiper	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Intelligent Power Distribution Module	Active Test	Cooling Fan State	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Intelligent Power Distribution Module	Active Test	Exterior Light	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Intelligent Power Distribution Module	Active Test	Rear Defogger Control	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Powertrain Control Module	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Powertrain Control Module	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Powertrain Control Module	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Powertrain Control Module	Active Test	Short term fuel trim 1	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Powertrain Control Module	Active Test	Engine coolant temperature	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Powertrain Control Module	Active Test	Alternator Commanded Duty Va	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Powertrain Control Module	Active Test	Ignition timing	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Powertrain Control Module	Active Test	Injector 1	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Powertrain Control Module	Active Test	Injector 2	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Powertrain Control Module	Active Test	Injector 3	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Powertrain Control Module	Active Test	Injector 4	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Powertrain Control Module	Active Test	Intake Variable Camshaft Timing	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Powertrain Control Module	Active Test	Air Fuel Ratio Sensor Heater (Ba	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Powertrain Control Module	Active Test	Low Cooling Fan State	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Powertrain Control Module	Active Test	High Cooling Fan State	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Restraint Control Module	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Restraint Control Module	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Antilock braking system	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Antilock braking system	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Antilock braking system	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.8L	MR18		2013 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	A-STOP System (No Idling System)	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	A-STOP System (No Idling System)	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	A-STOP System (No Idling System)	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	A-STOP System (No Idling System)	Active Test	Starting Motor	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Antilock braking system	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Antilock braking system	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Antilock braking system	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	HOT\$AVAS	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	HOT\$AVAS	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	HOT\$AVAS	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	HOT\$AVAS	Active Test	Speaker	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Body Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Body Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Body Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Body Control Module	Active Test	Hazard Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Body Control Module	Active Test	Key and Push Start System Illum	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Body Control Module	Active Test	Courtesy Light Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Body Control Module	Active Test	Room Light Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Body Control Module	Active Test	Door Lock Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Body Control Module	Active Test	Door Unlock Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Body Control Module	Active Test	Buzzer Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Body Control Module	Active Test	Alarm Indicator Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Body Control Module	Active Test	Horn Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Body Control Module	Active Test	Rear Defogger Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Body Control Module	Active Test	Shift Lock Solenoid	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Battery Management Unit	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Battery Management Unit	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Battery Management Unit	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Central Gateway	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Central Gateway	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Central Gateway	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	HOT\$CSW	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	HOT\$CSW	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	HOT\$CSW	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Rader Brake Support	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Rader Brake Support	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Rader Brake Support	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Head Up Display	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Head Up Display	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Head Up Display	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Head Up Display	Active Test	Segment	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Head Up Display	Active Test	Luminance	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Head Up Display	Active Test	Display	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Instrument Cluster	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Instrument Cluster	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Instrument Cluster	Live Data		V1.20.001

CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Instrument Cluster	Active Test	Fuel Meter (Direct)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Instrument Cluster	Active Test	Tachometer (Direct)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Instrument Cluster	Active Test	Speedometer (Direct)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Instrument Cluster	Active Test	Warning Buzzer	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Instrument Cluster	Active Test	Fuel Meter (Sweep)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Instrument Cluster	Active Test	Tachometer (Sweep)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Instrument Cluster	Active Test	Speedometer (Sweep)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Integrated Starter Generator	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Integrated Starter Generator	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Integrated Starter Generator	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Lighting Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Lighting Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Lighting Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Lighting Control Module	Active Test	Leveling Actuator	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	HOTSMFL	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	HOTSMFL	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	HOTSMFL	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	HOTSMFL	Active Test	High Beam Assist Inspection Mo	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Powertrain Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Powertrain Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Powertrain Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Powertrain Control Module	Active Test	Spark Advance	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Restraint Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Restraint Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Restraint Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Restraint Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Rear Sonar Brake Support	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Rear Sonar Brake Support	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Rear Sonar Brake Support	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Stereo Camera	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Stereo Camera	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Transmission Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Transmission Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	Transmission Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	View Monitor Camera	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	View Monitor Camera	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A	Other	View Monitor Camera	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	4X4 Control Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	4X4 Control Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Antilock braking system	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fro	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Antilock braking system	Active Test	Stability Control Valve (Right Fr	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Auto Leveling Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Auto Leveling Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Auto Leveling Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Body Control Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Body Control Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Body Control Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Body Control Module	Active Test	Front Fog Relay	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Body Control Module	Active Test	Horn Relay	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Body Control Module	Active Test	Stop Lamp Control	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Body Control Module	Active Test	Blower Motor Relay	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Body Control Module	Active Test	Rear Defogger Relay	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Body Control Module	Active Test	Headlight Hi-Beam Control Req	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Body Control Module	Active Test	Headlight Lo-Beam Control Req	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Body Control Module	Active Test	DRL(Daytime Running Lamps) C	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Body Control Module	Active Test	TNS Control Request to ESU	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Body Control Module	Active Test	Rear Wiper Control Request to F	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Body Control Module	Active Test	Front Washer Control Request t	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Body Control Module	Active Test	Control Request of Trunk/Cargo	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Body Control Module	Active Test	Control Request of Room Lamp	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Body Control Module	Active Test	Control Request of Reverse Lam	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Body Control Module	Active Test	PTC Heater Status	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Body Control Module	Active Test	Control Request of Door Unlock	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Body Control Module	Active Test	Control Request of Door Lock R	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Body Control Module	Active Test	Control Request of Trunk/Liftga	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Blind Spot Monitoring	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Blind Spot Monitoring	Live Data		V1.20.001

MAZDA2 / DEMIO	1.5L	S5	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Connectivity Master Unit	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Connectivity Master Unit	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	DC to DC Converter Control Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	DC to DC Converter Control Module	Active Test	Forced charging flag set at the ti	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Electric Supply Unit	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Electric Supply Unit	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Forward Sensing Camera	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Forward Sensing Camera	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Forward Sensing Camera	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Smart City Brake Support	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Smart City Brake Support	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Smart City Brake Support	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculatio	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	Intake Shutter Valve Control De	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	LP-EGR Control Valve Desired	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	Exhaust Shutter Valve Position	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	HP-EGR Control Valve Desired	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	Turbocharger with variable turb	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	Desired Coolant Control Valve	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	Electrical Water Pump	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Restraint Control Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Start Stop Unit	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Start Stop Unit	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Start Stop Unit	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	4X4 Control Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	4X4 Control Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Antilock braking system	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001

MAZDA2 / DEMIO	1.5L	P5	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fro	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Antilock braking system	Active Test	Stability Control Valve (Right Frc	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Auto Leveling Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Auto Leveling Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Auto Leveling Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Body Control Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Body Control Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Body Control Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Body Control Module	Active Test	Front Fog Relay	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Body Control Module	Active Test	Horn Relay	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Body Control Module	Active Test	Stop Lamp Control	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Body Control Module	Active Test	Blower Motor Relay	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Body Control Module	Active Test	Rear Defogger Relay	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Body Control Module	Active Test	Headlight Hi-Beam Control Reqr	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Body Control Module	Active Test	Headlight Lo-Beam Control Reqr	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Body Control Module	Active Test	DRL(Daytime Running Lamps) C	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Body Control Module	Active Test	TNS Control Request to ESU	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Body Control Module	Active Test	Rear Wiper Control Request to f	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Body Control Module	Active Test	Front Washer Control Request t	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Body Control Module	Active Test	Control Request of Trunk/Cargo	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Body Control Module	Active Test	Control Request of Room Lamp	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Body Control Module	Active Test	Control Request of Reverse Lam	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Body Control Module	Active Test	PTC Heater Status	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Body Control Module	Active Test	Control Request of Door Unlock	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Body Control Module	Active Test	Control Request of Door Lock Re	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Body Control Module	Active Test	Control Request of Trunk/Liftgai	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Blind Spot Monitoring	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Blind Spot Monitoring	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Connectivity Master Unit	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Connectivity Master Unit	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	DC to DC Converter Control Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	DC to DC Converter Control Module	Active Test	Forced charging flag set at the ti	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Electric Supply Unit	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Electric Supply Unit	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Forward Sensing Camera	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Forward Sensing Camera	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Forward Sensing Camera	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Smart City Brake Support	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Smart City Brake Support	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Smart City Brake Support	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculatio	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Restraint Control Module	Read DTC		V1.20.001

MAZDA2 / DEMIO	1.5L	P5	Other	Restraint Control Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Start Stop Unit	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Start Stop Unit	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Start Stop Unit	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	4X4 Control Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	4X4 Control Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Antilock braking system	Live Data		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fr	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Antilock braking system	Active Test	Stability Control Valve (Right Fr	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Auto Leveling Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Auto Leveling Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Auto Leveling Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Body Control Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Body Control Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Body Control Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Body Control Module	Active Test	Front Fog Relay	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Body Control Module	Active Test	Horn Relay	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Body Control Module	Active Test	Stop Lamp Control	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Body Control Module	Active Test	Blower Motor Relay	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Body Control Module	Active Test	Rear Defogger Relay	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Body Control Module	Active Test	Headlight Hi-Beam Control Reqr	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Body Control Module	Active Test	Headlight Lo-Beam Control Reqr	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Body Control Module	Active Test	DRL(Daytime Running Lamps) C	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Body Control Module	Active Test	TNS Control Request to ESU	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Body Control Module	Active Test	Rear Wiper Control Request to f	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Body Control Module	Active Test	Front Washer Control Request t	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Body Control Module	Active Test	Control Request of Trunk/Cargo	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Body Control Module	Active Test	Control Request of Room Lamp	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Body Control Module	Active Test	Control Request of Reverse Lam	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Body Control Module	Active Test	PTC Heater Status	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Body Control Module	Active Test	Control Request of Door Unlock	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Body Control Module	Active Test	Control Request of Door Lock Re	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Body Control Module	Active Test	Control Request of Trunk/Liftga	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Blind Spot Monitoring	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Blind Spot Monitoring	Live Data		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Connectivity Master Unit	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Connectivity Master Unit	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	DC to DC Converter Control Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	DC to DC Converter Control Module	Active Test	Forced charging flag set at the ti	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Electric Supply Unit	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Electric Supply Unit	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Forward Sensing Camera	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Forward Sensing Camera	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Forward Sensing Camera	Live Data		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Instrument Cluster	Read DTC		V1.20.001

MAZDA2 / DEMIO	1.3L	P3	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Smart City Brake Support	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Smart City Brake Support	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Smart City Brake Support	Live Data		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Powertrain Control Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculatio	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Restraint Control Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Start Stop Unit	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Start Stop Unit	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Start Stop Unit	Live Data		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
LANTIS	2.0L	KF		1996 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
LANTIS	2.0L	KF		1996 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
LANTIS	2.0L	KF		1996 Powertrain Control Module	Read DTC		V1.20.001
LANTIS	2.0L	KF		1996 Powertrain Control Module	Erase DTC		V1.20.001
LANTIS	2.0L	KF		1996 Transmission Control Module	Read DTC		V1.20.001
LANTIS	2.0L	KF		1996 Transmission Control Module	Erase DTC		V1.20.001
LANTIS	2.0L	KF		1996 Transmission Control Module	Live Data		V1.20.001
LANTIS	2.0L	KF		1996 Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
LANTIS	2.0L	KF		1996 Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
LANTIS	2.0L	KF		1996 Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
LANTIS	2.0L	KF		1996 Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
LANTIS	2.0L	KF		1996 Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
LANTIS	2.0L	KF		1996 Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
LANTIS	2.0L	KF		1996 Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
LANTIS	2.0L	KF		1996 Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
LANTIS	2.0L	KF		1996 Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
LANTIS	2.0L	KF		1996 Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
MAZDA RX 7	654x2cc	13B		1998 Transmission Control Module	Read DTC		V1.20.001
MAZDA RX 7	654x2cc	13B		1998 Transmission Control Module	Erase DTC		V1.20.001
MAZDA RX 7	654x2cc	13B		1998 Transmission Control Module	Live Data		V1.20.001
MAZDA RX 7	654x2cc	13B		1998 Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
MAZDA RX 7	654x2cc	13B		1998 Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
MAZDA RX 7	654x2cc	13B		1998 Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
MAZDA RX 7	654x2cc	13B		1998 Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
MAZDA RX 7	654x2cc	13B		1998 Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
MAZDA RX 7	654x2cc	13B		1998 Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MAZDA RX 7	654x2cc	13B		1998 Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
MAZDA RX 7	654x2cc	13B		1998 Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
MAZDA RX 7	654x2cc	13B		1998 Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
MAZDA RX 7	654x2cc	13B		1998 Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
MAZDA RX 7	654x2cc	13B		1998 Powertrain Control Module	Read DTC		V1.20.001
MAZDA RX 7	654x2cc	13B		1998 Powertrain Control Module	Erase DTC		V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3		2000 Antilock braking system	Read DTC		V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3		2000 Antilock braking system	Erase DTC		V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3		2000 Antilock braking system	Live Data		V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3		2000 Antilock braking system	Active Test	Left Front Traction Control Valve	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3		2000 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3		2000 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3		2000 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001

Millenia	2.5L	KL	1999 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Millenia	2.5L	KL	1999 Powertrain Control Module	Active Test	Injector 5	V1.20.001
Millenia	2.5L	KL	2000 Cruise Control	Read DTC		V1.20.001
Millenia	2.5L	KL	2000 Cruise Control	Erase DTC		V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Read DTC		V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Erase DTC		V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Live Data		V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	Variable Resonance Induction S ₁	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	Injector 2	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	purge valve control with caniste	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	Injector 4	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	3-2 Timing Solenoid Valve	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	Canister drain cut valve control	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	Injector 3	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	Variable Resonance Induction S ₁	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solen	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	Injector 6	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	Injector 1	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Millenia	2.5L	KL	2000 Powertrain Control Module	Active Test	Injector 5	V1.20.001
Millenia	2.5L	KL	2000 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Millenia	2.5L	KL	2000 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Millenia	2.5L	KL	2000 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Millenia	2.5L	KL	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Millenia	2.5L	KL	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
Millenia	2.5L	KL	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
Millenia	2.5L	KL	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power F	V1.20.001
Millenia	2.5L	KL	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Millenia	2.5L	KL	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Engine Torque Signal	V1.20.001
Millenia	2.5L	KL	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
Millenia	2.5L	KL	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Millenia	2.5L	KL	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Millenia	2.5L	KL	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
Millenia	2.5L	KL	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Millenia	2.5L	KL	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Traction Control Off Indicator	V1.20.001
Millenia	2.3L	KJ	1999 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Millenia	2.3L	KJ	1999 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Millenia	2.3L	KJ	1999 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Millenia	2.3L	KJ	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Millenia	2.3L	KJ	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
Millenia	2.3L	KJ	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
Millenia	2.3L	KJ	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power F	V1.20.001
Millenia	2.3L	KJ	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Millenia	2.3L	KJ	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Engine Torque Signal	V1.20.001
Millenia	2.3L	KJ	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
Millenia	2.3L	KJ	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Millenia	2.3L	KJ	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Millenia	2.3L	KJ	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
Millenia	2.3L	KJ	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Millenia	2.3L	KJ	1999 Anti-Lock Brake / Traction Control Mo	Active Test	Traction Control Off Indicator	V1.20.001
Millenia	2.3L	KJ	1999 Air Conditioning	Read DTC		V1.20.001
Millenia	2.3L	KJ	1999 Air Conditioning	Erase DTC		V1.20.001
Millenia	2.3L	KJ	1999 Cruise Control	Read DTC		V1.20.001
Millenia	2.3L	KJ	1999 Cruise Control	Erase DTC		V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Read DTC		V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Erase DTC		V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Live Data		V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Active Test	Air bypass valve solenoid(vent)	V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Active Test	Injector 2	V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Active Test	purge valve control with caniste	V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Active Test	Charge air cooler solenoid valve	V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Active Test	Injector 4	V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Active Test	Canister drain cut valve control	V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Active Test	Air bypass valve solenoid(vacuu	V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Active Test	Injector 3	V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Active Test	boost sensor solenoid valve	V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Active Test	Injector 6	V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solen	V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001

Millenia	2.3L	KJ	1999 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Active Test	Injector 1	V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Active Test	Fuel pump resistor relay	V1.20.001
Millenia	2.3L	KJ	1999 Powertrain Control Module	Active Test	Injector 5	V1.20.001
Millenia	2.3L	KJ	2000 Cruise Control	Read DTC		V1.20.001
Millenia	2.3L	KJ	2000 Cruise Control	Erase DTC		V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Read DTC		V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Erase DTC		V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Live Data		V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solenoid	V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Active Test	Air conditioning compressor cycle	V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Active Test	Evaporative Emission Canister Purge	V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Active Test	Air bypass valve solenoid(vent)	V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Active Test	Injector 2	V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Active Test	purge valve control with canister	V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Active Test	Charge air cooler solenoid valve	V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Active Test	Injector 4	V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Active Test	Canister drain cut valve control	V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Active Test	Air bypass valve solenoid(vacuum)	V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Active Test	Injector 3	V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Active Test	boost sensor solenoid valve	V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Active Test	Injector 6	V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solenoid	V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Active Test	Injector 1	V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Active Test	Fuel pump resistor relay	V1.20.001
Millenia	2.3L	KJ	2000 Powertrain Control Module	Active Test	Injector 5	V1.20.001
Millenia	2.3L	KJ	2000 Anti-Lock Brake / Traction Control Module	Read DTC		V1.20.001
Millenia	2.3L	KJ	2000 Anti-Lock Brake / Traction Control Module	Erase DTC		V1.20.001
Millenia	2.3L	KJ	2000 Anti-Lock Brake / Traction Control Module	Live Data		V1.20.001
Millenia	2.3L	KJ	2000 Anti-Lock Brake / Traction Control Module	Active Test	Hydraulic Pump Motor	V1.20.001
Millenia	2.3L	KJ	2000 Anti-Lock Brake / Traction Control Module	Active Test	Left Rear Outlet Valve	V1.20.001
Millenia	2.3L	KJ	2000 Anti-Lock Brake / Traction Control Module	Active Test	Right Rear Outlet Valve	V1.20.001
Millenia	2.3L	KJ	2000 Anti-Lock Brake / Traction Control Module	Active Test	Antilock braking system Power Flow	V1.20.001
Millenia	2.3L	KJ	2000 Anti-Lock Brake / Traction Control Module	Active Test	Left Front Outlet Valve	V1.20.001
Millenia	2.3L	KJ	2000 Anti-Lock Brake / Traction Control Module	Active Test	Engine Torque Signal	V1.20.001
Millenia	2.3L	KJ	2000 Anti-Lock Brake / Traction Control Module	Active Test	Right Rear Inlet Valve	V1.20.001
Millenia	2.3L	KJ	2000 Anti-Lock Brake / Traction Control Module	Active Test	Right Front Inlet Valve	V1.20.001
Millenia	2.3L	KJ	2000 Anti-Lock Brake / Traction Control Module	Active Test	Left Front Inlet Valve	V1.20.001
Millenia	2.3L	KJ	2000 Anti-Lock Brake / Traction Control Module	Active Test	Left Rear Inlet Valve	V1.20.001
Millenia	2.3L	KJ	2000 Anti-Lock Brake / Traction Control Module	Active Test	Right Front Outlet Valve	V1.20.001
Millenia	2.3L	KJ	2000 Anti-Lock Brake / Traction Control Module	Active Test	Traction Control Off Indicator	V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Anti-Lock Brake / Traction Control Module	Read DTC		V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Anti-Lock Brake / Traction Control Module	Erase DTC		V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Anti-Lock Brake / Traction Control Module	Live Data		V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Anti-Lock Brake / Traction Control Module	Active Test	Hydraulic Pump Motor	V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Anti-Lock Brake / Traction Control Module	Active Test	Left Rear Outlet Valve	V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Anti-Lock Brake / Traction Control Module	Active Test	Right Rear Outlet Valve	V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Anti-Lock Brake / Traction Control Module	Active Test	Antilock braking system Power Flow	V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Anti-Lock Brake / Traction Control Module	Active Test	Left Front Outlet Valve	V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Anti-Lock Brake / Traction Control Module	Active Test	Engine Torque Signal	V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Anti-Lock Brake / Traction Control Module	Active Test	Right Rear Inlet Valve	V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Anti-Lock Brake / Traction Control Module	Active Test	Right Front Inlet Valve	V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Anti-Lock Brake / Traction Control Module	Active Test	Left Front Inlet Valve	V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Anti-Lock Brake / Traction Control Module	Active Test	Left Rear Inlet Valve	V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Anti-Lock Brake / Traction Control Module	Active Test	Right Front Outlet Valve	V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Powertrain Control Module	Read DTC		V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Powertrain Control Module	Erase DTC		V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Powertrain Control Module	Live Data		V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Powertrain Control Module	Active Test	Injector 5	V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Powertrain Control Module	Active Test	Air conditioning compressor cycle	V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Powertrain Control Module	Active Test	Variable Resonance Induction System	V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Powertrain Control Module	Active Test	Evaporative Emission Canister Purge	V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Powertrain Control Module	Active Test	Injector 6	V1.20.001
MPV (Europe/General)	3.0L	JE	1996 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MPV (North America / General)	3.0L	JE	1997 Anti-Lock Brake / Traction Control Module	Read DTC		V1.20.001
MPV (North America / General)	3.0L	JE	1997 Anti-Lock Brake / Traction Control Module	Erase DTC		V1.20.001
MPV (North America / General)	3.0L	JE	1997 Cruise Control	Read DTC		V1.20.001
MPV (North America / General)	3.0L	JE	1997 Cruise Control	Erase DTC		V1.20.001
MPV (North America / General)	3.0L	JE	1997 Powertrain Control Module	Read DTC		V1.20.001
MPV (North America / General)	3.0L	JE	1997 Powertrain Control Module	Erase DTC		V1.20.001
MPV (North America / General)	3.0L	JE	1997 Powertrain Control Module	Live Data		V1.20.001
MPV (North America / General)	3.0L	JE	1997 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MPV (North America / General)	3.0L	JE	1997 Powertrain Control Module	Active Test	Air conditioning compressor cycle	V1.20.001
MPV (North America / General)	3.0L	JE	1997 Powertrain Control Module	Active Test	Accelerated warm-up solenoid valve	V1.20.001
MPV (North America / General)	3.0L	JE	1997 Powertrain Control Module	Active Test	Evaporative Emission Canister Purge	V1.20.001
MPV (North America / General)	3.0L	JE	1997 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MPV (North America / General)	3.0L	JE	1997 Powertrain Control Module	Active Test	purge valve control with canister	V1.20.001

MPV (North America / General)	3.0L	JE	1997 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MPV (North America / General)	3.0L	JE	1997 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MPV (North America / General)	3.0L	JE	1997 Powertrain Control Module	Active Test	Barometric pressure pressure si	V1.20.001
MPV (North America / General)	3.0L	JE	1997 Powertrain Control Module	Active Test	Canister drain cut valve control	V1.20.001
MPV (North America / General)	3.0L	JE	1997 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
MPV (North America / General)	3.0L	JE	1997 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MPV (North America / General)	3.0L	JE	1997 Powertrain Control Module	Active Test	Variable Resonance Induction S _y	V1.20.001
MPV (North America / General)	3.0L	JE	1997 Powertrain Control Module	Active Test	Injector 6	V1.20.001
MPV (North America / General)	3.0L	JE	1997 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MPV (North America / General)	3.0L	JE	1997 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MPV (North America / General)	3.0L	JE	1997 Powertrain Control Module	Active Test	Injector 5	V1.20.001
ROADSTER / MX-5	1.8L	BP	1997 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
ROADSTER / MX-5	1.8L	BP	1997 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
ROADSTER / MX-5	1.8L	BP	1997 Powertrain Control Module	Read DTC		V1.20.001
ROADSTER / MX-5	1.8L	BP	1997 Powertrain Control Module	Erase DTC		V1.20.001
ROADSTER / MX-5	1.8L	BP	1997 Powertrain Control Module	Live Data		V1.20.001
ROADSTER / MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Injector 4	V1.20.001
ROADSTER / MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
ROADSTER / MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Injector 3	V1.20.001
ROADSTER / MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Injector 5	V1.20.001
ROADSTER / MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Injector 1	V1.20.001
ROADSTER / MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
ROADSTER / MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
ROADSTER / MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
ROADSTER / MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
ROADSTER / MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
ROADSTER / MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
ROADSTER / MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
ROADSTER / MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
ROADSTER / MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
ROADSTER / MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Injector 6	V1.20.001
ROADSTER / MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MX-5 MIATA	1.8L	BP	1997 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MX-5 MIATA	1.8L	BP	1997 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
MX-5 MIATA	1.8L	BP	1997 Cruise Control	Read DTC		V1.20.001
MX-5 MIATA	1.8L	BP	1997 Cruise Control	Erase DTC		V1.20.001
MX-5 MIATA	1.8L	BP	1997 Powertrain Control Module	Read DTC		V1.20.001
MX-5 MIATA	1.8L	BP	1997 Powertrain Control Module	Erase DTC		V1.20.001
MX-5 MIATA	1.8L	BP	1997 Powertrain Control Module	Live Data		V1.20.001
MX-5 MIATA	1.8L	BP	1997 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MX-5 MIATA	1.8L	BP	1997 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MX-5 MIATA	1.8L	BP	1997 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MX-5 MIATA	1.8L	BP	1997 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MX-5 MIATA	1.8L	BP	1997 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MX-5 MIATA	1.8L	BP	1997 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MX-5 MIATA	1.8L	BP	1997 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MX-5 MIATA	1.8L	BP	1997 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MX-5 MIATA	1.8L	BP	1997 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
MX-5 MIATA	1.8L	BP	1997 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MX-5 MIATA	1.8L	BP	1997 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
MX-5 MIATA	1.8L	BP	1997 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
MX-5 MIATA	1.8L	BP	1997 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MX-5 MIATA	1.8L	BP	1997 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
MX-5 MIATA	1.8L	BP	1997 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solen	V1.20.001
MX-5 MIATA	1.8L	BP	1997 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MX-5 MIATA	1.8L	BP	1997 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MX-5 MIATA	1.8L	BP	1997 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MX-5	1.6L	B6	1997 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MX-5	1.6L	B6	1997 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
MX-5	1.6L	B6	1997 Powertrain Control Module	Read DTC		V1.20.001
MX-5	1.6L	B6	1997 Powertrain Control Module	Erase DTC		V1.20.001
MX-5	1.6L	B6	1997 Powertrain Control Module	Live Data		V1.20.001
MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MX-5	1.8L	BP	1997 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MX-5	1.8L	BP	1997 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
MX-5	1.8L	BP	1997 Powertrain Control Module	Read DTC		V1.20.001
MX-5	1.8L	BP	1997 Powertrain Control Module	Erase DTC		V1.20.001
MX-5	1.8L	BP	1997 Powertrain Control Module	Live Data		V1.20.001
MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001

MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MX-5	1.8L	BP	1997 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MX-5 MIATA	1.8L	BP	2000 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MX-5 MIATA	1.8L	BP	2000 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
MX-5 MIATA	1.8L	BP	2000 Cruise Control	Read DTC		V1.20.001
MX-5 MIATA	1.8L	BP	2000 Cruise Control	Erase DTC		V1.20.001
MX-5 MIATA	1.8L	BP	2000 Powertrain Control Module	Read DTC		V1.20.001
MX-5 MIATA	1.8L	BP	2000 Powertrain Control Module	Erase DTC		V1.20.001
MX-5 MIATA	1.8L	BP	2000 Powertrain Control Module	Live Data		V1.20.001
MX-5 MIATA	1.8L	BP	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MX-5 MIATA	1.8L	BP	2000 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MX-5 MIATA	1.8L	BP	2000 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MX-5 MIATA	1.8L	BP	2000 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MX-5 MIATA	1.8L	BP	2000 Powertrain Control Module	Active Test	purge valve control with caniste	V1.20.001
MX-5 MIATA	1.8L	BP	2000 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MX-5 MIATA	1.8L	BP	2000 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MX-5 MIATA	1.8L	BP	2000 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MX-5 MIATA	1.8L	BP	2000 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MX-5 MIATA	1.8L	BP	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Soleno	V1.20.001
MX-5 MIATA	1.8L	BP	2000 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MX-5 MIATA	1.8L	BP	2000 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
MX-5 MIATA	1.8L	BP	2000 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
MX-5 MIATA	1.8L	BP	2000 Powertrain Control Module	Active Test	Canister drain cut valve control	V1.20.001
MX-5 MIATA	1.8L	BP	2000 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MX-5 MIATA	1.8L	BP	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation	V1.20.001
MX-5 MIATA	1.8L	BP	2000 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
MX-5 MIATA	1.8L	BP	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation soleno	V1.20.001
MX-5 MIATA	1.8L	BP	2000 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MX-5 MIATA	1.8L	BP	2000 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MX-5 MIATA	1.8L	BP	2000 Powertrain Control Module	Active Test	Injector 1	V1.20.001
PROTEGE	1.5L	Z5	1997 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
PROTEGE	1.5L	Z5	1997 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Read DTC		V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Erase DTC		V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Live Data		V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Active Test	Injector 2	V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Active Test	purge valve control with caniste	V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Active Test	Injector 4	V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Active Test	Canister drain cut valve control	V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Active Test	Injector 3	V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Active Test	Exhaust Gas Recirculation	V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Active Test	Injector 1	V1.20.001
PROTEGE	1.5L	Z5	1997 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
PROTEGE	1.8L	BP	1997 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
PROTEGE	1.8L	BP	1997 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Read DTC		V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Erase DTC		V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Live Data		V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Active Test	Injector 2	V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Active Test	purge valve control with caniste	V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Active Test	Injector 4	V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Active Test	Canister drain cut valve control	V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Active Test	Injector 3	V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Active Test	Exhaust Gas Recirculation	V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Active Test	Injector 1	V1.20.001
PROTEGE	1.8L	BP	1997 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
PROTEGE	1.5L	Z5	1998 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001

PROTEGE	1.5L	Z5	1998 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Read DTC		V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Erase DTC		V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Live Data		V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Active Test	Injector 2	V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Active Test	purge valve control with caniste	V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Active Test	Injector 4	V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Active Test	Canister drain cut valve control	V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Active Test	Injector 3	V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Active Test	Exhaust Gas Recirculation	V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Active Test	Injector 1	V1.20.001
PROTEGE	1.5L	Z5	1998 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
PROTEGE	1.8L	BP	1998 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
PROTEGE	1.8L	BP	1998 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
PROTEGE	1.8L	BP	1998 Cruise Control	Read DTC		V1.20.001
PROTEGE	1.8L	BP	1998 Cruise Control	Erase DTC		V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Read DTC		V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Erase DTC		V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Live Data		V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Active Test	Injector 2	V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Active Test	purge valve control with caniste	V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Active Test	Injector 4	V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Active Test	Canister drain cut valve control	V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Active Test	Injector 3	V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Active Test	Exhaust Gas Recirculation	V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Active Test	Injector 1	V1.20.001
PROTEGE	1.8L	BP	1998 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
PROCEED	2.6L	G6	1996 Powertrain Control Module	Read DTC		V1.20.001
PROCEED	2.6L	G6	1996 Powertrain Control Module	Erase DTC		V1.20.001
PROCEED	2.6L	G6	1996 Powertrain Control Module	Live Data		V1.20.001
PROCEED	2.6L	G6	1996 Powertrain Control Module	Active Test	Injector 1	V1.20.001
PROCEED	2.6L	G6	1996 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PROCEED	2.6L	G6	1996 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
PROCEED	2.6L	G6	1996 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
PROCEED	2.6L	G6	1996 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
PROCEED	2.6L	G6	1996 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
PROCEED	2.6L	G6	1996 Powertrain Control Module	Active Test	Injector 2	V1.20.001
PROCEED	2.6L	G6	1996 Transmission Control Module	Read DTC		V1.20.001
PROCEED	2.6L	G6	1996 Transmission Control Module	Erase DTC		V1.20.001
ROADSTER / MX-5	1.6L	B6	1997 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
ROADSTER / MX-5	1.6L	B6	1997 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
ROADSTER / MX-5	1.6L	B6	1997 Powertrain Control Module	Read DTC		V1.20.001
ROADSTER / MX-5	1.6L	B6	1997 Powertrain Control Module	Erase DTC		V1.20.001
ROADSTER / MX-5	1.6L	B6	1997 Powertrain Control Module	Live Data		V1.20.001
ROADSTER / MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	Injector 4	V1.20.001
ROADSTER / MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
ROADSTER / MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	Injector 3	V1.20.001
ROADSTER / MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	Injector 1	V1.20.001
ROADSTER / MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
ROADSTER / MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
ROADSTER / MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
ROADSTER / MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
ROADSTER / MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
ROADSTER / MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
ROADSTER / MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
ROADSTER / MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
ROADSTER / MX-5	1.6L	B6	1997 Powertrain Control Module	Active Test	Injector 2	V1.20.001
SENTIA	3.0L	JE	1997 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
SENTIA	3.0L	JE	1997 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
SENTIA	3.0L	JE	1997 Air Conditioning	Read DTC		V1.20.001
SENTIA	3.0L	JE	1997 Air Conditioning	Erase DTC		V1.20.001

SENTIA	3.0L	JE	1997 Cruise Control	Read DTC		V1.20.001
SENTIA	3.0L	JE	1997 Cruise Control	Erase DTC		V1.20.001
SENTIA	3.0L	JE	1997 Powertrain Control Module	Read DTC		V1.20.001
SENTIA	3.0L	JE	1997 Powertrain Control Module	Erase DTC		V1.20.001
SENTIA	3.0L	JE	1997 Powertrain Control Module	Live Data		V1.20.001
SENTIA	3.0L	JE	1997 Powertrain Control Module	Active Test	Injector 4	V1.20.001
SENTIA	3.0L	JE	1997 Powertrain Control Module	Active Test	Injector 3	V1.20.001
SENTIA	3.0L	JE	1997 Powertrain Control Module	Active Test	Injector 5	V1.20.001
SENTIA	3.0L	JE	1997 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
SENTIA	3.0L	JE	1997 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
SENTIA	3.0L	JE	1997 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
SENTIA	3.0L	JE	1997 Powertrain Control Module	Active Test	Injector 1	V1.20.001
SENTIA	3.0L	JE	1997 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
SENTIA	3.0L	JE	1997 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
SENTIA	3.0L	JE	1997 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
SENTIA	3.0L	JE	1997 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
SENTIA	3.0L	JE	1997 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
SENTIA	3.0L	JE	1997 Powertrain Control Module	Active Test	Fuel pump resistor relay	V1.20.001
SENTIA	3.0L	JE	1997 Powertrain Control Module	Active Test	Variable Resonance Induction S _y	V1.20.001
SENTIA	3.0L	JE	1997 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
SENTIA	3.0L	JE	1997 Powertrain Control Module	Active Test	Injector 6	V1.20.001
SENTIA	3.0L	JE	1997 Powertrain Control Module	Active Test	Injector 2	V1.20.001
SENTIA	3.0L	JE	1997 4 Wheel Steering	Read DTC		V1.20.001
SENTIA	3.0L	JE	1997 4 Wheel Steering	Erase DTC		V1.20.001
SENTIA	3.0L	JE_HO	1997 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
SENTIA	3.0L	JE_HO	1997 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
SENTIA	3.0L	JE_HO	1997 Air Conditioning	Read DTC		V1.20.001
SENTIA	3.0L	JE_HO	1997 Air Conditioning	Erase DTC		V1.20.001
SENTIA	3.0L	JE_HO	1997 Cruise Control	Read DTC		V1.20.001
SENTIA	3.0L	JE_HO	1997 Cruise Control	Erase DTC		V1.20.001
SENTIA	3.0L	JE_HO	1997 Powertrain Control Module	Read DTC		V1.20.001
SENTIA	3.0L	JE_HO	1997 Powertrain Control Module	Erase DTC		V1.20.001
SENTIA	3.0L	JE_HO	1997 Powertrain Control Module	Live Data		V1.20.001
SENTIA	3.0L	JE_HO	1997 Powertrain Control Module	Active Test	Injector 4	V1.20.001
SENTIA	3.0L	JE_HO	1997 Powertrain Control Module	Active Test	Injector 3	V1.20.001
SENTIA	3.0L	JE_HO	1997 Powertrain Control Module	Active Test	Injector 5	V1.20.001
SENTIA	3.0L	JE_HO	1997 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
SENTIA	3.0L	JE_HO	1997 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
SENTIA	3.0L	JE_HO	1997 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
SENTIA	3.0L	JE_HO	1997 Powertrain Control Module	Active Test	Injector 1	V1.20.001
SENTIA	3.0L	JE_HO	1997 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
SENTIA	3.0L	JE_HO	1997 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
SENTIA	3.0L	JE_HO	1997 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
SENTIA	3.0L	JE_HO	1997 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
SENTIA	3.0L	JE_HO	1997 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
SENTIA	3.0L	JE_HO	1997 Powertrain Control Module	Active Test	Fuel pump resistor relay	V1.20.001
SENTIA	3.0L	JE_HO	1997 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
SENTIA	3.0L	JE_HO	1997 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
SENTIA	3.0L	JE_HO	1997 Powertrain Control Module	Active Test	Injector 6	V1.20.001
SENTIA	3.0L	JE_HO	1997 Powertrain Control Module	Active Test	Injector 2	V1.20.001
SENTIA	3.0L	JE_HO	1997 4 Wheel Steering	Read DTC		V1.20.001
SENTIA	3.0L	JE_HO	1997 4 Wheel Steering	Erase DTC		V1.20.001
XEDOS9	2.0L	KF	1996 Air Conditioning	Read DTC		V1.20.001
XEDOS9	2.0L	KF	1996 Air Conditioning	Erase DTC		V1.20.001
XEDOS9	2.0L	KF	1996 Cruise Control	Read DTC		V1.20.001
XEDOS9	2.0L	KF	1996 Cruise Control	Erase DTC		V1.20.001
XEDOS9	2.0L	KF	1996 Powertrain Control Module	Read DTC		V1.20.001
XEDOS9	2.0L	KF	1996 Powertrain Control Module	Erase DTC		V1.20.001
XEDOS9	2.0L	KF	1996 Powertrain Control Module	Live Data		V1.20.001
XEDOS9	2.0L	KF	1996 Powertrain Control Module	Active Test	Injector 4	V1.20.001
XEDOS9	2.0L	KF	1996 Powertrain Control Module	Active Test	Injector 3	V1.20.001
XEDOS9	2.0L	KF	1996 Powertrain Control Module	Active Test	Injector 5	V1.20.001
XEDOS9	2.0L	KF	1996 Powertrain Control Module	Active Test	Injector 1	V1.20.001
XEDOS9	2.0L	KF	1996 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
XEDOS9	2.0L	KF	1996 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
XEDOS9	2.0L	KF	1996 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
XEDOS9	2.0L	KF	1996 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
XEDOS9	2.0L	KF	1996 Powertrain Control Module	Active Test	Variable Resonance Induction S _y	V1.20.001
XEDOS9	2.0L	KF	1996 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solen	V1.20.001
XEDOS9	2.0L	KF	1996 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
XEDOS9	2.0L	KF	1996 Powertrain Control Module	Active Test	Injector 6	V1.20.001
XEDOS9	2.0L	KF	1996 Powertrain Control Module	Active Test	Injector 2	V1.20.001
XEDOS9	2.0L	KF	1996 4 Wheel Steering	Read DTC		V1.20.001
XEDOS9	2.0L	KF	1996 4 Wheel Steering	Erase DTC		V1.20.001
XEDOS9	2.0L	KF	1996 Antilock braking system	Read DTC		V1.20.001
XEDOS9	2.0L	KF	1996 Antilock braking system	Erase DTC		V1.20.001
XEDOS9	2.0L	KF	1996 Antilock braking system	Live Data		V1.20.001
XEDOS9	2.0L	KF	1996 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
XEDOS9	2.0L	KF	1996 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
XEDOS9	2.0L	KF	1996 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
XEDOS9	2.0L	KF	1996 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
XEDOS9	2.0L	KF	1996 Antilock braking system	Active Test	Antilock braking system Power F	V1.20.001
XEDOS9	2.0L	KF	1996 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
XEDOS9	2.0L	KF	1996 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
XEDOS9	2.0L	KF	1996 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
XEDOS9	2.0L	KF	1996 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
XEDOS9	2.0L	KF	1996 Antilock braking system	Active Test	Engine Torque Signal	V1.20.001
XEDOS9	2.0L	KF	1996 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
XEDOS9	2.0L	KF	1996 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
XEDOS9	2.3L	KJ	1996 Air Conditioning	Read DTC		V1.20.001
XEDOS9	2.3L	KJ	1996 Air Conditioning	Erase DTC		V1.20.001
XEDOS9	2.3L	KJ	1996 Cruise Control	Read DTC		V1.20.001

XEDOS9	2.3L	KJ	1996 Cruise Control	Erase DTC		V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Read DTC		V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Erase DTC		V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Live Data		V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Active Test	Injector 4	V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Active Test	Injector 3	V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Active Test	Injector 5	V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solenoid	V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Active Test	Air bypass valve solenoid(vent)	V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Active Test	Injector 1	V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Active Test	Air bypass valve solenoid(vacu	V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Active Test	Charge air cooler solenoid valve	V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Active Test	Fuel pump resistor relay	V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Active Test	boost sensor solenoid valve	V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Active Test	Injector 6	V1.20.001
XEDOS9	2.3L	KJ	1996 Powertrain Control Module	Active Test	Injector 2	V1.20.001
XEDOS9	2.3L	KJ	1996 4 Wheel Steering	Read DTC		V1.20.001
XEDOS9	2.3L	KJ	1996 4 Wheel Steering	Erase DTC		V1.20.001
XEDOS9	2.3L	KJ	1996 Antilock braking system	Read DTC		V1.20.001
XEDOS9	2.3L	KJ	1996 Antilock braking system	Erase DTC		V1.20.001
XEDOS9	2.3L	KJ	1996 Antilock braking system	Live Data		V1.20.001
XEDOS9	2.3L	KJ	1996 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
XEDOS9	2.3L	KJ	1996 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
XEDOS9	2.3L	KJ	1996 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
XEDOS9	2.3L	KJ	1996 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
XEDOS9	2.3L	KJ	1996 Antilock braking system	Active Test	Antilock braking system Power f	V1.20.001
XEDOS9	2.3L	KJ	1996 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
XEDOS9	2.3L	KJ	1996 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
XEDOS9	2.3L	KJ	1996 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
XEDOS9	2.3L	KJ	1996 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
XEDOS9	2.3L	KJ	1996 Antilock braking system	Active Test	Engine Torque Signal	V1.20.001
XEDOS9	2.3L	KJ	1996 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
XEDOS9	2.3L	KJ	1996 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
XEDOS9	2.5L	KL	1996 Air Conditioning	Read DTC		V1.20.001
XEDOS9	2.5L	KL	1996 Air Conditioning	Erase DTC		V1.20.001
XEDOS9	2.5L	KL	1996 Cruise Control	Read DTC		V1.20.001
XEDOS9	2.5L	KL	1996 Cruise Control	Erase DTC		V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Read DTC		V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Erase DTC		V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Live Data		V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	Injector 4	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	Injector 3	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	Injector 5	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	Variable Resonance Induction S ₁	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	Injector 1	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	3-2 Timing Solenoid Valve	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	Variable Resonance Induction S ₂	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solen	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	Injector 6	V1.20.001
XEDOS9	2.5L	KL	1996 Powertrain Control Module	Active Test	Injector 2	V1.20.001
XEDOS9	2.5L	KL	1996 4 Wheel Steering	Read DTC		V1.20.001
XEDOS9	2.5L	KL	1996 4 Wheel Steering	Erase DTC		V1.20.001
XEDOS9	2.5L	KL	1996 Antilock braking system	Read DTC		V1.20.001
XEDOS9	2.5L	KL	1996 Antilock braking system	Erase DTC		V1.20.001
XEDOS9	2.5L	KL	1996 Antilock braking system	Live Data		V1.20.001
XEDOS9	2.5L	KL	1996 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
XEDOS9	2.5L	KL	1996 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
XEDOS9	2.5L	KL	1996 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
XEDOS9	2.5L	KL	1996 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
XEDOS9	2.5L	KL	1996 Antilock braking system	Active Test	Antilock braking system Power f	V1.20.001
XEDOS9	2.5L	KL	1996 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
XEDOS9	2.5L	KL	1996 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
XEDOS9	2.5L	KL	1996 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
XEDOS9	2.5L	KL	1996 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
XEDOS9	2.5L	KL	1996 Antilock braking system	Active Test	Engine Torque Signal	V1.20.001
XEDOS9	2.5L	KL	1996 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001

XEDOS9	2.5L	KL	1996 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
XEDOS9	2.3L	KJ	1998 Air Conditioning	Read DTC		V1.20.001
XEDOS9	2.3L	KJ	1998 Air Conditioning	Erase DTC		V1.20.001
XEDOS9	2.3L	KJ	1998 Cruise Control	Read DTC		V1.20.001
XEDOS9	2.3L	KJ	1998 Cruise Control	Erase DTC		V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Read DTC		V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Erase DTC		V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Live Data		V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Active Test	Injector 4	V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Active Test	Injector 3	V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Active Test	Injector 5	V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solenoid	V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Active Test	Air bypass valve solenoid(vent)	V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Active Test	Injector 1	V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Active Test	Air bypass valve solenoid(vacuum)	V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Active Test	Air conditioning compressor cycle	V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Active Test	Charge air cooler solenoid valve	V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solenoid	V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Active Test	Fuel pump resistor relay	V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Active Test	Evaporative Emission Canister Purge Valve	V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Active Test	boost sensor solenoid valve	V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Active Test	Injector 6	V1.20.001
XEDOS9	2.3L	KJ	1998 Powertrain Control Module	Active Test	Injector 2	V1.20.001
XEDOS9	2.3L	KJ	1998 4 Wheel Steering	Read DTC		V1.20.001
XEDOS9	2.3L	KJ	1998 4 Wheel Steering	Erase DTC		V1.20.001
XEDOS9	2.3L	KJ	1998 Antilock braking system	Read DTC		V1.20.001
XEDOS9	2.3L	KJ	1998 Antilock braking system	Erase DTC		V1.20.001
XEDOS9	2.3L	KJ	1998 Antilock braking system	Live Data		V1.20.001
XEDOS9	2.3L	KJ	1998 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
XEDOS9	2.3L	KJ	1998 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
XEDOS9	2.3L	KJ	1998 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
XEDOS9	2.3L	KJ	1998 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
XEDOS9	2.3L	KJ	1998 Antilock braking system	Active Test	Antilock braking system Power F	V1.20.001
XEDOS9	2.3L	KJ	1998 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
XEDOS9	2.3L	KJ	1998 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
XEDOS9	2.3L	KJ	1998 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
XEDOS9	2.3L	KJ	1998 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
XEDOS9	2.3L	KJ	1998 Antilock braking system	Active Test	Engine Torque Signal	V1.20.001
XEDOS9	2.3L	KJ	1998 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
XEDOS9	2.3L	KJ	1998 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
XEDOS9	2.5L	KL	1998 Air Conditioning	Read DTC		V1.20.001
XEDOS9	2.5L	KL	1998 Air Conditioning	Erase DTC		V1.20.001
XEDOS9	2.5L	KL	1998 Cruise Control	Read DTC		V1.20.001
XEDOS9	2.5L	KL	1998 Cruise Control	Erase DTC		V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Read DTC		V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Erase DTC		V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Live Data		V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	Injector 4	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	Torque Converter Clutch Solenoid	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	Injector 3	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	Injector 5	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	Torque Converter Clutch Control	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	Variable Resonance Induction Solenoid	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	Injector 1	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solenoid	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	Air conditioning compressor cycle	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	3-2 Timing Solenoid Valve	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	Variable Resonance Induction Solenoid	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	Evaporative Emission Canister Purge Valve	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solenoid	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	Injector 6	V1.20.001
XEDOS9	2.5L	KL	1998 Powertrain Control Module	Active Test	Injector 2	V1.20.001
XEDOS9	2.5L	KL	1998 4 Wheel Steering	Read DTC		V1.20.001
XEDOS9	2.5L	KL	1998 4 Wheel Steering	Erase DTC		V1.20.001
XEDOS9	2.5L	KL	1998 Antilock braking system	Read DTC		V1.20.001
XEDOS9	2.5L	KL	1998 Antilock braking system	Erase DTC		V1.20.001
XEDOS9	2.5L	KL	1998 Antilock braking system	Live Data		V1.20.001
XEDOS9	2.5L	KL	1998 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
XEDOS9	2.5L	KL	1998 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
XEDOS9	2.5L	KL	1998 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
XEDOS9	2.5L	KL	1998 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
XEDOS9	2.5L	KL	1998 Antilock braking system	Active Test	Antilock braking system Power F	V1.20.001
XEDOS9	2.5L	KL	1998 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
XEDOS9	2.5L	KL	1998 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001

XEDOS9	2.5L	KL	1998 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
XEDOS9	2.5L	KL	1998 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
XEDOS9	2.5L	KL	1998 Antilock braking system	Active Test	Engine Torque Signal	V1.20.001
XEDOS9	2.5L	KL	1998 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
XEDOS9	2.5L	KL	1998 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Antilock braking system	Read DTC		V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Antilock braking system	Erase DTC		V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Antilock braking system	Live Data		V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Antilock braking system	Active Test	Antilock braking system Power F	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Read DTC		V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Erase DTC		V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Live Data		V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	3-2 Timing Solenoid Valve	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MPV (Europe/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Antilock braking system	Read DTC		V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Antilock braking system	Erase DTC		V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Antilock braking system	Live Data		V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Antilock braking system	Active Test	Antilock braking system Power F	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Air Conditioning	Read DTC		V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Air Conditioning	Erase DTC		V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Read DTC		V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Erase DTC		V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Live Data		V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	3-2 Timing Solenoid Valve	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MPV (JPN/General)	2.0L	FS	1999 Powertrain Control Module	Active Test	Injector 2	V1.20.001
PREMACY	1.8L	FP	1999 Antilock braking system	Read DTC		V1.20.001
PREMACY	1.8L	FP	1999 Antilock braking system	Erase DTC		V1.20.001
PREMACY	1.8L	FP	1999 Antilock braking system	Live Data		V1.20.001
PREMACY	1.8L	FP	1999 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
PREMACY	1.8L	FP	1999 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
PREMACY	1.8L	FP	1999 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
PREMACY	1.8L	FP	1999 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
PREMACY	1.8L	FP	1999 Antilock braking system	Active Test	Antilock braking system Power F	V1.20.001
PREMACY	1.8L	FP	1999 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001

PREMACY	1.8L	FP		1999 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
PREMACY	1.8L	FP		1999 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
PREMACY	1.8L	FP		1999 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
PREMACY	1.8L	FP		1999 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
PREMACY	1.8L	FP		1999 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Read DTC		V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Erase DTC		V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Live Data		V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Active Test	Injector 4	V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Active Test	Injector 3	V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Active Test	Injector 1	V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
PREMACY	1.8L	FP		1999 Powertrain Control Module	Active Test	Injector 2	V1.20.001
PREMACY	2.0L	RF_T		1999 Antilock braking system	Read DTC		V1.20.001
PREMACY	2.0L	RF_T		1999 Antilock braking system	Erase DTC		V1.20.001
PREMACY	2.0L	RF_T		1999 Antilock braking system	Live Data		V1.20.001
PREMACY	2.0L	RF_T		1999 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
PREMACY	2.0L	RF_T		1999 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
PREMACY	2.0L	RF_T		1999 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
PREMACY	2.0L	RF_T		1999 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
PREMACY	2.0L	RF_T		1999 Antilock braking system	Active Test	Antilock braking system Power F	V1.20.001
PREMACY	2.0L	RF_T		1999 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
PREMACY	2.0L	RF_T		1999 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
PREMACY	2.0L	RF_T		1999 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
PREMACY	2.0L	RF_T		1999 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
PREMACY	2.0L	RF_T		1999 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
PREMACY	2.0L	RF_T		1999 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
PREMACY	2.0L	RF_T		1999 Powertrain Control Module	Read DTC		V1.20.001
PREMACY	2.0L	RF_T		1999 Powertrain Control Module	Erase DTC		V1.20.001
PREMACY	2.0L	RF_T		1999 Powertrain Control Module	Live Data		V1.20.001
PREMACY	2.0L	RF_T		1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solen	V1.20.001
PREMACY	2.0L	RF_T		1999 Powertrain Control Module	Active Test	Glow plug control	V1.20.001
PREMACY	2.0L	RF_T		1999 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PREMACY	2.0L	RF_T		1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
PREMACY	2.0L	RF_T		1999 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
PREMACY	2.0L	RF_T		1999 Powertrain Control Module	Active Test	Glow plug lamp	V1.20.001
PREMACY	2.0L	RF_T		1999 Powertrain Control Module	Active Test	Fuel Shut Off Valve	V1.20.001
PREMACY	2.0L	RF_T		1999 Powertrain Control Module	Active Test	Spill Valve Relay	V1.20.001
MX-5 MIATA	1.8L	BP		1999 Powertrain Control Module	Read DTC		V1.20.001
MX-5 MIATA	1.8L	BP		1999 Powertrain Control Module	Erase DTC		V1.20.001
MX-5 MIATA	1.8L	BP		1999 Powertrain Control Module	Live Data		V1.20.001
MX-5 MIATA	1.8L	BP		1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MX-5 MIATA	1.8L	BP		1999 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MX-5 MIATA	1.8L	BP		1999 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MX-5 MIATA	1.8L	BP		1999 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MX-5 MIATA	1.8L	BP		1999 Powertrain Control Module	Active Test	purge valve control with caniste	V1.20.001
MX-5 MIATA	1.8L	BP		1999 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MX-5 MIATA	1.8L	BP		1999 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MX-5 MIATA	1.8L	BP		1999 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MX-5 MIATA	1.8L	BP		1999 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MX-5 MIATA	1.8L	BP		1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
MX-5 MIATA	1.8L	BP		1999 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MX-5 MIATA	1.8L	BP		1999 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
MX-5 MIATA	1.8L	BP		1999 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
MX-5 MIATA	1.8L	BP		1999 Powertrain Control Module	Active Test	Canister drain cut valve control	V1.20.001
MX-5 MIATA	1.8L	BP		1999 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MX-5 MIATA	1.8L	BP		1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation	V1.20.001
MX-5 MIATA	1.8L	BP		1999 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
MX-5 MIATA	1.8L	BP		1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solen	V1.20.001
MX-5 MIATA	1.8L	BP		1999 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MX-5 MIATA	1.8L	BP		1999 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MX-5 MIATA	1.8L	BP		1999 Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-3	1.5L	S5	Other	4X4 Control Module	Read DTC		V1.20.001
CX-3	1.5L	S5	Other	4X4 Control Module	Erase DTC		V1.20.001
CX-3	1.5L	S5	Other	4X4 Control Module	Live Data		V1.20.001
CX-3	1.5L	S5	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
CX-3	1.5L	S5	Other	Antilock braking system	Read DTC		V1.20.001
CX-3	1.5L	S5	Other	Antilock braking system	Erase DTC		V1.20.001
CX-3	1.5L	S5	Other	Antilock braking system	Live Data		V1.20.001
CX-3	1.5L	S5	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
CX-3	1.5L	S5	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
CX-3	1.5L	S5	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
CX-3	1.5L	S5	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
CX-3	1.5L	S5	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
CX-3	1.5L	S5	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001

CX-3	1.5L	S5	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
CX-3	1.5L	S5	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
CX-3	1.5L	S5	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
CX-3	1.5L	S5	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
CX-3	1.5L	S5	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fror	V1.20.001
CX-3	1.5L	S5	Other	Antilock braking system	Active Test	Stability Control Valve (Right Fr	V1.20.001
CX-3	1.5L	S5	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
CX-3	1.5L	S5	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
CX-3	1.5L	S5	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
CX-3	1.5L	S5	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
CX-3	1.5L	S5	Other	Body Control Module	Read DTC		V1.20.001
CX-3	1.5L	S5	Other	Body Control Module	Erase DTC		V1.20.001
CX-3	1.5L	S5	Other	Body Control Module	Live Data		V1.20.001
CX-3	1.5L	S5	Other	Body Control Module	Active Test	Front Fog Relay	V1.20.001
CX-3	1.5L	S5	Other	Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
CX-3	1.5L	S5	Other	Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
CX-3	1.5L	S5	Other	Body Control Module	Active Test	Horn Relay	V1.20.001
CX-3	1.5L	S5	Other	Body Control Module	Active Test	Stop Lamp Control	V1.20.001
CX-3	1.5L	S5	Other	Body Control Module	Active Test	Blower Motor Relay	V1.20.001
CX-3	1.5L	S5	Other	Body Control Module	Active Test	Rear Defogger Relay	V1.20.001
CX-3	1.5L	S5	Other	Body Control Module	Active Test	Headlight Hi-Beam Control Requ	V1.20.001
CX-3	1.5L	S5	Other	Body Control Module	Active Test	Headlight Lo-Beam Control Requ	V1.20.001
CX-3	1.5L	S5	Other	Body Control Module	Active Test	DRL(Daytime Running Lamps) C	V1.20.001
CX-3	1.5L	S5	Other	Body Control Module	Active Test	TNS Control Request to ESU	V1.20.001
CX-3	1.5L	S5	Other	Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
CX-3	1.5L	S5	Other	Body Control Module	Active Test	Rear Wiper Control Request to f	V1.20.001
CX-3	1.5L	S5	Other	Body Control Module	Active Test	Front Washer Control Request t	V1.20.001
CX-3	1.5L	S5	Other	Body Control Module	Active Test	Control Request of Trunk/Cargo	V1.20.001
CX-3	1.5L	S5	Other	Body Control Module	Active Test	Control Request of Room Lamp	V1.20.001
CX-3	1.5L	S5	Other	Body Control Module	Active Test	Control Request of Reverse Lam	V1.20.001
CX-3	1.5L	S5	Other	Body Control Module	Active Test	PTC Heater Status	V1.20.001
CX-3	1.5L	S5	Other	Body Control Module	Active Test	Control Request of Door Unlock	V1.20.001
CX-3	1.5L	S5	Other	Body Control Module	Active Test	Control Request of Door Lock Re	V1.20.001
CX-3	1.5L	S5	Other	Body Control Module	Active Test	Control Request of Trunk/Liftga	V1.20.001
CX-3	1.5L	S5	Other	Blind Spot Monitoring	Read DTC		V1.20.001
CX-3	1.5L	S5	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
CX-3	1.5L	S5	Other	Blind Spot Monitoring	Live Data		V1.20.001
CX-3	1.5L	S5	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
CX-3	1.5L	S5	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-3	1.5L	S5	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-3	1.5L	S5	Other	Connectivity Master Unit	Read DTC		V1.20.001
CX-3	1.5L	S5	Other	Connectivity Master Unit	Erase DTC		V1.20.001
CX-3	1.5L	S5	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
CX-3	1.5L	S5	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
CX-3	1.5L	S5	Other	DC to DC Converter Control Module	Live Data		V1.20.001
CX-3	1.5L	S5	Other	DC to DC Converter Control Module	Active Test	Forced charging flag set at the ti	V1.20.001
CX-3	1.5L	S5	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
CX-3	1.5L	S5	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
CX-3	1.5L	S5	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
CX-3	1.5L	S5	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
CX-3	1.5L	S5	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
CX-3	1.5L	S5	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
CX-3	1.5L	S5	Other	Electric Supply Unit	Read DTC		V1.20.001
CX-3	1.5L	S5	Other	Electric Supply Unit	Erase DTC		V1.20.001
CX-3	1.5L	S5	Other	Forward Sensing Camera	Read DTC		V1.20.001
CX-3	1.5L	S5	Other	Forward Sensing Camera	Erase DTC		V1.20.001
CX-3	1.5L	S5	Other	Forward Sensing Camera	Live Data		V1.20.001
CX-3	1.5L	S5	Other	Instrument Cluster	Read DTC		V1.20.001
CX-3	1.5L	S5	Other	Instrument Cluster	Erase DTC		V1.20.001
CX-3	1.5L	S5	Other	Instrument Cluster	Live Data		V1.20.001
CX-3	1.5L	S5	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
CX-3	1.5L	S5	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
CX-3	1.5L	S5	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
CX-3	1.5L	S5	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
CX-3	1.5L	S5	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
CX-3	1.5L	S5	Other	Smart City Brake Support	Read DTC		V1.20.001
CX-3	1.5L	S5	Other	Smart City Brake Support	Erase DTC		V1.20.001
CX-3	1.5L	S5	Other	Smart City Brake Support	Live Data		V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Read DTC		V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Erase DTC		V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Live Data		V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculatio	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	Intake Shatter Valve Control De	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	LP-EGR Control Valve Desired	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	Exhaust Shutter Valve Position	V1.20.001

CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	HP-EGR Control Valve Desired	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	Turbocharger with variable turb	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	Desired Coolant Control Valve	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	Electrical Water Pump	V1.20.001
CX-3	1.5L	S5	Other	Restraint Control Module	Read DTC		V1.20.001
CX-3	1.5L	S5	Other	Restraint Control Module	Erase DTC		V1.20.001
CX-3	1.5L	S5	Other	Restraint Control Module	Live Data		V1.20.001
CX-3	1.5L	S5	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
CX-3	1.5L	S5	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
CX-3	1.5L	S5	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
CX-3	1.5L	S5	Other	Start Stop Unit	Read DTC		V1.20.001
CX-3	1.5L	S5	Other	Start Stop Unit	Erase DTC		V1.20.001
CX-3	1.5L	S5	Other	Start Stop Unit	Live Data		V1.20.001
CX-3	1.5L	S5	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
CX-3	1.5L	S5	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
CX-3	1.5L	S5	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
CX-3	1.5L	S5	Other	Transmission Control Module	Read DTC		V1.20.001
CX-3	1.5L	S5	Other	Transmission Control Module	Erase DTC		V1.20.001
CX-3	1.5L	S5	Other	Transmission Control Module	Live Data		V1.20.001
CX-3	1.5L	S5	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
CX-3	1.5L	S5	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
CX-3	1.5L	S5	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
CX-3	1.5L	S5	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
CX-3	1.5L	S5	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
CX-3	1.5L	S5	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
CX-3	1.5L	S5	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
CX-3	1.5L	S5	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
CX-3	1.5L	S5	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
CX-3	1.5L	S5	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
CX-3	2.0L	PE	Other	4X4 Control Module	Read DTC		V1.20.001
CX-3	2.0L	PE	Other	4X4 Control Module	Erase DTC		V1.20.001
CX-3	2.0L	PE	Other	4X4 Control Module	Live Data		V1.20.001
CX-3	2.0L	PE	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
CX-3	2.0L	PE	Other	Antilock braking system	Read DTC		V1.20.001
CX-3	2.0L	PE	Other	Antilock braking system	Erase DTC		V1.20.001
CX-3	2.0L	PE	Other	Antilock braking system	Live Data		V1.20.001
CX-3	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
CX-3	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
CX-3	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
CX-3	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
CX-3	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
CX-3	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
CX-3	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
CX-3	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
CX-3	2.0L	PE	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
CX-3	2.0L	PE	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
CX-3	2.0L	PE	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fro	V1.20.001
CX-3	2.0L	PE	Other	Antilock braking system	Active Test	Stability Control Valve (Right Frc	V1.20.001
CX-3	2.0L	PE	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
CX-3	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
CX-3	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
CX-3	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
CX-3	2.0L	PE	Other	Body Control Module	Read DTC		V1.20.001
CX-3	2.0L	PE	Other	Body Control Module	Erase DTC		V1.20.001
CX-3	2.0L	PE	Other	Body Control Module	Live Data		V1.20.001
CX-3	2.0L	PE	Other	Body Control Module	Active Test	Front Fog Relay	V1.20.001
CX-3	2.0L	PE	Other	Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
CX-3	2.0L	PE	Other	Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
CX-3	2.0L	PE	Other	Body Control Module	Active Test	Horn Relay	V1.20.001
CX-3	2.0L	PE	Other	Body Control Module	Active Test	Stop Lamp Control	V1.20.001
CX-3	2.0L	PE	Other	Body Control Module	Active Test	Blower Motor Relay	V1.20.001
CX-3	2.0L	PE	Other	Body Control Module	Active Test	Rear Defogger Relay	V1.20.001
CX-3	2.0L	PE	Other	Body Control Module	Active Test	Headlight Hi-Beam Control Requ	V1.20.001
CX-3	2.0L	PE	Other	Body Control Module	Active Test	Headlight Lo-Beam Control Requ	V1.20.001
CX-3	2.0L	PE	Other	Body Control Module	Active Test	DRL(Daytime Running Lamps) Cr	V1.20.001
CX-3	2.0L	PE	Other	Body Control Module	Active Test	TNS Control Request to ESU	V1.20.001
CX-3	2.0L	PE	Other	Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
CX-3	2.0L	PE	Other	Body Control Module	Active Test	Rear Wiper Control Request to f	V1.20.001
CX-3	2.0L	PE	Other	Body Control Module	Active Test	Front Washer Control Request t	V1.20.001
CX-3	2.0L	PE	Other	Body Control Module	Active Test	Control Request of Trunk/Cargo	V1.20.001
CX-3	2.0L	PE	Other	Body Control Module	Active Test	Control Request of Room Lamp	V1.20.001
CX-3	2.0L	PE	Other	Body Control Module	Active Test	Control Request of Reverse Lam	V1.20.001
CX-3	2.0L	PE	Other	Body Control Module	Active Test	PTC Heater Status	V1.20.001
CX-3	2.0L	PE	Other	Body Control Module	Active Test	Control Request of Door Unlock	V1.20.001
CX-3	2.0L	PE	Other	Body Control Module	Active Test	Control Request of Door Lock Re	V1.20.001
CX-3	2.0L	PE	Other	Body Control Module	Active Test	Control Request of Trunk/Liftgai	V1.20.001
CX-3	2.0L	PE	Other	Blind Spot Monitoring	Read DTC		V1.20.001
CX-3	2.0L	PE	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
CX-3	2.0L	PE	Other	Blind Spot Monitoring	Live Data		V1.20.001
CX-3	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
CX-3	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-3	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-3	2.0L	PE	Other	Connectivity Master Unit	Read DTC		V1.20.001
CX-3	2.0L	PE	Other	Connectivity Master Unit	Erase DTC		V1.20.001
CX-3	2.0L	PE	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
CX-3	2.0L	PE	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
CX-3	2.0L	PE	Other	DC to DC Converter Control Module	Live Data		V1.20.001
CX-3	2.0L	PE	Other	DC to DC Converter Control Module	Active Test	Forced charging flag set at the ti	V1.20.001
CX-3	2.0L	PE	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
CX-3	2.0L	PE	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
CX-3	2.0L	PE	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
CX-3	2.0L	PE	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001

CX-3	2.0L	PE	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
CX-3	2.0L	PE	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
CX-3	2.0L	PE	Other	Electric Supply Unit	Read DTC		V1.20.001
CX-3	2.0L	PE	Other	Electric Supply Unit	Erase DTC		V1.20.001
CX-3	2.0L	PE	Other	Forward Sensing Camera	Read DTC		V1.20.001
CX-3	2.0L	PE	Other	Forward Sensing Camera	Erase DTC		V1.20.001
CX-3	2.0L	PE	Other	Forward Sensing Camera	Live Data		V1.20.001
CX-3	2.0L	PE	Other	Instrument Cluster	Read DTC		V1.20.001
CX-3	2.0L	PE	Other	Instrument Cluster	Erase DTC		V1.20.001
CX-3	2.0L	PE	Other	Instrument Cluster	Live Data		V1.20.001
CX-3	2.0L	PE	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
CX-3	2.0L	PE	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
CX-3	2.0L	PE	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
CX-3	2.0L	PE	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
CX-3	2.0L	PE	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
CX-3	2.0L	PE	Other	Smart City Brake Support	Read DTC		V1.20.001
CX-3	2.0L	PE	Other	Smart City Brake Support	Erase DTC		V1.20.001
CX-3	2.0L	PE	Other	Smart City Brake Support	Live Data		V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Read DTC		V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Erase DTC		V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Live Data		V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculatio	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-3	2.0L	PE	Other	Restraint Control Module	Read DTC		V1.20.001
CX-3	2.0L	PE	Other	Restraint Control Module	Erase DTC		V1.20.001
CX-3	2.0L	PE	Other	Restraint Control Module	Live Data		V1.20.001
CX-3	2.0L	PE	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
CX-3	2.0L	PE	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
CX-3	2.0L	PE	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
CX-3	2.0L	PE	Other	Start Stop Unit	Read DTC		V1.20.001
CX-3	2.0L	PE	Other	Start Stop Unit	Erase DTC		V1.20.001
CX-3	2.0L	PE	Other	Start Stop Unit	Live Data		V1.20.001
CX-3	2.0L	PE	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
CX-3	2.0L	PE	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
CX-3	2.0L	PE	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
CX-3	2.0L	PE	Other	Transmission Control Module	Read DTC		V1.20.001
CX-3	2.0L	PE	Other	Transmission Control Module	Erase DTC		V1.20.001
CX-3	2.0L	PE	Other	Transmission Control Module	Live Data		V1.20.001
CX-3	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
CX-3	2.0L	PE	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
CX-3	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
CX-3	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
CX-3	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
CX-3	2.0L	PE	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
CX-3	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
CX-3	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
CX-3	2.0L	PE	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
CX-3	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Antilock braking system	Read DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Antilock braking system	Erase DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Antilock braking system	Live Data		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fr	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Antilock braking system	Active Test	Stability Control Valve (Right Fr	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Amplifier Module	Read DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Amplifier Module	Erase DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Body Control Module	Read DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Body Control Module	Erase DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Body Control Module	Live Data		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Body Control Module	Active Test	Front Fog Relay	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Body Control Module	Active Test	Horn Relay	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Body Control Module	Active Test	Stop Lamp Control	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Body Control Module	Active Test	Blower Motor Relay	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Body Control Module	Active Test	Rear Defogger Relay	V1.20.001

MX-5 / ROADSTER	1.5L	P5	Other	Body Control Module	Active Test	Headlight Hi-Beam Control Req	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Body Control Module	Active Test	Headlight Lo-Beam Control Req	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Body Control Module	Active Test	DRL(Daytime Running Lamps) C	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Body Control Module	Active Test	TNS Control Request to ESU	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Body Control Module	Active Test	Rear Wiper Control Request to f	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Body Control Module	Active Test	Front Washer Control Request t	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Body Control Module	Active Test	Control Request of Trunk/Cargo	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Body Control Module	Active Test	Control Request of Room Lamp	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Body Control Module	Active Test	Control Request of Reverse Lam	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Body Control Module	Active Test	PTC Heater Status	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Body Control Module	Active Test	Control Request of Door Unlock	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Body Control Module	Active Test	Control Request of Door Lock Re	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Body Control Module	Active Test	Control Request of Trunk/Liftga	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Blind Spot Monitoring	Read DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Blind Spot Monitoring	Live Data		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Connectivity Master Unit	Read DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Connectivity Master Unit	Erase DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	DC to DC Converter Control Module	Live Data		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	DC to DC Converter Control Module	Active Test	Forced charging flag set at the ti	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Electric Supply Unit	Read DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Electric Supply Unit	Erase DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Electrical Vacuum Pump	Read DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Electrical Vacuum Pump	Erase DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Electrical Vacuum Pump	Live Data		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Electrical Vacuum Pump	Active Test	Vacuum Pump Status Feedback	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Instrument Cluster	Read DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Instrument Cluster	Erase DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Instrument Cluster	Live Data		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Read DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Erase DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Live Data		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculati	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Parking Sensor Module	Read DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Parking Sensor Module	Erase DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Parking Sensor Module	Live Data		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Restraint Control Module	Read DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Restraint Control Module	Erase DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Restraint Control Module	Live Data		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Retractable Hard Top	Read DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Retractable Hard Top	Erase DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Retractable Hard Top	Live Data		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Start Stop Unit	Read DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Start Stop Unit	Erase DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Start Stop Unit	Live Data		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Transmission Control Module	Read DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Transmission Control Module	Erase DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Transmission Control Module	Live Data		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Transmission Control Module	Active Test	Pressure Control Solenoid A - C	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Transmission Control Module	Active Test	Shift Solenoid A Commanded Cu	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Transmission Control Module	Active Test	Shift Solenoid B Commanded Cu	V1.20.001

MX-5 / ROADSTER	1.5L	P5	Other	Transmission Control Module	Active Test	ON/OFF solenoid 1	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Transmission Control Module	Active Test	ON/OFF solenoid 2	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Transmission Control Module	Active Test	ON/OFF solenoid 3	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Transmission Control Module	Active Test	ON/OFF solenoid 4	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Transmission Control Module	Active Test	ON/OFF solenoid 5	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Forward Sensing Camera	Read DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Forward Sensing Camera	Erase DTC		V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Forward Sensing Camera	Live Data		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Antilock braking system	Read DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Antilock braking system	Erase DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Antilock braking system	Live Data		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fro	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Antilock braking system	Active Test	Stability Control Valve (Right Fr	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Amplifier Module	Read DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Amplifier Module	Erase DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Body Control Module	Read DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Body Control Module	Erase DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Body Control Module	Live Data		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Body Control Module	Active Test	Front Fog Relay	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Body Control Module	Active Test	Horn Relay	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Body Control Module	Active Test	Stop Lamp Control	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Body Control Module	Active Test	Blower Motor Relay	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Body Control Module	Active Test	Rear Defogger Relay	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Body Control Module	Active Test	Headlight Hi-Beam Control Requ	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Body Control Module	Active Test	Headlight Lo-Beam Control Requ	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Body Control Module	Active Test	DRL(Daytime Running Lamps) Cr	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Body Control Module	Active Test	TNS Control Request to ESU	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Body Control Module	Active Test	Rear Wiper Control Request to f	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Body Control Module	Active Test	Front Washer Control Request t	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Body Control Module	Active Test	Control Request of Trunk/Cargo	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Body Control Module	Active Test	Control Request of Room Lamp	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Body Control Module	Active Test	Control Request of Reverse Lam	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Body Control Module	Active Test	PTC Heater Status	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Body Control Module	Active Test	Control Request of Door Unlock	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Body Control Module	Active Test	Control Request of Door Lock Re	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Body Control Module	Active Test	Control Request of Trunk/Liftga	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Blind Spot Monitoring	Read DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Blind Spot Monitoring	Live Data		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Connectivity Master Unit	Read DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Connectivity Master Unit	Erase DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	DC to DC Converter Control Module	Live Data		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	DC to DC Converter Control Module	Active Test	Forced charging flag set at the ti	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Electric Supply Unit	Read DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Electric Supply Unit	Erase DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Electrical Vacuum Pump	Read DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Electrical Vacuum Pump	Erase DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Electrical Vacuum Pump	Live Data		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Electrical Vacuum Pump	Active Test	Vacuum Pump Status Feedback	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Instrument Cluster	Read DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Instrument Cluster	Erase DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Instrument Cluster	Live Data		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Read DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Erase DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Live Data		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001

MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculat	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	Target Exhaust Variable Valve Ti	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	Wastgate Valve Position	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	Vehicle drive device function tes	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	Exhaust Flow Control Valve 'A' P	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	Engine Oil Pressure Solenoid Val	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	Engine Oil Pressure Solenoid Val	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Powertrain Control Module	Active Test	Engine Oil Pressure Solenoid Val	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Parking Sensor Module	Read DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Parking Sensor Module	Erase DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Parking Sensor Module	Live Data		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Restraint Control Module	Read DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Restraint Control Module	Erase DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Restraint Control Module	Live Data		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Retractable Hard Top	Read DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Retractable Hard Top	Erase DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Retractable Hard Top	Live Data		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Start Stop Unit	Read DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Start Stop Unit	Erase DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Start Stop Unit	Live Data		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Transmission Control Module	Read DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Transmission Control Module	Erase DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Transmission Control Module	Live Data		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Transmission Control Module	Active Test	Pressure Control Solenoid A - C	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid A Commanded Cu	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid B Commanded Cu	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Transmission Control Module	Active Test	ON/OFF solenoid 1	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Transmission Control Module	Active Test	ON/OFF solenoid 2	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Transmission Control Module	Active Test	ON/OFF solenoid 3	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Transmission Control Module	Active Test	ON/OFF solenoid 4	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Transmission Control Module	Active Test	ON/OFF solenoid 5	V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Forward Sensing Camera	Read DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Forward Sensing Camera	Erase DTC		V1.20.001
MX-5 / ROADSTER	2.0L	PE	Other	Forward Sensing Camera	Live Data		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J1_T		2014 Idling Start and Stop/Hill Start Aid	Read DTC		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J1_T		2014 Idling Start and Stop/Hill Start Aid	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J1_T		2014 Restraint Control Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	3.0L	4J1_T		2014 Restraint Control Module	Erase DTC		V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Read DTC		V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Erase DTC		V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Live Data		V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Active Test	Injector 5	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Active Test	Exhaust Gas Recirculation soleni	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Active Test	Air bypass valve solenoid(vent)	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Active Test	Air bypass valve solenoid(vacuu	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Active Test	Charge air cooler solenoid valve	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Active Test	Fuel pump resistor relay	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Active Test	boost sensor solenoid valve	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Active Test	Injector 6	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ		1996 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL		1996 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL		1996 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL		1996 Powertrain Control Module	Read DTC		V1.20.001

MPV (North America / General)	3.0L	JE	1999 Powertrain Control Module	Live Data		V1.20.001
MPV (North America / General)	3.0L	JE	1999 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MPV (North America / General)	3.0L	JE	1999 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MPV (North America / General)	3.0L	JE	1999 Powertrain Control Module	Active Test	Accelerated warm-up solenoid v	V1.20.001
MPV (North America / General)	3.0L	JE	1999 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MPV (North America / General)	3.0L	JE	1999 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MPV (North America / General)	3.0L	JE	1999 Powertrain Control Module	Active Test	purge valve control with caniste	V1.20.001
MPV (North America / General)	3.0L	JE	1999 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MPV (North America / General)	3.0L	JE	1999 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MPV (North America / General)	3.0L	JE	1999 Powertrain Control Module	Active Test	Barometric pressure pressure si	V1.20.001
MPV (North America / General)	3.0L	JE	1999 Powertrain Control Module	Active Test	Canister drain cut valve control	V1.20.001
MPV (North America / General)	3.0L	JE	1999 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
MPV (North America / General)	3.0L	JE	1999 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MPV (North America / General)	3.0L	JE	1999 Powertrain Control Module	Active Test	Variable Resonance Induction S _y	V1.20.001
MPV (North America / General)	3.0L	JE	1999 Powertrain Control Module	Active Test	Injector 6	V1.20.001
MPV (North America / General)	3.0L	JE	1999 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MPV (North America / General)	3.0L	JE	1999 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MPV (North America / General)	3.0L	JE	1999 Powertrain Control Module	Active Test	Injector 5	V1.20.001
PROCEED	2.5L	G5	1996 Powertrain Control Module	Read DTC		V1.20.001
PROCEED	2.5L	G5	1996 Powertrain Control Module	Erase DTC		V1.20.001
PROCEED	2.5L	G5	1996 Powertrain Control Module	Live Data		V1.20.001
PROCEED	2.5L	G5	1996 Powertrain Control Module	Active Test	Injector 1	V1.20.001
PROCEED	2.5L	G5	1996 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PROCEED	2.5L	G5	1996 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
PROCEED	2.5L	G5	1996 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
PROCEED	2.5L	G5	1996 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
PROCEED	2.5L	G5	1996 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
PROCEED	2.5L	G5	1996 Powertrain Control Module	Active Test	Injector 2	V1.20.001
PROCEED	2.5L	G5	1996 Transmission Control Module	Read DTC		V1.20.001
PROCEED	2.5L	G5	1996 Transmission Control Module	Erase DTC		V1.20.001
MAZDA 929	3.0L	JE	1997 Powertrain Control Module	Read DTC		V1.20.001
MAZDA 929	3.0L	JE	1997 Powertrain Control Module	Erase DTC		V1.20.001
MAZDA 929	3.0L	JE	1997 Powertrain Control Module	Live Data		V1.20.001
MAZDA 929	3.0L	JE	1997 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA 929	3.0L	JE	1997 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA 929	3.0L	JE	1997 Powertrain Control Module	Active Test	Injector 5	V1.20.001
MAZDA 929	3.0L	JE	1997 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MAZDA 929	3.0L	JE	1997 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA 929	3.0L	JE	1997 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA 929	3.0L	JE	1997 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
MAZDA 929	3.0L	JE	1997 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA 929	3.0L	JE	1997 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA 929	3.0L	JE	1997 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
MAZDA 929	3.0L	JE	1997 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
MAZDA 929	3.0L	JE	1997 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MAZDA 929	3.0L	JE	1997 Powertrain Control Module	Active Test	Injector 6	V1.20.001
MAZDA 929	3.0L	JE	1997 Powertrain Control Module	Active Test	Injector 2	V1.20.001
Titan	4.0L	TF	2000 Powertrain Control Module	Read DTC		V1.20.001
Titan	4.0L	TF	2000 Powertrain Control Module	Erase DTC		V1.20.001
Titan	4.0L	TF	2000 Powertrain Control Module	Live Data		V1.20.001
Titan	4.0L	TF	2000 Powertrain Control Module	Active Test	Exhaust Shutter Valve Solenoid	V1.20.001
Titan	4.0L	TF	2000 Powertrain Control Module	Active Test	Glow plug lamp	V1.20.001
Titan	4.0L	TF	2000 Powertrain Control Module	Active Test	Glow plug control	V1.20.001
Titan	4.0L	TF	2000 Powertrain Control Module	Active Test	Brake Lamp Relay	V1.20.001
Titan	4.0L	TF	2000 Powertrain Control Module	Active Test	intake air shutter valve	V1.20.001
Titan	4.0L	TF	2000 Powertrain Control Module	Active Test	Spill Valve Relay	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Electronic-Controlled Power Steering	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Electronic-Controlled Power Steering	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Generic Electronic Module	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Generic Electronic Module	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Generic Electronic Module	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Generic Electronic Module	Active Test	Room Light	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Generic Electronic Module	Active Test	Hazard Flashers	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Generic Electronic Module	Active Test	Air Conditioning Indicator	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Generic Electronic Module	Active Test	Key Reminder Warning Alarm	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Generic Electronic Module	Active Test	Seat Belt Reminder Warning Ala	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Generic Electronic Module	Active Test	Light Reminder Warning Alarm	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Generic Electronic Module	Active Test	Reverse Alarm	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Generic Electronic Module	Active Test	Taillight	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Generic Electronic Module	Active Test	Headlamp	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Generic Electronic Module	Active Test	Front windshield wiper	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Generic Electronic Module	Active Test	Rear wiper	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Instrument Cluster	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Instrument Cluster	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Instrument Cluster	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Intelligent Power Distribution Module	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Intelligent Power Distribution Module	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Intelligent Power Distribution Module	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Intelligent Power Distribution Module	Active Test	Front windshield wiper	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Intelligent Power Distribution Module	Active Test	Cooling Fan State	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Intelligent Power Distribution Module	Active Test	Exterior Light	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Intelligent Power Distribution Module	Active Test	Rear Defogger Control	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Powertrain Control Module	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Powertrain Control Module	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Powertrain Control Module	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Powertrain Control Module	Active Test	Short term fuel trim 1	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Powertrain Control Module	Active Test	Engine coolant temperature	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Powertrain Control Module	Active Test	Alternator Commanded Duty Va	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2013 Powertrain Control Module	Active Test	Ignition timing	V1.20.001

FAMILIA VAN (BV*Y12)	1.6L	HR16		2013 Powertrain Control Module	Active Test	Injector 1	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2013 Powertrain Control Module	Active Test	Injector 2	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2013 Powertrain Control Module	Active Test	Injector 3	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2013 Powertrain Control Module	Active Test	Injector 4	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2013 Powertrain Control Module	Active Test	Intake Variable Camshaft Timing	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2013 Powertrain Control Module	Active Test	Air Fuel Ratio Sensor Heater (Ba	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2013 Powertrain Control Module	Active Test	Low Cooling Fan State	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2013 Powertrain Control Module	Active Test	High Cooling Fan State	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2013 Restraint Control Module	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2013 Restraint Control Module	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2013 Antilock braking system	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2013 Antilock braking system	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2013 Antilock braking system	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2013 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2013 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2013 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2013 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2013 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2013 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2013 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2013 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2013 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Antilock braking system	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Antilock braking system	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Antilock braking system	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Body Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Body Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Body Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Body Control Module	Active Test	Hazard Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Body Control Module	Active Test	Auto Light Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Body Control Module	Active Test	Key and Push Start System Illum	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Body Control Module	Active Test	Room Light Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Body Control Module	Active Test	Door Lock Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Body Control Module	Active Test	Buzzer Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Body Control Module	Active Test	Alarm Indicator Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Body Control Module	Active Test	Horn Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Body Control Module	Active Test	Rear Defogger Control	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Body Control Module	Active Test	Shift Lock Solenoid	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Electronic Automatic Temperature Cor	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Electronic Automatic Temperature Cor	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Electronic Automatic Temperature Cor	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Rader Brake Support	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Rader Brake Support	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Rader Brake Support	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Instrument Cluster	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Instrument Cluster	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Instrument Cluster	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Instrument Cluster	Active Test	Fuel Meter (Direct)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Instrument Cluster	Active Test	Tachometer (Direct)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Instrument Cluster	Active Test	Speedometer (Direct)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Instrument Cluster	Active Test	Warning Buzzer	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Instrument Cluster	Active Test	Speedometer (Sweep)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Instrument Cluster	Active Test	Fuel Meter (Sweep)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Instrument Cluster	Active Test	Tachometer (Sweep)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Lighting Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Lighting Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Lighting Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Lighting Control Module	Active Test	Leveling Actuator	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Powertrain Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Powertrain Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Powertrain Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Powertrain Control Module	Active Test	Spark Advance	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Powertrain Control Module	Active Test	Variable Cam Timing	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Restraint Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Restraint Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Restraint Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Transmission Control Module	Read DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Transmission Control Module	Erase DTC		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Transmission Control Module	Live Data		V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A-T	Other	Transmission Control Module	Active Test	Clearing of Learning Value	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3		1998 Powertrain Control Module	Read DTC		V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3		1998 Powertrain Control Module	Erase DTC		V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3		1998 Powertrain Control Module	Live Data		V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3		1998 Powertrain Control Module	Active Test	Injector 4	V1.20.001

DEMIO / 121 DEMIO / 121	1.3L	B3		1998 Powertrain Control Module	Active Test	Generator field current control c	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3		1998 Powertrain Control Module	Active Test	Injector 3	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3		1998 Powertrain Control Module	Active Test	Injector 1	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3		1998 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3		1998 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3		1998 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3		1998 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3		1998 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3		1998 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3		1998 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3		1998 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3		1998 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Active Test	Generator field current control c	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MX-5 / ROADSTER	1.5L	P5	Other	Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	4X4 Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	4X4 Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Antilock braking system	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Traction Control Valve (Right Frc	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fror	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Stability Control Valve (Right Frc	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Audio Control Unit	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Audio Control Unit	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Adaptive Front Lighting System	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Adaptive Front Lighting System	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Amplifier Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Amplifier Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Amplifier Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Amplifier Module	Active Test	Engine Harmonic Enhancement	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Blind Spot Monitoring	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Blind Spot Monitoring	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Blind Spot Monitoring (Left)	Active Test	BSM OFF Indicator Light	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Blind Spot Monitoring (Left)	Active Test	Buzzer	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Blind Spot Monitoring (Right)	Read DTC	BSM Illumination Mode	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Connectivity Master Unit	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Connectivity Master Unit	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	DC to DC Converter Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Driver's Seat Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Driver's Seat Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Driver's Seat Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Electric Parking Brake	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Electric Parking Brake	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Electric Parking Brake	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Forward Sensing Camera	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Forward Sensing Camera	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Forward Sensing Camera	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Instrument Cluster	Erase DTC		V1.20.001

MAZDA3 / AXELA	1.5L	S5	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Smart City Brake Support	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Smart City Brake Support	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Smart City Brake Support	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Parking Sensor Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Parking Sensor Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Parking Sensor Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Restraint Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Rear Vehicle Monitoring	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Rear Vehicle Monitoring	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Rear Vehicle Monitoring	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Rear Vehicle Monitoring	Active Test	Buzzer	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Rear Vehicle Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Rear Body Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Rear Body Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Rear Body Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Start Stop Unit	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Start Stop Unit	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Start Stop Unit	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Front Body Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Front Body Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Front Body Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
MAZDA3 / AXELA	1.5L	S5	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
CX-4	2.0L	PE	Other	4X4 Control Module	Read DTC		V1.20.001
CX-4	2.0L	PE	Other	4X4 Control Module	Erase DTC		V1.20.001
CX-4	2.0L	PE	Other	4X4 Control Module	Live Data		V1.20.001
CX-4	2.0L	PE	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
CX-4	2.0L	PE	Other	Antilock braking system	Read DTC		V1.20.001
CX-4	2.0L	PE	Other	Antilock braking system	Erase DTC		V1.20.001
CX-4	2.0L	PE	Other	Antilock braking system	Live Data		V1.20.001
CX-4	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
CX-4	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
CX-4	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
CX-4	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
CX-4	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
CX-4	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
CX-4	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
CX-4	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
CX-4	2.0L	PE	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
CX-4	2.0L	PE	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fro	V1.20.001
CX-4	2.0L	PE	Other	Antilock braking system	Active Test	Stability Control Valve (Right Frc	V1.20.001
CX-4	2.0L	PE	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
CX-4	2.0L	PE	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
CX-4	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
CX-4	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
CX-4	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
CX-4	2.0L	PE	Other	Blind Spot Monitoring	Read DTC		V1.20.001

CX-4	2.0L	PE	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
CX-4	2.0L	PE	Other	Blind Spot Monitoring	Live Data		V1.20.001
CX-4	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
CX-4	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-4	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-4	2.0L	PE	Other	Connectivity Master Unit	Read DTC		V1.20.001
CX-4	2.0L	PE	Other	Connectivity Master Unit	Erase DTC		V1.20.001
CX-4	2.0L	PE	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
CX-4	2.0L	PE	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
CX-4	2.0L	PE	Other	DC to DC Converter Control Module	Live Data		V1.20.001
CX-4	2.0L	PE	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
CX-4	2.0L	PE	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
CX-4	2.0L	PE	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
CX-4	2.0L	PE	Other	Electric Parking Brake	Read DTC		V1.20.001
CX-4	2.0L	PE	Other	Electric Parking Brake	Erase DTC		V1.20.001
CX-4	2.0L	PE	Other	Electric Parking Brake	Live Data		V1.20.001
CX-4	2.0L	PE	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
CX-4	2.0L	PE	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
CX-4	2.0L	PE	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
CX-4	2.0L	PE	Other	Front Body Control Module	Read DTC		V1.20.001
CX-4	2.0L	PE	Other	Front Body Control Module	Erase DTC		V1.20.001
CX-4	2.0L	PE	Other	Front Body Control Module	Live Data		V1.20.001
CX-4	2.0L	PE	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
CX-4	2.0L	PE	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
CX-4	2.0L	PE	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
CX-4	2.0L	PE	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
CX-4	2.0L	PE	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
CX-4	2.0L	PE	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
CX-4	2.0L	PE	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
CX-4	2.0L	PE	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
CX-4	2.0L	PE	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
CX-4	2.0L	PE	Other	Instrument Cluster	Read DTC		V1.20.001
CX-4	2.0L	PE	Other	Instrument Cluster	Erase DTC		V1.20.001
CX-4	2.0L	PE	Other	Instrument Cluster	Live Data		V1.20.001
CX-4	2.0L	PE	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
CX-4	2.0L	PE	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
CX-4	2.0L	PE	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
CX-4	2.0L	PE	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
CX-4	2.0L	PE	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
CX-4	2.0L	PE	Other	Smart City Brake Support	Read DTC		V1.20.001
CX-4	2.0L	PE	Other	Smart City Brake Support	Erase DTC		V1.20.001
CX-4	2.0L	PE	Other	Smart City Brake Support	Live Data		V1.20.001
CX-4	2.0L	PE	Other	Powertrain Control Module	Read DTC		V1.20.001
CX-4	2.0L	PE	Other	Powertrain Control Module	Erase DTC		V1.20.001
CX-4	2.0L	PE	Other	Powertrain Control Module	Live Data		V1.20.001
CX-4	2.0L	PE	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CX-4	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
CX-4	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
CX-4	2.0L	PE	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculatio	V1.20.001
CX-4	2.0L	PE	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
CX-4	2.0L	PE	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
CX-4	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
CX-4	2.0L	PE	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CX-4	2.0L	PE	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CX-4	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
CX-4	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
CX-4	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
CX-4	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-4	2.0L	PE	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
CX-4	2.0L	PE	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
CX-4	2.0L	PE	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-4	2.0L	PE	Other	Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
CX-4	2.0L	PE	Other	Restraint Control Module	Read DTC		V1.20.001
CX-4	2.0L	PE	Other	Restraint Control Module	Erase DTC		V1.20.001
CX-4	2.0L	PE	Other	Restraint Control Module	Live Data		V1.20.001
CX-4	2.0L	PE	Other	Rear Body Control Module	Read DTC		V1.20.001
CX-4	2.0L	PE	Other	Rear Body Control Module	Erase DTC		V1.20.001
CX-4	2.0L	PE	Other	Rear Body Control Module	Live Data		V1.20.001
CX-4	2.0L	PE	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
CX-4	2.0L	PE	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
CX-4	2.0L	PE	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
CX-4	2.0L	PE	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
CX-4	2.0L	PE	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
CX-4	2.0L	PE	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
CX-4	2.0L	PE	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
CX-4	2.0L	PE	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
CX-4	2.0L	PE	Other	Start Stop Unit	Read DTC		V1.20.001
CX-4	2.0L	PE	Other	Start Stop Unit	Erase DTC		V1.20.001
CX-4	2.0L	PE	Other	Start Stop Unit	Live Data		V1.20.001
CX-4	2.0L	PE	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
CX-4	2.0L	PE	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
CX-4	2.0L	PE	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
CX-4	2.0L	PE	Other	Transmission Control Module	Read DTC		V1.20.001
CX-4	2.0L	PE	Other	Transmission Control Module	Erase DTC		V1.20.001
CX-4	2.0L	PE	Other	Transmission Control Module	Live Data		V1.20.001
CX-4	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
CX-4	2.0L	PE	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
CX-4	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
CX-4	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
CX-4	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
CX-4	2.0L	PE	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
CX-4	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001

CX-4	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
CX-4	2.0L	PE	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
CX-4	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
CX-4	2.5L	PY	Other	4X4 Control Module	Read DTC		V1.20.001
CX-4	2.5L	PY	Other	4X4 Control Module	Erase DTC		V1.20.001
CX-4	2.5L	PY	Other	4X4 Control Module	Live Data		V1.20.001
CX-4	2.5L	PY	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
CX-4	2.5L	PY	Other	Antilock braking system	Read DTC		V1.20.001
CX-4	2.5L	PY	Other	Antilock braking system	Erase DTC		V1.20.001
CX-4	2.5L	PY	Other	Antilock braking system	Live Data		V1.20.001
CX-4	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
CX-4	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
CX-4	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
CX-4	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
CX-4	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
CX-4	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
CX-4	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
CX-4	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
CX-4	2.5L	PY	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
CX-4	2.5L	PY	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fror	V1.20.001
CX-4	2.5L	PY	Other	Antilock braking system	Active Test	Stability Control Valve (Right Frc	V1.20.001
CX-4	2.5L	PY	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
CX-4	2.5L	PY	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
CX-4	2.5L	PY	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
CX-4	2.5L	PY	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
CX-4	2.5L	PY	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
CX-4	2.5L	PY	Other	Blind Spot Monitoring	Read DTC		V1.20.001
CX-4	2.5L	PY	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
CX-4	2.5L	PY	Other	Blind Spot Monitoring	Live Data		V1.20.001
CX-4	2.5L	PY	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
CX-4	2.5L	PY	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-4	2.5L	PY	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-4	2.5L	PY	Other	Connectivity Master Unit	Read DTC		V1.20.001
CX-4	2.5L	PY	Other	Connectivity Master Unit	Erase DTC		V1.20.001
CX-4	2.5L	PY	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
CX-4	2.5L	PY	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
CX-4	2.5L	PY	Other	DC to DC Converter Control Module	Live Data		V1.20.001
CX-4	2.5L	PY	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
CX-4	2.5L	PY	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
CX-4	2.5L	PY	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
CX-4	2.5L	PY	Other	Electric Parking Brake	Read DTC		V1.20.001
CX-4	2.5L	PY	Other	Electric Parking Brake	Erase DTC		V1.20.001
CX-4	2.5L	PY	Other	Electric Parking Brake	Live Data		V1.20.001
CX-4	2.5L	PY	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
CX-4	2.5L	PY	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
CX-4	2.5L	PY	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
CX-4	2.5L	PY	Other	Front Body Control Module	Read DTC		V1.20.001
CX-4	2.5L	PY	Other	Front Body Control Module	Erase DTC		V1.20.001
CX-4	2.5L	PY	Other	Front Body Control Module	Live Data		V1.20.001
CX-4	2.5L	PY	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
CX-4	2.5L	PY	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
CX-4	2.5L	PY	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
CX-4	2.5L	PY	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
CX-4	2.5L	PY	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
CX-4	2.5L	PY	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
CX-4	2.5L	PY	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
CX-4	2.5L	PY	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
CX-4	2.5L	PY	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
CX-4	2.5L	PY	Other	Instrument Cluster	Read DTC		V1.20.001
CX-4	2.5L	PY	Other	Instrument Cluster	Erase DTC		V1.20.001
CX-4	2.5L	PY	Other	Instrument Cluster	Live Data		V1.20.001
CX-4	2.5L	PY	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
CX-4	2.5L	PY	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
CX-4	2.5L	PY	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
CX-4	2.5L	PY	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
CX-4	2.5L	PY	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
CX-4	2.5L	PY	Other	Smart City Brake Support	Read DTC		V1.20.001
CX-4	2.5L	PY	Other	Smart City Brake Support	Erase DTC		V1.20.001
CX-4	2.5L	PY	Other	Smart City Brake Support	Live Data		V1.20.001
CX-4	2.5L	PY	Other	Powertrain Control Module	Read DTC		V1.20.001
CX-4	2.5L	PY	Other	Powertrain Control Module	Erase DTC		V1.20.001
CX-4	2.5L	PY	Other	Powertrain Control Module	Live Data		V1.20.001
CX-4	2.5L	PY	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CX-4	2.5L	PY	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
CX-4	2.5L	PY	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
CX-4	2.5L	PY	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculatio	V1.20.001
CX-4	2.5L	PY	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
CX-4	2.5L	PY	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
CX-4	2.5L	PY	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
CX-4	2.5L	PY	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CX-4	2.5L	PY	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CX-4	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
CX-4	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
CX-4	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
CX-4	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-4	2.5L	PY	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
CX-4	2.5L	PY	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
CX-4	2.5L	PY	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-4	2.5L	PY	Other	Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
CX-4	2.5L	PY	Other	Restraint Control Module	Read DTC		V1.20.001
CX-4	2.5L	PY	Other	Restraint Control Module	Erase DTC		V1.20.001
CX-4	2.5L	PY	Other	Restraint Control Module	Live Data		V1.20.001

CX-4	2.5L	PY	Other	Rear Body Control Module	Read DTC		V1.20.001
CX-4	2.5L	PY	Other	Rear Body Control Module	Erase DTC		V1.20.001
CX-4	2.5L	PY	Other	Rear Body Control Module	Live Data		V1.20.001
CX-4	2.5L	PY	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
CX-4	2.5L	PY	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
CX-4	2.5L	PY	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
CX-4	2.5L	PY	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
CX-4	2.5L	PY	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
CX-4	2.5L	PY	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
CX-4	2.5L	PY	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
CX-4	2.5L	PY	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
CX-4	2.5L	PY	Other	Start Stop Unit	Read DTC		V1.20.001
CX-4	2.5L	PY	Other	Start Stop Unit	Erase DTC		V1.20.001
CX-4	2.5L	PY	Other	Start Stop Unit	Live Data		V1.20.001
CX-4	2.5L	PY	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
CX-4	2.5L	PY	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
CX-4	2.5L	PY	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
CX-4	2.5L	PY	Other	Transmission Control Module	Read DTC		V1.20.001
CX-4	2.5L	PY	Other	Transmission Control Module	Erase DTC		V1.20.001
CX-4	2.5L	PY	Other	Transmission Control Module	Live Data		V1.20.001
CX-4	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
CX-4	2.5L	PY	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
CX-4	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
CX-4	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
CX-4	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
CX-4	2.5L	PY	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
CX-4	2.5L	PY	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
CX-4	2.5L	PY	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
CX-4	2.5L	PY	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
CX-4	2.5L	PY	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
CX-9	2.5L	PY_T	Other	4X4 Control Module	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	4X4 Control Module	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	4X4 Control Module	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
CX-9	2.5L	PY_T	Other	Antilock braking system	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Antilock braking system	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Antilock braking system	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
CX-9	2.5L	PY_T	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
CX-9	2.5L	PY_T	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
CX-9	2.5L	PY_T	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
CX-9	2.5L	PY_T	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
CX-9	2.5L	PY_T	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
CX-9	2.5L	PY_T	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
CX-9	2.5L	PY_T	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
CX-9	2.5L	PY_T	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
CX-9	2.5L	PY_T	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fro	V1.20.001
CX-9	2.5L	PY_T	Other	Antilock braking system	Active Test	Stability Control Valve (Right Fr	V1.20.001
CX-9	2.5L	PY_T	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
CX-9	2.5L	PY_T	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
CX-9	2.5L	PY_T	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	Amplifier Module	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Amplifier Module	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-9	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
CX-9	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Read DTC	BSM Illumination Mode	V1.20.001
CX-9	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-9	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
CX-9	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
CX-9	2.5L	PY_T	Other	Connectivity Master Unit	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Connectivity Master Unit	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	DC to DC Converter Control Module	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	DC to DC Converter Control Module	Active Test	Forced charging flag set at the ti	V1.20.001
CX-9	2.5L	PY_T	Other	Data Communication Module	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Data Communication Module	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Data Communication Module	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	Driver's Seat Module	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Driver's Seat Module	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Driver's Seat Module	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	Electric Parking Brake	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Electric Parking Brake	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Electric Parking Brake	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	Forward Sensing Camera	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Forward Sensing Camera	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Forward Sensing Camera	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	Front Body Control Module	Read DTC		V1.20.001

CX-9	2.5L	PY_T	Other	Front Body Control Module	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Front Body Control Module	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
CX-9	2.5L	PY_T	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
CX-9	2.5L	PY_T	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
CX-9	2.5L	PY_T	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
CX-9	2.5L	PY_T	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
CX-9	2.5L	PY_T	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
CX-9	2.5L	PY_T	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
CX-9	2.5L	PY_T	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
CX-9	2.5L	PY_T	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
CX-9	2.5L	PY_T	Other	Head Up Display	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Head Up Display	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Head Up Display	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	Head Up Display	Active Test	HUD Test Mode	V1.20.001
CX-9	2.5L	PY_T	Other	Instrument Cluster	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Instrument Cluster	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Instrument Cluster	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
CX-9	2.5L	PY_T	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
CX-9	2.5L	PY_T	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
CX-9	2.5L	PY_T	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
CX-9	2.5L	PY_T	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
CX-9	2.5L	PY_T	Other	Smart City Brake Support	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Smart City Brake Support	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Smart City Brake Support	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	Powertrain Control Module	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Powertrain Control Module	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Powertrain Control Module	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CX-9	2.5L	PY_T	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
CX-9	2.5L	PY_T	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
CX-9	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculatio	V1.20.001
CX-9	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
CX-9	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
CX-9	2.5L	PY_T	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
CX-9	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CX-9	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CX-9	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
CX-9	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
CX-9	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
CX-9	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-9	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
CX-9	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
CX-9	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-9	2.5L	PY_T	Other	Powertrain Control Module	Active Test	VEV Oil Pressure	V1.20.001
CX-9	2.5L	PY_T	Other	Powertrain Control Module	Active Test	ABV Oil Pressure	V1.20.001
CX-9	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Wastgate Valve Position	V1.20.001
CX-9	2.5L	PY_T	Other	Power Liftgate	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Power Liftgate	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Power Liftgate	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	Parking Sensor Module	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Parking Sensor Module	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Parking Sensor Module	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	Restraint Control Module	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Restraint Control Module	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Restraint Control Module	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	Rear Body Control Module	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Rear Body Control Module	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Rear Body Control Module	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
CX-9	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
CX-9	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
CX-9	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
CX-9	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
CX-9	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
CX-9	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
CX-9	2.5L	PY_T	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
CX-9	2.5L	PY_T	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	Start Stop Unit	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Start Stop Unit	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Start Stop Unit	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
CX-9	2.5L	PY_T	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
CX-9	2.5L	PY_T	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
CX-9	2.5L	PY_T	Other	Transmission Control Module	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Transmission Control Module	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	Transmission Control Module	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
CX-9	2.5L	PY_T	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
CX-9	2.5L	PY_T	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
CX-9	2.5L	PY_T	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
CX-9	2.5L	PY_T	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
CX-9	2.5L	PY_T	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
CX-9	2.5L	PY_T	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
CX-9	2.5L	PY_T	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
CX-9	2.5L	PY_T	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
CX-9	2.5L	PY_T	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	4X4 Control Module	Erase DTC		V1.20.001

MAZDA3/ AXELA	1.5L	P5	Other	4X4 Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Antilock braking system	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fro	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Stability Control Valve (Right Frc	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Amplifier Module	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Amplifier Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Amplifier Module	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Amplifier Module	Active Test	Engine Harmonic Enhancement	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Blind Spot Monitoring	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Blind Spot Monitoring	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Connectivity Master Unit	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Connectivity Master Unit	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	DC to DC Converter Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Data Communication Module	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Data Communication Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Data Communication Module	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Driver's Seat Module	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Driver's Seat Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Driver's Seat Module	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Electric Parking Brake	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Electric Parking Brake	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Electric Parking Brake	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Forward Sensing Camera	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Forward Sensing Camera	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Forward Sensing Camera	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Front Body Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Front Body Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Front Body Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Head Up Display	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Head Up Display	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Head Up Display	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Head Up Display	Active Test	Maintenance mode	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Powertrain Control Module	Erase DTC		V1.20.001

MAZDA3/ AXELA	1.5L	P5	Other	Powertrain Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculati	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Parking Sensor Module	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Parking Sensor Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Parking Sensor Module	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Restraint Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Rear Body Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Rear Body Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Rear Body Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Start Stop Unit	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Start Stop Unit	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Start Stop Unit	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	View Monitor Camera	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	View Monitor Camera	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	P5	Other	View Monitor Camera	Live Data		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	4X4 Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	4X4 Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Antilock braking system	Live Data		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Traction Control Valve (Right Frc	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fro	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Stability Control Valve (Right Frc	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Amplifier Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Amplifier Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Amplifier Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Amplifier Module	Active Test	Engine Harmonic Enhancement	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Blind Spot Monitoring	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Blind Spot Monitoring	Erase DTC		V1.20.001

MAZDA3/ AXELA	2.0L	PE	Other	Blind Spot Monitoring	Live Data		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Connectivity Master Unit	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Connectivity Master Unit	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	DC to DC Converter Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Data Communication Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Data Communication Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Data Communication Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Driver's Seat Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Driver's Seat Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Driver's Seat Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Electric Parking Brake	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Electric Parking Brake	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Electric Parking Brake	Live Data		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Forward Sensing Camera	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Forward Sensing Camera	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Forward Sensing Camera	Live Data		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Front Body Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Front Body Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Front Body Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Head Up Display	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Head Up Display	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Head Up Display	Live Data		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Head Up Display	Active Test	Maintenance mode	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Powertrain Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculatio	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Parking Sensor Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Parking Sensor Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Parking Sensor Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Restraint Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Restraint Control Module	Live Data		V1.20.001

MAZDA3/ AXELA	2.0L	PE	Other	Rear Body Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Rear Body Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Rear Body Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Start Stop Unit	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Start Stop Unit	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Start Stop Unit	Live Data		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	View Monitor Camera	Read DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	View Monitor Camera	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.0L	PE	Other	View Monitor Camera	Live Data		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	4X4 Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	4X4 Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Antilock braking system	Live Data		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Traction Control Valve (Right Frc	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fro	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Stability Control Valve (Right Frc	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Amplifier Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Amplifier Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Amplifier Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Amplifier Module	Active Test	Engine Harmonic Enhancement	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Blind Spot Monitoring	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Blind Spot Monitoring	Live Data		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Connectivity Master Unit	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Connectivity Master Unit	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	DC to DC Converter Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Data Communication Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Data Communication Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Data Communication Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Data Communication Module	Active Test		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Driver's Seat Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Driver's Seat Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Driver's Seat Module	Live Data		V1.20.001

MAZDA3/ AXELA	2.5L	PY	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Electric Parking Brake	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Electric Parking Brake	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Electric Parking Brake	Live Data		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Forward Sensing Camera	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Forward Sensing Camera	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Forward Sensing Camera	Live Data		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Front Body Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Front Body Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Front Body Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Head Up Display	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Head Up Display	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Head Up Display	Live Data		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Head Up Display	Active Test	Maintenance mode	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Powertrain Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculati	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Parking Sensor Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Parking Sensor Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Parking Sensor Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Restraint Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Rear Body Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Rear Body Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Rear Body Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Start Stop Unit	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Start Stop Unit	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Start Stop Unit	Live Data		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001

MAZDA3/ AXELA	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	View Monitor Camera	Read DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	View Monitor Camera	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.5L	PY	Other	View Monitor Camera	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	4X4 Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	4X4 Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Antilock braking system	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Traction Control Valve (Right Frc	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fror	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Stability Control Valve (Right Frc	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Amplifier Module	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Amplifier Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Amplifier Module	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Amplifier Module	Active Test	Engine Harmonic Enhancement	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Blind Spot Monitoring	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Blind Spot Monitoring	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Connectivity Master Unit	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Connectivity Master Unit	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	DC to DC Converter Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Data Communication Module	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Data Communication Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Data Communication Module	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Driver's Seat Module	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Driver's Seat Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Driver's Seat Module	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Electric Parking Brake	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Electric Parking Brake	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Electric Parking Brake	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Forward Sensing Camera	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Forward Sensing Camera	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Forward Sensing Camera	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Front Body Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Front Body Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Front Body Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Head Up Display	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Head Up Display	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Head Up Display	Live Data		V1.20.001

MAZDA3/ AXELA	1.5L	S5	Other	Head Up Display	Active Test	Maintenance mode	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Powertrain Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle 2	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Powertrain Control Module	Active Test	Intake Shatter Valve Control De	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Powertrain Control Module	Active Test	LP-EGR Control Valve Desired	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Powertrain Control Module	Active Test	Exhaust Shutter Valve Position C	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Powertrain Control Module	Active Test	HP-EGR Control Valve Desired	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Powertrain Control Module	Active Test	Turbocharger with variable turb	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Powertrain Control Module	Active Test	Desired Coolant Control Valve	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Powertrain Control Module	Active Test	Electrical Water Pump	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Parking Sensor Module	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Parking Sensor Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Parking Sensor Module	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Restraint Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Rear Body Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Rear Body Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Rear Body Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Start Stop Unit	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Start Stop Unit	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Start Stop Unit	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	View Monitor Camera	Read DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	View Monitor Camera	Erase DTC		V1.20.001
MAZDA3/ AXELA	1.5L	S5	Other	View Monitor Camera	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	4X4 Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	4X4 Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Antilock braking system	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fr	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Stability Control Valve (Right Fr	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001

MAZDA3/ AXELA	2.2L	SH	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Amplifier Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Amplifier Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Amplifier Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Amplifier Module	Active Test	Engine Harmonic Enhancement	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Blind Spot Monitoring	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Blind Spot Monitoring	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Connectivity Master Unit	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Connectivity Master Unit	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	DC to DC Converter Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Data Communication Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Data Communication Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Data Communication Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Driver's Seat Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Driver's Seat Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Driver's Seat Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Electric Parking Brake	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Electric Parking Brake	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Electric Parking Brake	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Forward Sensing Camera	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Forward Sensing Camera	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Forward Sensing Camera	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Front Body Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Front Body Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Front Body Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Head Up Display	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Head Up Display	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Head Up Display	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Head Up Display	Active Test	Maintenance mode	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Powertrain Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Powertrain Control Module	Active Test	Turocharger Compressor Bypass	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle 2	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Powertrain Control Module	Active Test	Intake Shutter Valve Control De	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Powertrain Control Module	Active Test	Wastegate Solenoid Valve	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Powertrain Control Module	Active Test	Exhaust Gas Recirculation Coole	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Powertrain Control Module	Active Test	Regulating Solenoid Valve	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Parking Sensor Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Parking Sensor Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Parking Sensor Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Restraint Control Module	Erase DTC		V1.20.001

MAZDA3/ AXELA	2.2L	SH	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Rear Body Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Rear Body Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Rear Body Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Start Stop Unit	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Start Stop Unit	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Start Stop Unit	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	View Monitor Camera	Read DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	View Monitor Camera	Erase DTC		V1.20.001
MAZDA3/ AXELA	2.2L	SH	Other	View Monitor Camera	Live Data		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Driver's Seat Module	Read DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Driver's Seat Module	Erase DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Driver's Seat Module	Live Data		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Head Up Display	Read DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Head Up Display	Erase DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Head Up Display	Live Data		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Head Up Display	Active Test	Maintenance mode	V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Parking Sensor Module	Read DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Parking Sensor Module	Erase DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	Parking Sensor Module	Live Data		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	View Monitor Camera	Read DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	View Monitor Camera	Erase DTC		V1.20.001
AXELA (Hybrid)	2.0L	PE	Other	View Monitor Camera	Live Data		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	4X4 Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	4X4 Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Antilock braking system	Live Data		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fr	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Amplifier Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Amplifier Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Blind Spot Monitoring	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Blind Spot Monitoring	Live Data		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Read DTC	Mirror Warning Indicator - Left	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Connectivity Master Unit	Read DTC		V1.20.001

MAZDA6/ ATENZA	2.0L	PE	Other	Connectivity Master Unit	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	DC to DC Converter Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Data Communication Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Data Communication Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Data Communication Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Driver's Seat Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Driver's Seat Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Driver's Seat Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Electric Parking Brake	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Electric Parking Brake	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Electric Parking Brake	Live Data		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Forward Sensing Camera	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Forward Sensing Camera	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Forward Sensing Camera	Live Data		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Front Body Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Front Body Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Front Body Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Head Up Display	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Head Up Display	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Head Up Display	Live Data		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Head Up Display	Active Test	Maintenance mode	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculatio	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Parking Sensor Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Parking Sensor Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Parking Sensor Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Restraint Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Rear Body Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Rear Body Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Rear Body Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Start Stop Unit	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Start Stop Unit	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Start Stop Unit	Live Data		V1.20.001

MAZDA6/ ATENZA	2.0L	PE	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	4X4 Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	4X4 Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Antilock braking system	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fro	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Amplifier Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Amplifier Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Blind Spot Monitoring	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Blind Spot Monitoring	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Connectivity Master Unit	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Connectivity Master Unit	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	DC to DC Converter Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Data Communication Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Data Communication Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Data Communication Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Driver's Seat Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Driver's Seat Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Driver's Seat Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Electric Parking Brake	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Electric Parking Brake	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Electric Parking Brake	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Forward Sensing Camera	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Forward Sensing Camera	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Forward Sensing Camera	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Front Body Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Front Body Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Front Body Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001

MAZDA6/ ATENZA	2.5L	PY	Other	Head Up Display	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Head Up Display	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Head Up Display	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Head Up Display	Active Test	Maintenance mode	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculat	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Parking Sensor Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Parking Sensor Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Parking Sensor Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Restraint Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Rear Body Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Rear Body Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Rear Body Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Start Stop Unit	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Start Stop Unit	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Start Stop Unit	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	4X4 Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	4X4 Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Antilock braking system	Live Data		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fr	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001

MAZDA6/ ATENZA	2.2L	SH	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Amplifier Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Amplifier Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Blind Spot Monitoring	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Blind Spot Monitoring	Live Data		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Connectivity Master Unit	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Connectivity Master Unit	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	DC to DC Converter Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Data Communication Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Data Communication Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Data Communication Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Driver's Seat Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Driver's Seat Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Driver's Seat Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Electric Parking Brake	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Electric Parking Brake	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Electric Parking Brake	Live Data		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Forward Sensing Camera	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Forward Sensing Camera	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Forward Sensing Camera	Live Data		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Front Body Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Front Body Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Front Body Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Head Up Display	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Head Up Display	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Head Up Display	Live Data		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Head Up Display	Active Test	Maintenance mode	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Powertrain Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Turocharger Compressor Bypass	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle 2	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Intake Shutter Valve Control De	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Wastegate Solenoid Valve	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Exhaust Gas Recirculation Coole	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Regulating Solenoid Valve	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Parking Sensor Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Parking Sensor Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Parking Sensor Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Restraint Control Module	Erase DTC		V1.20.001

MAZDA6/ ATENZA	2.2L	SH	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Rear Body Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Rear Body Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Rear Body Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Start Stop Unit	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Start Stop Unit	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Start Stop Unit	Live Data		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Driver's Seat Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Driver's Seat Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Driver's Seat Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Head Up Display	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Head Up Display	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Head Up Display	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Head Up Display	Active Test	Maintenance mode	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle 2	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Parking Sensor Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Parking Sensor Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Parking Sensor Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	View Monitor Camera	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	View Monitor Camera	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	S5	Other	View Monitor Camera	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Driver's Seat Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Driver's Seat Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Driver's Seat Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Head Up Display	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Head Up Display	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Head Up Display	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Head Up Display	Active Test	Maintenance mode	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	VEV Oil Pressure	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	ABV Oil Pressure	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	Wastgate Valve Position	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	Vehicle drive device function te	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	Exhaust Flow Control Valve 'A' P	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	Engine Oil Pressure Solenoid Val	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	Engine Oil Pressure Solenoid Val	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Powertrain Control Module	Active Test	Engine Oil Pressure Solenoid Val	V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Parking Sensor Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Parking Sensor Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Parking Sensor Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	View Monitor Camera	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	View Monitor Camera	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.5L	P5	Other	View Monitor Camera	Live Data		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Driver's Seat Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Driver's Seat Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Driver's Seat Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Head Up Display	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Head Up Display	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Head Up Display	Live Data		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Head Up Display	Active Test	Maintenance mode	V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Parking Sensor Module	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Parking Sensor Module	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Parking Sensor Module	Live Data		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	View Monitor Camera	Read DTC		V1.20.001
MAZDA2 / DEMIO	1.3L	P3	Other	View Monitor Camera	Erase DTC		V1.20.001

MAZDA2 / DEMIO	1.3L	P3	Other	View Monitor Camera	Live Data		V1.20.001
CX-3	1.5L	S5	Other	Driver's Seat Module	Read DTC		V1.20.001
CX-3	1.5L	S5	Other	Driver's Seat Module	Erase DTC		V1.20.001
CX-3	1.5L	S5	Other	Driver's Seat Module	Live Data		V1.20.001
CX-3	1.5L	S5	Other	Electric Parking Brake	Read DTC		V1.20.001
CX-3	1.5L	S5	Other	Electric Parking Brake	Erase DTC		V1.20.001
CX-3	1.5L	S5	Other	Electric Parking Brake	Live Data		V1.20.001
CX-3	1.5L	S5	Other	Head Up Display	Read DTC		V1.20.001
CX-3	1.5L	S5	Other	Head Up Display	Erase DTC		V1.20.001
CX-3	1.5L	S5	Other	Head Up Display	Live Data		V1.20.001
CX-3	1.5L	S5	Other	Head Up Display	Active Test	Maintenance mode	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	Turocharger Compressor Bypass	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle 2	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	Wastegate Solenoid Valve	V1.20.001
CX-3	1.5L	S5	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
CX-3	1.5L	S5	Other	Parking Sensor Module	Read DTC		V1.20.001
CX-3	1.5L	S5	Other	Parking Sensor Module	Erase DTC		V1.20.001
CX-3	1.5L	S5	Other	Parking Sensor Module	Live Data		V1.20.001
CX-3	1.5L	S5	Other	View Monitor Camera	Read DTC		V1.20.001
CX-3	1.5L	S5	Other	View Monitor Camera	Erase DTC		V1.20.001
CX-3	1.5L	S5	Other	View Monitor Camera	Live Data		V1.20.001
CX-3	2.0L	PE	Other	Driver's Seat Module	Read DTC		V1.20.001
CX-3	2.0L	PE	Other	Driver's Seat Module	Erase DTC		V1.20.001
CX-3	2.0L	PE	Other	Driver's Seat Module	Live Data		V1.20.001
CX-3	2.0L	PE	Other	Electric Parking Brake	Read DTC		V1.20.001
CX-3	2.0L	PE	Other	Electric Parking Brake	Erase DTC		V1.20.001
CX-3	2.0L	PE	Other	Electric Parking Brake	Live Data		V1.20.001
CX-3	2.0L	PE	Other	Head Up Display	Read DTC		V1.20.001
CX-3	2.0L	PE	Other	Head Up Display	Erase DTC		V1.20.001
CX-3	2.0L	PE	Other	Head Up Display	Live Data		V1.20.001
CX-3	2.0L	PE	Other	Head Up Display	Active Test	Maintenance mode	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	Wastgate Valve Position	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	Vehicle drive device function te	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	Exhaust Flow Control Valve 'A' P	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	Engine Oil Pressure Solenoid Val	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	Engine Oil Pressure Solenoid Val	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	Engine Oil Pressure Solenoid Val	V1.20.001
CX-3	2.0L	PE	Other	Parking Sensor Module	Read DTC		V1.20.001
CX-3	2.0L	PE	Other	Parking Sensor Module	Erase DTC		V1.20.001
CX-3	2.0L	PE	Other	Parking Sensor Module	Live Data		V1.20.001
CX-3	2.0L	PE	Other	View Monitor Camera	Read DTC		V1.20.001
CX-3	2.0L	PE	Other	View Monitor Camera	Erase DTC		V1.20.001
CX-3	2.0L	PE	Other	View Monitor Camera	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Amplifier Module	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Amplifier Module	Active Test	Engine Harmonic Enhancement	V1.20.001
CX-5	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
CX-5	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
CX-5	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
CX-5	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
CX-5	2.0L	PE	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Head Up Display	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Head Up Display	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Head Up Display	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Head Up Display	Active Test	HUD Test Mode	V1.20.001
CX-5	2.0L	PE	Other	Head Up Display	Active Test	Maintenance mode	V1.20.001
CX-5	2.0L	PE	Other	Power Liftgate	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Power Liftgate	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Power Liftgate	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Transmission Control Module	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	Transmission Control Module	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	Transmission Control Module	Live Data		V1.20.001
CX-5	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
CX-5	2.0L	PE	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
CX-5	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
CX-5	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
CX-5	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
CX-5	2.0L	PE	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
CX-5	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
CX-5	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
CX-5	2.0L	PE	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
CX-5	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
CX-5	2.0L	PE	Other	View Monitor Camera	Read DTC		V1.20.001
CX-5	2.0L	PE	Other	View Monitor Camera	Erase DTC		V1.20.001
CX-5	2.0L	PE	Other	View Monitor Camera	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Amplifier Module	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Amplifier Module	Active Test	Engine Harmonic Enhancement	V1.20.001
CX-5	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
CX-5	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
CX-5	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
CX-5	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
CX-5	2.5L	PY	Other	Head Up Display	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Head Up Display	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Head Up Display	Live Data		V1.20.001
CX-5	2.5L	PY	Other	Head Up Display	Active Test	HUD Test Mode	V1.20.001

CX-5	2.5L	PY	Other	Head Up Display	Active Test	Maintenance mode	V1.20.001
CX-5	2.5L	PY	Other	Power Liftgate	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	Power Liftgate	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	Power Liftgate	Live Data		V1.20.001
CX-5	2.5L	PY	Other	View Monitor Camera	Read DTC		V1.20.001
CX-5	2.5L	PY	Other	View Monitor Camera	Erase DTC		V1.20.001
CX-5	2.5L	PY	Other	View Monitor Camera	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Amplifier Module	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Amplifier Module	Active Test	Engine Harmonic Enhancement	V1.20.001
CX-5	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
CX-5	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
CX-5	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
CX-5	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
CX-5	2.2L	SH	Other	Head Up Display	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Head Up Display	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Head Up Display	Live Data		V1.20.001
CX-5	2.2L	SH	Other	Head Up Display	Active Test	HUD Test Mode	V1.20.001
CX-5	2.2L	SH	Other	Head Up Display	Active Test	Maintenance mode	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Turocharger Compressor Bypass	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle 2	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Intake Shatter Valve Control De	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Wastegate Solenoid Valve	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Exhaust Gas Recirculation Coole	V1.20.001
CX-5	2.2L	SH	Other	Powertrain Control Module	Active Test	Regulating Solenoid Valve	V1.20.001
CX-5	2.2L	SH	Other	Power Liftgate	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	Power Liftgate	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	Power Liftgate	Live Data		V1.20.001
CX-5	2.2L	SH	Other	View Monitor Camera	Read DTC		V1.20.001
CX-5	2.2L	SH	Other	View Monitor Camera	Erase DTC		V1.20.001
CX-5	2.2L	SH	Other	View Monitor Camera	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Advanced driver assistance system	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Advanced driver assistance system	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Advanced driver assistance system	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Advanced driver assistance system	Active Test	Brake Actuator Mode	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Advanced driver assistance system	Active Test	ICC Buzzer Mode	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Advanced driver assistance system	Active Test	Meter Lamp	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Advanced driver assistance system	Active Test	Stop Lamp	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Advanced driver assistance system	Active Test	LDP Buzzer	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Advanced driver assistance system	Active Test	Warning System Indicator Light	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Advanced driver assistance system	Active Test	Lane Departure Warning Light	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Advanced driver assistance system	Active Test	LDW Warning Light	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Electronic-Controlled Power Steering	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Electronic-Controlled Power Steering	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Generic Electronic Module	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Generic Electronic Module	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Generic Electronic Module	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Generic Electronic Module	Active Test	Room Light	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Generic Electronic Module	Active Test	Hazard Flashers	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Generic Electronic Module	Active Test	Air Conditioning Indicator	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Generic Electronic Module	Active Test	Key Reminder Warning Alarm	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Generic Electronic Module	Active Test	Seat Belt Reminder Warning Ala	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Generic Electronic Module	Active Test	Light Reminder Warning Alarm	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Generic Electronic Module	Active Test	Reverse Alarm	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Generic Electronic Module	Active Test	Taillight	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Generic Electronic Module	Active Test	Headlamp	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Generic Electronic Module	Active Test	Front windshield wiper	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Generic Electronic Module	Active Test	Rear wiper	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Instrument Cluster	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Instrument Cluster	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Instrument Cluster	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Intelligent Power Distribution Module	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Intelligent Power Distribution Module	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Intelligent Power Distribution Module	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Intelligent Power Distribution Module	Active Test	Front windshield wiper	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Intelligent Power Distribution Module	Active Test	Cooling Fan State	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Intelligent Power Distribution Module	Active Test	Exterior Light	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Intelligent Power Distribution Module	Active Test	Rear Defogger Control	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Lane Departure Warning	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Lane Departure Warning	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Lane Departure Warning	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Powertrain Control Module	Read DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Powertrain Control Module	Erase DTC		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Powertrain Control Module	Live Data		V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Powertrain Control Module	Active Test	Short term fuel trim 1	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Powertrain Control Module	Active Test	Engine coolant temperature	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Powertrain Control Module	Active Test	Alternator Commanded Duty Va	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Powertrain Control Module	Active Test	Ignition timing	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Powertrain Control Module	Active Test	Injector 1	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Powertrain Control Module	Active Test	Injector 2	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Powertrain Control Module	Active Test	Injector 3	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Powertrain Control Module	Active Test	Injector 4	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Powertrain Control Module	Active Test	Intake Variable Camshaft Timing	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Powertrain Control Module	Active Test	Air Fuel Ratio Sensor Heater (Ba	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Powertrain Control Module	Active Test	Low Cooling Fan State	V1.20.001
FAMILIA VAN (BV**Y12)	1.5L	HR15		2017 Powertrain Control Module	Active Test	High Cooling Fan State	V1.20.001

FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Restraint Control Module	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Restraint Control Module	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Restraint Control Module	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Transmission Control Module	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Transmission Control Module	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Transmission Control Module	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Antilock braking system	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Antilock braking system	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Antilock braking system	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Antilock braking system	Active Test	Right Front Inlet Valve (ACT)	V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Antilock braking system	Active Test	Right Front Outlet Valve (ACT)	V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Antilock braking system	Active Test	Left Front Inlet Valve (ACT)	V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Antilock braking system	Active Test	Left Front Outlet Valve (ACT)	V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Antilock braking system	Active Test	Right Rear Inlet Valve (ACT)	V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Antilock braking system	Active Test	Right Rear Outlet Valve (ACT)	V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Antilock braking system	Active Test	Left Rear Inlet Valve (ACT)	V1.20.001
FAMILIA VAN (BV*Y12)	1.5L	HR15	2017 Antilock braking system	Active Test	Left Rear Outlet Valve (ACT)	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Advanced driver assistance system	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Advanced driver assistance system	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Advanced driver assistance system	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Advanced driver assistance system	Active Test	Brake Actuator Mode	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Advanced driver assistance system	Active Test	ICC Buzzer Mode	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Advanced driver assistance system	Active Test	Meter Lamp	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Advanced driver assistance system	Active Test	Stop Lamp	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Advanced driver assistance system	Active Test	LDP Buzzer	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Advanced driver assistance system	Active Test	Warning System Indicator Light	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Advanced driver assistance system	Active Test	Lane Departure Warning Light	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Advanced driver assistance system	Active Test	LDW Warning Light	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Electronic-Controlled Power Steering	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Electronic-Controlled Power Steering	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Electronic-Controlled Power Steering	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Generic Electronic Module	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Generic Electronic Module	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Generic Electronic Module	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Generic Electronic Module	Active Test	Room Light	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Generic Electronic Module	Active Test	Hazard Flashers	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Generic Electronic Module	Active Test	Air Conditioning Indicator	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Generic Electronic Module	Active Test	Key Reminder Warning Alarm	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Generic Electronic Module	Active Test	Seat Belt Reminder Warning Ala	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Generic Electronic Module	Active Test	Light Reminder Warning Alarm	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Generic Electronic Module	Active Test	Reverse Alarm	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Generic Electronic Module	Active Test	Taillight	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Generic Electronic Module	Active Test	Headlamp	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Generic Electronic Module	Active Test	Front windshield wiper	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Generic Electronic Module	Active Test	Rear wiper	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Instrument Cluster	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Instrument Cluster	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Instrument Cluster	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Intelligent Power Distribution Module	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Intelligent Power Distribution Module	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Intelligent Power Distribution Module	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Intelligent Power Distribution Module	Active Test	Front windshield wiper	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Intelligent Power Distribution Module	Active Test	Cooling Fan State	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Intelligent Power Distribution Module	Active Test	Exterior Light	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Intelligent Power Distribution Module	Active Test	Rear Defogger Control	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Lane Departure Warning	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Lane Departure Warning	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Lane Departure Warning	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Powertrain Control Module	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Powertrain Control Module	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Powertrain Control Module	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Powertrain Control Module	Active Test	Short term fuel trim 1	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Powertrain Control Module	Active Test	Engine coolant temperature	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Powertrain Control Module	Active Test	Alternator Commanded Duty Va	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Powertrain Control Module	Active Test	Ignition timing	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Powertrain Control Module	Active Test	Injector 1	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Powertrain Control Module	Active Test	Injector 2	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Powertrain Control Module	Active Test	Injector 3	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Powertrain Control Module	Active Test	Injector 4	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Powertrain Control Module	Active Test	Intake Variable Camshaft Timing	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Powertrain Control Module	Active Test	Air Fuel Ratio Sensor Heater (Ba	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Powertrain Control Module	Active Test	Low Cooling Fan State	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Powertrain Control Module	Active Test	High Cooling Fan State	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Restraint Control Module	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Restraint Control Module	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Restraint Control Module	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Antilock braking system	Read DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Antilock braking system	Erase DTC		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Antilock braking system	Live Data		V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16	2017 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001

FAMILIA VAN (BV*Y12)	1.6L	HR16		2017 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2017 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2017 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2017 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2017 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2017 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2017 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2017 Antilock braking system	Active Test	Right Front Inlet Valve (ACT)	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2017 Antilock braking system	Active Test	Right Front Outlet Valve (ACT)	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2017 Antilock braking system	Active Test	Left Front Inlet Valve (ACT)	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2017 Antilock braking system	Active Test	Left Front Outlet Valve (ACT)	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2017 Antilock braking system	Active Test	Right Rear Inlet Valve (ACT)	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2017 Antilock braking system	Active Test	Right Rear Outlet Valve (ACT)	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2017 Antilock braking system	Active Test	Left Rear Inlet Valve (ACT)	V1.20.001
FAMILIA VAN (BV*Y12)	1.6L	HR16		2017 Antilock braking system	Active Test	Left Rear Outlet Valve (ACT)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Antilock braking system	Active Test	Right Front Inlet Valve (ACT)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Antilock braking system	Active Test	Right Front Outlet Valve (ACT)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Antilock braking system	Active Test	Left Front Inlet Valve (ACT)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Antilock braking system	Active Test	Left Front Outlet Valve (ACT)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Antilock braking system	Active Test	Right Rear Inlet Valve (ACT)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Antilock braking system	Active Test	Right Rear Outlet Valve (ACT)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Antilock braking system	Active Test	Left Rear Inlet Valve (ACT)	V1.20.001
CAROL/FLAIR WAGON/SCRUM/FLAIR	660cc	R06A (A-STOP)	Other	Antilock braking system	Active Test	Left Rear Outlet Valve (ACT)	V1.20.001
CX-4	2.5L	PY	Other	Forward Sensing Camera	Read DTC		V1.20.001
CX-4	2.5L	PY	Other	Forward Sensing Camera	Erase DTC		V1.20.001
CX-4	2.5L	PY	Other	Forward Sensing Camera	Live Data		V1.20.001
CX-4	2.5L	PY	Other	Head Up Display	Read DTC		V1.20.001
CX-4	2.5L	PY	Other	Head Up Display	Erase DTC		V1.20.001
CX-4	2.5L	PY	Other	Head Up Display	Live Data		V1.20.001
CX-4	2.5L	PY	Other	Head Up Display	Active Test	Maintenance mode	V1.20.001
CX-4	2.5L	PY	Other	Parking Sensor Module	Read DTC		V1.20.001
CX-4	2.5L	PY	Other	Parking Sensor Module	Erase DTC		V1.20.001
CX-4	2.5L	PY	Other	Parking Sensor Module	Live Data		V1.20.001
CX-4	2.5L	PY	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
CX-4	2.5L	PY	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
CX-4	2.5L	PY	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
CX-4	2.0L	PE	Other	Forward Sensing Camera	Read DTC		V1.20.001
CX-4	2.0L	PE	Other	Forward Sensing Camera	Erase DTC		V1.20.001
CX-4	2.0L	PE	Other	Forward Sensing Camera	Live Data		V1.20.001
CX-4	2.0L	PE	Other	Head Up Display	Read DTC		V1.20.001
CX-4	2.0L	PE	Other	Head Up Display	Erase DTC		V1.20.001
CX-4	2.0L	PE	Other	Head Up Display	Live Data		V1.20.001
CX-4	2.0L	PE	Other	Head Up Display	Active Test	Maintenance mode	V1.20.001
CX-4	2.0L	PE	Other	Parking Sensor Module	Read DTC		V1.20.001
CX-4	2.0L	PE	Other	Parking Sensor Module	Erase DTC		V1.20.001
CX-4	2.0L	PE	Other	Parking Sensor Module	Live Data		V1.20.001
CX-4	2.0L	PE	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
CX-4	2.0L	PE	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
CX-4	2.0L	PE	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	Amplifier Module	Live Data		V1.20.001
CX-9	2.5L	PY_T	Other	Amplifier Module	Active Test	Engine Harmonic Enhancement	V1.20.001
CX-9	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Target Exhaust Variable Valve Ti	V1.20.001
CX-9	2.5L	PY_T	Other	View Monitor Camera	Read DTC		V1.20.001
CX-9	2.5L	PY_T	Other	View Monitor Camera	Erase DTC		V1.20.001
CX-9	2.5L	PY_T	Other	View Monitor Camera	Live Data		V1.20.001
ATENZA	2.0L	PE	Other	Antilock braking system	Read DTC		V1.20.001
ATENZA	2.0L	PE	Other	Antilock braking system	Erase DTC		V1.20.001
ATENZA	2.0L	PE	Other	Antilock braking system	Live Data		V1.20.001
ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fr	V1.20.001
ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
ATENZA	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
ATENZA	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
ATENZA	2.0L	PE	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
ATENZA	2.0L	PE	Other	Amplifier Module	Read DTC		V1.20.001
ATENZA	2.0L	PE	Other	Amplifier Module	Erase DTC		V1.20.001
ATENZA	2.0L	PE	Other	Amplifier Module	Live Data		V1.20.001
ATENZA	2.0L	PE	Other	Amplifier Module	Active Test	Engine Harmonic Enhancement	V1.20.001
ATENZA	2.0L	PE	Other	Blind Spot Monitoring	Read DTC		V1.20.001
ATENZA	2.0L	PE	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
ATENZA	2.0L	PE	Other	Blind Spot Monitoring	Live Data		V1.20.001
ATENZA	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
ATENZA	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
ATENZA	2.0L	PE	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
ATENZA	2.0L	PE	Other	Connectivity Master Unit	Read DTC		V1.20.001

ATENZA	2.0L	PE	Other	Connectivity Master Unit	Erase DTC		V1.20.001
ATENZA	2.0L	PE	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
ATENZA	2.0L	PE	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
ATENZA	2.0L	PE	Other	DC to DC Converter Control Module	Live Data		V1.20.001
ATENZA	2.0L	PE	Other	Driver's Seat Module	Read DTC		V1.20.001
ATENZA	2.0L	PE	Other	Driver's Seat Module	Erase DTC		V1.20.001
ATENZA	2.0L	PE	Other	Driver's Seat Module	Live Data		V1.20.001
ATENZA	2.0L	PE	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
ATENZA	2.0L	PE	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
ATENZA	2.0L	PE	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
ATENZA	2.0L	PE	Other	Electric Parking Brake	Read DTC		V1.20.001
ATENZA	2.0L	PE	Other	Electric Parking Brake	Erase DTC		V1.20.001
ATENZA	2.0L	PE	Other	Electric Parking Brake	Live Data		V1.20.001
ATENZA	2.0L	PE	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
ATENZA	2.0L	PE	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
ATENZA	2.0L	PE	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
ATENZA	2.0L	PE	Other	Front Body Control Module	Read DTC		V1.20.001
ATENZA	2.0L	PE	Other	Front Body Control Module	Erase DTC		V1.20.001
ATENZA	2.0L	PE	Other	Front Body Control Module	Live Data		V1.20.001
ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
ATENZA	2.0L	PE	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
ATENZA	2.0L	PE	Other	Head Up Display	Read DTC		V1.20.001
ATENZA	2.0L	PE	Other	Head Up Display	Erase DTC		V1.20.001
ATENZA	2.0L	PE	Other	Head Up Display	Live Data		V1.20.001
ATENZA	2.0L	PE	Other	Head Up Display	Active Test	HUD Test Mode	V1.20.001
ATENZA	2.0L	PE	Other	Instrument Cluster	Read DTC		V1.20.001
ATENZA	2.0L	PE	Other	Instrument Cluster	Erase DTC		V1.20.001
ATENZA	2.0L	PE	Other	Instrument Cluster	Live Data		V1.20.001
ATENZA	2.0L	PE	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
ATENZA	2.0L	PE	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
ATENZA	2.0L	PE	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
ATENZA	2.0L	PE	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
ATENZA	2.0L	PE	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
ATENZA	2.0L	PE	Other	Smart City Brake Support	Read DTC		V1.20.001
ATENZA	2.0L	PE	Other	Smart City Brake Support	Erase DTC		V1.20.001
ATENZA	2.0L	PE	Other	Smart City Brake Support	Live Data		V1.20.001
ATENZA	2.0L	PE	Other	Powertrain Control Module	Read DTC		V1.20.001
ATENZA	2.0L	PE	Other	Powertrain Control Module	Erase DTC		V1.20.001
ATENZA	2.0L	PE	Other	Parking Sensor Module	Read DTC		V1.20.001
ATENZA	2.0L	PE	Other	Parking Sensor Module	Erase DTC		V1.20.001
ATENZA	2.0L	PE	Other	Parking Sensor Module	Live Data		V1.20.001
ATENZA	2.0L	PE	Other	Restraint Control Module	Read DTC		V1.20.001
ATENZA	2.0L	PE	Other	Restraint Control Module	Erase DTC		V1.20.001
ATENZA	2.0L	PE	Other	Restraint Control Module	Live Data		V1.20.001
ATENZA	2.0L	PE	Other	Rear Body Control Module	Read DTC		V1.20.001
ATENZA	2.0L	PE	Other	Rear Body Control Module	Erase DTC		V1.20.001
ATENZA	2.0L	PE	Other	Rear Body Control Module	Live Data		V1.20.001
ATENZA	2.0L	PE	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
ATENZA	2.0L	PE	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
ATENZA	2.0L	PE	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
ATENZA	2.0L	PE	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
ATENZA	2.0L	PE	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
ATENZA	2.0L	PE	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
ATENZA	2.0L	PE	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
ATENZA	2.0L	PE	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
ATENZA	2.0L	PE	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
ATENZA	2.0L	PE	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
ATENZA	2.0L	PE	Other	Start Stop Unit	Read DTC		V1.20.001
ATENZA	2.0L	PE	Other	Start Stop Unit	Erase DTC		V1.20.001
ATENZA	2.0L	PE	Other	Start Stop Unit	Live Data		V1.20.001
ATENZA	2.0L	PE	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
ATENZA	2.0L	PE	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
ATENZA	2.0L	PE	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
ATENZA	2.0L	PE	Other	Transmission Control Module	Read DTC		V1.20.001
ATENZA	2.0L	PE	Other	Transmission Control Module	Erase DTC		V1.20.001
ATENZA	2.0L	PE	Other	Transmission Control Module	Live Data		V1.20.001
ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
ATENZA	2.0L	PE	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
ATENZA	2.0L	PE	Other	Forward Sensing Camera	Read DTC		V1.20.001
ATENZA	2.0L	PE	Other	Forward Sensing Camera	Erase DTC		V1.20.001
ATENZA	2.0L	PE	Other	Forward Sensing Camera	Live Data		V1.20.001
ATENZA	2.0L	PE	Other	View Monitor Camera	Read DTC		V1.20.001
ATENZA	2.0L	PE	Other	View Monitor Camera	Erase DTC		V1.20.001
ATENZA	2.0L	PE	Other	View Monitor Camera	Live Data		V1.20.001
ATENZA	2.5L	PY	Other	Antilock braking system	Read DTC		V1.20.001
ATENZA	2.5L	PY	Other	Antilock braking system	Erase DTC		V1.20.001
ATENZA	2.5L	PY	Other	Antilock braking system	Live Data		V1.20.001

ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fro	V1.20.001
ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
ATENZA	2.5L	PY	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
ATENZA	2.5L	PY	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
ATENZA	2.5L	PY	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
ATENZA	2.5L	PY	Other	Amplifier Module	Read DTC		V1.20.001
ATENZA	2.5L	PY	Other	Amplifier Module	Erase DTC		V1.20.001
ATENZA	2.5L	PY	Other	Amplifier Module	Live Data		V1.20.001
ATENZA	2.5L	PY	Other	Amplifier Module	Active Test	Engine Harmonic Enhancement	V1.20.001
ATENZA	2.5L	PY	Other	Blind Spot Monitoring	Read DTC		V1.20.001
ATENZA	2.5L	PY	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
ATENZA	2.5L	PY	Other	Blind Spot Monitoring	Live Data		V1.20.001
ATENZA	2.5L	PY	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
ATENZA	2.5L	PY	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
ATENZA	2.5L	PY	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
ATENZA	2.5L	PY	Other	Connectivity Master Unit	Read DTC		V1.20.001
ATENZA	2.5L	PY	Other	Connectivity Master Unit	Erase DTC		V1.20.001
ATENZA	2.5L	PY	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
ATENZA	2.5L	PY	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
ATENZA	2.5L	PY	Other	DC to DC Converter Control Module	Live Data		V1.20.001
ATENZA	2.5L	PY	Other	Driver's Seat Module	Read DTC		V1.20.001
ATENZA	2.5L	PY	Other	Driver's Seat Module	Erase DTC		V1.20.001
ATENZA	2.5L	PY	Other	Driver's Seat Module	Live Data		V1.20.001
ATENZA	2.5L	PY	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
ATENZA	2.5L	PY	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
ATENZA	2.5L	PY	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
ATENZA	2.5L	PY	Other	Electric Parking Brake	Read DTC		V1.20.001
ATENZA	2.5L	PY	Other	Electric Parking Brake	Erase DTC		V1.20.001
ATENZA	2.5L	PY	Other	Electric Parking Brake	Live Data		V1.20.001
ATENZA	2.5L	PY	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
ATENZA	2.5L	PY	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
ATENZA	2.5L	PY	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
ATENZA	2.5L	PY	Other	Front Body Control Module	Read DTC		V1.20.001
ATENZA	2.5L	PY	Other	Front Body Control Module	Erase DTC		V1.20.001
ATENZA	2.5L	PY	Other	Front Body Control Module	Live Data		V1.20.001
ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
ATENZA	2.5L	PY	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
ATENZA	2.5L	PY	Other	Head Up Display	Read DTC		V1.20.001
ATENZA	2.5L	PY	Other	Head Up Display	Erase DTC		V1.20.001
ATENZA	2.5L	PY	Other	Head Up Display	Live Data		V1.20.001
ATENZA	2.5L	PY	Other	Head Up Display	Active Test	HUD Test Mode	V1.20.001
ATENZA	2.5L	PY	Other	Instrument Cluster	Read DTC		V1.20.001
ATENZA	2.5L	PY	Other	Instrument Cluster	Erase DTC		V1.20.001
ATENZA	2.5L	PY	Other	Instrument Cluster	Live Data		V1.20.001
ATENZA	2.5L	PY	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
ATENZA	2.5L	PY	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
ATENZA	2.5L	PY	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
ATENZA	2.5L	PY	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
ATENZA	2.5L	PY	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
ATENZA	2.5L	PY	Other	Smart City Brake Support	Read DTC		V1.20.001
ATENZA	2.5L	PY	Other	Smart City Brake Support	Erase DTC		V1.20.001
ATENZA	2.5L	PY	Other	Smart City Brake Support	Live Data		V1.20.001
ATENZA	2.5L	PY	Other	Powertrain Control Module	Read DTC		V1.20.001
ATENZA	2.5L	PY	Other	Powertrain Control Module	Erase DTC		V1.20.001
ATENZA	2.5L	PY	Other	Powertrain Control Module	Live Data		V1.20.001
ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculati	V1.20.001
ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Target Exhaust Variable Valve Ti	V1.20.001
ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
ATENZA	2.5L	PY	Other	Parking Sensor Module	Read DTC		V1.20.001
ATENZA	2.5L	PY	Other	Parking Sensor Module	Erase DTC		V1.20.001
ATENZA	2.5L	PY	Other	Parking Sensor Module	Live Data		V1.20.001

ATENZA	2.5L	PY	Other	Restraint Control Module	Read DTC		V1.20.001
ATENZA	2.5L	PY	Other	Restraint Control Module	Erase DTC		V1.20.001
ATENZA	2.5L	PY	Other	Restraint Control Module	Live Data		V1.20.001
ATENZA	2.5L	PY	Other	Rear Body Control Module	Read DTC		V1.20.001
ATENZA	2.5L	PY	Other	Rear Body Control Module	Erase DTC		V1.20.001
ATENZA	2.5L	PY	Other	Rear Body Control Module	Live Data		V1.20.001
ATENZA	2.5L	PY	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
ATENZA	2.5L	PY	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
ATENZA	2.5L	PY	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
ATENZA	2.5L	PY	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
ATENZA	2.5L	PY	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
ATENZA	2.5L	PY	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
ATENZA	2.5L	PY	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
ATENZA	2.5L	PY	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
ATENZA	2.5L	PY	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
ATENZA	2.5L	PY	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
ATENZA	2.5L	PY	Other	Start Stop Unit	Read DTC		V1.20.001
ATENZA	2.5L	PY	Other	Start Stop Unit	Erase DTC		V1.20.001
ATENZA	2.5L	PY	Other	Start Stop Unit	Live Data		V1.20.001
ATENZA	2.5L	PY	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
ATENZA	2.5L	PY	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
ATENZA	2.5L	PY	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
ATENZA	2.5L	PY	Other	Transmission Control Module	Read DTC		V1.20.001
ATENZA	2.5L	PY	Other	Transmission Control Module	Erase DTC		V1.20.001
ATENZA	2.5L	PY	Other	Transmission Control Module	Live Data		V1.20.001
ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
ATENZA	2.5L	PY	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
ATENZA	2.5L	PY	Other	Forward Sensing Camera	Read DTC		V1.20.001
ATENZA	2.5L	PY	Other	Forward Sensing Camera	Erase DTC		V1.20.001
ATENZA	2.5L	PY	Other	Forward Sensing Camera	Live Data		V1.20.001
ATENZA	2.5L	PY	Other	View Monitor Camera	Read DTC		V1.20.001
ATENZA	2.5L	PY	Other	View Monitor Camera	Erase DTC		V1.20.001
ATENZA	2.5L	PY	Other	View Monitor Camera	Live Data		V1.20.001
CX-8	2.2L	SH	Other	4X4 Control Module	Read DTC		V1.20.001
CX-8	2.2L	SH	Other	4X4 Control Module	Erase DTC		V1.20.001
CX-8	2.2L	SH	Other	4X4 Control Module	Live Data		V1.20.001
CX-8	2.2L	SH	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
CX-8	2.2L	SH	Other	Antilock braking system	Read DTC		V1.20.001
CX-8	2.2L	SH	Other	Antilock braking system	Erase DTC		V1.20.001
CX-8	2.2L	SH	Other	Antilock braking system	Live Data		V1.20.001
CX-8	2.2L	SH	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
CX-8	2.2L	SH	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
CX-8	2.2L	SH	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
CX-8	2.2L	SH	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
CX-8	2.2L	SH	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
CX-8	2.2L	SH	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
CX-8	2.2L	SH	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
CX-8	2.2L	SH	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
CX-8	2.2L	SH	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
CX-8	2.2L	SH	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
CX-8	2.2L	SH	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fr	V1.20.001
CX-8	2.2L	SH	Other	Antilock braking system	Active Test	Stability Control Valve (Right Fr	V1.20.001
CX-8	2.2L	SH	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
CX-8	2.2L	SH	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
CX-8	2.2L	SH	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
CX-8	2.2L	SH	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
CX-8	2.2L	SH	Other	Amplifier Module	Read DTC		V1.20.001
CX-8	2.2L	SH	Other	Amplifier Module	Erase DTC		V1.20.001
CX-8	2.2L	SH	Other	Amplifier Module	Live Data		V1.20.001
CX-8	2.2L	SH	Other	Amplifier Module	Active Test	Engine Harmonic Enhancement	V1.20.001
CX-8	2.2L	SH	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
CX-8	2.2L	SH	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
CX-8	2.2L	SH	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
CX-8	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
CX-8	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
CX-8	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
CX-8	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-8	2.2L	SH	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
CX-8	2.2L	SH	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
CX-8	2.2L	SH	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
CX-8	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
CX-8	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-8	2.2L	SH	Other	Connectivity Master Unit	Read DTC		V1.20.001
CX-8	2.2L	SH	Other	Connectivity Master Unit	Erase DTC		V1.20.001
CX-8	2.2L	SH	Other	Driver's Seat Module	Read DTC		V1.20.001
CX-8	2.2L	SH	Other	Driver's Seat Module	Erase DTC		V1.20.001
CX-8	2.2L	SH	Other	Driver's Seat Module	Live Data		V1.20.001
CX-8	2.2L	SH	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
CX-8	2.2L	SH	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
CX-8	2.2L	SH	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
CX-8	2.2L	SH	Other	Electric Parking Brake	Read DTC		V1.20.001
CX-8	2.2L	SH	Other	Electric Parking Brake	Erase DTC		V1.20.001
CX-8	2.2L	SH	Other	Electric Parking Brake	Live Data		V1.20.001
CX-8	2.2L	SH	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001

CX-8	2.2L	SH	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
CX-8	2.2L	SH	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
CX-8	2.2L	SH	Other	Forward Sensing Camera	Read DTC		V1.20.001
CX-8	2.2L	SH	Other	Forward Sensing Camera	Erase DTC		V1.20.001
CX-8	2.2L	SH	Other	Forward Sensing Camera	Live Data		V1.20.001
CX-8	2.2L	SH	Other	Front Body Control Module	Read DTC		V1.20.001
CX-8	2.2L	SH	Other	Front Body Control Module	Erase DTC		V1.20.001
CX-8	2.2L	SH	Other	Front Body Control Module	Live Data		V1.20.001
CX-8	2.2L	SH	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
CX-8	2.2L	SH	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
CX-8	2.2L	SH	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
CX-8	2.2L	SH	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
CX-8	2.2L	SH	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
CX-8	2.2L	SH	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
CX-8	2.2L	SH	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
CX-8	2.2L	SH	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
CX-8	2.2L	SH	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
CX-8	2.2L	SH	Other	Head Up Display	Read DTC		V1.20.001
CX-8	2.2L	SH	Other	Head Up Display	Erase DTC		V1.20.001
CX-8	2.2L	SH	Other	Head Up Display	Live Data		V1.20.001
CX-8	2.2L	SH	Other	Head Up Display	Active Test	HUD Test Mode	V1.20.001
CX-8	2.2L	SH	Other	Instrument Cluster	Read DTC		V1.20.001
CX-8	2.2L	SH	Other	Instrument Cluster	Erase DTC		V1.20.001
CX-8	2.2L	SH	Other	Instrument Cluster	Live Data		V1.20.001
CX-8	2.2L	SH	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
CX-8	2.2L	SH	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
CX-8	2.2L	SH	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
CX-8	2.2L	SH	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
CX-8	2.2L	SH	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
CX-8	2.2L	SH	Other	Powertrain Control Module	Read DTC		V1.20.001
CX-8	2.2L	SH	Other	Powertrain Control Module	Erase DTC		V1.20.001
CX-8	2.2L	SH	Other	Powertrain Control Module	Live Data		V1.20.001
CX-8	2.2L	SH	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CX-8	2.2L	SH	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
CX-8	2.2L	SH	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
CX-8	2.2L	SH	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
CX-8	2.2L	SH	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
CX-8	2.2L	SH	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
CX-8	2.2L	SH	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-8	2.2L	SH	Other	Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
CX-8	2.2L	SH	Other	Powertrain Control Module	Active Test	Turocharger Compressor Bypass	V1.20.001
CX-8	2.2L	SH	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle 2	V1.20.001
CX-8	2.2L	SH	Other	Powertrain Control Module	Active Test	Intake Shatter Valve Control De	V1.20.001
CX-8	2.2L	SH	Other	Powertrain Control Module	Active Test	Wastegate Solenoid Valve	V1.20.001
CX-8	2.2L	SH	Other	Powertrain Control Module	Active Test	Exhaust Gas Recirculation Coole	V1.20.001
CX-8	2.2L	SH	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
CX-8	2.2L	SH	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-8	2.2L	SH	Other	Powertrain Control Module	Active Test	LP-EGR Control Valve Desired	V1.20.001
CX-8	2.2L	SH	Other	Powertrain Control Module	Active Test	Exhaust Shutter Valve Position [V1.20.001
CX-8	2.2L	SH	Other	Powertrain Control Module	Active Test	Turbocharger with variable turb	V1.20.001
CX-8	2.2L	SH	Other	Powertrain Control Module	Active Test	Desired Coolant Control Valve	V1.20.001
CX-8	2.2L	SH	Other	Powertrain Control Module	Active Test	Electrical Water Pump	V1.20.001
CX-8	2.2L	SH	Other	Powertrain Control Module	Active Test	Alternator generate current limi	V1.20.001
CX-8	2.2L	SH	Other	Power Liftgate	Read DTC		V1.20.001
CX-8	2.2L	SH	Other	Power Liftgate	Erase DTC		V1.20.001
CX-8	2.2L	SH	Other	Power Liftgate	Live Data		V1.20.001
CX-8	2.2L	SH	Other	Parking Sensor Module	Read DTC		V1.20.001
CX-8	2.2L	SH	Other	Parking Sensor Module	Erase DTC		V1.20.001
CX-8	2.2L	SH	Other	Parking Sensor Module	Live Data		V1.20.001
CX-8	2.2L	SH	Other	Restraint Control Module	Read DTC		V1.20.001
CX-8	2.2L	SH	Other	Restraint Control Module	Erase DTC		V1.20.001
CX-8	2.2L	SH	Other	Restraint Control Module	Live Data		V1.20.001
CX-8	2.2L	SH	Other	Rear Body Control Module	Read DTC		V1.20.001
CX-8	2.2L	SH	Other	Rear Body Control Module	Erase DTC		V1.20.001
CX-8	2.2L	SH	Other	Rear Body Control Module	Live Data		V1.20.001
CX-8	2.2L	SH	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
CX-8	2.2L	SH	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
CX-8	2.2L	SH	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
CX-8	2.2L	SH	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
CX-8	2.2L	SH	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
CX-8	2.2L	SH	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
CX-8	2.2L	SH	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
CX-8	2.2L	SH	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
CX-8	2.2L	SH	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
CX-8	2.2L	SH	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
CX-8	2.2L	SH	Other	Start Stop Unit	Read DTC		V1.20.001
CX-8	2.2L	SH	Other	Start Stop Unit	Erase DTC		V1.20.001
CX-8	2.2L	SH	Other	Start Stop Unit	Live Data		V1.20.001
CX-8	2.2L	SH	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
CX-8	2.2L	SH	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
CX-8	2.2L	SH	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
CX-8	2.2L	SH	Other	Transmission Control Module	Read DTC		V1.20.001
CX-8	2.2L	SH	Other	Transmission Control Module	Erase DTC		V1.20.001
CX-8	2.2L	SH	Other	Transmission Control Module	Live Data		V1.20.001
CX-8	2.2L	SH	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
CX-8	2.2L	SH	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
CX-8	2.2L	SH	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
CX-8	2.2L	SH	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
CX-8	2.2L	SH	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
CX-8	2.2L	SH	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
CX-8	2.2L	SH	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
CX-8	2.2L	SH	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001

CX-8	2.2L	SH	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
CX-8	2.2L	SH	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
CX-8	2.2L	SH	Other	View Monitor Camera	Read DTC		V1.20.001
CX-8	2.2L	SH	Other	View Monitor Camera	Erase DTC		V1.20.001
CX-8	2.2L	SH	Other	View Monitor Camera	Live Data		V1.20.001
CX-3	1.8L	S8	Other	4X4 Control Module	Read DTC		V1.20.001
CX-3	1.8L	S8	Other	4X4 Control Module	Erase DTC		V1.20.001
CX-3	1.8L	S8	Other	4X4 Control Module	Live Data		V1.20.001
CX-3	1.8L	S8	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
CX-3	1.8L	S8	Other	Antilock braking system	Read DTC		V1.20.001
CX-3	1.8L	S8	Other	Antilock braking system	Erase DTC		V1.20.001
CX-3	1.8L	S8	Other	Antilock braking system	Live Data		V1.20.001
CX-3	1.8L	S8	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
CX-3	1.8L	S8	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
CX-3	1.8L	S8	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
CX-3	1.8L	S8	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
CX-3	1.8L	S8	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
CX-3	1.8L	S8	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
CX-3	1.8L	S8	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
CX-3	1.8L	S8	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
CX-3	1.8L	S8	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
CX-3	1.8L	S8	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
CX-3	1.8L	S8	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fro	V1.20.001
CX-3	1.8L	S8	Other	Antilock braking system	Active Test	Stability Control Valve (Right Frc	V1.20.001
CX-3	1.8L	S8	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
CX-3	1.8L	S8	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
CX-3	1.8L	S8	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
CX-3	1.8L	S8	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
CX-3	1.8L	S8	Other	Body Control Module	Read DTC		V1.20.001
CX-3	1.8L	S8	Other	Body Control Module	Erase DTC		V1.20.001
CX-3	1.8L	S8	Other	Body Control Module	Live Data		V1.20.001
CX-3	1.8L	S8	Other	Body Control Module	Active Test	Front Fog Relay	V1.20.001
CX-3	1.8L	S8	Other	Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
CX-3	1.8L	S8	Other	Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
CX-3	1.8L	S8	Other	Body Control Module	Active Test	Horn Relay	V1.20.001
CX-3	1.8L	S8	Other	Body Control Module	Active Test	Stop Lamp Control	V1.20.001
CX-3	1.8L	S8	Other	Body Control Module	Active Test	Blower Motor Relay	V1.20.001
CX-3	1.8L	S8	Other	Body Control Module	Active Test	Rear Defogger Relay	V1.20.001
CX-3	1.8L	S8	Other	Body Control Module	Active Test	Headlight Hi-Beam Control Req	V1.20.001
CX-3	1.8L	S8	Other	Body Control Module	Active Test	Headlight Lo-Beam Control Req	V1.20.001
CX-3	1.8L	S8	Other	Body Control Module	Active Test	DRL(Daytime Running Lamps) C	V1.20.001
CX-3	1.8L	S8	Other	Body Control Module	Active Test	TNS Control Request to ESU	V1.20.001
CX-3	1.8L	S8	Other	Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
CX-3	1.8L	S8	Other	Body Control Module	Active Test	Rear Wiper Control Request to f	V1.20.001
CX-3	1.8L	S8	Other	Body Control Module	Active Test	Front Washer Control Request t	V1.20.001
CX-3	1.8L	S8	Other	Body Control Module	Active Test	Control Request of Trunk/Cargo	V1.20.001
CX-3	1.8L	S8	Other	Body Control Module	Active Test	Control Request of Room Lamp	V1.20.001
CX-3	1.8L	S8	Other	Body Control Module	Active Test	Control Request of Reverse Lam	V1.20.001
CX-3	1.8L	S8	Other	Body Control Module	Active Test	PTC Heater Status	V1.20.001
CX-3	1.8L	S8	Other	Body Control Module	Active Test	Control Request of Door Unlock	V1.20.001
CX-3	1.8L	S8	Other	Body Control Module	Active Test	Control Request of Door Lock R	V1.20.001
CX-3	1.8L	S8	Other	Body Control Module	Active Test	Control Request of Trunk/Liftga	V1.20.001
CX-3	1.8L	S8	Other	Blind Spot Monitoring	Read DTC		V1.20.001
CX-3	1.8L	S8	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
CX-3	1.8L	S8	Other	Blind Spot Monitoring	Live Data		V1.20.001
CX-3	1.8L	S8	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
CX-3	1.8L	S8	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-3	1.8L	S8	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-3	1.8L	S8	Other	Connectivity Master Unit	Read DTC		V1.20.001
CX-3	1.8L	S8	Other	Connectivity Master Unit	Erase DTC		V1.20.001
CX-3	1.8L	S8	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
CX-3	1.8L	S8	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
CX-3	1.8L	S8	Other	DC to DC Converter Control Module	Live Data		V1.20.001
CX-3	1.8L	S8	Other	DC to DC Converter Control Module	Active Test	Forced charging flag set at the ti	V1.20.001
CX-3	1.8L	S8	Other	Driver's Seat Module	Read DTC		V1.20.001
CX-3	1.8L	S8	Other	Driver's Seat Module	Erase DTC		V1.20.001
CX-3	1.8L	S8	Other	Driver's Seat Module	Live Data		V1.20.001
CX-3	1.8L	S8	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
CX-3	1.8L	S8	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
CX-3	1.8L	S8	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
CX-3	1.8L	S8	Other	Electric Parking Brake	Read DTC		V1.20.001
CX-3	1.8L	S8	Other	Electric Parking Brake	Erase DTC		V1.20.001
CX-3	1.8L	S8	Other	Electric Parking Brake	Live Data		V1.20.001
CX-3	1.8L	S8	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
CX-3	1.8L	S8	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
CX-3	1.8L	S8	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
CX-3	1.8L	S8	Other	Electric Supply Unit	Read DTC		V1.20.001
CX-3	1.8L	S8	Other	Electric Supply Unit	Erase DTC		V1.20.001
CX-3	1.8L	S8	Other	Forward Sensing Camera	Read DTC		V1.20.001
CX-3	1.8L	S8	Other	Forward Sensing Camera	Erase DTC		V1.20.001
CX-3	1.8L	S8	Other	Forward Sensing Camera	Live Data		V1.20.001
CX-3	1.8L	S8	Other	Head Up Display	Read DTC		V1.20.001
CX-3	1.8L	S8	Other	Head Up Display	Erase DTC		V1.20.001
CX-3	1.8L	S8	Other	Head Up Display	Live Data		V1.20.001
CX-3	1.8L	S8	Other	Head Up Display	Active Test	Maintenance mode	V1.20.001
CX-3	1.8L	S8	Other	Instrument Cluster	Read DTC		V1.20.001
CX-3	1.8L	S8	Other	Instrument Cluster	Erase DTC		V1.20.001
CX-3	1.8L	S8	Other	Instrument Cluster	Live Data		V1.20.001
CX-3	1.8L	S8	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
CX-3	1.8L	S8	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
CX-3	1.8L	S8	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
CX-3	1.8L	S8	Other	Instrument Cluster	Active Test	Alarm	V1.20.001

CX-3	1.8L	S8	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
CX-3	1.8L	S8	Other	Powertrain Control Module	Read DTC		V1.20.001
CX-3	1.8L	S8	Other	Powertrain Control Module	Erase DTC		V1.20.001
CX-3	1.8L	S8	Other	Powertrain Control Module	Live Data		V1.20.001
CX-3	1.8L	S8	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CX-3	1.8L	S8	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
CX-3	1.8L	S8	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
CX-3	1.8L	S8	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
CX-3	1.8L	S8	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
CX-3	1.8L	S8	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-3	1.8L	S8	Other	Powertrain Control Module	Active Test	Exhaust Gas Recirculation Valve	V1.20.001
CX-3	1.8L	S8	Other	Powertrain Control Module	Active Test	Turbocharger Compressor Bypass	V1.20.001
CX-3	1.8L	S8	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle 2	V1.20.001
CX-3	1.8L	S8	Other	Powertrain Control Module	Active Test	Intake Shutter Valve Control De	V1.20.001
CX-3	1.8L	S8	Other	Powertrain Control Module	Active Test	Wastegate Solenoid Valve	V1.20.001
CX-3	1.8L	S8	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-3	1.8L	S8	Other	Powertrain Control Module	Active Test	LP-EGR Control Valve Desired	V1.20.001
CX-3	1.8L	S8	Other	Powertrain Control Module	Active Test	Exhaust Shutter Valve Position	V1.20.001
CX-3	1.8L	S8	Other	Powertrain Control Module	Active Test	Turbocharger with variable turb	V1.20.001
CX-3	1.8L	S8	Other	Powertrain Control Module	Active Test	Desired Coolant Control Valve	V1.20.001
CX-3	1.8L	S8	Other	Powertrain Control Module	Active Test	Electrical Water Pump	V1.20.001
CX-3	1.8L	S8	Other	Parking Sensor Module	Read DTC		V1.20.001
CX-3	1.8L	S8	Other	Parking Sensor Module	Erase DTC		V1.20.001
CX-3	1.8L	S8	Other	Parking Sensor Module	Live Data		V1.20.001
CX-3	1.8L	S8	Other	Restraint Control Module	Read DTC		V1.20.001
CX-3	1.8L	S8	Other	Restraint Control Module	Erase DTC		V1.20.001
CX-3	1.8L	S8	Other	Restraint Control Module	Live Data		V1.20.001
CX-3	1.8L	S8	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
CX-3	1.8L	S8	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
CX-3	1.8L	S8	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
CX-3	1.8L	S8	Other	Start Stop Unit	Read DTC		V1.20.001
CX-3	1.8L	S8	Other	Start Stop Unit	Erase DTC		V1.20.001
CX-3	1.8L	S8	Other	Start Stop Unit	Live Data		V1.20.001
CX-3	1.8L	S8	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
CX-3	1.8L	S8	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
CX-3	1.8L	S8	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
CX-3	1.8L	S8	Other	Transmission Control Module	Read DTC		V1.20.001
CX-3	1.8L	S8	Other	Transmission Control Module	Erase DTC		V1.20.001
CX-3	1.8L	S8	Other	Transmission Control Module	Live Data		V1.20.001
CX-3	1.8L	S8	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
CX-3	1.8L	S8	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
CX-3	1.8L	S8	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
CX-3	1.8L	S8	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
CX-3	1.8L	S8	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
CX-3	1.8L	S8	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
CX-3	1.8L	S8	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
CX-3	1.8L	S8	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
CX-3	1.8L	S8	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
CX-3	1.8L	S8	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
CX-3	1.8L	S8	Other	View Monitor Camera	Read DTC		V1.20.001
CX-3	1.8L	S8	Other	View Monitor Camera	Erase DTC		V1.20.001
CX-3	1.8L	S8	Other	View Monitor Camera	Live Data		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Stability Control Valve (Right Frc	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Head Up Display	Active Test	HUD Test Mode	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	LP-EGR Control Valve Desired	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Exhaust Shutter Valve Position	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Turbocharger with variable turb	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Desired Coolant Control Valve	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	Powertrain Control Module	Active Test	Electrical Water Pump	V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	View Monitor Camera	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	View Monitor Camera	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.2L	SH	Other	View Monitor Camera	Live Data		V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Air Conditioning	Read DTC		V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Air Conditioning	Erase DTC		V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Powertrain Control Module	Read DTC		V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Powertrain Control Module	Erase DTC		V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Powertrain Control Module	Live Data		V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Powertrain Control Module	Active Test	Injector 5	V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Powertrain Control Module	Active Test	3-2 Timing Solenoid Valve	V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Powertrain Control Module	Active Test	Variable Resonance Induction S	V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solen	V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Powertrain Control Module	Active Test	Injector 6	V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MILLENNIA / EUNOS 800	2.0L	KF	Other	2000 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001

MILLENNIA / EUNOS 800	2.5L	KL	2000 Air Conditioning	Read DTC		V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Air Conditioning	Erase DTC		V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Cruise Control	Read DTC		V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Cruise Control	Erase DTC		V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Read DTC		V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Erase DTC		V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Live Data		V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Active Test	Injector 5	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Active Test	Variable Resonance Induction S ₁	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Active Test	3-2 Timing Solenoid Valve	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Active Test	Variable Resonance Induction S ₁	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Active Test	Injector 6	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 4 Wheel Steering	Read DTC		V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 4 Wheel Steering	Erase DTC		V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2000 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Antilock braking system	Read DTC		V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Antilock braking system	Erase DTC		V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Antilock braking system	Live Data		V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Antilock braking system	Active Test	Rear Inlet Valve	V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Antilock braking system	Active Test	Rear Outlet Valve	V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Powertrain Control Module	Read DTC		V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Powertrain Control Module	Erase DTC		V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Powertrain Control Module	Live Data		V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Powertrain Control Module	Active Test	Injector 4	V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Powertrain Control Module	Active Test	Injector 3	V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Powertrain Control Module	Active Test	Injector 1	V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
ROADSTER / MX-5	1.6L	B6	2000 Powertrain Control Module	Active Test	Injector 2	V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Antilock braking system	Read DTC		V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Antilock braking system	Erase DTC		V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Antilock braking system	Live Data		V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Antilock braking system	Active Test	Rear Inlet Valve	V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Antilock braking system	Active Test	Rear Outlet Valve	V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Powertrain Control Module	Read DTC		V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Powertrain Control Module	Erase DTC		V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Powertrain Control Module	Live Data		V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Injector 4	V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Injector 3	V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Injector 1	V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Overflow control valve	V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
ROADSTER / MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Injector 2	V1.20.001
TITAN DASH	2.0L	FE	2000 Powertrain Control Module	Read DTC		V1.20.001
TITAN DASH	2.0L	FE	2000 Powertrain Control Module	Erase DTC		V1.20.001
TITAN DASH	2.0L	FE	2000 Powertrain Control Module	Live Data		V1.20.001
TITAN DASH	2.0L	FE	2000 Powertrain Control Module	Active Test	Injector 1	V1.20.001

TITAN DASH	2.0L	FE		2000 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
TITAN DASH	2.0L	FE		2000 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
TITAN DASH	2.0L	FE		2000 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
TITAN DASH	2.0L	FE		2000 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
TITAN DASH	2.0L	FE		2000 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
TITAN DASH	2.0L	FE		2000 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
TITAN DASH	2.0L	FE		2000 Powertrain Control Module	Active Test	Injector 2	V1.20.001
TITAN DASH	2.0L	FE		2000 Transmission Control Module	Read DTC		V1.20.001
TITAN DASH	2.0L	FE		2000 Transmission Control Module	Erase DTC		V1.20.001
TITAN DASH	2.0L	FE		2000 Transmission Control Module	Live Data		V1.20.001
TITAN DASH	2.0L	FE		2000 Transmission Control Module	Active Test	Electronic Pressure Control sole	V1.20.001
TITAN DASH	2.0L	FE		2000 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
TITAN DASH	2.0L	FE		2000 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
TITAN DASH	2.0L	FE		2000 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
TITAN DASH	2.0L	FE		2000 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
TITAN DASH	2.0L	FE		2000 Transmission Control Module	Active Test	C F	V1.20.001
TITAN DASH	2.5L	WL		2000 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
TITAN DASH	2.5L	WL		2000 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
TITAN DASH	2.5L	WL		2000 Powertrain Control Module	Read DTC		V1.20.001
TITAN DASH	2.5L	WL		2000 Powertrain Control Module	Erase DTC		V1.20.001
TITAN DASH	2.5L	WL		2000 Powertrain Control Module	Live Data		V1.20.001
TITAN DASH	2.5L	WL		2000 Powertrain Control Module	Active Test	Electric Governor	V1.20.001
TITAN DASH	2.5L	WL		2000 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
TITAN DASH	2.5L	WL		2000 Powertrain Control Module	Active Test	Fuel Shut Off Valve	V1.20.001
TITAN DASH	2.5L	WL		2000 Powertrain Control Module	Active Test	Glow plug control	V1.20.001
TITAN DASH	2.5L	WL		2000 Powertrain Control Module	Active Test	timer control valve signal	V1.20.001
TITAN DASH	2.5L	WL		2000 Powertrain Control Module	Active Test	Glow plug lamp	V1.20.001
TITAN DASH	2.5L	WL		2000 Powertrain Control Module	Active Test	Exhaust Shutter Valve Solenoid	V1.20.001
TITAN DASH	2.5L	WL		2000 Transmission Control Module	Read DTC		V1.20.001
TITAN DASH	2.5L	WL		2000 Transmission Control Module	Erase DTC		V1.20.001
TITAN DASH	2.5L	WL		2000 Transmission Control Module	Live Data		V1.20.001
TITAN DASH	2.5L	WL		2000 Transmission Control Module	Active Test	Electronic Pressure Control sole	V1.20.001
TITAN DASH	2.5L	WL		2000 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
TITAN DASH	2.5L	WL		2000 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
TITAN DASH	2.5L	WL		2000 Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
TITAN DASH	2.5L	WL		2000 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
TITAN DASH	2.5L	WL		2000 Transmission Control Module	Active Test	C F	V1.20.001
TITAN DASH	2.5L	WL		2000 Transmission Control Module	Active Test	Transmission Fluid Temperature	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Stability Control Valve (Right Frc	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Head Up Display	Active Test	HUD Test Mode	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	VEV Oil Pressure	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	ABV Oil Pressure	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	Powertrain Control Module	Active Test	Wastgate Valve Position	V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	View Monitor Camera	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	View Monitor Camera	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.0L	PE	Other	View Monitor Camera	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	4X4 Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	4X4 Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	4X4 Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Antilock braking system	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Antilock braking system	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Antilock braking system	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Antilock braking system	Active Test	Traction Control Valve (Right Frc	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Antilock braking system	Active Test	Traction Control Valve (Left For	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Antilock braking system	Active Test	Stability Control Valve (Right Frc	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Amplifier Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Amplifier Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Blind Spot Monitoring	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Blind Spot Monitoring	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Blind Spot Monitoring	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Blind Spot Monitoring	Active Test	Buzzer	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Blind Spot Monitoring	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001

MAZDA6/ ATENZA	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Connectivity Master Unit	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Connectivity Master Unit	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Data Communication Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Data Communication Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Data Communication Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Driver's Seat Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Driver's Seat Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Driver's Seat Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Electric Parking Brake	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Electric Parking Brake	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Electric Parking Brake	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Forward Sensing Camera	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Forward Sensing Camera	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Forward Sensing Camera	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Front Body Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Front Body Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Front Body Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Head Up Display	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Head Up Display	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Head Up Display	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Head Up Display	Active Test	HUD Test Mode	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Instrument Cluster	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Instrument Cluster	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Instrument Cluster	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculatio	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Waste Gate Control Solenoid Va	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Active Test	VEV Oil Pressure	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Active Test	ABV Oil Pressure	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Wastgate Valve Position	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Parking Sensor Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Parking Sensor Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Parking Sensor Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Restraint Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Restraint Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Restraint Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Rear Body Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Rear Body Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Rear Body Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001

MAZDA6/ ATENZA	2.5L	PY_T	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Start Stop Unit	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Start Stop Unit	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Start Stop Unit	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Transmission Control Module	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Transmission Control Module	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Transmission Control Module	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	View Monitor Camera	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	View Monitor Camera	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY_T	Other	View Monitor Camera	Live Data		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Stability Control Valve (Right Frc	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Head Up Display	Active Test	HUD Test Mode	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	VEV Oil Pressure	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	ABV Oil Pressure	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Wastgate Valve Position	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	Powertrain Control Module	Active Test	Vehicle drive device function te	V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	View Monitor Camera	Read DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	View Monitor Camera	Erase DTC		V1.20.001
MAZDA6/ ATENZA	2.5L	PY	Other	View Monitor Camera	Live Data		V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Powertrain Control Module	Read DTC		V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Powertrain Control Module	Erase DTC		V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Powertrain Control Module	Live Data		V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Powertrain Control Module	Active Test	Injector 4	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Powertrain Control Module	Active Test	Generator field current control	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Powertrain Control Module	Active Test	Injector 3	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Powertrain Control Module	Active Test	Injector 1	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Powertrain Control Module	Active Test	Injector 2	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Antilock braking system	Read DTC		V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Antilock braking system	Erase DTC		V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Antilock braking system	Live Data		V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Antilock braking system	Active Test	Left Front Traction Control Valve	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Antilock braking system	Active Test	Left Front DSC Valve	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Antilock braking system	Active Test	Antilock braking system Power F	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Antilock braking system	Active Test	Stability Control Active Indicato	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Antilock braking system	Active Test	Right Front Traction Control Val	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Antilock braking system	Active Test	Right Front DSC Valve	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Antilock braking system	Active Test	DSC Active Chime	V1.20.001
DEMIO / 121 DEMIO / 121	1.3L	B3	1996	Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5	1996	Powertrain Control Module	Read DTC		V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5	1996	Powertrain Control Module	Erase DTC		V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5	1996	Powertrain Control Module	Live Data		V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5	1996	Powertrain Control Module	Active Test	Injector 4	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5	1996	Powertrain Control Module	Active Test	Generator field current control	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5	1996	Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5	1996	Powertrain Control Module	Active Test	Injector 3	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5	1996	Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5	1996	Powertrain Control Module	Active Test	Injector 1	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5	1996	Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5	1996	Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5	1996	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5	1996	Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5	1996	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5	1996	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5	1996	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5	1996	Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5	1996	Powertrain Control Module	Active Test	Injector 2	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5	1996	Antilock braking system	Read DTC		V1.20.001

DEMIO / 121 DEMIO / 121	1.5L	B5		1996 Antilock braking system	Erase DTC		V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5		1996 Antilock braking system	Live Data		V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5		1996 Antilock braking system	Active Test	Left Front Traction Control Valve	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5		1996 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5		1996 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5		1996 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5		1996 Antilock braking system	Active Test	Left Front DSC Valve	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5		1996 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5		1996 Antilock braking system	Active Test	Antilock braking system Power f	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5		1996 Antilock braking system	Active Test	Stability Control Active Indicator	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5		1996 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5		1996 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5		1996 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5		1996 Antilock braking system	Active Test	Right Front Traction Control Valve	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5		1996 Antilock braking system	Active Test	Right Front DSC Valve	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5		1996 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5		1996 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5		1996 Antilock braking system	Active Test	DSC Active Chime	V1.20.001
DEMIO / 121 DEMIO / 121	1.5L	B5		1996 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
CX-3	2.0L	PE	Other	Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MX-5	1.6L	B6		2000 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MX-5	1.6L	B6		2000 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
MX-5	1.6L	B6		2000 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
MX-5	1.6L	B6		2000 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
MX-5	1.6L	B6		2000 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
MX-5	1.6L	B6		2000 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
MX-5	1.6L	B6		2000 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
MX-5	1.6L	B6		2000 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
MX-5	1.6L	B6		2000 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
MX-5	1.6L	B6		2000 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
MX-5	1.6L	B6		2000 Powertrain Control Module	Read DTC		V1.20.001
MX-5	1.6L	B6		2000 Powertrain Control Module	Erase DTC		V1.20.001
MX-5	1.6L	B6		2000 Powertrain Control Module	Live Data		V1.20.001
MX-5	1.6L	B6		2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MX-5	1.6L	B6		2000 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MX-5	1.6L	B6		2000 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MX-5	1.6L	B6		2000 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MX-5	1.6L	B6		2000 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MX-5	1.6L	B6		2000 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MX-5	1.6L	B6		2000 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MX-5	1.6L	B6		2000 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
MX-5	1.6L	B6		2000 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MX-5	1.6L	B6		2000 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MX-5	1.6L	B6		2000 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MX-5	1.6L	B6		2000 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MX-5	1.6L	B6		2000 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MX-5	1.6L	B6		2000 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MX-5 MIATA	1.8L	BP		2001 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
MX-5 MIATA	1.8L	BP		2001 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
MX-5 MIATA	1.8L	BP		2001 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Cruise Control	Read DTC		V1.20.001
MX-5 MIATA	1.8L	BP		2001 Cruise Control	Erase DTC		V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Read DTC		V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Erase DTC		V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Live Data		V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Active Test	purge valve control with caniste	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Active Test	Overflow control valve	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Active Test	Canister drain cut valve control	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Active Test	Exhaust Gas Recirculation	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solen	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MX-5 MIATA	1.8L	BP		2001 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MX-5	1.8L	BP		2000 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MX-5	1.8L	BP		2000 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
MX-5	1.8L	BP		2000 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
MX-5	1.8L	BP		2000 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
MX-5	1.8L	BP		2000 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
MX-5	1.8L	BP		2000 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001

MX-5	1.8L	BP	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
MX-5	1.8L	BP	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
MX-5	1.8L	BP	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
MX-5	1.8L	BP	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
MX-5	1.8L	BP	2000 Powertrain Control Module	Read DTC		V1.20.001
MX-5	1.8L	BP	2000 Powertrain Control Module	Erase DTC		V1.20.001
MX-5	1.8L	BP	2000 Powertrain Control Module	Live Data		V1.20.001
MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Generator field current control c	V1.20.001
MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Overflow control valve	V1.20.001
MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MX-5	1.8L	BP	2000 Powertrain Control Module	Active Test	Injector 1	V1.20.001
PREMACY	1.8L	FP	2000 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
PREMACY	1.8L	FP	2000 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
PREMACY	1.8L	FP	2000 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
PREMACY	1.8L	FP	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
PREMACY	1.8L	FP	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
PREMACY	1.8L	FP	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
PREMACY	1.8L	FP	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
PREMACY	1.8L	FP	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
PREMACY	1.8L	FP	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
PREMACY	1.8L	FP	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
PREMACY	1.8L	FP	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
PREMACY	1.8L	FP	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
PREMACY	1.8L	FP	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
PREMACY	1.8L	FP	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Traction Control Off Indicator	V1.20.001
PREMACY	1.8L	FP	2000 Air Conditioning	Read DTC		V1.20.001
PREMACY	1.8L	FP	2000 Air Conditioning	Erase DTC		V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Read DTC		V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Erase DTC		V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Live Data		V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Active Test	Injector 2	V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Active Test	Injector 4	V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Active Test	Generator field current control c	V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Active Test	Injector 3	V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
PREMACY	1.8L	FP	2000 Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-3	1.8L	S8	Other Powertrain Control Module	Active Test	HP-EGR Control Valve Desired	V1.20.001
Millenia	2.3L	KJ	2001 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Millenia	2.3L	KJ	2001 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Millenia	2.3L	KJ	2001 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Millenia	2.3L	KJ	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Millenia	2.3L	KJ	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
Millenia	2.3L	KJ	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
Millenia	2.3L	KJ	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
Millenia	2.3L	KJ	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Millenia	2.3L	KJ	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Engine Torque Signal	V1.20.001
Millenia	2.3L	KJ	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
Millenia	2.3L	KJ	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Millenia	2.3L	KJ	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Millenia	2.3L	KJ	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
Millenia	2.3L	KJ	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Millenia	2.3L	KJ	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Traction Control Off Indicator	V1.20.001
Millenia	2.3L	KJ	2001 Air Conditioning	Read DTC		V1.20.001
Millenia	2.3L	KJ	2001 Air Conditioning	Erase DTC		V1.20.001
Millenia	2.3L	KJ	2001 Cruise Control	Read DTC		V1.20.001
Millenia	2.3L	KJ	2001 Cruise Control	Erase DTC		V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Read DTC		V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Erase DTC		V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Live Data		V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Active Test	Air bypass valve solenoid(vent)	V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Active Test	Injector 2	V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Active Test	purge valve control with caniste	V1.20.001

Millenia	2.3L	KJ	2001 Powertrain Control Module	Active Test	Charge air cooler solenoid valve	V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Active Test	Injector 4	V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Active Test	Canister drain cut valve control	V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Active Test	Air bypass valve solenoid(vacuu	V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Active Test	Injector 3	V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Active Test	boost sensor solenoid valve	V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Active Test	Injector 6	V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solen	V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Active Test	Injector 1	V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Active Test	Fuel pump resistor relay	V1.20.001
Millenia	2.3L	KJ	2001 Powertrain Control Module	Active Test	Injector 5	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Air Conditioning	Read DTC		V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Air Conditioning	Erase DTC		V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Cruise Control	Read DTC		V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Cruise Control	Erase DTC		V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Read DTC		V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Erase DTC		V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Live Data		V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Active Test	Injector 5	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solen	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Active Test	Air bypass valve solenoid(vent)	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Active Test	Air bypass valve solenoid(vacuu	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Active Test	Charge air cooler solenoid valve	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Active Test	Fuel pump resistor relay	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Active Test	boost sensor solenoid valve	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Active Test	Injector 6	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 4 Wheel Steering	Read DTC		V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 4 Wheel Steering	Erase DTC		V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MILLENNIA / EUNOS 800	2.3L	KJ	2000 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Millenia	2.5L	KL	2001 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
Millenia	2.5L	KL	2001 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
Millenia	2.5L	KL	2001 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
Millenia	2.5L	KL	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
Millenia	2.5L	KL	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
Millenia	2.5L	KL	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
Millenia	2.5L	KL	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
Millenia	2.5L	KL	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
Millenia	2.5L	KL	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Engine Torque Signal	V1.20.001
Millenia	2.5L	KL	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
Millenia	2.5L	KL	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
Millenia	2.5L	KL	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
Millenia	2.5L	KL	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
Millenia	2.5L	KL	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
Millenia	2.5L	KL	2001 Anti-Lock Brake / Traction Control Mo	Active Test	Traction Control Off Indicator	V1.20.001
Millenia	2.5L	KL	2001 Air Conditioning	Read DTC		V1.20.001
Millenia	2.5L	KL	2001 Air Conditioning	Erase DTC		V1.20.001
Millenia	2.5L	KL	2001 Cruise Control	Read DTC		V1.20.001
Millenia	2.5L	KL	2001 Cruise Control	Erase DTC		V1.20.001
Millenia	2.5L	KL	2001 Powertrain Control Module	Read DTC		V1.20.001
Millenia	2.5L	KL	2001 Powertrain Control Module	Erase DTC		V1.20.001
Millenia	2.5L	KL	2001 Powertrain Control Module	Live Data		V1.20.001
Millenia	2.5L	KL	2001 Powertrain Control Module	Active Test	Variable Resonance Induction S	V1.20.001
Millenia	2.5L	KL	2001 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
Millenia	2.5L	KL	2001 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
Millenia	2.5L	KL	2001 Powertrain Control Module	Active Test	Injector 2	V1.20.001
Millenia	2.5L	KL	2001 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Millenia	2.5L	KL	2001 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Millenia	2.5L	KL	2001 Powertrain Control Module	Active Test	purge valve control with caniste	V1.20.001
Millenia	2.5L	KL	2001 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Millenia	2.5L	KL	2001 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
Millenia	2.5L	KL	2001 Powertrain Control Module	Active Test	Injector 4	V1.20.001
Millenia	2.5L	KL	2001 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
Millenia	2.5L	KL	2001 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Millenia	2.5L	KL	2001 Powertrain Control Module	Active Test	3-2 Timing Solenoid Valve	V1.20.001
Millenia	2.5L	KL	2001 Powertrain Control Module	Active Test	Canister drain cut valve control	V1.20.001
Millenia	2.5L	KL	2001 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
Millenia	2.5L	KL	2001 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Millenia	2.5L	KL	2001 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
Millenia	2.5L	KL	2001 Powertrain Control Module	Active Test	Injector 3	V1.20.001
Millenia	2.5L	KL	2001 Powertrain Control Module	Active Test	Exhaust Gas Recirculation	V1.20.001

Millenia	2.5L	KL	2001	Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
Millenia	2.5L	KL	2001	Powertrain Control Module	Active Test	Variable Resonance Induction S _y	V1.20.001
Millenia	2.5L	KL	2001	Powertrain Control Module	Active Test	Exhaust Gas Recirculation solenoid	V1.20.001
Millenia	2.5L	KL	2001	Powertrain Control Module	Active Test	Injector 6	V1.20.001
Millenia	2.5L	KL	2001	Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
Millenia	2.5L	KL	2001	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
Millenia	2.5L	KL	2001	Powertrain Control Module	Active Test	Injector 1	V1.20.001
Millenia	2.5L	KL	2001	Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Millenia	2.5L	KL	2001	Powertrain Control Module	Active Test	Injector 5	V1.20.001
XEDOS9	2.5L	KL	2000	Air Conditioning	Read DTC		V1.20.001
XEDOS9	2.5L	KL	2000	Air Conditioning	Erase DTC		V1.20.001
XEDOS9	2.5L	KL	2000	Cruise Control	Read DTC		V1.20.001
XEDOS9	2.5L	KL	2000	Cruise Control	Erase DTC		V1.20.001
XEDOS9	2.5L	KL	2000	Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
XEDOS9	2.5L	KL	2000	Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
XEDOS9	2.5L	KL	2000	Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
XEDOS9	2.5L	KL	2000	Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
XEDOS9	2.5L	KL	2000	Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
XEDOS9	2.5L	KL	2000	Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
XEDOS9	2.5L	KL	2000	Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power F	V1.20.001
XEDOS9	2.5L	KL	2000	Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
XEDOS9	2.5L	KL	2000	Anti-Lock Brake / Traction Control Mo	Active Test	Engine Torque Signal	V1.20.001
XEDOS9	2.5L	KL	2000	Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
XEDOS9	2.5L	KL	2000	Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
XEDOS9	2.5L	KL	2000	Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
XEDOS9	2.5L	KL	2000	Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
XEDOS9	2.5L	KL	2000	Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
XEDOS9	2.5L	KL	2000	Anti-Lock Brake / Traction Control Mo	Active Test	Traction Control Off Indicator	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Read DTC		V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Erase DTC		V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Live Data		V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	Variable Resonance Induction S _y	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	Injector 2	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	Injector 4	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	3-2 Timing Solenoid Valve	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	Injector 3	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	Exhaust Gas Recirculation	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	Variable Resonance Induction S _y	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	Exhaust Gas Recirculation solenoid	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	Injector 6	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	Injector 1	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
XEDOS9	2.5L	KL	2000	Powertrain Control Module	Active Test	Injector 5	V1.20.001
PREMACY	2.0L	RF_T	2000	Antilock braking system	Read DTC		V1.20.001
PREMACY	2.0L	RF_T	2000	Antilock braking system	Erase DTC		V1.20.001
PREMACY	2.0L	RF_T	2000	Antilock braking system	Live Data		V1.20.001
PREMACY	2.0L	RF_T	2000	Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
PREMACY	2.0L	RF_T	2000	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
PREMACY	2.0L	RF_T	2000	Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
PREMACY	2.0L	RF_T	2000	Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
PREMACY	2.0L	RF_T	2000	Antilock braking system	Active Test	Antilock braking system Power F	V1.20.001
PREMACY	2.0L	RF_T	2000	Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
PREMACY	2.0L	RF_T	2000	Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
PREMACY	2.0L	RF_T	2000	Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
PREMACY	2.0L	RF_T	2000	Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
PREMACY	2.0L	RF_T	2000	Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
PREMACY	2.0L	RF_T	2000	Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
PREMACY	2.0L	RF_T	2000	Powertrain Control Module	Read DTC		V1.20.001
PREMACY	2.0L	RF_T	2000	Powertrain Control Module	Erase DTC		V1.20.001
PREMACY	2.0L	RF_T	2000	Powertrain Control Module	Live Data		V1.20.001
PREMACY	2.0L	RF_T	2000	Powertrain Control Module	Active Test	Exhaust Gas Recirculation solenoid	V1.20.001
PREMACY	2.0L	RF_T	2000	Powertrain Control Module	Active Test	Glow plug control	V1.20.001
PREMACY	2.0L	RF_T	2000	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PREMACY	2.0L	RF_T	2000	Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solenoid	V1.20.001
PREMACY	2.0L	RF_T	2000	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
PREMACY	2.0L	RF_T	2000	Powertrain Control Module	Active Test	Glow plug lamp	V1.20.001
PREMACY	2.0L	RF_T	2000	Powertrain Control Module	Active Test	Fuel Shut Off Valve	V1.20.001
PREMACY	2.0L	RF_T	2000	Powertrain Control Module	Active Test	Spill Valve Relay	V1.20.001
CX-8	2.5L	PY_T	Other	4X4 Control Module	Read DTC		V1.20.001
CX-8	2.5L	PY_T	Other	4X4 Control Module	Erase DTC		V1.20.001
CX-8	2.5L	PY_T	Other	4X4 Control Module	Live Data		V1.20.001
CX-8	2.5L	PY_T	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
CX-8	2.5L	PY_T	Other	Antilock braking system	Read DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Antilock braking system	Erase DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Antilock braking system	Live Data		V1.20.001
CX-8	2.5L	PY_T	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
CX-8	2.5L	PY_T	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001

CX-8	2.5L	PY_T	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
CX-8	2.5L	PY_T	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
CX-8	2.5L	PY_T	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
CX-8	2.5L	PY_T	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
CX-8	2.5L	PY_T	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
CX-8	2.5L	PY_T	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
CX-8	2.5L	PY_T	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
CX-8	2.5L	PY_T	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
CX-8	2.5L	PY_T	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fr	V1.20.001
CX-8	2.5L	PY_T	Other	Antilock braking system	Active Test	Stability Control Valve (Right Fr	V1.20.001
CX-8	2.5L	PY_T	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
CX-8	2.5L	PY_T	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
CX-8	2.5L	PY_T	Other	Amplifier Module	Read DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Amplifier Module	Erase DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Amplifier Module	Live Data		V1.20.001
CX-8	2.5L	PY_T	Other	Amplifier Module	Active Test	Engine Harmonic Enhancement	V1.20.001
CX-8	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
CX-8	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
CX-8	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
CX-8	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
CX-8	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-8	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
CX-8	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
CX-8	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-8	2.5L	PY_T	Other	Connectivity Master Unit	Read DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Connectivity Master Unit	Erase DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Driver's Seat Module	Read DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Driver's Seat Module	Erase DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Driver's Seat Module	Live Data		V1.20.001
CX-8	2.5L	PY_T	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
CX-8	2.5L	PY_T	Other	Electric Parking Brake	Read DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Electric Parking Brake	Erase DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Electric Parking Brake	Live Data		V1.20.001
CX-8	2.5L	PY_T	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
CX-8	2.5L	PY_T	Other	Forward Sensing Camera	Read DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Forward Sensing Camera	Erase DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Forward Sensing Camera	Live Data		V1.20.001
CX-8	2.5L	PY_T	Other	Front Body Control Module	Read DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Front Body Control Module	Erase DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Front Body Control Module	Live Data		V1.20.001
CX-8	2.5L	PY_T	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
CX-8	2.5L	PY_T	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
CX-8	2.5L	PY_T	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
CX-8	2.5L	PY_T	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
CX-8	2.5L	PY_T	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
CX-8	2.5L	PY_T	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
CX-8	2.5L	PY_T	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
CX-8	2.5L	PY_T	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
CX-8	2.5L	PY_T	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
CX-8	2.5L	PY_T	Other	Head Up Display	Read DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Head Up Display	Erase DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Head Up Display	Live Data		V1.20.001
CX-8	2.5L	PY_T	Other	Head Up Display	Active Test	HUD Test Mode	V1.20.001
CX-8	2.5L	PY_T	Other	Instrument Cluster	Read DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Instrument Cluster	Erase DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Instrument Cluster	Live Data		V1.20.001
CX-8	2.5L	PY_T	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
CX-8	2.5L	PY_T	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
CX-8	2.5L	PY_T	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
CX-8	2.5L	PY_T	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
CX-8	2.5L	PY_T	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
CX-8	2.5L	PY_T	Other	Powertrain Control Module	Read DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Powertrain Control Module	Erase DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Powertrain Control Module	Live Data		V1.20.001
CX-8	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CX-8	2.5L	PY_T	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
CX-8	2.5L	PY_T	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
CX-8	2.5L	PY_T	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
CX-8	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculati	V1.20.001
CX-8	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
CX-8	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
CX-8	2.5L	PY_T	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
CX-8	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CX-8	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CX-8	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
CX-8	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
CX-8	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
CX-8	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-8	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Target Exhaust Variable Valve Ti	V1.20.001
CX-8	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
CX-8	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
CX-8	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001

CX-8	2.5L	PY_T	Other	Powertrain Control Module	Active Test	VEV Oil Pressure	V1.20.001
CX-8	2.5L	PY_T	Other	Powertrain Control Module	Active Test	ABV Oil Pressure	V1.20.001
CX-8	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Wastgate Valve Position	V1.20.001
CX-8	2.5L	PY_T	Other	Power Liftgate	Read DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Power Liftgate	Erase DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Power Liftgate	Live Data		V1.20.001
CX-8	2.5L	PY_T	Other	Parking Sensor Module	Read DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Parking Sensor Module	Erase DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Parking Sensor Module	Live Data		V1.20.001
CX-8	2.5L	PY_T	Other	Restraint Control Module	Read DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Restraint Control Module	Erase DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Restraint Control Module	Live Data		V1.20.001
CX-8	2.5L	PY_T	Other	Rear Body Control Module	Read DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Rear Body Control Module	Erase DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Rear Body Control Module	Live Data		V1.20.001
CX-8	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
CX-8	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
CX-8	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
CX-8	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
CX-8	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
CX-8	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
CX-8	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
CX-8	2.5L	PY_T	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
CX-8	2.5L	PY_T	Other	Start Stop Unit	Read DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Start Stop Unit	Erase DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Start Stop Unit	Live Data		V1.20.001
CX-8	2.5L	PY_T	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
CX-8	2.5L	PY_T	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
CX-8	2.5L	PY_T	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
CX-8	2.5L	PY_T	Other	Transmission Control Module	Read DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Transmission Control Module	Erase DTC		V1.20.001
CX-8	2.5L	PY_T	Other	Transmission Control Module	Live Data		V1.20.001
CX-8	2.5L	PY_T	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
CX-8	2.5L	PY_T	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
CX-8	2.5L	PY_T	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
CX-8	2.5L	PY_T	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
CX-8	2.5L	PY_T	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
CX-8	2.5L	PY_T	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
CX-8	2.5L	PY_T	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
CX-8	2.5L	PY_T	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
CX-8	2.5L	PY_T	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
CX-8	2.5L	PY_T	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
CX-8	2.5L	PY_T	Other	View Monitor Camera	Read DTC		V1.20.001
CX-8	2.5L	PY_T	Other	View Monitor Camera	Erase DTC		V1.20.001
CX-8	2.5L	PY_T	Other	View Monitor Camera	Live Data		V1.20.001
CX-8	2.5L	PY	Other	4X4 Control Module	Read DTC		V1.20.001
CX-8	2.5L	PY	Other	4X4 Control Module	Erase DTC		V1.20.001
CX-8	2.5L	PY	Other	4X4 Control Module	Live Data		V1.20.001
CX-8	2.5L	PY	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
CX-8	2.5L	PY	Other	Antilock braking system	Read DTC		V1.20.001
CX-8	2.5L	PY	Other	Antilock braking system	Erase DTC		V1.20.001
CX-8	2.5L	PY	Other	Antilock braking system	Live Data		V1.20.001
CX-8	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
CX-8	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
CX-8	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
CX-8	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
CX-8	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
CX-8	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
CX-8	2.5L	PY	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
CX-8	2.5L	PY	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
CX-8	2.5L	PY	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
CX-8	2.5L	PY	Other	Antilock braking system	Active Test	Traction Control Valve (Right Frc	V1.20.001
CX-8	2.5L	PY	Other	Antilock braking system	Active Test	Traction Control Valve (Left For	V1.20.001
CX-8	2.5L	PY	Other	Antilock braking system	Active Test	Stability Control Valve (Right Frc	V1.20.001
CX-8	2.5L	PY	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
CX-8	2.5L	PY	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
CX-8	2.5L	PY	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
CX-8	2.5L	PY	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
CX-8	2.5L	PY	Other	Amplifier Module	Read DTC		V1.20.001
CX-8	2.5L	PY	Other	Amplifier Module	Erase DTC		V1.20.001
CX-8	2.5L	PY	Other	Amplifier Module	Live Data		V1.20.001
CX-8	2.5L	PY	Other	Amplifier Module	Active Test	Engine Harmonic Enhancement	V1.20.001
CX-8	2.5L	PY	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
CX-8	2.5L	PY	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
CX-8	2.5L	PY	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
CX-8	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
CX-8	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
CX-8	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
CX-8	2.5L	PY	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-8	2.5L	PY	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
CX-8	2.5L	PY	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
CX-8	2.5L	PY	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
CX-8	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
CX-8	2.5L	PY	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-8	2.5L	PY	Other	Connectivity Master Unit	Read DTC		V1.20.001
CX-8	2.5L	PY	Other	Connectivity Master Unit	Erase DTC		V1.20.001
CX-8	2.5L	PY	Other	Driver's Seat Module	Read DTC		V1.20.001
CX-8	2.5L	PY	Other	Driver's Seat Module	Erase DTC		V1.20.001
CX-8	2.5L	PY	Other	Driver's Seat Module	Live Data		V1.20.001
CX-8	2.5L	PY	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001

CX-8	2.5L	PY	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
CX-8	2.5L	PY	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
CX-8	2.5L	PY	Other	Electric Parking Brake	Read DTC		V1.20.001
CX-8	2.5L	PY	Other	Electric Parking Brake	Erase DTC		V1.20.001
CX-8	2.5L	PY	Other	Electric Parking Brake	Live Data		V1.20.001
CX-8	2.5L	PY	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
CX-8	2.5L	PY	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
CX-8	2.5L	PY	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
CX-8	2.5L	PY	Other	Forward Sensing Camera	Read DTC		V1.20.001
CX-8	2.5L	PY	Other	Forward Sensing Camera	Erase DTC		V1.20.001
CX-8	2.5L	PY	Other	Forward Sensing Camera	Live Data		V1.20.001
CX-8	2.5L	PY	Other	Front Body Control Module	Read DTC		V1.20.001
CX-8	2.5L	PY	Other	Front Body Control Module	Erase DTC		V1.20.001
CX-8	2.5L	PY	Other	Front Body Control Module	Live Data		V1.20.001
CX-8	2.5L	PY	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
CX-8	2.5L	PY	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
CX-8	2.5L	PY	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
CX-8	2.5L	PY	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
CX-8	2.5L	PY	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
CX-8	2.5L	PY	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
CX-8	2.5L	PY	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
CX-8	2.5L	PY	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
CX-8	2.5L	PY	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
CX-8	2.5L	PY	Other	Head Up Display	Read DTC		V1.20.001
CX-8	2.5L	PY	Other	Head Up Display	Erase DTC		V1.20.001
CX-8	2.5L	PY	Other	Head Up Display	Live Data		V1.20.001
CX-8	2.5L	PY	Other	Head Up Display	Active Test	HUD Test Mode	V1.20.001
CX-8	2.5L	PY	Other	Instrument Cluster	Read DTC		V1.20.001
CX-8	2.5L	PY	Other	Instrument Cluster	Erase DTC		V1.20.001
CX-8	2.5L	PY	Other	Instrument Cluster	Live Data		V1.20.001
CX-8	2.5L	PY	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
CX-8	2.5L	PY	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
CX-8	2.5L	PY	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
CX-8	2.5L	PY	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
CX-8	2.5L	PY	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Read DTC		V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Erase DTC		V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Live Data		V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculatio	V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Active Test	VEV Oil Pressure	V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Active Test	ABV Oil Pressure	V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Active Test	Wastgate Valve Position	V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Active Test	Exhaust Flow Control Valve 'A' P	V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Active Test	Engine Oil Pressure Solenoid Val	V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Active Test	Engine Oil Pressure Solenoid Val	V1.20.001
CX-8	2.5L	PY	Other	Powertrain Control Module	Active Test	Engine Oil Pressure Solenoid Val	V1.20.001
CX-8	2.5L	PY	Other	Power Liftgate	Read DTC		V1.20.001
CX-8	2.5L	PY	Other	Power Liftgate	Erase DTC		V1.20.001
CX-8	2.5L	PY	Other	Power Liftgate	Live Data		V1.20.001
CX-8	2.5L	PY	Other	Parking Sensor Module	Read DTC		V1.20.001
CX-8	2.5L	PY	Other	Parking Sensor Module	Erase DTC		V1.20.001
CX-8	2.5L	PY	Other	Parking Sensor Module	Live Data		V1.20.001
CX-8	2.5L	PY	Other	Restraint Control Module	Read DTC		V1.20.001
CX-8	2.5L	PY	Other	Restraint Control Module	Erase DTC		V1.20.001
CX-8	2.5L	PY	Other	Restraint Control Module	Live Data		V1.20.001
CX-8	2.5L	PY	Other	Rear Body Control Module	Read DTC		V1.20.001
CX-8	2.5L	PY	Other	Rear Body Control Module	Erase DTC		V1.20.001
CX-8	2.5L	PY	Other	Rear Body Control Module	Live Data		V1.20.001
CX-8	2.5L	PY	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
CX-8	2.5L	PY	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
CX-8	2.5L	PY	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
CX-8	2.5L	PY	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
CX-8	2.5L	PY	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
CX-8	2.5L	PY	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
CX-8	2.5L	PY	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
CX-8	2.5L	PY	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
CX-8	2.5L	PY	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
CX-8	2.5L	PY	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
CX-8	2.5L	PY	Other	Start Stop Unit	Read DTC		V1.20.001
CX-8	2.5L	PY	Other	Start Stop Unit	Erase DTC		V1.20.001
CX-8	2.5L	PY	Other	Start Stop Unit	Live Data		V1.20.001
CX-8	2.5L	PY	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
CX-8	2.5L	PY	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
CX-8	2.5L	PY	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
CX-8	2.5L	PY	Other	Transmission Control Module	Read DTC		V1.20.001
CX-8	2.5L	PY	Other	Transmission Control Module	Erase DTC		V1.20.001

CX-8	2.5L	PY	Other	Transmission Control Module	Live Data		V1.20.001
CX-8	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
CX-8	2.5L	PY	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
CX-8	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
CX-8	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
CX-8	2.5L	PY	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
CX-8	2.5L	PY	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
CX-8	2.5L	PY	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
CX-8	2.5L	PY	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
CX-8	2.5L	PY	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
CX-8	2.5L	PY	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
CX-8	2.5L	PY	Other	View Monitor Camera	Read DTC		V1.20.001
CX-8	2.5L	PY	Other	View Monitor Camera	Erase DTC		V1.20.001
CX-8	2.5L	PY	Other	View Monitor Camera	Live Data		V1.20.001
CX-5	2.5L	PY_T	Other	4X4 Control Module	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	4X4 Control Module	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	4X4 Control Module	Live Data		V1.20.001
CX-5	2.5L	PY_T	Other	4X4 Control Module	Active Test	Coupling Solenoid Duty Cycle	V1.20.001
CX-5	2.5L	PY_T	Other	Antilock braking system	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Antilock braking system	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Antilock braking system	Live Data		V1.20.001
CX-5	2.5L	PY_T	Other	Antilock braking system	Active Test	Inlet Valve (Right Rear)	V1.20.001
CX-5	2.5L	PY_T	Other	Antilock braking system	Active Test	Outlet Valve (Right Rear)	V1.20.001
CX-5	2.5L	PY_T	Other	Antilock braking system	Active Test	Inlet Valve (Left Rear)	V1.20.001
CX-5	2.5L	PY_T	Other	Antilock braking system	Active Test	Outlet Valve (Left Rear)	V1.20.001
CX-5	2.5L	PY_T	Other	Antilock braking system	Active Test	Inlet Valve (Right Front)	V1.20.001
CX-5	2.5L	PY_T	Other	Antilock braking system	Active Test	Outlet Valve (Right Front)	V1.20.001
CX-5	2.5L	PY_T	Other	Antilock braking system	Active Test	Inlet Valve (Left Front)	V1.20.001
CX-5	2.5L	PY_T	Other	Antilock braking system	Active Test	Outlet Valve (Left Front)	V1.20.001
CX-5	2.5L	PY_T	Other	Antilock braking system	Active Test	Pump Motor Supply	V1.20.001
CX-5	2.5L	PY_T	Other	Antilock braking system	Active Test	Traction Control Valve (Right Fr	V1.20.001
CX-5	2.5L	PY_T	Other	Antilock braking system	Active Test	Traction Control Valve (Left Fr	V1.20.001
CX-5	2.5L	PY_T	Other	Antilock braking system	Active Test	Stability Control Valve (Right Fr	V1.20.001
CX-5	2.5L	PY_T	Other	Antilock braking system	Active Test	Stability Control Valve (Left Fro	V1.20.001
CX-5	2.5L	PY_T	Other	Adaptive Front Lighting System / Auto	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Adaptive Front Lighting System / Auto	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Adaptive Front Lighting System / Auto	Live Data		V1.20.001
CX-5	2.5L	PY_T	Other	Amplifier Module	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Amplifier Module	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Amplifier Module	Live Data		V1.20.001
CX-5	2.5L	PY_T	Other	Amplifier Module	Active Test	Engine Harmonic Enhancement	V1.20.001
CX-5	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Live Data		V1.20.001
CX-5	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Active Test	Vehicle Speed	V1.20.001
CX-5	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
CX-5	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Active Test	BSM Illumination Mode	V1.20.001
CX-5	2.5L	PY_T	Other	Blind Spot Monitoring (Left)	Active Test	Mirror Warning Indicator - Left	V1.20.001
CX-5	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Live Data		V1.20.001
CX-5	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Active Test	Vehicle Speed	V1.20.001
CX-5	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Active Test	Rear Cross Traffic Alert Buzzer R	V1.20.001
CX-5	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Active Test	BSM Illumination Mode	V1.20.001
CX-5	2.5L	PY_T	Other	Blind Spot Monitoring (Right)	Active Test	Mirror Warning Indicator - Right	V1.20.001
CX-5	2.5L	PY_T	Other	Connectivity Master Unit	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Connectivity Master Unit	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	DC to DC Converter Control Module	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	DC to DC Converter Control Module	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Data Communication Module	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Data Communication Module	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Data Communication Module	Live Data		V1.20.001
CX-5	2.5L	PY_T	Other	Driver's Seat Module	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Driver's Seat Module	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Driver's Seat Module	Live Data		V1.20.001
CX-5	2.5L	PY_T	Other	Electronic Air Temperature Controller	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Electronic Air Temperature Controller	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Electronic Air Temperature Controller	Live Data		V1.20.001
CX-5	2.5L	PY_T	Other	Electric Parking Brake	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Electric Parking Brake	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Electric Parking Brake	Live Data		V1.20.001
CX-5	2.5L	PY_T	Other	Electronic-Controlled Power Steering	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Electronic-Controlled Power Steering	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Electronic-Controlled Power Steering	Live Data		V1.20.001
CX-5	2.5L	PY_T	Other	Forward Sensing Camera	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Forward Sensing Camera	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Forward Sensing Camera	Live Data		V1.20.001
CX-5	2.5L	PY_T	Other	Front Body Control Module	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Front Body Control Module	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Front Body Control Module	Live Data		V1.20.001
CX-5	2.5L	PY_T	Other	Front Body Control Module	Active Test	ESS Status	V1.20.001
CX-5	2.5L	PY_T	Other	Front Body Control Module	Active Test	Hazard Lamp	V1.20.001
CX-5	2.5L	PY_T	Other	Front Body Control Module	Active Test	Front Fog Lamp	V1.20.001
CX-5	2.5L	PY_T	Other	Front Body Control Module	Active Test	Headlight	V1.20.001
CX-5	2.5L	PY_T	Other	Front Body Control Module	Active Test	Rear Washer Motor Relay	V1.20.001
CX-5	2.5L	PY_T	Other	Front Body Control Module	Active Test	Front Washer Motor Relay	V1.20.001
CX-5	2.5L	PY_T	Other	Front Body Control Module	Active Test	Head Light Cleaner Relay	V1.20.001
CX-5	2.5L	PY_T	Other	Front Body Control Module	Active Test	Rear Defogger Status	V1.20.001
CX-5	2.5L	PY_T	Other	Front Body Control Module	Active Test	PTC Heater Status	V1.20.001
CX-5	2.5L	PY_T	Other	Head Up Display	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Head Up Display	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Head Up Display	Live Data		V1.20.001

CX-5	2.5L	PY_T	Other	Head Up Display	Active Test	HUD Test Mode	V1.20.001
CX-5	2.5L	PY_T	Other	Head Up Display	Active Test	Maintenance mode	V1.20.001
CX-5	2.5L	PY_T	Other	Instrument Cluster	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Instrument Cluster	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Instrument Cluster	Live Data		V1.20.001
CX-5	2.5L	PY_T	Other	Instrument Cluster	Active Test	All Warning Lamp and Indicator	V1.20.001
CX-5	2.5L	PY_T	Other	Instrument Cluster	Active Test	Tachometer	V1.20.001
CX-5	2.5L	PY_T	Other	Instrument Cluster	Active Test	Speedometer	V1.20.001
CX-5	2.5L	PY_T	Other	Instrument Cluster	Active Test	Alarm	V1.20.001
CX-5	2.5L	PY_T	Other	Instrument Cluster	Active Test	All LCD Segment	V1.20.001
CX-5	2.5L	PY_T	Other	Powertrain Control Module	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Powertrain Control Module	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Powertrain Control Module	Live Data		V1.20.001
CX-5	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
CX-5	2.5L	PY_T	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
CX-5	2.5L	PY_T	Other	Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
CX-5	2.5L	PY_T	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
CX-5	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Desired Exhaust Gas Recirculatio	V1.20.001
CX-5	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
CX-5	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister V	V1.20.001
CX-5	2.5L	PY_T	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
CX-5	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
CX-5	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
CX-5	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
CX-5	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
CX-5	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
CX-5	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
CX-5	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Target Exhaust Variable Valve Ti	V1.20.001
CX-5	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Oil Pressure Solenoid Valve	V1.20.001
CX-5	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Active Air Shutter Position Desir	V1.20.001
CX-5	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Desired RPM	V1.20.001
CX-5	2.5L	PY_T	Other	Powertrain Control Module	Active Test	VEV Oil Pressure	V1.20.001
CX-5	2.5L	PY_T	Other	Powertrain Control Module	Active Test	ABV Oil Pressure	V1.20.001
CX-5	2.5L	PY_T	Other	Powertrain Control Module	Active Test	Wastgate Valve Position	V1.20.001
CX-5	2.5L	PY_T	Other	Power Liftgate	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Power Liftgate	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Power Liftgate	Live Data		V1.20.001
CX-5	2.5L	PY_T	Other	Parking Sensor Module	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Parking Sensor Module	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Parking Sensor Module	Live Data		V1.20.001
CX-5	2.5L	PY_T	Other	Rear Body Control Module	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Rear Body Control Module	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Rear Body Control Module	Live Data		V1.20.001
CX-5	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Electric Latch (Unlock)	V1.20.001
CX-5	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Rear Fog Lamp	V1.20.001
CX-5	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Reverse Lamp	V1.20.001
CX-5	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Rear Wiper Motor (LOW)	V1.20.001
CX-5	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Burglar Horn Relay	V1.20.001
CX-5	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Electric Latch Motor Relay	V1.20.001
CX-5	2.5L	PY_T	Other	Rear Body Control Module	Active Test	Control Signal of Stop Lamp	V1.20.001
CX-5	2.5L	PY_T	Other	Rear Body Control Module	Active Test	All Door Lock Motor	V1.20.001
CX-5	2.5L	PY_T	Other	Smart Brake Support/Mazda Radar Cr	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Smart Brake Support/Mazda Radar Cr	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Smart Brake Support/Mazda Radar Cr	Live Data		V1.20.001
CX-5	2.5L	PY_T	Other	Start Stop Unit	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Start Stop Unit	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Start Stop Unit	Live Data		V1.20.001
CX-5	2.5L	PY_T	Other	Start Stop Unit	Active Test	Outer Buzzer	V1.20.001
CX-5	2.5L	PY_T	Other	Start Stop Unit	Active Test	Touch Sensor Power (Left Front)	V1.20.001
CX-5	2.5L	PY_T	Other	Start Stop Unit	Active Test	Touch Sensor Power (Right Fron	V1.20.001
CX-5	2.5L	PY_T	Other	Transmission Control Module	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Transmission Control Module	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Transmission Control Module	Live Data		V1.20.001
CX-5	2.5L	PY_T	Other	Transmission Control Module	Active Test	Shift Solenoid 1 Current - Comm	V1.20.001
CX-5	2.5L	PY_T	Other	Transmission Control Module	Active Test	Pressure Control Solenoid Curre	V1.20.001
CX-5	2.5L	PY_T	Other	Transmission Control Module	Active Test	Shift Solenoid 2 Current - Comm	V1.20.001
CX-5	2.5L	PY_T	Other	Transmission Control Module	Active Test	Shift Solenoid 3 Current - Comm	V1.20.001
CX-5	2.5L	PY_T	Other	Transmission Control Module	Active Test	Shift Solenoid 4 Current - Comm	V1.20.001
CX-5	2.5L	PY_T	Other	Transmission Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
CX-5	2.5L	PY_T	Other	Transmission Control Module	Active Test	Electric Oil Pump	V1.20.001
CX-5	2.5L	PY_T	Other	Transmission Control Module	Active Test	Electric Oil Pump - Duty Cycle	V1.20.001
CX-5	2.5L	PY_T	Other	Transmission Control Module	Active Test	ON/OFF solenoid	V1.20.001
CX-5	2.5L	PY_T	Other	Transmission Control Module	Active Test	Electric Oil Pump Relay	V1.20.001
CX-5	2.5L	PY_T	Other	Restraint Control Module	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Restraint Control Module	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	Restraint Control Module	Live Data		V1.20.001
CX-5	2.5L	PY_T	Other	View Monitor Camera	Read DTC		V1.20.001
CX-5	2.5L	PY_T	Other	View Monitor Camera	Erase DTC		V1.20.001
CX-5	2.5L	PY_T	Other	View Monitor Camera	Live Data		V1.20.001
MPV (North America / General)	2.5L	GY	Other	2000 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MPV (North America / General)	2.5L	GY	Other	2000 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
MPV (North America / General)	2.5L	GY	Other	2000 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
MPV (North America / General)	2.5L	GY	Other	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
MPV (North America / General)	2.5L	GY	Other	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
MPV (North America / General)	2.5L	GY	Other	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
MPV (North America / General)	2.5L	GY	Other	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power F	V1.20.001
MPV (North America / General)	2.5L	GY	Other	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
MPV (North America / General)	2.5L	GY	Other	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
MPV (North America / General)	2.5L	GY	Other	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
MPV (North America / General)	2.5L	GY	Other	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
MPV (North America / General)	2.5L	GY	Other	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
MPV (North America / General)	2.5L	GY	Other	2000 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001

PROTEGE	2.0L	FS	2001 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
PROTEGE	2.0L	FS	2001 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
PROTEGE	2.0L	FS	2001 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
PROTEGE	2.0L	FS	2001 Powertrain Control Module	Active Test	Canister drain cut valve control	V1.20.001
PROTEGE	2.0L	FS	2001 Powertrain Control Module	Active Test	Injector 3	V1.20.001
PROTEGE	2.0L	FS	2001 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
PROTEGE	2.0L	FS	2001 Powertrain Control Module	Active Test	Exhaust Gas Recirculation	V1.20.001
PROTEGE	2.0L	FS	2001 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
PROTEGE	2.0L	FS	2001 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
PROTEGE	2.0L	FS	2001 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
PROTEGE	2.0L	FS	2001 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
PROTEGE	2.0L	FS	2001 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
PROTEGE	2.0L	FS	2001 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
PROTEGE	2.0L	FS	2001 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Antilock braking system	Read DTC		V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Antilock braking system	Erase DTC		V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Antilock braking system	Live Data		V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Antilock braking system	Active Test	Antilock braking system Power f	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Air Conditioning	Read DTC		V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Air Conditioning	Erase DTC		V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Read DTC		V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Erase DTC		V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Live Data		V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	Injector 5	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	3-2 Timing Solenoid Valve	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	Injector 6	V1.20.001
MPV (JPN/General)	2.5L	GY	1999 Powertrain Control Module	Active Test	Injector 2	V1.20.001
PROTEGE	1.6L	ZM	1999 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
PROTEGE	1.6L	ZM	1999 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
PROTEGE	1.6L	ZM	1999 Cruise Control	Read DTC		V1.20.001
PROTEGE	1.6L	ZM	1999 Cruise Control	Erase DTC		V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Read DTC		V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Erase DTC		V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Live Data		V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	Injector 2	V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	purge valve control with caniste	V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	Injector 4	V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	Canister drain cut valve control	V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	Injector 3	V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	Exhaust Gas Recirculation	V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
PROTEGE	1.6L	ZM	1999 Powertrain Control Module	Active Test	Injector 1	V1.20.001
PROTEGE	1.6L	ZM	2000 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
PROTEGE	1.6L	ZM	2000 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
PROTEGE	1.6L	ZM	2000 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001

AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A-T	2000 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A-T	2000 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A-T	2000 Restraint Control Module	Read DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A-T	2000 Restraint Control Module	Erase DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A-T	2000 Restraint Control Module	Live Data		V1.20.001
PREMACY	2.0L	FS	2001 Air Conditioning	Read DTC		V1.20.001
PREMACY	2.0L	FS	2001 Air Conditioning	Erase DTC		V1.20.001
PREMACY	2.0L	FS	2001 Antilock braking system	Read DTC		V1.20.001
PREMACY	2.0L	FS	2001 Antilock braking system	Erase DTC		V1.20.001
PREMACY	2.0L	FS	2001 Antilock braking system	Live Data		V1.20.001
PREMACY	2.0L	FS	2001 Antilock braking system	Active Test	Left Front Traction Control Valve	V1.20.001
PREMACY	2.0L	FS	2001 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
PREMACY	2.0L	FS	2001 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
PREMACY	2.0L	FS	2001 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
PREMACY	2.0L	FS	2001 Antilock braking system	Active Test	Vehicle Speed Signal Output	V1.20.001
PREMACY	2.0L	FS	2001 Antilock braking system	Active Test	Left Front DSC Valve	V1.20.001
PREMACY	2.0L	FS	2001 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
PREMACY	2.0L	FS	2001 Antilock braking system	Active Test	Antilock braking system Power F	V1.20.001
PREMACY	2.0L	FS	2001 Antilock braking system	Active Test	Stability Control Active Indicator	V1.20.001
PREMACY	2.0L	FS	2001 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
PREMACY	2.0L	FS	2001 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
PREMACY	2.0L	FS	2001 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
PREMACY	2.0L	FS	2001 Antilock braking system	Active Test	Right Front Traction Control Valve	V1.20.001
PREMACY	2.0L	FS	2001 Antilock braking system	Active Test	Right Front DSC Valve	V1.20.001
PREMACY	2.0L	FS	2001 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
PREMACY	2.0L	FS	2001 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
PREMACY	2.0L	FS	2001 Antilock braking system	Active Test	DSC Active Chime	V1.20.001
PREMACY	2.0L	FS	2001 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Read DTC		V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Erase DTC		V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Live Data		V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Active Test	Air conditioning compressor cycle	V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Active Test	Injector 2	V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Active Test	Injector 4	V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Active Test	Injector 3	V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Active Test	Evaporative Emission Canister Purge	V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
PREMACY	2.0L	FS	2001 Powertrain Control Module	Active Test	Injector 1	V1.20.001
LAPUTA	660cc	K6A	2000 Antilock braking system	Read DTC		V1.20.001
LAPUTA	660cc	K6A	2000 Antilock braking system	Erase DTC		V1.20.001
LAPUTA	660cc	K6A	2000 Antilock braking system	Live Data		V1.20.001
LAPUTA	660cc	K6A	2000 Powertrain Control Module	Read DTC		V1.20.001
LAPUTA	660cc	K6A	2000 Powertrain Control Module	Erase DTC		V1.20.001
LAPUTA	660cc	K6A	2000 Powertrain Control Module	Live Data		V1.20.001
LAPUTA	660cc	K6A	2000 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
LAPUTA	660cc	K6A	2000 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
LAPUTA	660cc	K6A	2000 Powertrain Control Module	Active Test	Variable Cam Timing	V1.20.001
LAPUTA	660cc	K6A	2000 Restraint Control Module	Read DTC		V1.20.001
LAPUTA	660cc	K6A	2000 Restraint Control Module	Erase DTC		V1.20.001
LAPUTA	660cc	K6A	2000 Restraint Control Module	Live Data		V1.20.001
LAPUTA	660cc	F6A-T	2001 Antilock braking system	Read DTC		V1.20.001
LAPUTA	660cc	F6A-T	2001 Antilock braking system	Erase DTC		V1.20.001
LAPUTA	660cc	F6A-T	2001 Antilock braking system	Live Data		V1.20.001
LAPUTA	660cc	F6A-T	2001 Powertrain Control Module	Read DTC		V1.20.001
LAPUTA	660cc	F6A-T	2001 Powertrain Control Module	Erase DTC		V1.20.001
LAPUTA	660cc	F6A-T	2001 Powertrain Control Module	Live Data		V1.20.001
LAPUTA	660cc	F6A-T	2001 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
LAPUTA	660cc	F6A-T	2001 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
LAPUTA	660cc	F6A-T	2001 Restraint Control Module	Read DTC		V1.20.001
LAPUTA	660cc	F6A-T	2001 Restraint Control Module	Erase DTC		V1.20.001
LAPUTA	660cc	F6A-T	2001 Restraint Control Module	Live Data		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	F6A-T	2000 Antilock braking system	Read DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	F6A-T	2000 Antilock braking system	Erase DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	F6A-T	2000 Antilock braking system	Live Data		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	F6A-T	2000 Powertrain Control Module	Read DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	F6A-T	2000 Powertrain Control Module	Erase DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	F6A-T	2000 Powertrain Control Module	Live Data		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	F6A-T	2000 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	F6A-T	2000 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	F6A-T	2000 Restraint Control Module	Read DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	F6A-T	2000 Restraint Control Module	Erase DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	F6A-T	2000 Restraint Control Module	Live Data		V1.20.001
LAPUTA	660cc	K6A-T	2001 Antilock braking system	Read DTC		V1.20.001
LAPUTA	660cc	K6A-T	2001 Antilock braking system	Erase DTC		V1.20.001
LAPUTA	660cc	K6A-T	2001 Antilock braking system	Live Data		V1.20.001
LAPUTA	660cc	K6A-T	2001 Powertrain Control Module	Read DTC		V1.20.001
LAPUTA	660cc	K6A-T	2001 Powertrain Control Module	Erase DTC		V1.20.001

LAPUTA	660cc	F6A-T	Null	Restraint Control Module	Read DTC		V1.20.001
LAPUTA	660cc	F6A-T	Null	Restraint Control Module	Erase DTC		V1.20.001
LAPUTA	660cc	F6A-T	Null	Restraint Control Module	Live Data		V1.20.001
LAPUTA	660cc	F6A-T	Null	Powertrain Control Module	Read DTC		V1.20.001
LAPUTA	660cc	F6A-T	Null	Powertrain Control Module	Erase DTC		V1.20.001
LAPUTA	660cc	F6A-T	Null	Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
LAPUTA	660cc	F6A-T	Null	Powertrain Control Module	Active Test	Spark Advance	V1.20.001
LAPUTA	660cc	K6A	Null	Antilock braking system	Read DTC		V1.20.001
LAPUTA	660cc	K6A	Null	Antilock braking system	Erase DTC		V1.20.001
LAPUTA	660cc	K6A	Null	Antilock braking system	Live Data		V1.20.001
LAPUTA	660cc	K6A	Null	Restraint Control Module	Read DTC		V1.20.001
LAPUTA	660cc	K6A	Null	Restraint Control Module	Erase DTC		V1.20.001
LAPUTA	660cc	K6A	Null	Restraint Control Module	Live Data		V1.20.001
LAPUTA	660cc	K6A	Null	Powertrain Control Module	Read DTC		V1.20.001
LAPUTA	660cc	K6A	Null	Powertrain Control Module	Erase DTC		V1.20.001
LAPUTA	660cc	K6A	Null	Powertrain Control Module	Live Data		V1.20.001
LAPUTA	660cc	K6A	Null	Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
LAPUTA	660cc	K6A	Null	Powertrain Control Module	Active Test	Spark Advance	V1.20.001
LAPUTA	660cc	K6A	Null	Powertrain Control Module	Active Test	Variable Cam Timing	V1.20.001
SCRUM	660cc	F6A	Null	Antilock braking system	Read DTC		V1.20.001
SCRUM	660cc	F6A	Null	Antilock braking system	Erase DTC		V1.20.001
SCRUM	660cc	F6A	Null	Antilock braking system	Live Data		V1.20.001
SCRUM	660cc	F6A	Null	Restraint Control Module	Read DTC		V1.20.001
SCRUM	660cc	F6A	Null	Restraint Control Module	Erase DTC		V1.20.001
SCRUM	660cc	F6A	Null	Restraint Control Module	Live Data		V1.20.001
SCRUM	660cc	F6A	Null	Powertrain Control Module	Read DTC		V1.20.001
SCRUM	660cc	F6A	Null	Powertrain Control Module	Erase DTC		V1.20.001
SCRUM	660cc	F6A	Null	Powertrain Control Module	Live Data		V1.20.001
SCRUM	660cc	F6A	Null	Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
SCRUM	660cc	F6A	Null	Powertrain Control Module	Active Test	Spark Advance	V1.20.001
SCRUM	660cc	F6A-T	Null	Antilock braking system	Read DTC		V1.20.001
SCRUM	660cc	F6A-T	Null	Antilock braking system	Erase DTC		V1.20.001
SCRUM	660cc	F6A-T	Null	Antilock braking system	Live Data		V1.20.001
SCRUM	660cc	F6A-T	Null	Restraint Control Module	Read DTC		V1.20.001
SCRUM	660cc	F6A-T	Null	Restraint Control Module	Erase DTC		V1.20.001
SCRUM	660cc	F6A-T	Null	Restraint Control Module	Live Data		V1.20.001
SCRUM	660cc	F6A-T	Null	Transmission Control Module	Read DTC		V1.20.001
SCRUM	660cc	F6A-T	Null	Transmission Control Module	Erase DTC		V1.20.001
SCRUM	660cc	F6A-T	Null	Transmission Control Module	Live Data		V1.20.001
SCRUM	660cc	F6A-T	Null	Powertrain Control Module	Read DTC		V1.20.001
SCRUM	660cc	F6A-T	Null	Powertrain Control Module	Erase DTC		V1.20.001
SCRUM	660cc	F6A-T	Null	Powertrain Control Module	Live Data		V1.20.001
SCRUM	660cc	F6A-T	Null	Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
SCRUM	660cc	F6A-T	Null	Powertrain Control Module	Active Test	Spark Advance	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power F	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Powertrain Control Module	Read DTC		V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Powertrain Control Module	Erase DTC		V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Powertrain Control Module	Live Data		V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MPV (Europe/General)	2.0L	FS		2000 Powertrain Control Module	Active Test	Injector 1	V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	F6A-T		1998 Antilock braking system	Read DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	F6A-T		1998 Antilock braking system	Erase DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	F6A-T		1998 Antilock braking system	Live Data		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	F6A-T		1998 Powertrain Control Module	Read DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	F6A-T		1998 Powertrain Control Module	Erase DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	F6A-T		1998 Powertrain Control Module	Live Data		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	F6A-T		1998 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	F6A-T		1998 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	F6A-T		1998 Restraint Control Module	Read DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	F6A-T		1998 Restraint Control Module	Erase DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	F6A-T		1998 Restraint Control Module	Live Data		V1.20.001
SCRUM	660cc	K6A		2001 Antilock braking system	Read DTC		V1.20.001
SCRUM	660cc	K6A		2001 Antilock braking system	Erase DTC		V1.20.001
SCRUM	660cc	K6A		2001 Antilock braking system	Live Data		V1.20.001
SCRUM	660cc	K6A		2001 Powertrain Control Module	Read DTC		V1.20.001
SCRUM	660cc	K6A		2001 Powertrain Control Module	Erase DTC		V1.20.001

SCRUM	660cc	K6A	2001 Powertrain Control Module	Live Data		V1.20.001
SCRUM	660cc	K6A	2001 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
SCRUM	660cc	K6A	2001 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
SCRUM	660cc	K6A	2001 Restraint Control Module	Read DTC		V1.20.001
SCRUM	660cc	K6A	2001 Restraint Control Module	Erase DTC		V1.20.001
SCRUM	660cc	K6A	2001 Restraint Control Module	Live Data		V1.20.001
SCRUM	660cc	K6A-T	2001 Antilock braking system	Read DTC		V1.20.001
SCRUM	660cc	K6A-T	2001 Antilock braking system	Erase DTC		V1.20.001
SCRUM	660cc	K6A-T	2001 Antilock braking system	Live Data		V1.20.001
SCRUM	660cc	K6A-T	2001 Powertrain Control Module	Read DTC		V1.20.001
SCRUM	660cc	K6A-T	2001 Powertrain Control Module	Erase DTC		V1.20.001
SCRUM	660cc	K6A-T	2001 Powertrain Control Module	Live Data		V1.20.001
SCRUM	660cc	K6A-T	2001 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
SCRUM	660cc	K6A-T	2001 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
SCRUM	660cc	K6A-T	2001 Restraint Control Module	Read DTC		V1.20.001
SCRUM	660cc	K6A-T	2001 Restraint Control Module	Erase DTC		V1.20.001
SCRUM	660cc	K6A-T	2001 Restraint Control Module	Live Data		V1.20.001
SCRUM	660cc	K6A-T	2001 Transmission Control Module	Read DTC		V1.20.001
SCRUM	660cc	K6A-T	2001 Transmission Control Module	Erase DTC		V1.20.001
SCRUM	660cc	K6A-T	2001 Transmission Control Module	Live Data		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A	2001 Antilock braking system	Read DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A	2001 Antilock braking system	Erase DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A	2001 Antilock braking system	Live Data		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A	2001 Powertrain Control Module	Read DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A	2001 Powertrain Control Module	Erase DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A	2001 Powertrain Control Module	Live Data		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A	2001 Powertrain Control Module	Active Test	Variable Cam Timing	V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A	2001 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A	2001 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A	2001 Restraint Control Module	Read DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A	2001 Restraint Control Module	Erase DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A	2001 Restraint Control Module	Live Data		V1.20.001
LAPUTA	660cc	K6A	2001,5 Antilock braking system	Read DTC		V1.20.001
LAPUTA	660cc	K6A	2001,5 Antilock braking system	Erase DTC		V1.20.001
LAPUTA	660cc	K6A	2001,5 Antilock braking system	Live Data		V1.20.001
LAPUTA	660cc	K6A	2001,5 Powertrain Control Module	Read DTC		V1.20.001
LAPUTA	660cc	K6A	2001,5 Powertrain Control Module	Erase DTC		V1.20.001
LAPUTA	660cc	K6A	2001,5 Powertrain Control Module	Live Data		V1.20.001
LAPUTA	660cc	K6A	2001,5 Powertrain Control Module	Active Test	Variable Cam Timing	V1.20.001
LAPUTA	660cc	K6A	2001,5 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
LAPUTA	660cc	K6A	2001,5 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
LAPUTA	660cc	K6A	2001,5 Restraint Control Module	Read DTC		V1.20.001
LAPUTA	660cc	K6A	2001,5 Restraint Control Module	Erase DTC		V1.20.001
LAPUTA	660cc	K6A	2001,5 Restraint Control Module	Live Data		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A-T	2001 Antilock braking system	Read DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A-T	2001 Antilock braking system	Erase DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A-T	2001 Antilock braking system	Live Data		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A-T	2001 Powertrain Control Module	Read DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A-T	2001 Powertrain Control Module	Erase DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A-T	2001 Powertrain Control Module	Live Data		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A-T	2001 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A-T	2001 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A-T	2001 Restraint Control Module	Read DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A-T	2001 Restraint Control Module	Erase DTC		V1.20.001
AZ-WAGON (MD/MJ)/ SPIANO (HF)	660cc	K6A-T	2001 Restraint Control Module	Live Data		V1.20.001
LAPUTA	660cc	K6A-T	2001,5 Antilock braking system	Read DTC		V1.20.001
LAPUTA	660cc	K6A-T	2001,5 Antilock braking system	Erase DTC		V1.20.001
LAPUTA	660cc	K6A-T	2001,5 Antilock braking system	Live Data		V1.20.001
LAPUTA	660cc	K6A-T	2001,5 Powertrain Control Module	Read DTC		V1.20.001
LAPUTA	660cc	K6A-T	2001,5 Powertrain Control Module	Erase DTC		V1.20.001
LAPUTA	660cc	K6A-T	2001,5 Powertrain Control Module	Live Data		V1.20.001
LAPUTA	660cc	K6A-T	2001,5 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
LAPUTA	660cc	K6A-T	2001,5 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
LAPUTA	660cc	K6A-T	2001,5 Restraint Control Module	Read DTC		V1.20.001
LAPUTA	660cc	K6A-T	2001,5 Restraint Control Module	Erase DTC		V1.20.001
LAPUTA	660cc	K6A-T	2001,5 Restraint Control Module	Live Data		V1.20.001
LAPUTA	660cc	F6A-T	1998 Antilock braking system	Read DTC		V1.20.001
LAPUTA	660cc	F6A-T	1998 Antilock braking system	Erase DTC		V1.20.001
LAPUTA	660cc	F6A-T	1998 Antilock braking system	Live Data		V1.20.001
LAPUTA	660cc	F6A-T	1998 Restraint Control Module	Read DTC		V1.20.001
LAPUTA	660cc	F6A-T	1998 Restraint Control Module	Erase DTC		V1.20.001
LAPUTA	660cc	F6A-T	1998 Restraint Control Module	Live Data		V1.20.001
LAPUTA	660cc	F6A-T	1998 Transmission Control Module	Read DTC		V1.20.001
LAPUTA	660cc	F6A-T	1998 Transmission Control Module	Erase DTC		V1.20.001
LAPUTA	660cc	F6A-T	1998 Transmission Control Module	Live Data		V1.20.001
LAPUTA	660cc	F6A-T	1998 Powertrain Control Module	Read DTC		V1.20.001
LAPUTA	660cc	F6A-T	1998 Powertrain Control Module	Erase DTC		V1.20.001
LAPUTA	660cc	F6A-T	1998 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
LAPUTA	660cc	F6A-T	1998 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MPV (Europe/General)	3.0L	AJ	2002 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MPV (Europe/General)	3.0L	AJ	2002 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
MPV (Europe/General)	3.0L	AJ	2002 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
MPV (Europe/General)	3.0L	AJ	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
MPV (Europe/General)	3.0L	AJ	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
MPV (Europe/General)	3.0L	AJ	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Traction Control Off Indicator	V1.20.001
MPV (Europe/General)	3.0L	AJ	2002 Powertrain Control Module	Read DTC		V1.20.001
MPV (Europe/General)	3.0L	AJ	2002 Powertrain Control Module	Erase DTC		V1.20.001
MPV (Europe/General)	3.0L	AJ	2002 Powertrain Control Module	Live Data		V1.20.001
MPV (Europe/General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MPV (Europe/General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MPV (Europe/General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MPV (Europe/General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Injector 4	V1.20.001

MPV (Europe/General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Generator field current control	V1.20.001	
MPV (Europe/General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Fuel pump	V1.20.001	
MPV (Europe/General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001	
MPV (Europe/General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001	
MPV (Europe/General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001	
MPV (Europe/General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Injector 3	V1.20.001	
MPV (Europe/General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001	
MPV (Europe/General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Injector 6	V1.20.001	
MPV (Europe/General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001	
MPV (Europe/General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001	
MPV (Europe/General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Injector 1	V1.20.001	
MPV (Europe/General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Injector 5	V1.20.001	
MPV (Europe/General)	3.0L	AJ	2002 Transmission Control Module	Read DTC		V1.20.001	
MPV (Europe/General)	3.0L	AJ	2002 Transmission Control Module	Erase DTC		V1.20.001	
MPV (Europe/General)	3.0L	AJ	2002 Transmission Control Module	Live Data		V1.20.001	
MPV (Europe/General)	3.0L	AJ	2002 Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001	
MPV (Europe/General)	3.0L	AJ	2002 Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001	
MPV (Europe/General)	3.0L	AJ	2002 Transmission Control Module	Active Test	Line Pressure Solenoid	V1.20.001	
MPV (Europe/General)	3.0L	AJ	2002 Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001	
MPV (Europe/General)	3.0L	AJ	2002 Transmission Control Module	Active Test	Torque Converter Clutch Control	V1.20.001	
MPV (Europe/General)	3.0L	AJ	2002 Transmission Control Module	Active Test	Reduction Timing Solenoid	V1.20.001	
MPV (Europe/General)	3.0L	AJ	2002 Transmission Control Module	Active Test	2-4 Brake Solenoid	V1.20.001	
MPV (Europe/General)	3.0L	AJ	2002 Transmission Control Module	Active Test	High Clutch Solenoid	V1.20.001	
MPV (Europe/General)	3.0L	AJ	2002 Transmission Control Module	Active Test	N-Shift Solenoid	V1.20.001	
SCRUM	660cc	K6A	Null	Antilock braking system	Read DTC	V1.20.001	
SCRUM	660cc	K6A	Null	Antilock braking system	Erase DTC	V1.20.001	
SCRUM	660cc	K6A	Null	Antilock braking system	Live Data	V1.20.001	
SCRUM	660cc	K6A	Null	Restraint Control Module	Read DTC	V1.20.001	
SCRUM	660cc	K6A	Null	Restraint Control Module	Erase DTC	V1.20.001	
SCRUM	660cc	K6A	Null	Restraint Control Module	Live Data	V1.20.001	
SCRUM	660cc	K6A	Null	Powertrain Control Module	Read DTC	V1.20.001	
SCRUM	660cc	K6A	Null	Powertrain Control Module	Erase DTC	V1.20.001	
SCRUM	660cc	K6A	Null	Powertrain Control Module	Live Data	V1.20.001	
SCRUM	660cc	K6A	Null	Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
SCRUM	660cc	K6A	Null	Powertrain Control Module	Active Test	Spark Advance	V1.20.001
SCRUM	660cc	K6A-T	Null	Antilock braking system	Read DTC	V1.20.001	
SCRUM	660cc	K6A-T	Null	Antilock braking system	Erase DTC	V1.20.001	
SCRUM	660cc	K6A-T	Null	Antilock braking system	Live Data	V1.20.001	
SCRUM	660cc	K6A-T	Null	Powertrain Control Module	Read DTC	V1.20.001	
SCRUM	660cc	K6A-T	Null	Powertrain Control Module	Erase DTC	V1.20.001	
SCRUM	660cc	K6A-T	Null	Powertrain Control Module	Live Data	V1.20.001	
SCRUM	660cc	K6A-T	Null	Powertrain Control Module	Active Test	Spark Advance	V1.20.001
SCRUM	660cc	K6A-T	Null	Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
SCRUM	660cc	K6A-T	Null	Restraint Control Module	Read DTC	V1.20.001	
SCRUM	660cc	K6A-T	Null	Restraint Control Module	Erase DTC	V1.20.001	
SCRUM	660cc	K6A-T	Null	Restraint Control Module	Live Data	V1.20.001	
SCRUM	660cc	K6A-T	Null	Transmission Control Module	Read DTC	V1.20.001	
SCRUM	660cc	K6A-T	Null	Transmission Control Module	Erase DTC	V1.20.001	
SCRUM	660cc	K6A-T	Null	Transmission Control Module	Live Data	V1.20.001	
LAPUTA	660cc	K6A-T	Null	Antilock braking system	Read DTC	V1.20.001	
LAPUTA	660cc	K6A-T	Null	Antilock braking system	Erase DTC	V1.20.001	
LAPUTA	660cc	K6A-T	Null	Antilock braking system	Live Data	V1.20.001	
LAPUTA	660cc	K6A-T	Null	Restraint Control Module	Read DTC	V1.20.001	
LAPUTA	660cc	K6A-T	Null	Restraint Control Module	Erase DTC	V1.20.001	
LAPUTA	660cc	K6A-T	Null	Restraint Control Module	Live Data	V1.20.001	
LAPUTA	660cc	K6A-T	Null	Restraint Control Module	Read DTC	V1.20.001	
LAPUTA	660cc	K6A-T	Null	Powertrain Control Module	Erase DTC	V1.20.001	
LAPUTA	660cc	K6A-T	Null	Powertrain Control Module	Live Data	V1.20.001	
LAPUTA	660cc	K6A-T	Null	Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
LAPUTA	660cc	K6A-T	Null	Powertrain Control Module	Active Test	Spark Advance	V1.20.001
Titan	4.0L	TF	2002 Powertrain Control Module	Read DTC		V1.20.001	
Titan	4.0L	TF	2002 Powertrain Control Module	Erase DTC		V1.20.001	
Titan	4.0L	TF	2002 Powertrain Control Module	Live Data		V1.20.001	
Titan	4.0L	TF	2002 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001	
Titan	4.0L	TF	2002 Powertrain Control Module	Active Test	Spark Advance	V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Cruise Control	Read DTC		V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Cruise Control	Erase DTC		V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Powertrain Control Module	Read DTC		V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Powertrain Control Module	Erase DTC		V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Powertrain Control Module	Live Data		V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Injector 2	V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Injector 4	V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Generator field current control	V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Fuel pump	V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001	
MPV (North America / General)	3.0L	AJ	2002 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001	

TITAN DASH	2.0L	FE_LPG	2002	Powertrain Control Module	Read DTC		V1.20.001
TITAN DASH	2.0L	FE_LPG	2002	Powertrain Control Module	Erase DTC		V1.20.001
TITAN DASH	2.0L	FE_LPG	2002	Powertrain Control Module	Live Data		V1.20.001
TITAN DASH	2.0L	FE_LPG	2002	Transmission Control Module	Read DTC		V1.20.001
TITAN DASH	2.0L	FE_LPG	2002	Transmission Control Module	Erase DTC		V1.20.001
TITAN DASH	2.0L	FE_LPG	2002	Transmission Control Module	Live Data		V1.20.001
TITAN DASH	2.0L	FE_LPG	2002	Transmission Control Module	Active Test	Transmission Fluid Temperature	V1.20.001
TITAN DASH	2.0L	FE_LPG	2002	Transmission Control Module	Active Test	Shift Solenoid 3	V1.20.001
TITAN DASH	2.0L	FE_LPG	2002	Transmission Control Module	Active Test	C F	V1.20.001
TITAN DASH	2.0L	FE_LPG	2002	Transmission Control Module	Active Test	Torque Converter Clutch Contro	V1.20.001
TITAN DASH	2.0L	FE_LPG	2002	Transmission Control Module	Active Test	Shift Solenoid 1	V1.20.001
TITAN DASH	2.0L	FE_LPG	2002	Transmission Control Module	Active Test	Shift Solenoid 2	V1.20.001
TITAN DASH	2.0L	FE_LPG	2002	Transmission Control Module	Active Test	Electronic Pressure Control sole	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power F	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Anti-Lock Brake / Traction Control Mo	Active Test	Engine Torque Signal	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Anti-Lock Brake / Traction Control Mo	Active Test	Traction Control Off Indicator	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Air Conditioning	Read DTC		V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Air Conditioning	Erase DTC		V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Read DTC		V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Erase DTC		V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Live Data		V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	Variable Resonance Induction S _y	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	Injector 2	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	Injector 4	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	3-2 Timing Solenoid Valve	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	Injector 3	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	Exhaust Gas Recirculation	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	Variable Resonance Induction S _y	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	Exhaust Gas Recirculation solen	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	Injector 6	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	Injector 1	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
MILLENNIA / EUNOS 800	2.5L	KL	2002	Powertrain Control Module	Active Test	Injector 5	V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	4X4 Control Module	Read DTC		V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	4X4 Control Module	Erase DTC		V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	4X4 Control Module	Live Data		V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	4X4 Control Module	Active Test	Alternator Output	V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	4X4 Control Module	Active Test	Clutch Output	V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	4X4 Control Module	Active Test	Motor Magnet Field Output	V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	4X4 Control Module	Active Test	Motor Output	V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	4X4 Control Module	Active Test	42V Relay Output	V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	4X4 Control Module	Active Test	E4WD Relay Output	V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Traction Control Valve	V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Anti-Lock Brake / Traction Control Mo	Active Test	Left Front DSC Valve	V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Anti-Lock Brake / Traction Control Mo	Active Test	Right Front DSC Valve	V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Anti-Lock Brake / Traction Control Mo	Active Test	Calibrate Master Cylinder Press	V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Anti-Lock Brake / Traction Control Mo	Active Test	Lateral Accel Sensor Initialization	V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Traction Control Valv	V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Anti-Lock Brake / Traction Control Mo	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Instrument Cluster	Read DTC		V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Instrument Cluster	Erase DTC		V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Instrument Cluster	Live Data		V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Restraint Control Module	Read DTC		V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Restraint Control Module	Erase DTC		V1.20.001
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	Null	Restraint Control Module	Live Data		V1.20.001

CAROL	660cc	K6A	2002 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
CAROL	660cc	K6A	2002 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
CAROL	660cc	K6A	2002 Powertrain Control Module	Active Test	Variable Cam Timing	V1.20.001
CAROL	660cc	K6A	2002 Restraint Control Module	Read DTC		V1.20.001
CAROL	660cc	K6A	2002 Restraint Control Module	Erase DTC		V1.20.001
CAROL	660cc	K6A	2002 Restraint Control Module	Live Data		V1.20.001
PROTEGE	2.0L	FS_T	2003 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
PROTEGE	2.0L	FS_T	2003 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
PROTEGE	2.0L	FS_T	2003 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
PROTEGE	2.0L	FS_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
PROTEGE	2.0L	FS_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
PROTEGE	2.0L	FS_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
PROTEGE	2.0L	FS_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
PROTEGE	2.0L	FS_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
PROTEGE	2.0L	FS_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
PROTEGE	2.0L	FS_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
PROTEGE	2.0L	FS_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
PROTEGE	2.0L	FS_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
PROTEGE	2.0L	FS_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
PROTEGE	2.0L	FS_T	2003 Cruise Control	Read DTC		V1.20.001
PROTEGE	2.0L	FS_T	2003 Cruise Control	Erase DTC		V1.20.001
PROTEGE	2.0L	FS_T	2003 Powertrain Control Module	Read DTC		V1.20.001
PROTEGE	2.0L	FS_T	2003 Powertrain Control Module	Erase DTC		V1.20.001
PROTEGE	2.0L	FS_T	2003 Powertrain Control Module	Live Data		V1.20.001
PROTEGE	2.0L	FS_T	2003 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
PROTEGE	2.0L	FS_T	2003 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PROTEGE	2.0L	FS_T	2003 Powertrain Control Module	Active Test	Injector 2	V1.20.001
PROTEGE	2.0L	FS_T	2003 Powertrain Control Module	Active Test	purge valve control with caniste	V1.20.001
PROTEGE	2.0L	FS_T	2003 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
PROTEGE	2.0L	FS_T	2003 Powertrain Control Module	Active Test	Injector 4	V1.20.001
PROTEGE	2.0L	FS_T	2003 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
PROTEGE	2.0L	FS_T	2003 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
PROTEGE	2.0L	FS_T	2003 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
PROTEGE	2.0L	FS_T	2003 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
PROTEGE	2.0L	FS_T	2003 Powertrain Control Module	Active Test	Canister drain cut valve control	V1.20.001
PROTEGE	2.0L	FS_T	2003 Powertrain Control Module	Active Test	Injector 3	V1.20.001
PROTEGE	2.0L	FS_T	2003 Powertrain Control Module	Active Test	Exhaust Gas Recirculation	V1.20.001
PROTEGE	2.0L	FS_T	2003 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
PROTEGE	2.0L	FS_T	2003 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
PROTEGE	2.0L	FS_T	2003 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
PROTEGE	2.0L	FS_T	2003 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
PROTEGE	2.0L	FS_T	2003 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
PROTEGE	2.0L	FS_T	2003 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
PROTEGE	2.0L	FS_T	2003 Powertrain Control Module	Active Test	Injector 1	V1.20.001
PREMACY	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
PREMACY	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
PREMACY	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
PREMACY	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front DSC Valve	V1.20.001
PREMACY	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
PREMACY	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Vehicle Speed Signal Output	V1.20.001
PREMACY	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Traction Control Valve	V1.20.001
PREMACY	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
PREMACY	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	DSC Active Chime	V1.20.001
PREMACY	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Stability Control Active Indicator	V1.20.001
PREMACY	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
PREMACY	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front DSC Valve	V1.20.001
PREMACY	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
PREMACY	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
PREMACY	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
PREMACY	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
PREMACY	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
PREMACY	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001
PREMACY	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
PREMACY	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Traction Control Valv	V1.20.001
PREMACY	2.0L	RF_T	2003 Anti-Lock Brake / Traction Control Mo	Active Test	Traction Control Off Indicator	V1.20.001
PREMACY	2.0L	RF_T	2003 Powertrain Control Module	Read DTC		V1.20.001
PREMACY	2.0L	RF_T	2003 Powertrain Control Module	Erase DTC		V1.20.001
PREMACY	2.0L	RF_T	2003 Powertrain Control Module	Live Data		V1.20.001
PREMACY	2.0L	RF_T	2003 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
PREMACY	2.0L	RF_T	2003 Powertrain Control Module	Active Test	Fuel Shut Off Valve	V1.20.001
PREMACY	2.0L	RF_T	2003 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
PREMACY	2.0L	RF_T	2003 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
PREMACY	2.0L	RF_T	2003 Powertrain Control Module	Active Test	Glow plug lamp	V1.20.001
PREMACY	2.0L	RF_T	2003 Powertrain Control Module	Active Test	Glow plug control	V1.20.001
PREMACY	2.0L	RF_T	2003 Powertrain Control Module	Active Test	intake air shutter valve	V1.20.001
PREMACY	2.0L	RF_T	2003 Powertrain Control Module	Active Test	Spill Valve Relay	V1.20.001
PREMACY	2.0L	RF_T	2003 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solen	V1.20.001
PREMACY	2.0L	RF_T	2003 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
PREMACY	2.0L	RF_T	2003 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
PREMACY	2.0L	RF_T	2003 Powertrain Control Module	Active Test	variable boost control solenoid	V1.20.001
MPV (North America / General)	3.0L	AJ	2004 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MPV (North America / General)	3.0L	AJ	2004 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
MPV (North America / General)	3.0L	AJ	2004 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
MPV (North America / General)	3.0L	AJ	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
MPV (North America / General)	3.0L	AJ	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Outlet Valve	V1.20.001
MPV (North America / General)	3.0L	AJ	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Outlet Valve	V1.20.001
MPV (North America / General)	3.0L	AJ	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power f	V1.20.001
MPV (North America / General)	3.0L	AJ	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
MPV (North America / General)	3.0L	AJ	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Right Rear Inlet Valve	V1.20.001
MPV (North America / General)	3.0L	AJ	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
MPV (North America / General)	3.0L	AJ	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
MPV (North America / General)	3.0L	AJ	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Left Rear Inlet Valve	V1.20.001

AZ-WAGON (MJ)	660cc	K6A	2003 Powertrain Control Module	Live Data			V1.20.001
AZ-WAGON (MJ)	660cc	K6A	2003 Powertrain Control Module	Active Test	Variable Cam Timing		V1.20.001
AZ-WAGON (MJ)	660cc	K6A	2003 Powertrain Control Module	Active Test	Spark Advance		V1.20.001
AZ-WAGON (MJ)	660cc	K6A	2003 Powertrain Control Module	Active Test	Idle Air Control		V1.20.001
AZ-WAGON (MJ)	660cc	K6A	2003 Restraint Control Module	Read DTC			V1.20.001
AZ-WAGON (MJ)	660cc	K6A	2003 Restraint Control Module	Erase DTC			V1.20.001
AZ-WAGON (MJ)	660cc	K6A	2003 Restraint Control Module	Live Data			V1.20.001
AZ-WAGON (MJ)	660cc	K6A-T	2003 Antilock braking system	Read DTC			V1.20.001
AZ-WAGON (MJ)	660cc	K6A-T	2003 Antilock braking system	Erase DTC			V1.20.001
AZ-WAGON (MJ)	660cc	K6A-T	2003 Antilock braking system	Live Data			V1.20.001
AZ-WAGON (MJ)	660cc	K6A-T	2003 Powertrain Control Module	Read DTC			V1.20.001
AZ-WAGON (MJ)	660cc	K6A-T	2003 Powertrain Control Module	Erase DTC			V1.20.001
AZ-WAGON (MJ)	660cc	K6A-T	2003 Powertrain Control Module	Live Data			V1.20.001
AZ-WAGON (MJ)	660cc	K6A-T	2003 Powertrain Control Module	Active Test	Idle Air Control		V1.20.001
AZ-WAGON (MJ)	660cc	K6A-T	2003 Powertrain Control Module	Active Test	Spark Advance		V1.20.001
AZ-WAGON (MJ)	660cc	K6A-T	2003 Restraint Control Module	Read DTC			V1.20.001
AZ-WAGON (MJ)	660cc	K6A-T	2003 Restraint Control Module	Erase DTC			V1.20.001
AZ-WAGON (MJ)	660cc	K6A-T	2003 Restraint Control Module	Live Data			V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A	2003 Antilock braking system	Read DTC			V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A	2003 Antilock braking system	Erase DTC			V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A	2003 Antilock braking system	Live Data			V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A	2003 Powertrain Control Module	Read DTC			V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A	2003 Powertrain Control Module	Erase DTC			V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A	2003 Powertrain Control Module	Live Data			V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A	2003 Powertrain Control Module	Active Test	Spark Advance		V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A	2003 Powertrain Control Module	Active Test	Idle Air Control		V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A	2003 Restraint Control Module	Read DTC			V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A	2003 Restraint Control Module	Erase DTC			V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A	2003 Restraint Control Module	Live Data			V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A-T	2003 Antilock braking system	Read DTC			V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A-T	2003 Antilock braking system	Erase DTC			V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A-T	2003 Antilock braking system	Live Data			V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A-T	2003 Powertrain Control Module	Read DTC			V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A-T	2003 Powertrain Control Module	Erase DTC			V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A-T	2003 Powertrain Control Module	Live Data			V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A-T	2003 Powertrain Control Module	Active Test	Spark Advance		V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A-T	2003 Powertrain Control Module	Active Test	Idle Air Control		V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A-T	2003 Restraint Control Module	Read DTC			V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A-T	2003 Restraint Control Module	Erase DTC			V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A-T	2003 Restraint Control Module	Live Data			V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A-T	2003 Transmission Control Module	Read DTC			V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A-T	2003 Transmission Control Module	Erase DTC			V1.20.001
SCRUM (2003 / 9 -)	660cc	K6A-T	2003 Transmission Control Module	Live Data			V1.20.001
AZ-OFFROAD	660cc	K6A-T	2003 Antilock braking system	Read DTC			V1.20.001
AZ-OFFROAD	660cc	K6A-T	2003 Antilock braking system	Erase DTC			V1.20.001
AZ-OFFROAD	660cc	K6A-T	2003 Antilock braking system	Live Data			V1.20.001
AZ-OFFROAD	660cc	K6A-T	2003 Powertrain Control Module	Read DTC			V1.20.001
AZ-OFFROAD	660cc	K6A-T	2003 Powertrain Control Module	Erase DTC			V1.20.001
AZ-OFFROAD	660cc	K6A-T	2003 Powertrain Control Module	Live Data			V1.20.001
AZ-OFFROAD	660cc	K6A-T	2003 Powertrain Control Module	Active Test	Spark Advance		V1.20.001
AZ-OFFROAD	660cc	K6A-T	2003 Powertrain Control Module	Active Test	Idle Air Control		V1.20.001
AZ-OFFROAD	660cc	K6A-T	2003 Restraint Control Module	Read DTC			V1.20.001
AZ-OFFROAD	660cc	K6A-T	2003 Restraint Control Module	Erase DTC			V1.20.001
AZ-OFFROAD	660cc	K6A-T	2003 Restraint Control Module	Live Data			V1.20.001
AZ-OFFROAD	660cc	K6A-T	2003 Transmission Control Module	Read DTC			V1.20.001
AZ-OFFROAD	660cc	K6A-T	2003 Transmission Control Module	Erase DTC			V1.20.001
AZ-OFFROAD	660cc	K6A-T	2003 Transmission Control Module	Live Data			V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Anti-Lock Brake / Traction Control Mo	Read DTC			V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Anti-Lock Brake / Traction Control Mo	Erase DTC			V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Anti-Lock Brake / Traction Control Mo	Live Data			V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor		V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve		V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power F		V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve		V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve		V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve		V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve		V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve		V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Cruise Control	Read DTC			V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Cruise Control	Erase DTC			V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Powertrain Control Module	Read DTC			V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Powertrain Control Module	Erase DTC			V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Powertrain Control Module	Live Data			V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve		V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Powertrain Control Module	Active Test	Air conditioning compressor cyc		V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Powertrain Control Module	Active Test	Injector 2		V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Powertrain Control Module	Active Test	FAN3 Control Signal		V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Powertrain Control Module	Active Test	Injector 4		V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Powertrain Control Module	Active Test	Generator field current control c		V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Powertrain Control Module	Active Test	Fuel pump		V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Powertrain Control Module	Active Test	Generator Warning Light		V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Powertrain Control Module	Active Test	Injector 3		V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Powertrain Control Module	Active Test	Exhaust Gas Recirculation		V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Powertrain Control Module	Active Test	Idle Air Control		V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Powertrain Control Module	Active Test	Intake Manifold Runner Control		V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Powertrain Control Module	Active Test	Evaporative Emission Canister P		V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Powertrain Control Module	Active Test	Fuel Pulse Width #1		V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Powertrain Control Module	Active Test	FAN2 Control Signal		V1.20.001
MX-5 MIATA	1.8L	BP Turbo	2004 Powertrain Control Module	Active Test	Injector 1		V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1	2004 Powertrain Control Module	Read DTC			V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1	2004 Powertrain Control Module	Erase DTC			V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1	2004 Powertrain Control Module	Live Data			V1.20.001

TITAN (Isuzu OEM)	4.8L	4HL1	2004 Powertrain Control Module	Active Test	Injector 1	V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1	2004 Powertrain Control Module	Active Test	Injector 2	V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1	2004 Powertrain Control Module	Active Test	Injector 3	V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1	2004 Powertrain Control Module	Active Test	Injector 4	V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1	2004 Powertrain Control Module	Active Test	Glow plug relay	V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1	2004 Powertrain Control Module	Active Test	Exhaust Brake Control	V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1	2004 Powertrain Control Module	Active Test	Main Injection Timing	V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1	2004 Powertrain Control Module	Active Test	Stop Pre-injection Command	V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1	2004 Transmission Control Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1	2004 Transmission Control Module	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1	2004 Transmission Control Module	Live Data		V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1_T	2004 Powertrain Control Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1_T	2004 Powertrain Control Module	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1_T	2004 Powertrain Control Module	Live Data		V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1_T	2004 Powertrain Control Module	Active Test	Injector 1	V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1_T	2004 Powertrain Control Module	Active Test	Injector 2	V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1_T	2004 Powertrain Control Module	Active Test	Injector 3	V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1_T	2004 Powertrain Control Module	Active Test	Injector 4	V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1_T	2004 Powertrain Control Module	Active Test	Glow plug relay	V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1_T	2004 Powertrain Control Module	Active Test	Exhaust Brake Control	V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1_T	2004 Powertrain Control Module	Active Test	Main Injection Timing	V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1_T	2004 Powertrain Control Module	Active Test	Stop Pre-injection Command	V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1_T	2004 Transmission Control Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1_T	2004 Transmission Control Module	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	4.8L	4HL1_T	2004 Transmission Control Module	Live Data		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HG1_LPG	2004 Powertrain Control Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HG1_LPG	2004 Powertrain Control Module	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HG1_LPG	2004 Powertrain Control Module	Live Data		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HG1_LPG	2004 Powertrain Control Module	Active Test	Clear F/B SOL Idle Average Duty	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HG1_LPG	2004 Powertrain Control Module	Active Test	Clear F/B SOL Partial Average Duty	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HG1_LPG	2004 Powertrain Control Module	Active Test	Feedback solenoid	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HG1_LPG	2004 Powertrain Control Module	Active Test	Fuel-cut Solenoid	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HG1_LPG	2004 Powertrain Control Module	Active Test	Fuel-cut Solenoid 2	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HG1_LPG	2004 Powertrain Control Module	Active Test	Clear Idle Air Control Learning	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HG1_LPG	2004 Powertrain Control Module	Active Test	Target Idle Air Control Step	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HG1_LPG	2004 Powertrain Control Module	Active Test	Clear Heated Exhaust Oxygen Sensor	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HG1_LPG	2004 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HG1_LPG	2004 Powertrain Control Module	Active Test	Wide open throttle Governor	V1.20.001
TITAN (Isuzu OEM)	4.3L	4HF1_CNG	2004 Powertrain Control Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	4.3L	4HF1_CNG	2004 Powertrain Control Module	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	4.3L	4HF1_CNG	2004 Powertrain Control Module	Live Data		V1.20.001
TITAN (Isuzu OEM)	4.3L	4HF1_CNG	2004 Powertrain Control Module	Active Test	Clear F/B SOL Idle Average Duty	V1.20.001
TITAN (Isuzu OEM)	4.3L	4HF1_CNG	2004 Powertrain Control Module	Active Test	Clear F/B SOL Partial Average Duty	V1.20.001
TITAN (Isuzu OEM)	4.3L	4HF1_CNG	2004 Powertrain Control Module	Active Test	Feedback solenoid	V1.20.001
TITAN (Isuzu OEM)	4.3L	4HF1_CNG	2004 Powertrain Control Module	Active Test	Fuel-cut Solenoid	V1.20.001
TITAN (Isuzu OEM)	4.3L	4HF1_CNG	2004 Powertrain Control Module	Active Test	Fuel-cut Solenoid 2	V1.20.001
TITAN (Isuzu OEM)	4.3L	4HF1_CNG	2004 Powertrain Control Module	Active Test	Clear Idle Air Control Learning	V1.20.001
TITAN (Isuzu OEM)	4.3L	4HF1_CNG	2004 Powertrain Control Module	Active Test	Target Idle Air Control Step	V1.20.001
TITAN (Isuzu OEM)	4.3L	4HF1_CNG	2004 Powertrain Control Module	Active Test	Clear Heated Exhaust Oxygen Sensor	V1.20.001
TITAN (Isuzu OEM)	4.3L	4HF1_CNG	2004 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
TITAN (Isuzu OEM)	4.3L	4HF1_CNG	2004 Powertrain Control Module	Active Test	Wide open throttle Governor	V1.20.001
CAROL (2003 / 9 -)	660cc	K6A	2004 Antilock braking system	Read DTC		V1.20.001
CAROL (2003 / 9 -)	660cc	K6A	2004 Antilock braking system	Erase DTC		V1.20.001
CAROL (2003 / 9 -)	660cc	K6A	2004 Antilock braking system	Live Data		V1.20.001
CAROL (2003 / 9 -)	660cc	K6A	2004 Powertrain Control Module	Read DTC		V1.20.001
CAROL (2003 / 9 -)	660cc	K6A	2004 Powertrain Control Module	Erase DTC		V1.20.001
CAROL (2003 / 9 -)	660cc	K6A	2004 Powertrain Control Module	Live Data		V1.20.001
CAROL (2003 / 9 -)	660cc	K6A	2004 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
CAROL (2003 / 9 -)	660cc	K6A	2004 Restraint Control Module	Read DTC		V1.20.001
CAROL (2003 / 9 -)	660cc	K6A	2004 Restraint Control Module	Erase DTC		V1.20.001
CAROL (2003 / 9 -)	660cc	K6A	2004 Restraint Control Module	Live Data		V1.20.001
PROTEGE	2.0L	FS	2003 Anti-Lock Brake / Traction Control Module	Read DTC		V1.20.001
PROTEGE	2.0L	FS	2003 Anti-Lock Brake / Traction Control Module	Erase DTC		V1.20.001
PROTEGE	2.0L	FS	2003 Anti-Lock Brake / Traction Control Module	Live Data		V1.20.001
PROTEGE	2.0L	FS	2003 Anti-Lock Brake / Traction Control Module	Active Test	Hydraulic Pump Motor	V1.20.001
PROTEGE	2.0L	FS	2003 Anti-Lock Brake / Traction Control Module	Active Test	Left Rear Outlet Valve	V1.20.001
PROTEGE	2.0L	FS	2003 Anti-Lock Brake / Traction Control Module	Active Test	Right Rear Outlet Valve	V1.20.001
PROTEGE	2.0L	FS	2003 Anti-Lock Brake / Traction Control Module	Active Test	Antilock braking system Power	V1.20.001
PROTEGE	2.0L	FS	2003 Anti-Lock Brake / Traction Control Module	Active Test	Left Front Outlet Valve	V1.20.001
PROTEGE	2.0L	FS	2003 Anti-Lock Brake / Traction Control Module	Active Test	Right Rear Inlet Valve	V1.20.001
PROTEGE	2.0L	FS	2003 Anti-Lock Brake / Traction Control Module	Active Test	Right Front Inlet Valve	V1.20.001
PROTEGE	2.0L	FS	2003 Anti-Lock Brake / Traction Control Module	Active Test	Left Front Inlet Valve	V1.20.001
PROTEGE	2.0L	FS	2003 Anti-Lock Brake / Traction Control Module	Active Test	Left Rear Inlet Valve	V1.20.001
PROTEGE	2.0L	FS	2003 Anti-Lock Brake / Traction Control Module	Active Test	Right Front Outlet Valve	V1.20.001
PROTEGE	2.0L	FS	2003 Cruise Control	Read DTC		V1.20.001
PROTEGE	2.0L	FS	2003 Cruise Control	Erase DTC		V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Read DTC		V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Erase DTC		V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Live Data		V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	Air conditioning compressor cycle	V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	Injector 2	V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	purge valve control with canister	V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	shift solenoid E/5	V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	Injector 4	V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	Fuel pump	V1.20.001

PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	Canister drain cut valve control	V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	Injector 3	V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	Shift Solenoid 4	V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	Exhaust Gas Recirculation	V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
PROTEGE	2.0L	FS	2003 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MX-5 MIATA	1.8L	BP	2005 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
MX-5 MIATA	1.8L	BP	2005 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
MX-5 MIATA	1.8L	BP	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power F	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Cruise Control	Read DTC		V1.20.001
MX-5 MIATA	1.8L	BP	2005 Cruise Control	Erase DTC		V1.20.001
MX-5 MIATA	1.8L	BP	2005 Powertrain Control Module	Read DTC		V1.20.001
MX-5 MIATA	1.8L	BP	2005 Powertrain Control Module	Erase DTC		V1.20.001
MX-5 MIATA	1.8L	BP	2005 Powertrain Control Module	Live Data		V1.20.001
MX-5 MIATA	1.8L	BP	2005 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Powertrain Control Module	Active Test	Overflow control valve	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Powertrain Control Module	Active Test	Exhaust Gas Recirculation	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solen	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MX-5 MIATA	1.8L	BP	2005 Powertrain Control Module	Active Test	Injector 1	V1.20.001
TITAN (Isuzu OEM)	3.1L	4JG2	2004 Powertrain Control Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	3.1L	4JG2	2004 Powertrain Control Module	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	3.1L	4JG2	2004 Powertrain Control Module	Live Data		V1.20.001
TITAN (Isuzu OEM)	3.1L	4JG2	2004 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Status	V1.20.001
TITAN (Isuzu OEM)	3.1L	4JG2_LPG	2004 Powertrain Control Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	3.1L	4JG2_LPG	2004 Powertrain Control Module	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	3.1L	4JG2_LPG	2004 Powertrain Control Module	Live Data		V1.20.001
TITAN (Isuzu OEM)	3.1L	4JG2_LPG	2004 Powertrain Control Module	Active Test	Clear F/B SOL Idle Average Duty	V1.20.001
TITAN (Isuzu OEM)	3.1L	4JG2_LPG	2004 Powertrain Control Module	Active Test	Clear F/B SOL Partial Average Di	V1.20.001
TITAN (Isuzu OEM)	3.1L	4JG2_LPG	2004 Powertrain Control Module	Active Test	Feedback solenoid	V1.20.001
TITAN (Isuzu OEM)	3.1L	4JG2_LPG	2004 Powertrain Control Module	Active Test	Fuel-cut Solenoid	V1.20.001
TITAN (Isuzu OEM)	3.1L	4JG2_LPG	2004 Powertrain Control Module	Active Test	Fuel-cut Solenoid 2	V1.20.001
TITAN (Isuzu OEM)	3.1L	4JG2_LPG	2004 Powertrain Control Module	Active Test	Clear Idle Air Control Learning V	V1.20.001
TITAN (Isuzu OEM)	3.1L	4JG2_LPG	2004 Powertrain Control Module	Active Test	Target Idle Air Control Step	V1.20.001
TITAN (Isuzu OEM)	3.1L	4JG2_LPG	2004 Powertrain Control Module	Active Test	Clear Heated Exhaust Oxygen Se	V1.20.001
TITAN (Isuzu OEM)	3.1L	4JG2_LPG	2004 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
TITAN (Isuzu OEM)	3.1L	4JG2_LPG	2004 Powertrain Control Module	Active Test	Wide open throttle Governor	V1.20.001
MX-5 MIATA	1.8L	BP	2004 Anti-Lock Brake / Traction Control Mo	Read DTC		V1.20.001
MX-5 MIATA	1.8L	BP	2004 Anti-Lock Brake / Traction Control Mo	Erase DTC		V1.20.001
MX-5 MIATA	1.8L	BP	2004 Anti-Lock Brake / Traction Control Mo	Live Data		V1.20.001
MX-5 MIATA	1.8L	BP	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Hydraulic Pump Motor	V1.20.001
MX-5 MIATA	1.8L	BP	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Inlet Valve	V1.20.001
MX-5 MIATA	1.8L	BP	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Antilock braking system Power F	V1.20.001
MX-5 MIATA	1.8L	BP	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Outlet Valve	V1.20.001
MX-5 MIATA	1.8L	BP	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Inlet Valve	V1.20.001
MX-5 MIATA	1.8L	BP	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Left Front Inlet Valve	V1.20.001
MX-5 MIATA	1.8L	BP	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Rear Outlet Valve	V1.20.001
MX-5 MIATA	1.8L	BP	2004 Anti-Lock Brake / Traction Control Mo	Active Test	Right Front Outlet Valve	V1.20.001
MX-5 MIATA	1.8L	BP	2004 Cruise Control	Read DTC		V1.20.001
MX-5 MIATA	1.8L	BP	2004 Cruise Control	Erase DTC		V1.20.001
MX-5 MIATA	1.8L	BP	2004 Powertrain Control Module	Read DTC		V1.20.001
MX-5 MIATA	1.8L	BP	2004 Powertrain Control Module	Erase DTC		V1.20.001
MX-5 MIATA	1.8L	BP	2004 Powertrain Control Module	Live Data		V1.20.001
MX-5 MIATA	1.8L	BP	2004 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MX-5 MIATA	1.8L	BP	2004 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MX-5 MIATA	1.8L	BP	2004 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MX-5 MIATA	1.8L	BP	2004 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MX-5 MIATA	1.8L	BP	2004 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MX-5 MIATA	1.8L	BP	2004 Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
MX-5 MIATA	1.8L	BP	2004 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MX-5 MIATA	1.8L	BP	2004 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MX-5 MIATA	1.8L	BP	2004 Powertrain Control Module	Active Test	Exhaust Gas Recirculation Solen	V1.20.001

MX-5 MIATA	1.8L	BP		2004 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MX-5 MIATA	1.8L	BP		2004 Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
MX-5 MIATA	1.8L	BP		2004 Powertrain Control Module	Active Test	Overflow control valve	V1.20.001
MX-5 MIATA	1.8L	BP		2004 Powertrain Control Module	Active Test	Variable Inertia Charging System	V1.20.001
MX-5 MIATA	1.8L	BP		2004 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MX-5 MIATA	1.8L	BP		2004 Powertrain Control Module	Active Test	Exhaust Gas Recirculation	V1.20.001
MX-5 MIATA	1.8L	BP		2004 Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
MX-5 MIATA	1.8L	BP		2004 Powertrain Control Module	Active Test	Exhaust Gas Recirculation solenoid	V1.20.001
MX-5 MIATA	1.8L	BP		2004 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MX-5 MIATA	1.8L	BP		2004 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MX-5 MIATA	1.8L	BP		2004 Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
MX-5 MIATA	1.8L	BP		2004 Powertrain Control Module	Active Test	Injector 1	V1.20.001
CAROL (HB245)	660cc	K6A		2004 Antilock braking system	Read DTC		V1.20.001
CAROL (HB245)	660cc	K6A		2004 Antilock braking system	Erase DTC		V1.20.001
CAROL (HB245)	660cc	K6A		2004 Antilock braking system	Live Data		V1.20.001
CAROL (HB245)	660cc	K6A		2004 Powertrain Control Module	Read DTC		V1.20.001
CAROL (HB245)	660cc	K6A		2004 Powertrain Control Module	Erase DTC		V1.20.001
CAROL (HB245)	660cc	K6A		2004 Powertrain Control Module	Live Data		V1.20.001
CAROL (HB245)	660cc	K6A		2004 Powertrain Control Module	Active Test	Evaporative Emission Canister Purge Valve	V1.20.001
CAROL (HB245)	660cc	K6A		2004 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
CAROL (HB245)	660cc	K6A		2004 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
CAROL (HB245)	660cc	K6A		2004 Restraint Control Module	Read DTC		V1.20.001
CAROL (HB245)	660cc	K6A		2004 Restraint Control Module	Erase DTC		V1.20.001
CAROL (HB245)	660cc	K6A		2004 Restraint Control Module	Live Data		V1.20.001
MAZDA6 (North America / General)	3.0L	AJ	Null	Anti-Lock Brake / Traction Control Module	Read DTC		V1.20.001
MAZDA6 (North America / General)	3.0L	AJ	Null	Anti-Lock Brake / Traction Control Module	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.0L	AJ	Null	Anti-Lock Brake / Traction Control Module	Live Data		V1.20.001
MAZDA6 (North America / General)	3.0L	AJ	Null	Anti-Lock Brake / Traction Control Module	Active Test	Hydraulic Pump Motor	V1.20.001
MAZDA6 (North America / General)	3.0L	AJ	Null	Anti-Lock Brake / Traction Control Module	Active Test	Left Rear Outlet Valve	V1.20.001
MAZDA6 (North America / General)	3.0L	AJ	Null	Anti-Lock Brake / Traction Control Module	Active Test	Right Rear Outlet Valve	V1.20.001
MAZDA6 (North America / General)	3.0L	AJ	Null	Anti-Lock Brake / Traction Control Module	Active Test	Antilock braking system Power F	V1.20.001
MAZDA6 (North America / General)	3.0L	AJ	Null	Anti-Lock Brake / Traction Control Module	Active Test	Left Front Outlet Valve	V1.20.001
MAZDA6 (North America / General)	3.0L	AJ	Null	Anti-Lock Brake / Traction Control Module	Active Test	Right Rear Inlet Valve	V1.20.001
MAZDA6 (North America / General)	3.0L	AJ	Null	Anti-Lock Brake / Traction Control Module	Active Test	Right Front Inlet Valve	V1.20.001
MAZDA6 (North America / General)	3.0L	AJ	Null	Anti-Lock Brake / Traction Control Module	Active Test	Left Front Inlet Valve	V1.20.001
MAZDA6 (North America / General)	3.0L	AJ	Null	Anti-Lock Brake / Traction Control Module	Active Test	Left Rear Inlet Valve	V1.20.001
MAZDA6 (North America / General)	3.0L	AJ	Null	Anti-Lock Brake / Traction Control Module	Active Test	Right Front Outlet Valve	V1.20.001
MAZDA6 (North America / General)	3.0L	AJ	Null	Anti-Lock Brake / Traction Control Module	Active Test	Traction Control Off Indicator	V1.20.001
MAZDA6 (North America / General)	3.0L	AJ	Null	Instrument Cluster	Read DTC		V1.20.001
MAZDA6 (North America / General)	3.0L	AJ	Null	Instrument Cluster	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.0L	AJ	Null	Instrument Cluster	Live Data		V1.20.001
MAZDA6 (North America / General)	3.0L	AJ	Null	Restraint Control Module	Read DTC		V1.20.001
MAZDA6 (North America / General)	3.0L	AJ	Null	Restraint Control Module	Erase DTC		V1.20.001
MAZDA6 (North America / General)	3.0L	AJ	Null	Restraint Control Module	Live Data		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Antilock braking system	Read DTC		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Antilock braking system	Erase DTC		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Antilock braking system	Live Data		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Antilock braking system	Active Test	Antilock braking system Power F	V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Powertrain Control Module	Read DTC		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Powertrain Control Module	Erase DTC		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Powertrain Control Module	Live Data		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Restraint Control Module	Read DTC		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Restraint Control Module	Erase DTC		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Restraint Control Module	Live Data		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Transmission Control Module	Read DTC		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Transmission Control Module	Erase DTC		V1.20.001
AZ-OFFROAD	660cc	K6A-T		2004 Transmission Control Module	Live Data		V1.20.001
EUNOS Cosmo (JCESE / JC3SE)	654x2cc	13B		1990 Anti-Lock Brake / Traction Control Module	Read DTC		V1.20.001
EUNOS Cosmo (JCESE / JC3SE)	654x2cc	13B		1990 Anti-Lock Brake / Traction Control Module	Erase DTC		V1.20.001
EUNOS Cosmo (JCESE / JC3SE)	654x2cc	13B		1990 Cruise Control	Read DTC		V1.20.001
EUNOS Cosmo (JCESE / JC3SE)	654x2cc	13B		1990 Cruise Control	Erase DTC		V1.20.001
EUNOS Cosmo (JCESE / JC3SE)	654x2cc	13B		1990 Transmission Control Module	Read DTC		V1.20.001
EUNOS Cosmo (JCESE / JC3SE)	654x2cc	13B		1990 Transmission Control Module	Erase DTC		V1.20.001
EUNOS Cosmo (JCESE / JC3SE)	654x2cc	13B		1990 Transmission Control Module	Live Data		V1.20.001
EUNOS Cosmo (JCESE / JC3SE)	654x2cc	13B		1990 Powertrain Control Module	Read DTC		V1.20.001
EUNOS Cosmo (JCESE / JC3SE)	654x2cc	13B		1990 Powertrain Control Module	Erase DTC		V1.20.001
EUNOS Cosmo (JCESE / JC3SE)	654x2cc	13B		1990 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
EUNOS Cosmo (JCESE / JC3SE)	654x2cc	13B		1990 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
EUNOS Cosmo (JCESE / JC3SE)	654x3cc	20B		1990 Anti-Lock Brake / Traction Control Module	Read DTC		V1.20.001
EUNOS Cosmo (JCESE / JC3SE)	654x3cc	20B		1990 Anti-Lock Brake / Traction Control Module	Erase DTC		V1.20.001
EUNOS Cosmo (JCESE / JC3SE)	654x3cc	20B		1990 Cruise Control	Read DTC		V1.20.001
EUNOS Cosmo (JCESE / JC3SE)	654x3cc	20B		1990 Cruise Control	Erase DTC		V1.20.001
EUNOS Cosmo (JCESE / JC3SE)	654x3cc	20B		1990 Transmission Control Module	Read DTC		V1.20.001
EUNOS Cosmo (JCESE / JC3SE)	654x3cc	20B		1990 Transmission Control Module	Erase DTC		V1.20.001
EUNOS Cosmo (JCESE / JC3SE)	654x3cc	20B		1990 Transmission Control Module	Live Data		V1.20.001
EUNOS Cosmo (JCESE / JC3SE)	654x3cc	20B		1990 Powertrain Control Module	Read DTC		V1.20.001
EUNOS Cosmo (JCESE / JC3SE)	654x3cc	20B		1990 Powertrain Control Module	Erase DTC		V1.20.001
EUNOS Cosmo (JCESE / JC3SE)	654x3cc	20B		1990 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
EUNOS Cosmo (JCESE / JC3SE)	654x3cc	20B		1990 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Antilock braking system	Read DTC		V1.20.001

MX-5 (North America / General Specs.)	2.0L	LF	Null	Antilock braking system	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Antilock braking system	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Antilock braking system	Active Test	Steering Angle Sensor Initializati	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Antilock braking system	Active Test	Left Rear Inlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Antilock braking system	Active Test	Right Rear Inlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Antilock braking system	Active Test	Left Rear Outlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Antilock braking system	Active Test	Stability Control Active Indicato	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Antilock braking system	Active Test	Traction Control Off Indicator	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Antilock braking system	Active Test	Left Front Inlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Antilock braking system	Active Test	Right Front Outlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Antilock braking system	Active Test	Right Rear Outlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Antilock braking system	Active Test	Right Front Inlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Antilock braking system	Active Test	Left Front Outlet Valve	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Antilock braking system	Active Test	Hydraulic Pump Motor	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Antilock braking system	Active Test	Left Stability Control Solenoid V	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Antilock braking system	Active Test	Right Stability Control Solenoid	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Antilock braking system	Active Test	Left Traction Control Solenoid V	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Antilock braking system	Active Test	Right Traction Control Solenoid	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Antilock braking system	Active Test	Lateral Accel Sensor Initialization	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Antilock braking system	Active Test	Yaw Rate Sensor Initialization St	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Instrument Cluster	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Instrument Cluster	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Instrument Cluster	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Instrument Cluster	Active Test	ID Regist Mode	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Powertrain Control Module	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Powertrain Control Module	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Powertrain Control Module	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Restraint Control Module	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Restraint Control Module	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Restraint Control Module	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Remote Keyless Entry	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Remote Keyless Entry	Erase DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Remote Keyless Entry	Live Data		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Remote Keyless Entry	Active Test	Antenna (Lift Gate/Trunk Lid)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Remote Keyless Entry	Active Test	Inner Antenna 1	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Remote Keyless Entry	Active Test	Inner Antenna 2	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Remote Keyless Entry	Active Test	Inner Antenna 3	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Remote Keyless Entry	Active Test	Inner Antenna 4	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Remote Keyless Entry	Active Test	Antenna (Left Front Door)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Remote Keyless Entry	Active Test	Antenna (Right Front Door)	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Remote Keyless Entry	Active Test	Hazard Flashers	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Remote Keyless Entry	Active Test	Two Stage Unlocking	V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Transmission Control Module	Read DTC		V1.20.001
MX-5 (North America / General Specs.)	2.0L	LF	Null	Transmission Control Module	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2004	Powertrain Control Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2004	Powertrain Control Module	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2004	Powertrain Control Module	Live Data		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2004	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2004	Powertrain Control Module	Active Test	Exhaust Brake	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2004	Powertrain Control Module	Active Test	Fuel-cut Solenoid	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2004	Powertrain Control Module	Active Test	Fuel-cut Solenoid 2	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2004	Powertrain Control Module	Active Test	Fuel Pulse Width	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2004	Powertrain Control Module	Active Test	Target Engine Engine RPM	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2004	Powertrain Control Module	Active Test	Spark Advance	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2004	Powertrain Control Module	Active Test	Target Throttle Position	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2004	Transmission Control Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2004	Transmission Control Module	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2004	Transmission Control Module	Live Data		V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A-T	2005	Antilock braking system	Read DTC		V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A-T	2005	Antilock braking system	Erase DTC		V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A-T	2005	Antilock braking system	Live Data		V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A-T	2005	Powertrain Control Module	Read DTC		V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A-T	2005	Powertrain Control Module	Erase DTC		V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A-T	2005	Powertrain Control Module	Live Data		V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A-T	2005	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A-T	2005	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A-T	2005	Powertrain Control Module	Active Test	Spark Advance	V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A-T	2005	Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A-T	2005	Restraint Control Module	Read DTC		V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A-T	2005	Restraint Control Module	Erase DTC		V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A-T	2005	Restraint Control Module	Live Data		V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A	2005	Antilock braking system	Read DTC		V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A	2005	Antilock braking system	Erase DTC		V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A	2005	Antilock braking system	Live Data		V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A	2005	Powertrain Control Module	Read DTC		V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A	2005	Powertrain Control Module	Erase DTC		V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A	2005	Powertrain Control Module	Live Data		V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A	2005	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A	2005	Powertrain Control Module	Active Test	Spark Advance	V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A	2005	Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A	2005	Restraint Control Module	Read DTC		V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A	2005	Restraint Control Module	Erase DTC		V1.20.001
SCRUM (2005 / 9 -) DG64V / DG64W	660cc	K6A	2005	Restraint Control Module	Live Data		V1.20.001
SCRUM	660cc	K6A	2005	Antilock braking system	Read DTC		V1.20.001
SCRUM	660cc	K6A	2005	Antilock braking system	Erase DTC		V1.20.001
SCRUM	660cc	K6A	2005	Antilock braking system	Live Data		V1.20.001

MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Powertrain Control Module	Live Data		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Desired RPM	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Fuel pump	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Variable Fan Duty Cycle	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Generator field current control	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Rich-to-lean delayed time.	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Heated Exhaust Gas Oxygen Sen	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Injector 4	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Injector 2	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Injector 3	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Exhaust Gas Recirculation valve	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Injector 1	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Intake Manifold Tuning Valve	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Generator Voltage Desired	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	TEN Terminal (Data Link Connec	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Powertrain Control Module	Active Test	Camshaft Position Commanded	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Restraint Control Module	Read DTC		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Restraint Control Module	Erase DTC		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Restraint Control Module	Live Data		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Remote Keyless Entry	Read DTC		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Remote Keyless Entry	Erase DTC		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Remote Keyless Entry	Live Data		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Remote Keyless Entry	Active Test	Inner Buzzer	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Remote Keyless Entry	Active Test	Outer Buzzer	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Remote Keyless Entry	Active Test	All Door Lock	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Remote Keyless Entry	Active Test	All Door Unlock	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Green)	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Remote Keyless Entry	Active Test	Indicator Lamp (Red)	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006 Remote Keyless Entry	Active Test	Super Lock	V1.20.001
AZ-WAGON (MJ)	660cc	K6A	2006 Antilock braking system	Read DTC		V1.20.001
AZ-WAGON (MJ)	660cc	K6A	2006 Antilock braking system	Erase DTC		V1.20.001
AZ-WAGON (MJ)	660cc	K6A	2006 Antilock braking system	Live Data		V1.20.001
AZ-WAGON (MJ)	660cc	K6A	2006 Powertrain Control Module	Read DTC		V1.20.001
AZ-WAGON (MJ)	660cc	K6A	2006 Powertrain Control Module	Erase DTC		V1.20.001
AZ-WAGON (MJ)	660cc	K6A	2006 Powertrain Control Module	Live Data		V1.20.001
AZ-WAGON (MJ)	660cc	K6A	2006 Powertrain Control Module	Active Test	Variable Cam Timing	V1.20.001
AZ-WAGON (MJ)	660cc	K6A	2006 Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
AZ-WAGON (MJ)	660cc	K6A	2006 Powertrain Control Module	Active Test	Spark Advance	V1.20.001
AZ-WAGON (MJ)	660cc	K6A	2006 Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
AZ-WAGON (MJ)	660cc	K6A	2006 Restraint Control Module	Read DTC		V1.20.001
AZ-WAGON (MJ)	660cc	K6A	2006 Restraint Control Module	Erase DTC		V1.20.001
AZ-WAGON (MJ)	660cc	K6A	2006 Restraint Control Module	Live Data		V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Antilock braking system	Read DTC		V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Antilock braking system	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Antilock braking system	Live Data		V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Antilock braking system	Active Test	Antilock braking system Warnin	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Antilock braking system	Active Test	Antilock braking system Power f	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Antilock braking system	Active Test	Antilock braking system Pump A	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Antilock braking system	Active Test	Left Rear Dump Valve Commanc	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Antilock braking system	Active Test	Left Rear Isolation Valve Comm	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Antilock braking system	Active Test	Right Rear Dump Valve Commar	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Antilock braking system	Active Test	Right Rear Isolation Valve Comn	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Antilock braking system	Active Test	Left Front Dump Valve Commanc	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Antilock braking system	Active Test	Left Front Isolation Valve Comm	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Antilock braking system	Active Test	Right Front Dump Valve Comma	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Antilock braking system	Active Test	Right Front Isolation Valve Com	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Antilock braking system	Active Test	Exhaust Brake Cut State	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Antilock braking system	Active Test	ASR Warning Indicator Status	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Antilock braking system	Active Test	ASR Information Indicator Statu	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Generic Electronic Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Generic Electronic Module	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Generic Electronic Module	Live Data		V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Generic Electronic Module	Active Test	Air conditioning Compressor Rel	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Generic Electronic Module	Active Test	Air conditioning Fan Relay Outp	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Generic Electronic Module	Active Test	Answer Back	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Generic Electronic Module	Active Test	Door Lock Actuators (Lock)	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Generic Electronic Module	Active Test	Door Lock Actuators (Unlock)	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Generic Electronic Module	Active Test	Room Light	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Passive Anti Theft System	Read DTC		V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Passive Anti Theft System	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Passive Anti Theft System	Live Data		V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Powertrain Control Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Powertrain Control Module	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Powertrain Control Module	Live Data		V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Powertrain Control Module	Active Test	Exhaust Brake Control	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Powertrain Control Module	Active Test	Exhaust Throttle Control Status	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Powertrain Control Module	Active Test	Glow plug relay	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Powertrain Control Module	Active Test	Injector 1	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Powertrain Control Module	Active Test	Injector 2	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Powertrain Control Module	Active Test	Injector 3	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Powertrain Control Module	Active Test	Injector 4	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Powertrain Control Module	Active Test	Main Injection Timing	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Powertrain Control Module	Active Test	Stop Pre-injection Command	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Powertrain Control Module	Active Test	Variable Geometry Turbo positio	V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Restraint Control Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	5.2L	4HK1_T	2007 Restraint Control Module	Erase DTC		V1.20.001

Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	Injector 2	V1.20.001
Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	Torque Converter Clutch Soleno	V1.20.001
Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	Shift Solenoid 3	V1.20.001
Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	FAN3 Control Signal	V1.20.001
Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	Injector 4	V1.20.001
Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	Generator field current control	V1.20.001
Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	Fuel pump	V1.20.001
Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	Generator Warning Light	V1.20.001
Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	3-2 Timing Solenoid Valve	V1.20.001
Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	Line Pressure Solenoid	V1.20.001
Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	Shift Solenoid 2	V1.20.001
Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	FAN1 Control Signal	V1.20.001
Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	Injector 3	V1.20.001
Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	Exhaust Gas Recirculation	V1.20.001
Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	Fuel Pump Regulator Control	V1.20.001
Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	Idle Air Control	V1.20.001
Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	Injector 6	V1.20.001
Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	Intake Manifold Runner Control	V1.20.001
Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	Evaporative Emission Canister P	V1.20.001
Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	Fuel Pulse Width #1	V1.20.001
Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	FAN2 Control Signal	V1.20.001
Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	Injector 1	V1.20.001
Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	Shift Solenoid 1	V1.20.001
Etude	2.0L	Other	Other	Powertrain Control Module	Active Test	Injector 5	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Antilock braking system	Read DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Antilock braking system	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Antilock braking system	Live Data		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Antilock braking system	Active Test	Antilock braking system Warnin	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Antilock braking system	Active Test	Antilock braking system Power f	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Antilock braking system	Active Test	Antilock braking system Pump A	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Antilock braking system	Active Test	Left Rear Dump Valve Commanc	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Antilock braking system	Active Test	Left Rear Isolation Valve Comm	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Antilock braking system	Active Test	Right Rear Dump Valve Commar	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Antilock braking system	Active Test	Right Rear Isolation Valve Comm	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Antilock braking system	Active Test	Left Front Dump Valve Comman	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Antilock braking system	Active Test	Left Front Isolation Valve Comm	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Antilock braking system	Active Test	Right Front Dump Valve Comma	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Antilock braking system	Active Test	Right Front Isolation Valve Com	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Antilock braking system	Active Test	Exhaust Brake Cut State	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Antilock braking system	Active Test	ASR Warning Indicator Status	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Antilock braking system	Active Test	ASR Information Indicator Statu	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Generic Electronic Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Generic Electronic Module	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Generic Electronic Module	Live Data		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Generic Electronic Module	Active Test	Air conditioning Compressor Rel	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Generic Electronic Module	Active Test	Air conditioning Fan Relay Outp	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Generic Electronic Module	Active Test	Answer Back	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Generic Electronic Module	Active Test	Door Lock Actuators (Lock)	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Generic Electronic Module	Active Test	Door Lock Actuators (Unlock)	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Generic Electronic Module	Active Test	Room Light	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Generic Electronic Module	Active Test	Front windshield wiper	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Powertrain Control Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Powertrain Control Module	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Powertrain Control Module	Live Data		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Powertrain Control Module	Active Test	Air conditioning compressor cyc	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Powertrain Control Module	Active Test	Exhaust Brake	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Powertrain Control Module	Active Test	Fuel-cut Solenoid	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Powertrain Control Module	Active Test	Fuel-cut Solenoid 2	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Powertrain Control Module	Active Test	Fuel Pulse Width	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Powertrain Control Module	Active Test	Target Engine Engine RPM	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Powertrain Control Module	Active Test	Spark Advance	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Powertrain Control Module	Active Test	Target Throttle Position	V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Restraint Control Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Restraint Control Module	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Restraint Control Module	Live Data		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Transmission Control Module	Read DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Transmission Control Module	Erase DTC		V1.20.001
TITAN (Isuzu OEM)	4.6L	4HV1_CNG	2007	Transmission Control Module	Live Data		V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003	Powertrain Control Module	Active Test	Exhaust Brake	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003	Powertrain Control Module	Active Test	Fuel-cut Solenoid	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003	Powertrain Control Module	Active Test	Fuel-cut Solenoid 2	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003	Powertrain Control Module	Active Test	Fuel Pulse Width	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003	Powertrain Control Module	Active Test	Target Engine Engine RPM	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003	Powertrain Control Module	Active Test	Spark Advance	V1.20.001
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003	Powertrain Control Module	Active Test	Target Throttle Position	V1.20.001