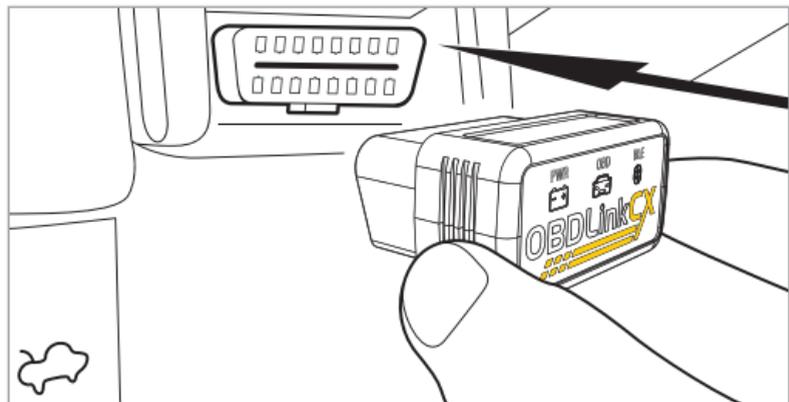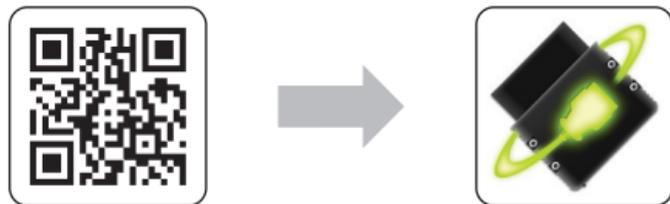**1.** Plug CX into the OBD port

OBD port is usually in driver's footwell

2. Get the OBDLink app
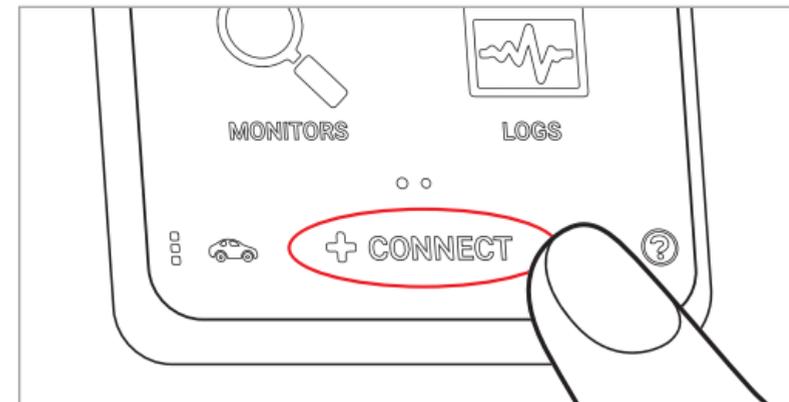

visit www.obdlink.com/apps
or scan the QR code

3. Turn the ignition to the "Key On, Engine Off" position

ON
ACC   START
LOCK

4. Tap "Connect" in the OBDLink app

MONITORS   LOGS

+ CONNECT

If prompted for a PIN, please enter

1 2 3 4 5 6